Service Manual

2-channel Power Amplifier

WP-9110C/9220C

RAMSA

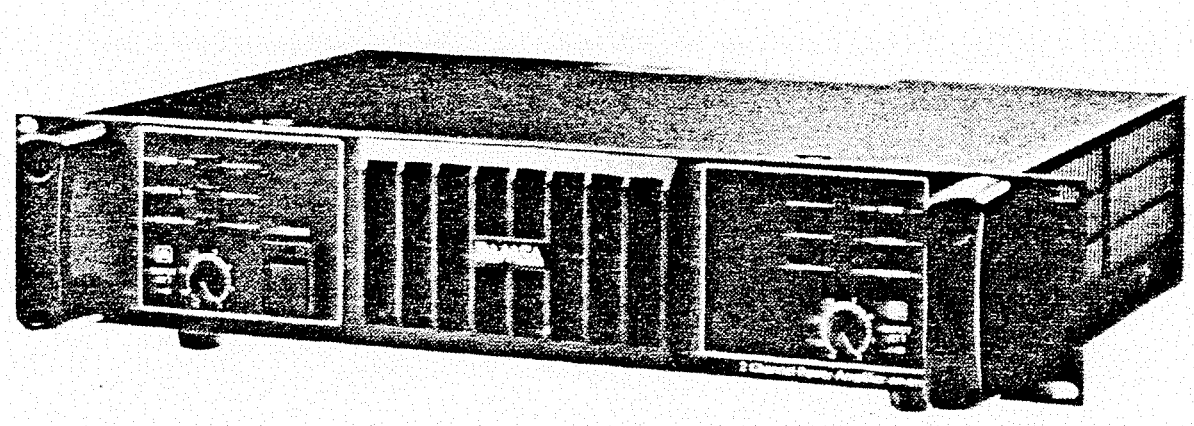

WP-9110C

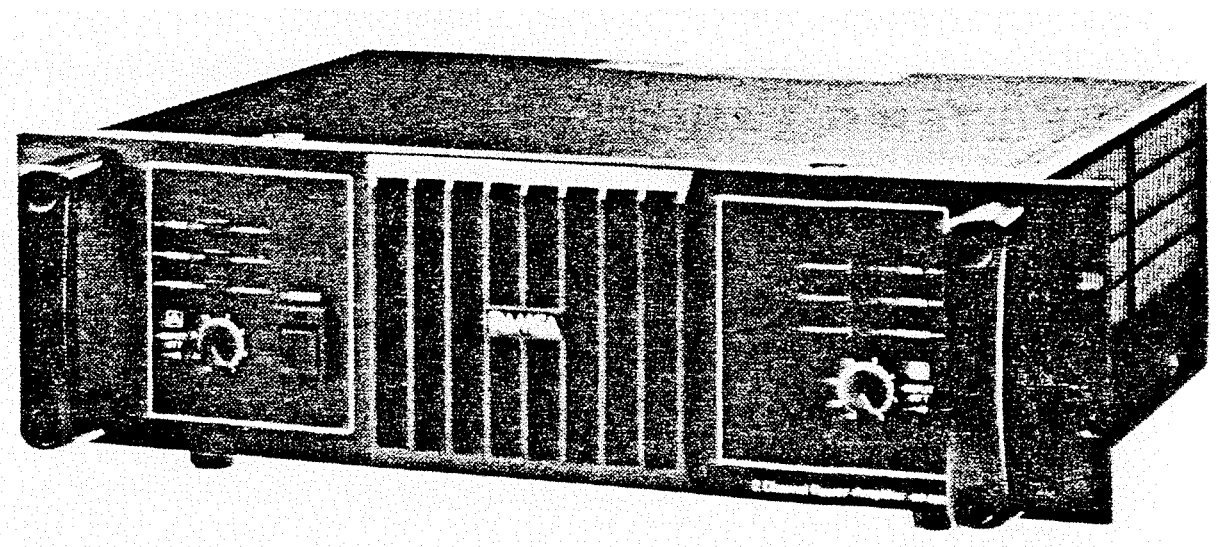

WP-9220C

National/Panasonic

Matsushita Electric Trading Co., Ltd
P.O. Box 288, Central Osaka Japan

CONTENTS

SPECIFICATIONS 1

MAJOR OPERATING CONTROLS 2,3

CONNECTIONS 4,5

AIR FILTER CLEANING. 5

RACK MOUNTING. 6

BLOCK DIAGRAM 7

POWER SOURCE VOLTAGE SETTING. 8

HOW TO LIFT GROUND. 9

DISASSEMBLY PROCEDURE 10

PERFORMANCE CHECK. 11

TECHNICAL EXPLANATION 12–15

ADJUSTMENT PROCEDURE. 16

EXPLODED VIEW/PACKING OF WP-9110C 17

CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM OF WP-9110C 18

SCHEMATIC DIAGRAM OF WP-9110C 19

CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM OF WP-9110C 20

SCHEMATIC DIAGRAM OF WP-9110C 21

EXPLODED VIEW/PACKING OF WP-9110C 22

REPLACEMENT PARTS LIST 23–31

SPECIFICATIONS

	WP-9110C	WP-9220C
Power supply:	110/120/220/240V AC 50/60Hz (Set at 240V AC)	
Power consumption:	Approx. 633W at the rated output of 150W (RMS) + 150W (RMS)/4 ohms	Approx. 1184W at the rated output of 300W (RMS) + 300W (RMS)/4 ohms
Rated power output:	100W + 100W (RMS, 8 ohms) 150W + 150W (RMS, 4 ohms)	200W + 200W (RMS, 8 ohms) 300W + 300W (RMS, 4 ohms)
Mono-bridge output:	300W (RMS, 8 ohms)	600W (RMS,.8 ohms)
Frequency response:	20 to 20 kHz ±0.5 dB (at Rated Output)	
Total harmonic distortion:	0.05% or less (8 ohms, 100W + 100W, 20 to 20 kHz) 0.1% or less (4 ohms, 150W + 150W, 20 to 20 kHz) 0.1% or less ([BRIDGE] 8 ohms, 300W, 20 to 20 kHz)	0.05% or less (8 ohms, 200W + 200W, 20 to 20 kHz) 0.1% or less (4 ohms, 300W + 300W, 20 to 20 kHz) 0.1% or less ([BRIDGE] 8 ohms, 600W, 20 to 20 kHz)
Crosstalk:	60 dB or more (20kHz)	
Intermodulation distortion:	0.05% or less (8 ohms, 100W, 60 Hz : 7 kHz = 4 : 1)	0.05% or less (8 ohms, 200W, 60 Hz : 7 kHz = 4 : 1)
Damping factor:	100 or more (8 ohms, 1 kHz)	
SN ratio:	100 dB or more (IHF A.W.T.D.)	
Input level:	+4 dB (continuously variable), balanced	
Voltage gain:	27 dB	30 dB
Input impedance:	40 kohms (balanced)	
Monitor output: VU meter output: Relay terminals:	+14 dB, 300 ohms (7.5 kohms optimum) No-voltage make contact (contact capacity: DC 24V, 1A)	
Connectors:	Input: 3-pin XLR-type connectors (male, and female), and 1/4" tip-ring-sleeve phone jack (3-pin connection) Output: Screw terminals, and 1/4" tip-sleeve phone jack	
Dimensions:	480 (W) x 100.5 (H) x 383 (D) mm (Height includes rubber feet and depth includes rear panel rubber stays.)	480 (W) x 144.5 (H) x 383 (D) mm (High includes rubber feet and depth includes rear panel rubber stays.)
Weight:	Approx. 13 kg	Approx. 17.5 kg
Finish:	Panels: Black alumite Cabinet: Dull black finish	
Accessories:	Mounting clips .... 4 Operating Instructions .... 1 Filter 1	
Option:	WP-Q01 { Connector pin .... 8 Nylon connector .... 2 Protective cap 2	

MAJOR OPERATING CONTROLS

■ WP-9110C

- **Front Panel:**

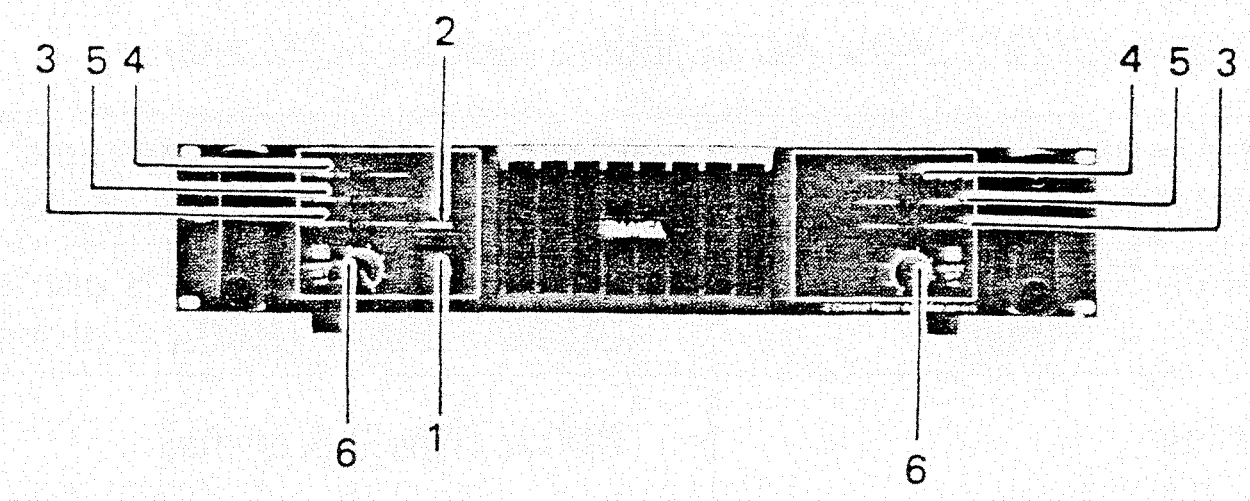

- **Rear Panel:**

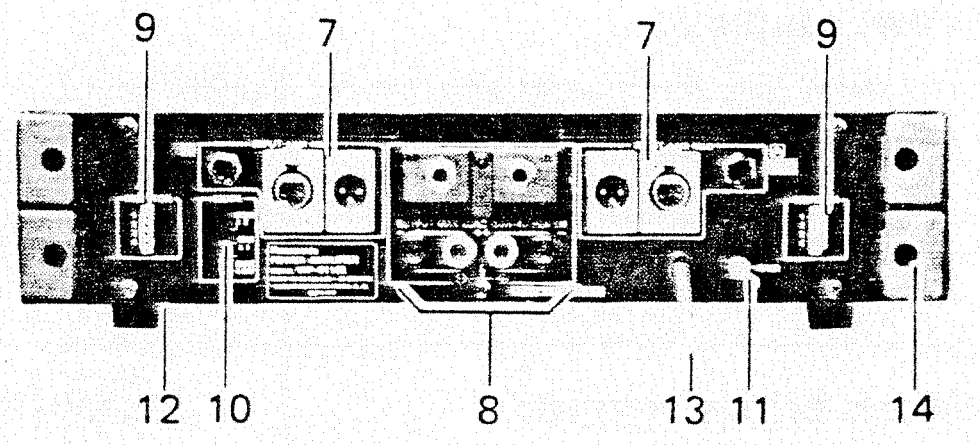

■ WP-9220C

- **Front Panel:**

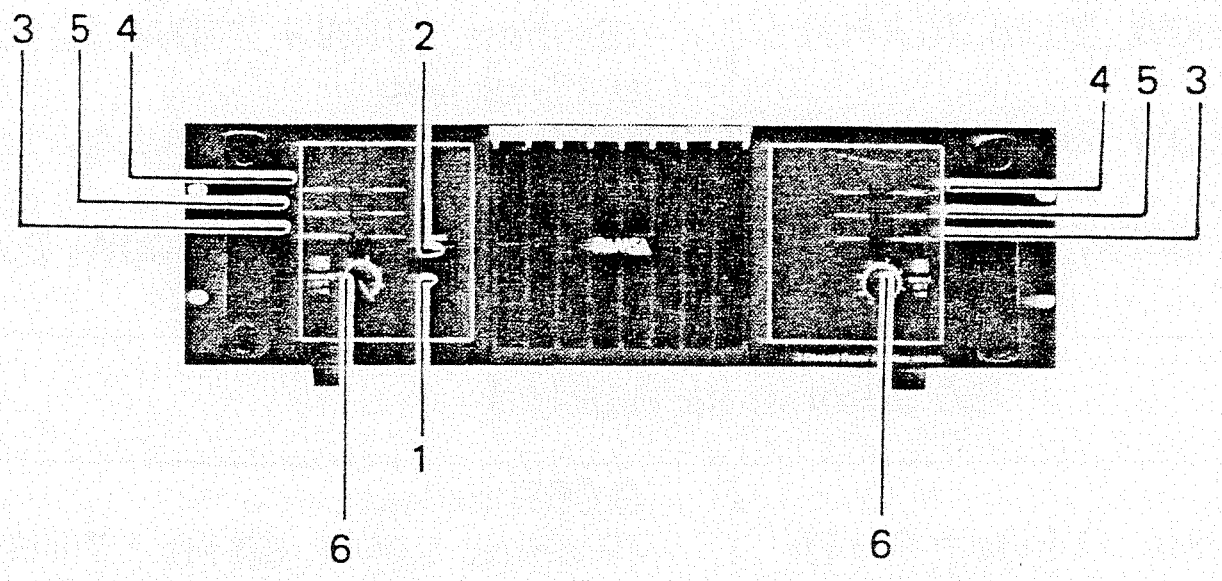

- **Rear Panel:**

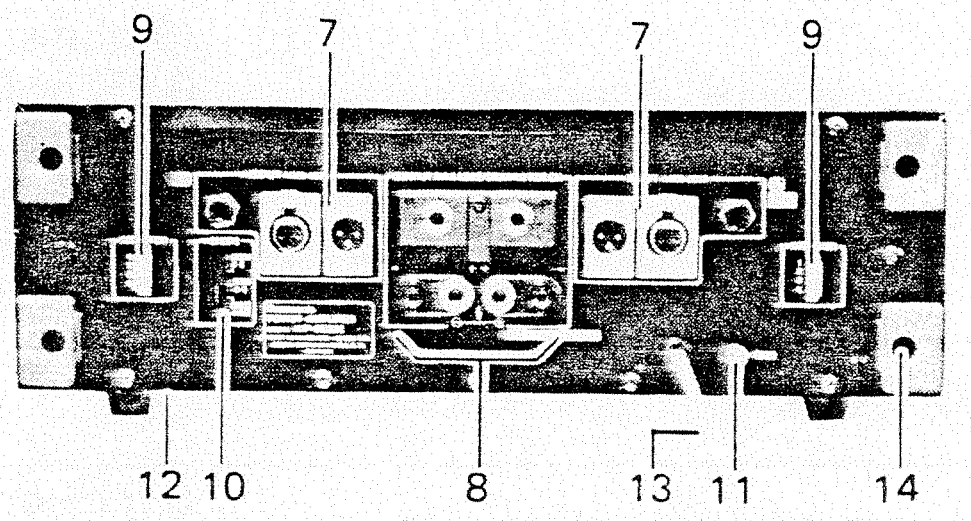

1. **Power Switch [POWER]**
   - The power amplifier reaches the operating conditions within 4 to 6 seconds after turning on the power switch due to a muting circuit which prevents switching noise of power-up.

   CAUTION:

   When using the WP-9110C/9220C in a system with other equipment such as a mixer, equalizer, crossover, etc., always turn the amplifier on last as switching noise from the other equipment can damage the speakers. Similarly, at system power-down always turn the amplifier off first.

2. **Power ON indicator lamp [POWER] (red)**

   Indicates that the amplifier is turned on.

3. **Protect indicator lamp [PROTECT] (red)**

   This LED indicates that the muting circuit is activated and therefore sound cannot be produced at the output. This occurs for 4 to 6 seconds when the amplifier is turned on, and also during overheating or any malfunction that may cause damage to the speakers.

4. **Peak level indicator lamp [PEAK (red) $\boxed{A}$, $\boxed{B}$]**

   Sound is distorted as soon as the PEAK LED (red) lights. Should this occur, either adjust the output level of the mixer or adjust the power amplifier Input Level control so that the PEAK LED turns off.

5. **Signal Indicator [SIGNAL (green) $\boxed{A}$, $\boxed{B}$]**

   Lights when the signal level reaches – 20 dB below the rated output level.

6. **Input level control [INPUT ATT $\boxed{A}$, $\boxed{B}$]**
   - When this control is at "0" the amplifier will reach its rated power output when the input signal is at a level of +4dB.
   - The calibrated markings on the front panel indicate the amount of attenuation applied to the input signal. This allows proper volume setting of the speakers when the input signal source is at its rated level.

7. **Input connectors [INPUT $\boxed{A}$, $\boxed{B}$] +4 dB, 40 kΩ, balanced**
   - Three types of input connectors are provided: XLR-type connectors (male, female) and 1/4" tip-ring-sleeve phone jack.
   - These input connectors are connected in parallel internally. Do not connect more than one input signal to these connectors at the same time.
   - When using amplifier in bridge mono mode, connect the input signal to $\boxed{A}$ channel only. Any signal connected to $\boxed{B}$ channel will not be passed.

8. Output terminals [SPEAKER 4Ω MIN $\boxed{A}$, $\boxed{B}$]

■WP-9110C

○ 8Ω . . . . 100W + 100W (RMS)
4Ω . . . . 150W + 150W (RMS)

○ Bridge . . . . 8Ω 300W (RMS)

○ When using in bridge mode, the + side of the $\boxed{A}$ CH output terminals becomes the hot side, and the + side of the $\boxed{B}$ CH output terminal becomes the cold.

■WP-9220C

○ 8Ω . . . . 200W + 200W (RMS)
4Ω . . . . 300W + 300W (RMS)

○ Bridge . . . . 8Ω 600W (RMS)

○ When using in bridge mode, the + side of the $\boxed{A}$ CH output terminals becomes the hot side, and the + side of the $\boxed{B}$ CH output terminal becomes the cold.

CAUTIONS:

- Do not connect the output channels in parallel.
- When using bridge connection, always use minimum 8Ω speakers. Never connect the speakers between + and − of $\boxed{A}$ CH, or + and − of $\boxed{B}$ CH.

9. Remote monitor output connection [MONITOR $\boxed{A}$ $\boxed{B}$] (4-pin)

Connect this terminal for remote monitoring of the amplifier output: (See page 4)

*The remote monitoring operates as soon as the muting is released after switching on the power supply.

10. Mode selector, [MODE]

STEREO $\boxed{A}$ · $\boxed{B}$
MONO $\boxed{A}$ · $\boxed{B}$
BRIDGE $\boxed{A}$ ONLY

When using either MONO Mode or Bridge Mode the input signal must be applied to the $\boxed{A}$ Channel only.

11. Ground terminal [GND]

An external amplifier ground terminal.

- Turntable ground leads may be connected here. Ungrounded turntables may produce hum-noise.

12. AC voltage selector

For power source voltage setting.

13. AC power cord

110V/120V/220V/240V AC 50/60Hz - approx. 2.5m.

14. Rear panel rubber feet

These are rubber feet to protect the input and output terminals against damage. However, do not stand the power amplifier on them during performance.

CONNECTIONS

■ WP-9110C

For 1 input: [BRIDGE]

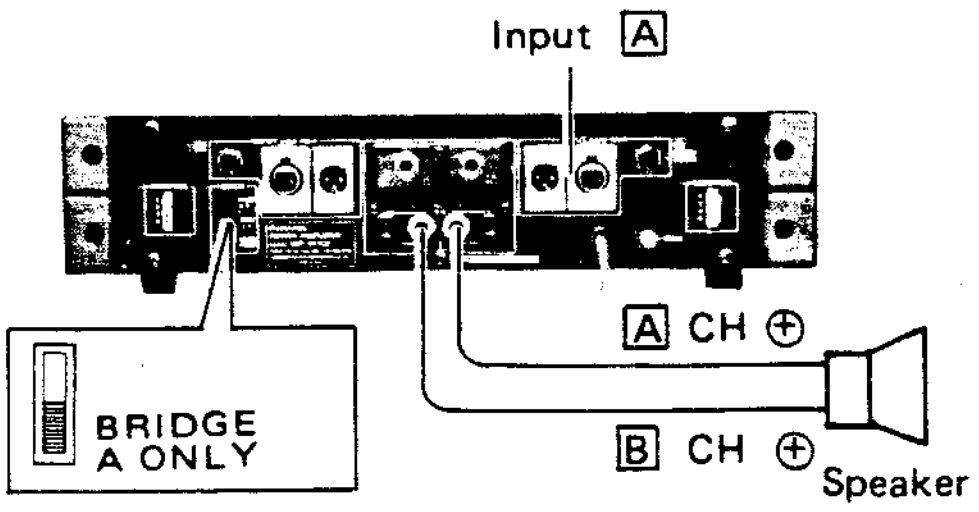
Input A
BRIDGE
A ONLY
A CH ⊕
B CH ⊕
Speaker

For 2 inputs: [Stereo or 2 channels]

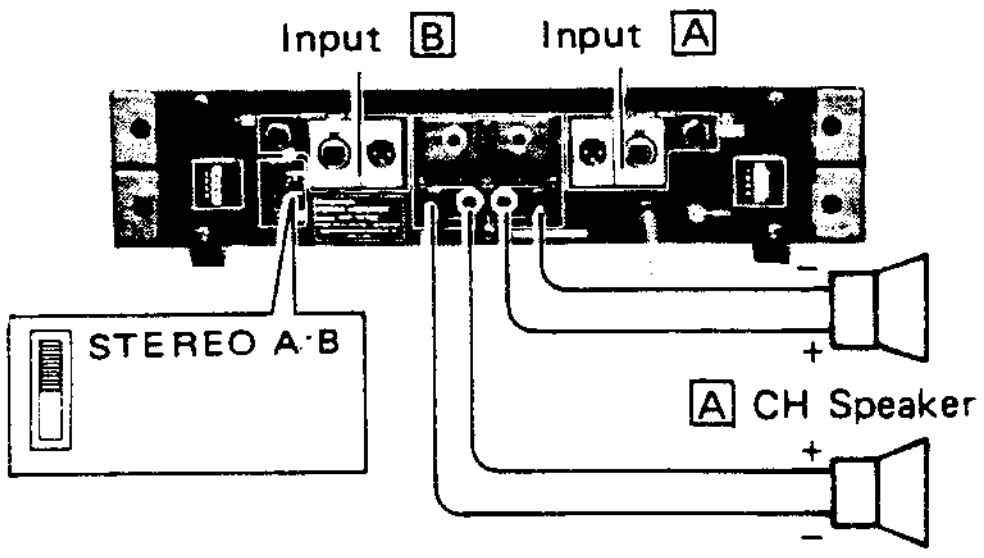
Input B
Input A
STEREO A·B
−
+
A CH Speaker
+
−

For 1 input: [Mono]

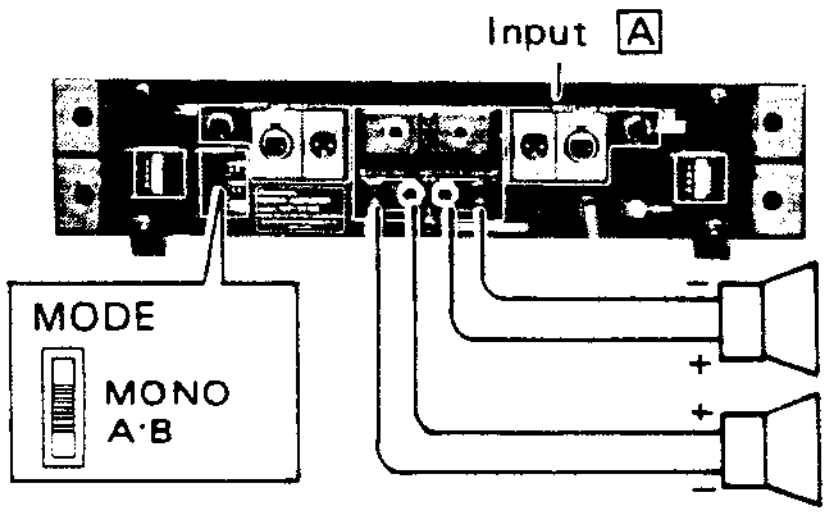
Input A
MODE
MONO
A·B
−
+
+
−

■ WP-9220C

For 1 input: [BRIDGE]

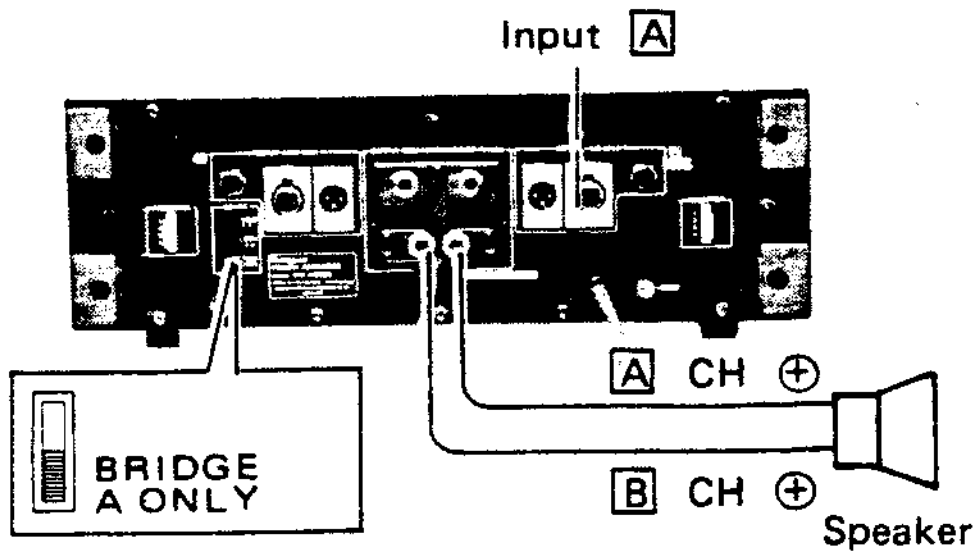
Input A
BRIDGE
A ONLY
A CH ⊕
B CH ⊕
Speaker

For 2 inputs: [Stereo or 2 channels]

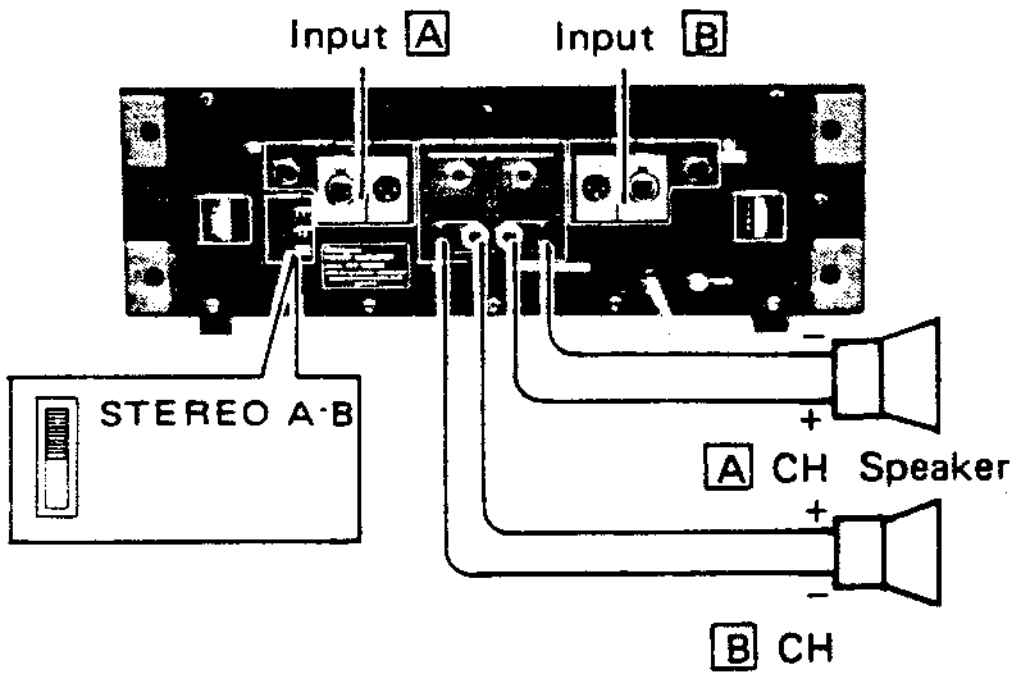
Input A
Input B
STEREO A·B
−
+
A CH Speaker
+
−
B CH

For 1 input: [Mono]

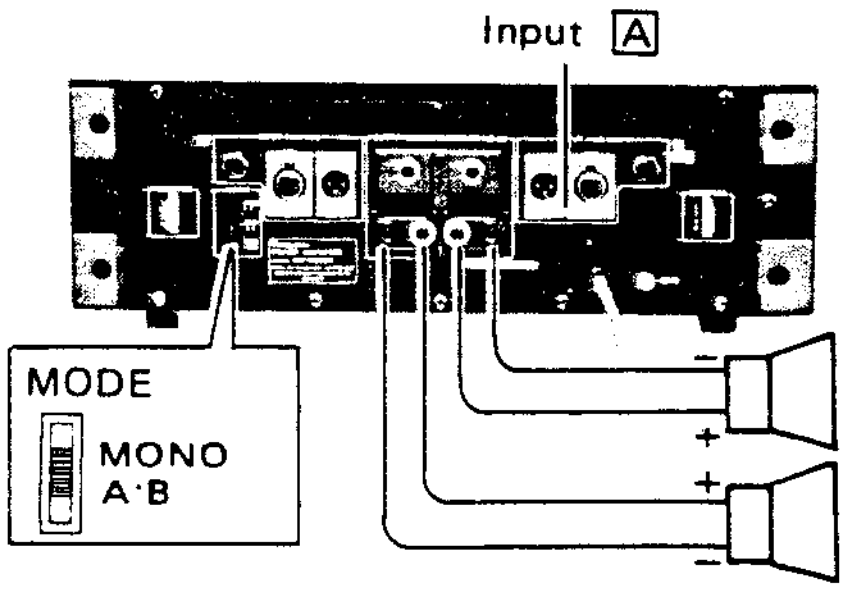
Input A
MODE
MONO
A·B
−
+
+
−

CAUTIONS:

- Connect the speakers after selecting either bridge, mono, or stereo.
- When using bridge connection, never connect the speakers between ⊕ and ⊖ of A CH or B CH.

■ Protective Cap Installation (OPTION)

After adjusting the input level controls, install the protective covers to protect the controls from tampering as follows.

1. Detach the knobs from the front panel.
2. Insert the protective caps (option) in the holes.

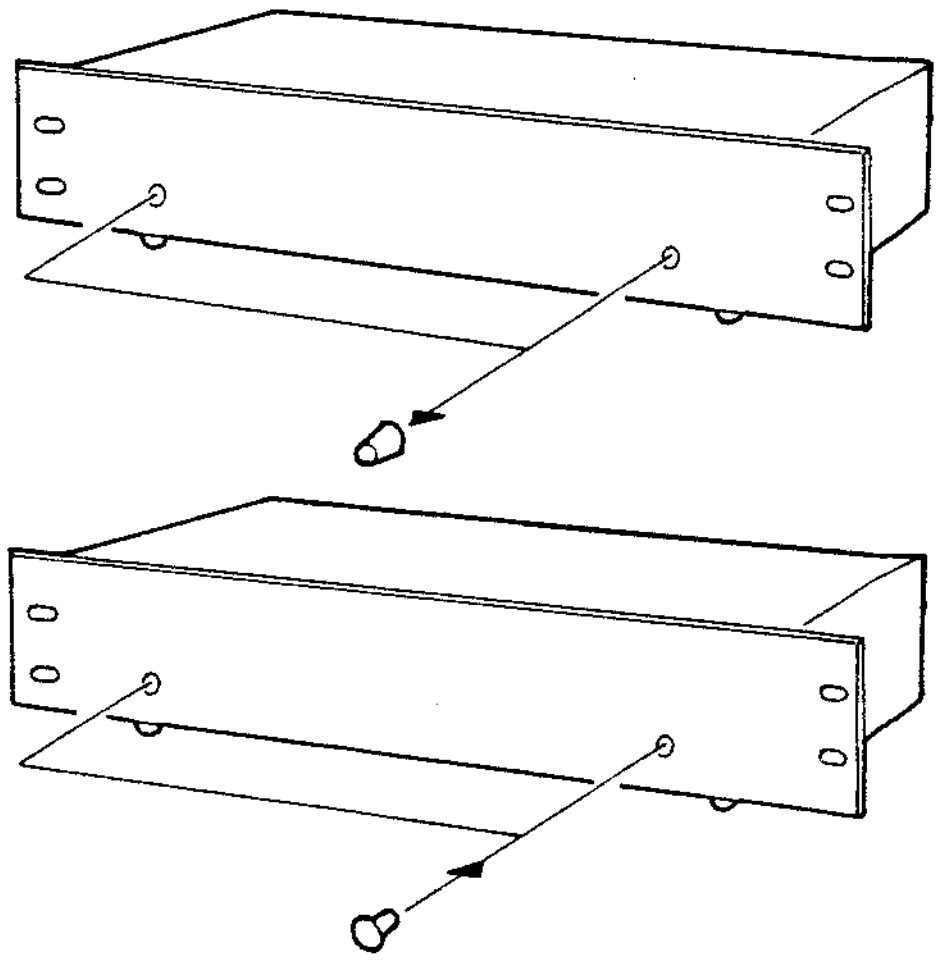

■ Connections of Remote Monitor Output Connectors:

(Example)

1 +14dB 300Ω
(optimum impedance 7.5kΩ)

2 Ground

3 } Relay contact
4 } (contact capacity up to DC24V 1A)

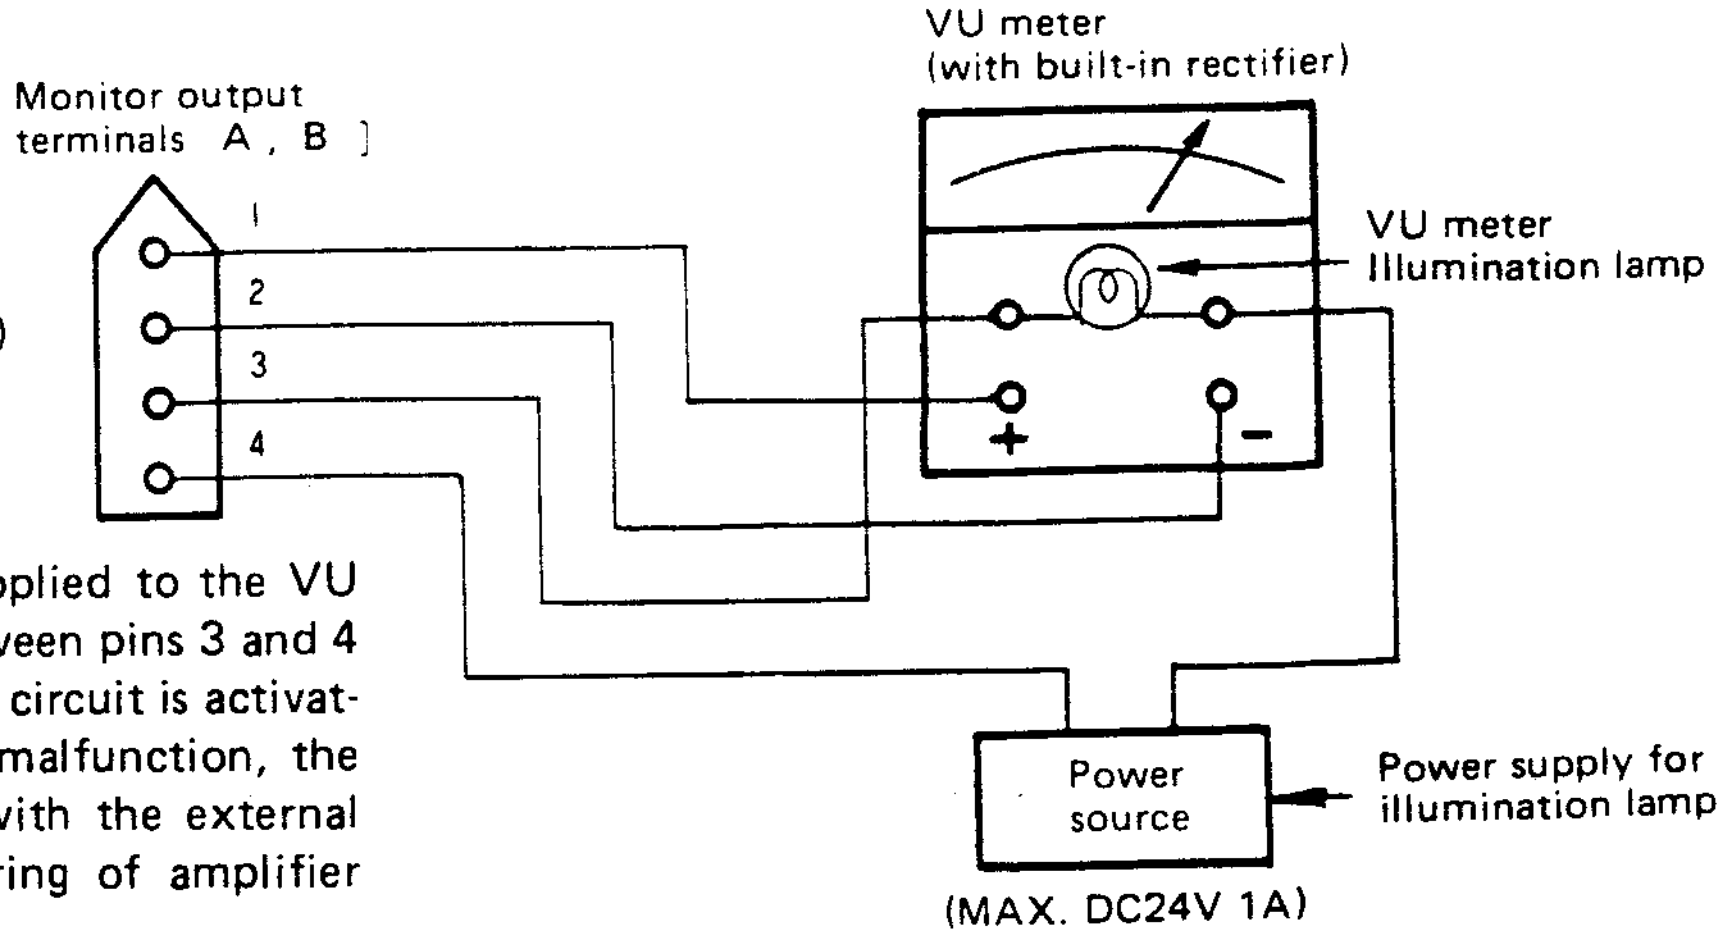
Monitor output terminals A , B]
1
2
3
4
VU meter
(with built-in rectifier)
VU meter
Illumination lamp
+
−
Power source
Power supply for illumination lamp
(MAX. DC24V 1A)

- In this configuration, power will be supplied to the VU meter lamp when the relay contacts between pins 3 and 4 are closed. Therefore, when the muting circuit is activated due to power-up or and amplifier malfunction, the light will go out. So in combination with the external VU meter, this allows remote monitoring of amplifier signal and status.

■ Connection of Plugs and Connectors:

1. Input connector (3-pin XLR-type connectors, male and female)

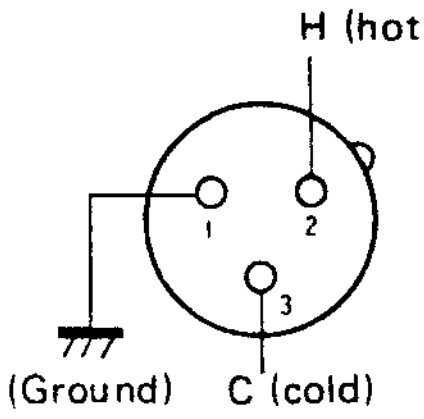
H (hot)
1
2
3
(Ground)
C (cold)

Wiring of input terminal

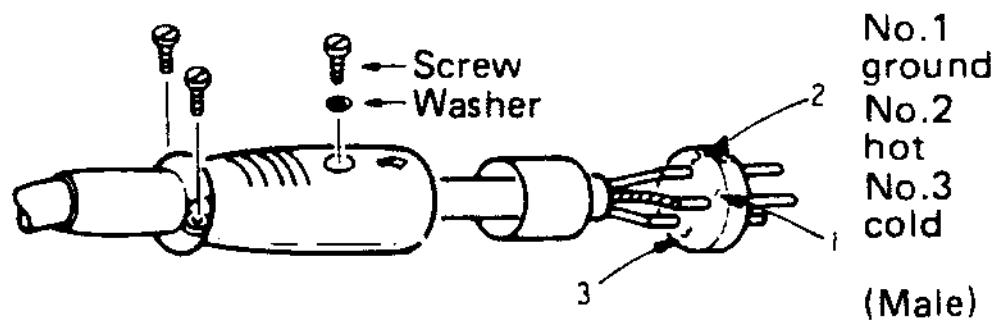
Screw
Washer
No.1 ground
No.2 hot
No.3 cold
1
2
3

(Male)

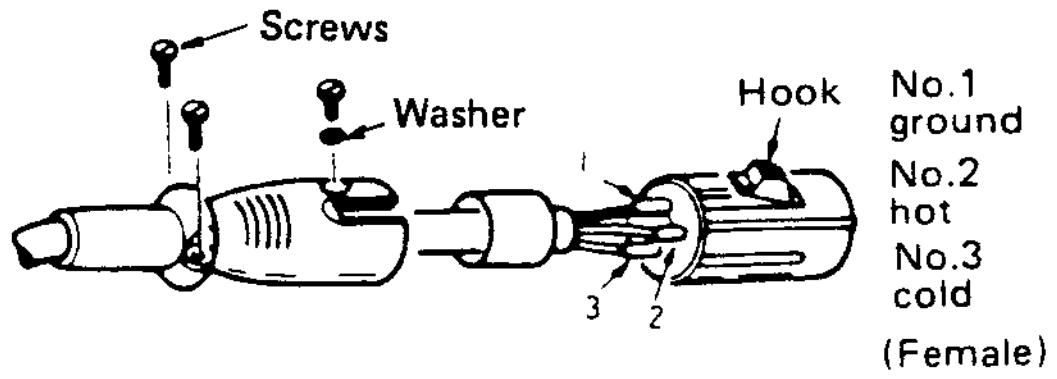
Screws
Washer
Hook
No.1 ground
No.2 hot
No.3 cold
1
2
3

(Female)

2. Tip-ring-sleeve phone plug

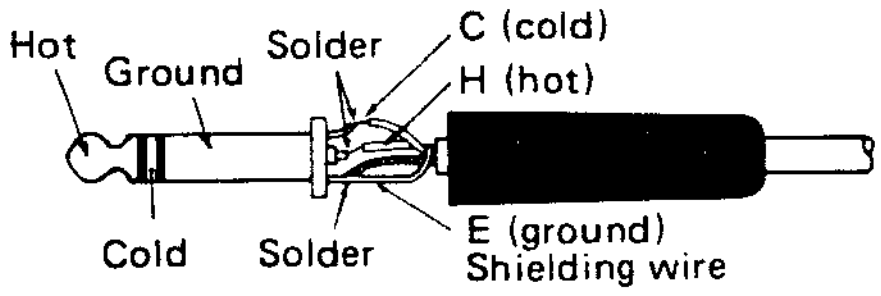
Hot
Ground
Solder
C (cold)
H (hot)
Cold
Solder
E (ground)
Shielding wire

3. Tip-sleeve phone plug (Speaker output terminal)

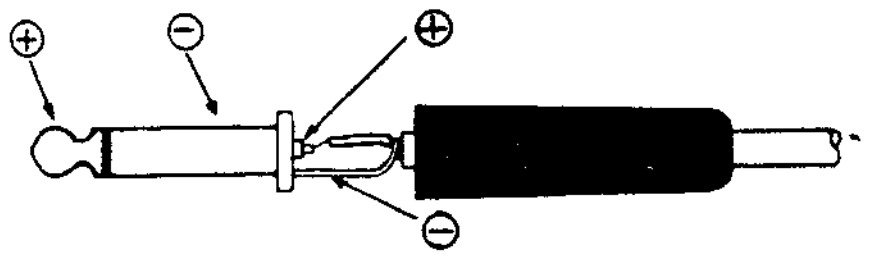

4. Nylon connector for monitor output (4-pin)(option)

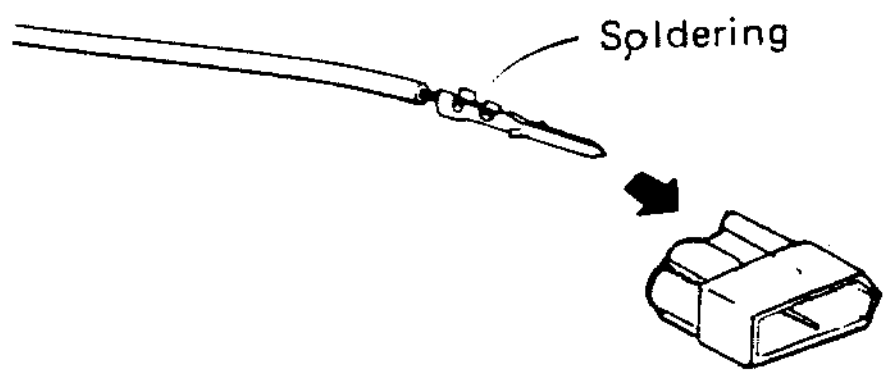

AIR FILTER CLEANING

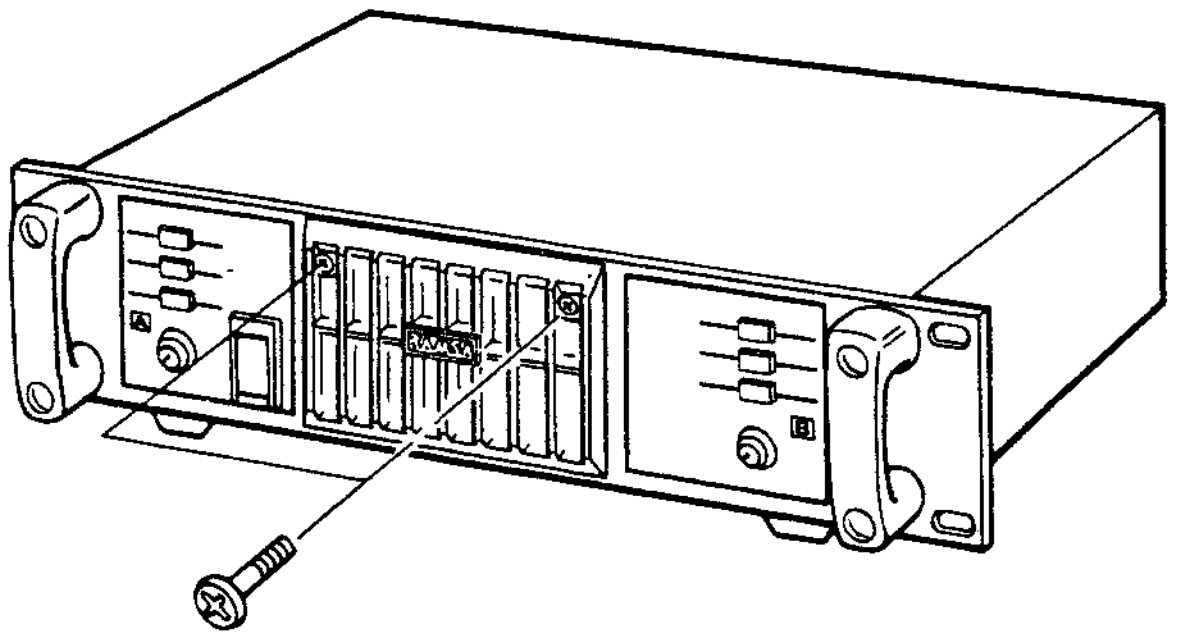

1. Remove the 2 fixing screws and remove the grille.
   *The air filter can now be removed.
2. Wash the filter with water and dry thoroughly.
3. Reinstall the filter and grille in their original positions and replace the fixing screws.

4

RACK MOUNTING

1. Loosen the fixing screws and detach the four rubber feet from the bottom.
2. Insert the mounting clips in the holes for the rubber feet.
3. Mount the power amplifier to the rack with four rack mounting screws (M5 x 12).

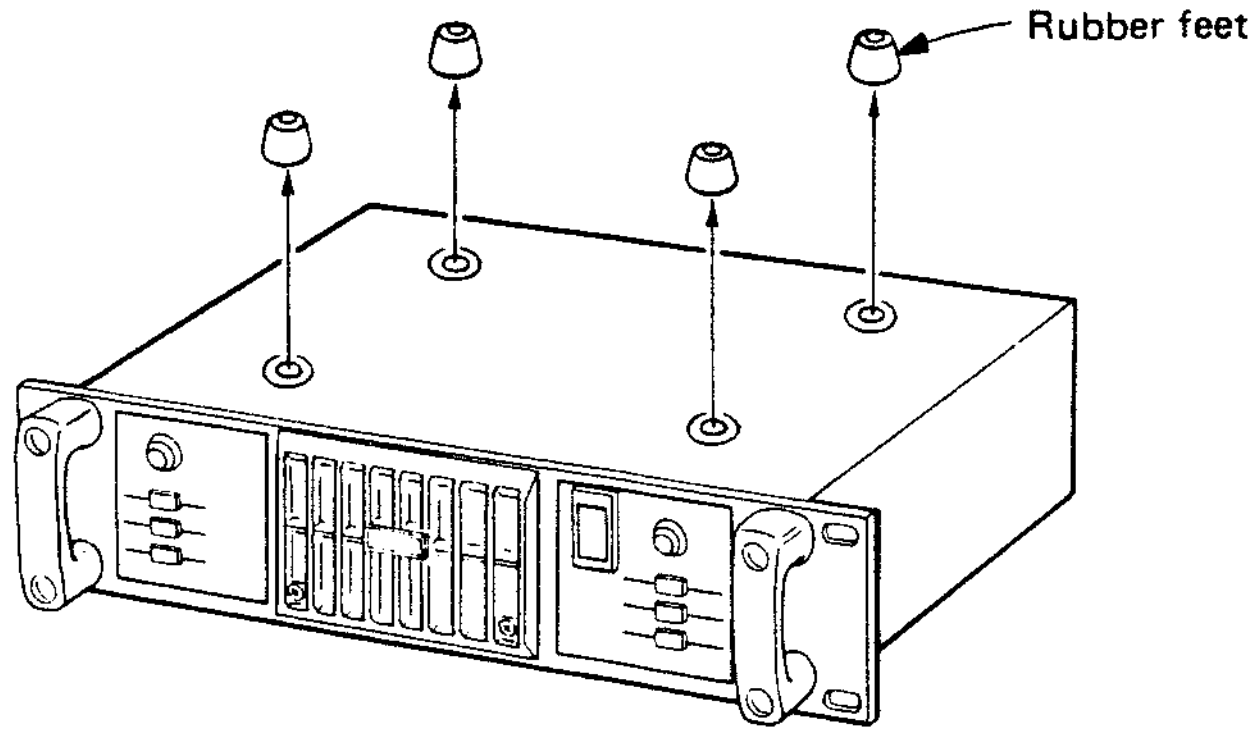

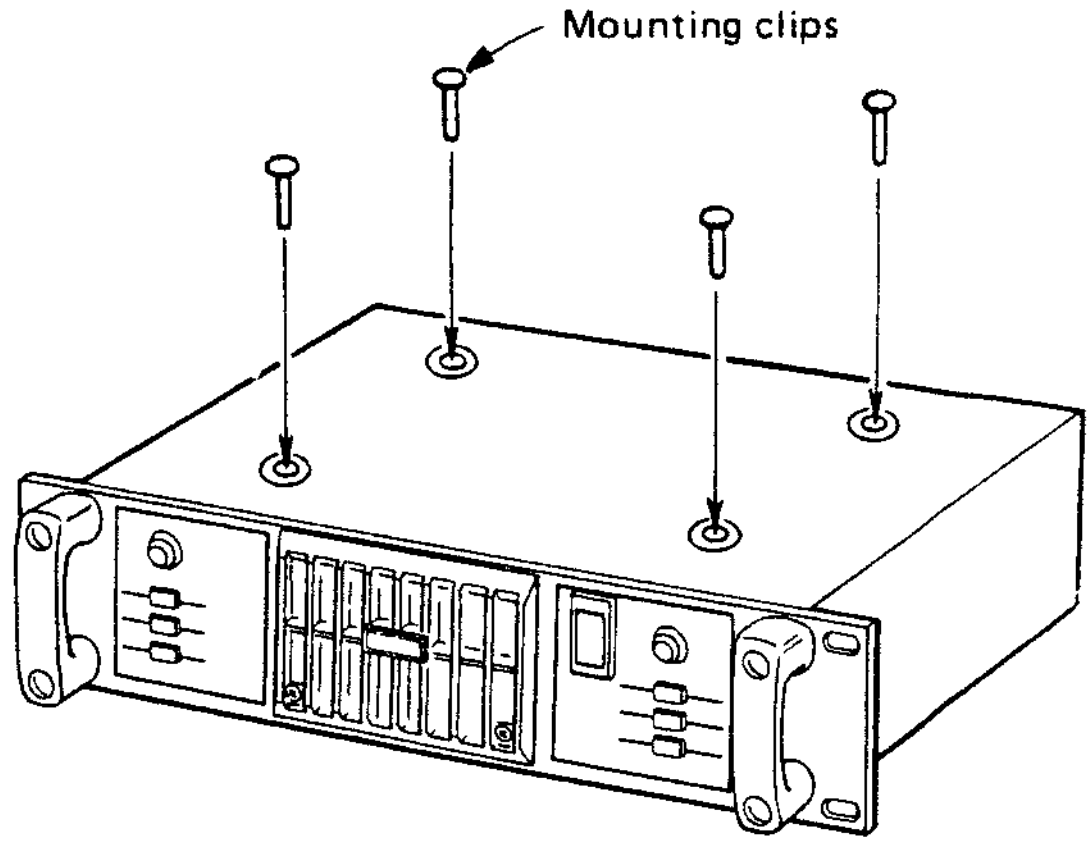

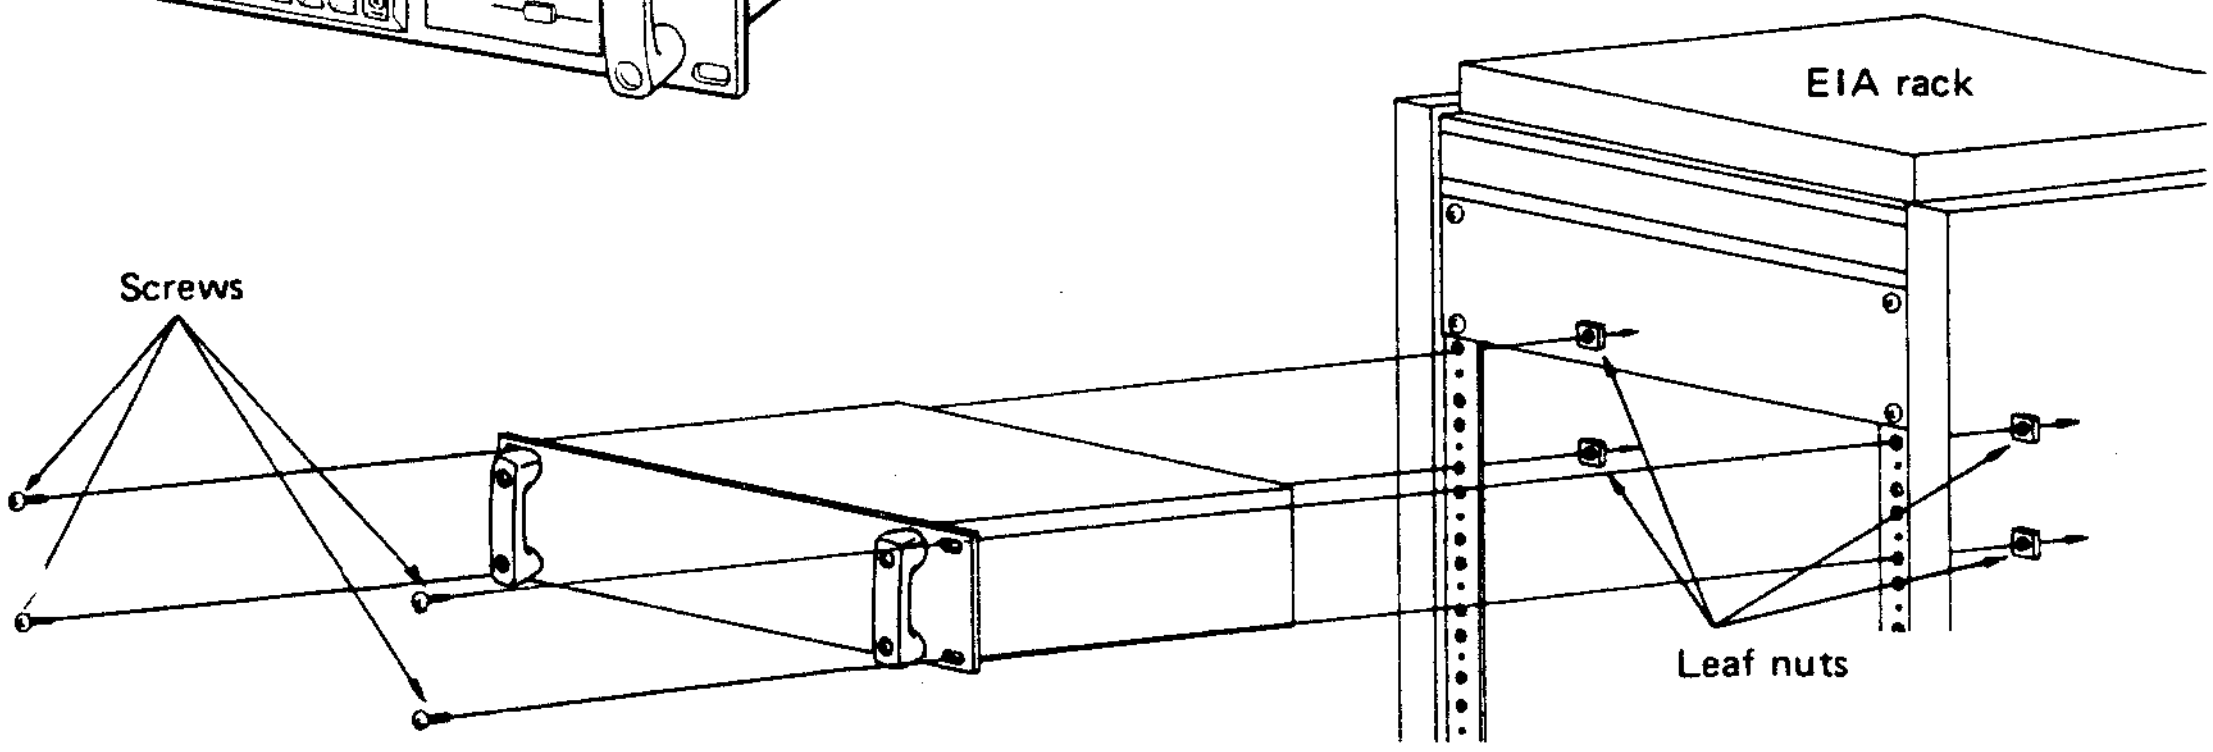

Note:

When transporting the machine while mounted in a rack, rear-fixing angles must be installed so that the rear of the amplifier will be secure during transportation. Use an angle with a thickness of at least 2 mm.

Rear-fixing angle:

A ... Rear-fixing angle for mounting side of rack.
B ... Rear-fixing angle for mounting on bottom of rack.
C ... Rear-fixing angle for mounting on rear of rack.

Remove the rear panel rubber stay.

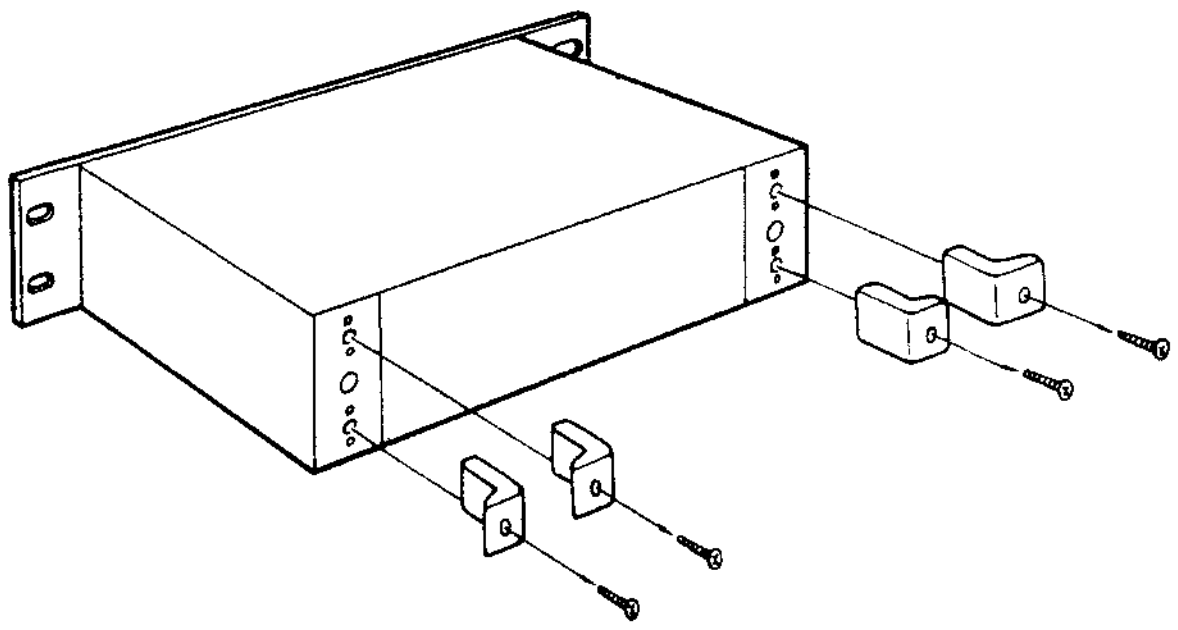

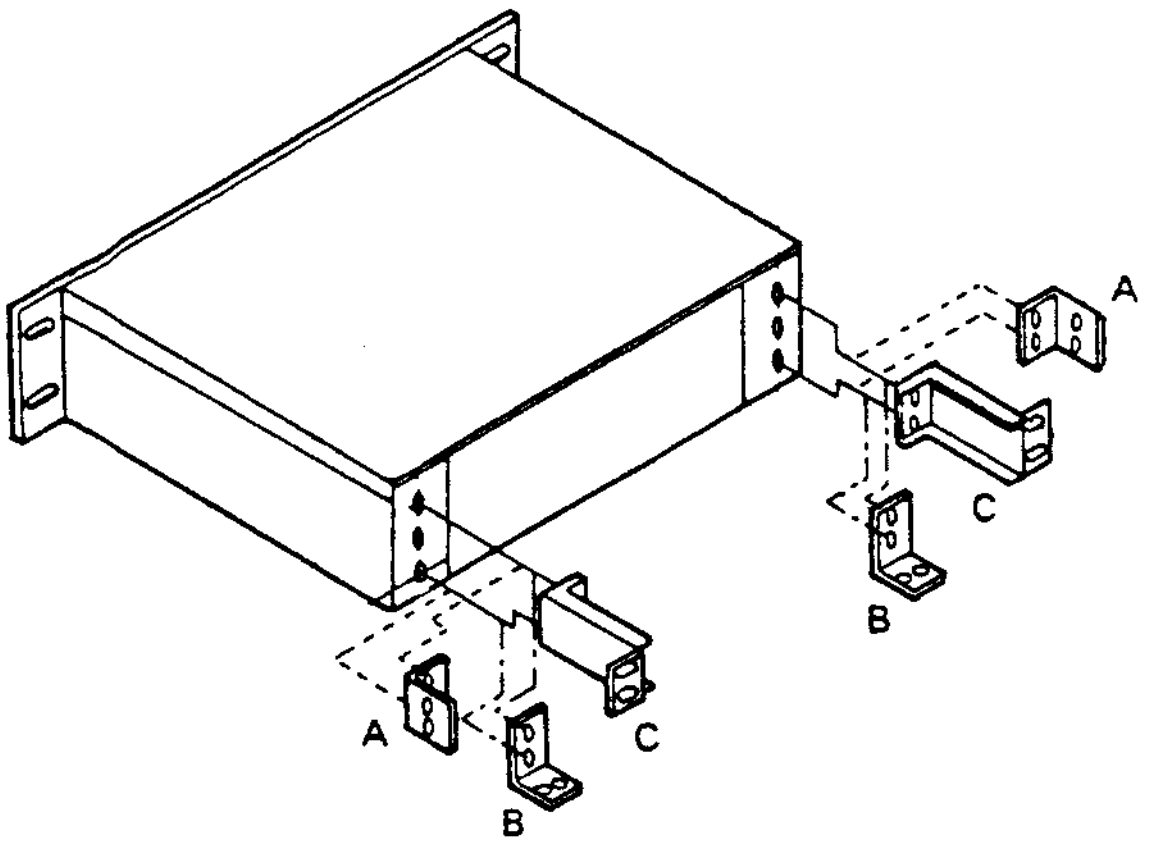

BLOCK DIAGRAM

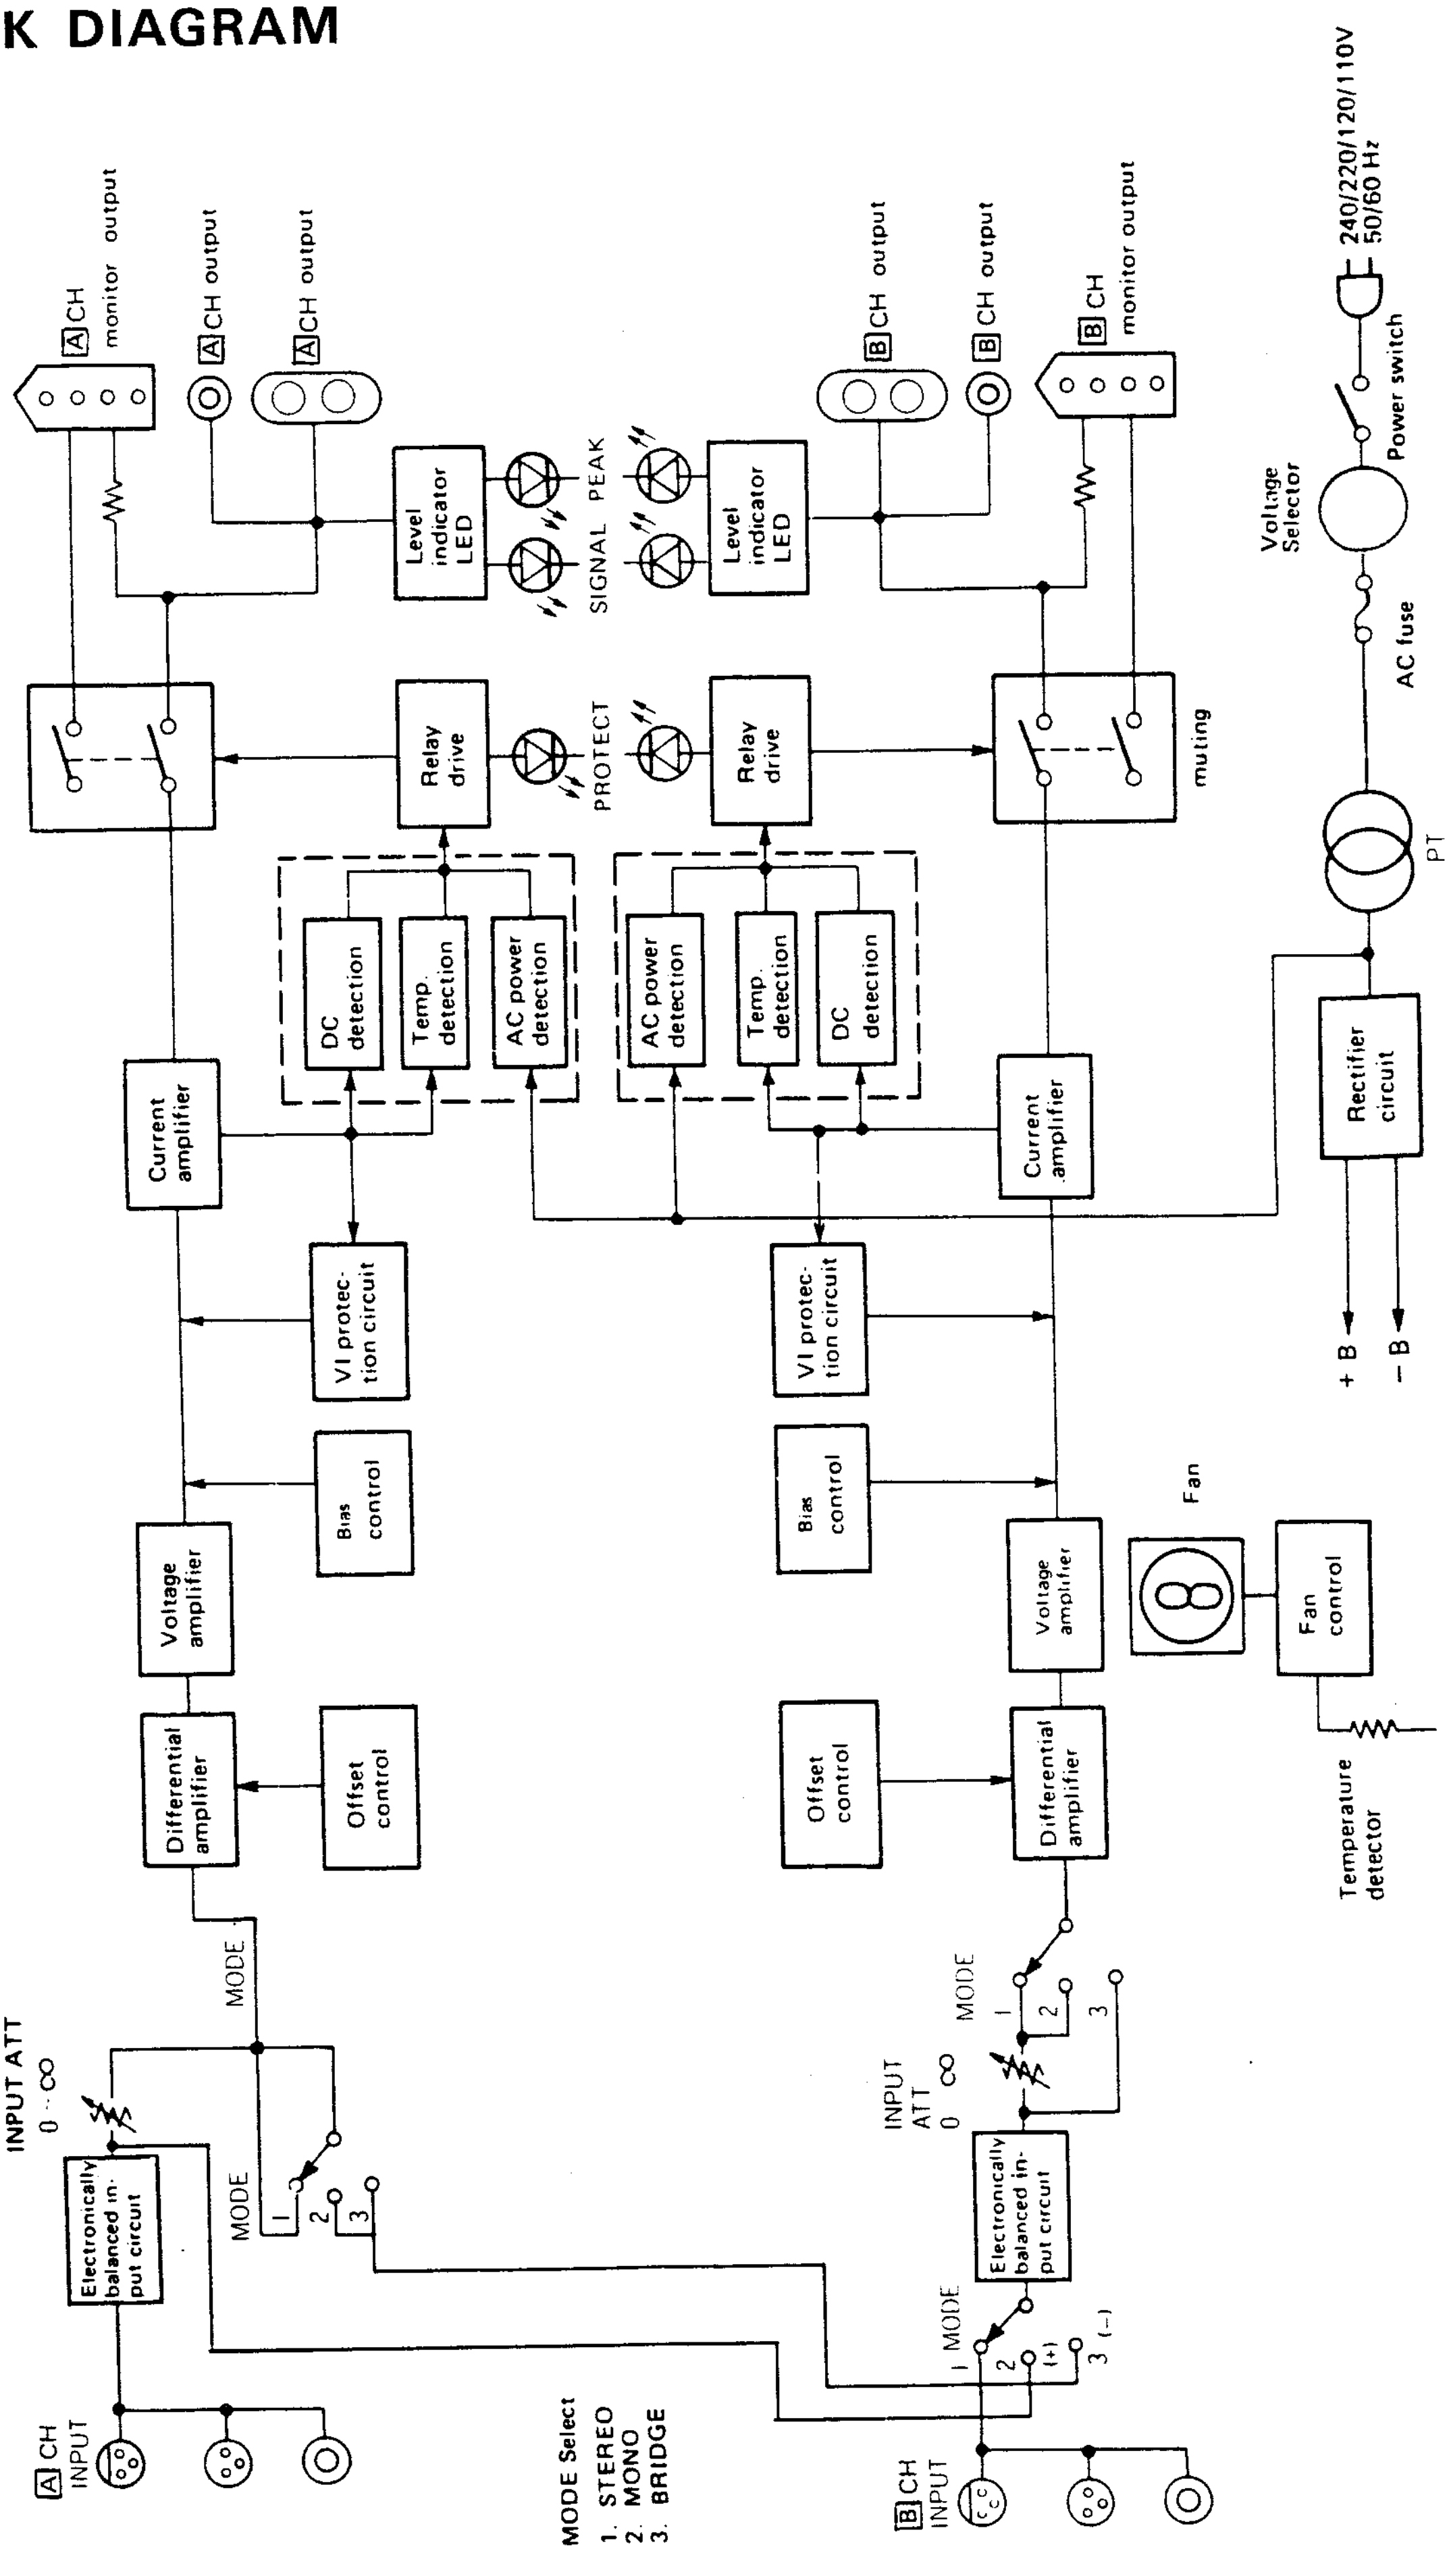
A CH monitor output
A CH output
A CH output
B CH output
B CH output
B CH monitor output
240/220/120/110V 50/60 Hz
Power switch
Voltage Selector
AC fuse
PT
Level indicator LED
SIGNAL
PEAK
Level indicator LED
Relay drive
PROTECT
Relay drive
muting
DC detection
Temp. detection
AC power detection
AC power detection
Temp. detection
DC detection
Current amplifier
Current amplifier
Rectifier circuit
+B
−B
VI protection circuit
VI protection circuit
Bias control
Bias control
Voltage amplifier
Voltage amplifier
Fan
Fan control
Differential amplifier
Offset control
Offset control
Differential amplifier
Temperature detector
MODE
INPUT ATT 0 ∞
Electronically balanced input circuit
MODE
1
2
3
MODE
1
2
3
INPUT ATT 0 ∞
Electronically balanced input circuit
MODE
1
2 (+)
3 (−)
A CH INPUT
B CH INPUT

MODE Select
1. STEREO
2. MONO
3. BRIDGE

5

POWER SOURCE VOLTAGE SETTING

At the time of shipment, the WP-9110C, WP-9220C are set for 240V AC power supply. Before putting it in operation, check the commercial voltage available in your region, and set the AC voltage selector according to the following procedure.

CAUTION:

At the time of setting the AC voltage regulator, invariably disconnect the power plug from its power outlet.
If incorrect voltage is set, the instrument may be damaged.
Make sure that the right power is used.

The AC voltage selector is located on the bottom. Set the voltage at the desired voltage as illustrated below.

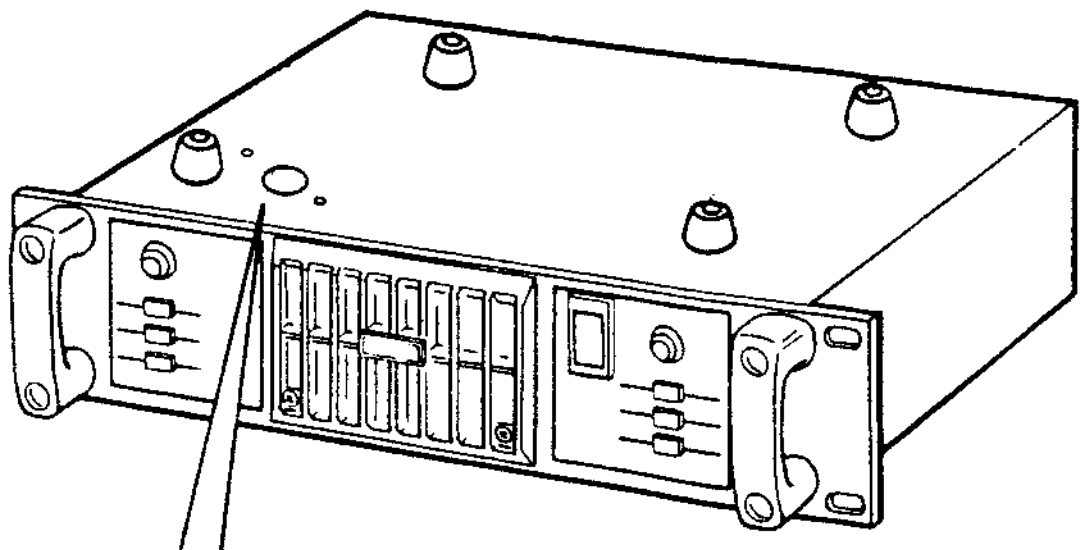

[Voltage indication]
The voltage indicated here is the actual set voltage. When the control is turned counterclockwise, the voltage is switched over in 4 stages: 240V,220V,110V, 120V.

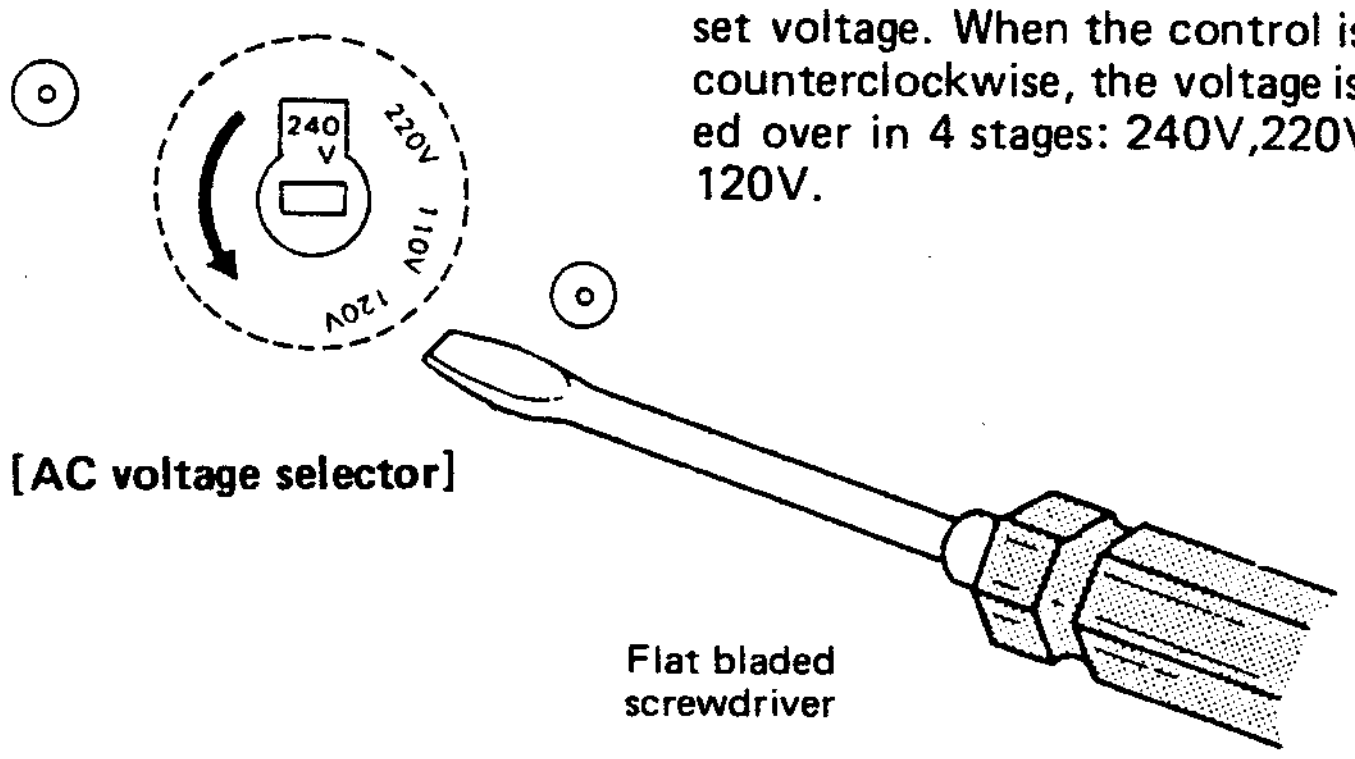

[AC voltage selector]

HOW TO LIFT GROUND

CAUTION :

To avoid short-circuit across amplifier output terminals, be sure to ground-lift the ground terminal on the AC line cord of the amplifier or the test equipment when testing the amplifier in bridge mode.

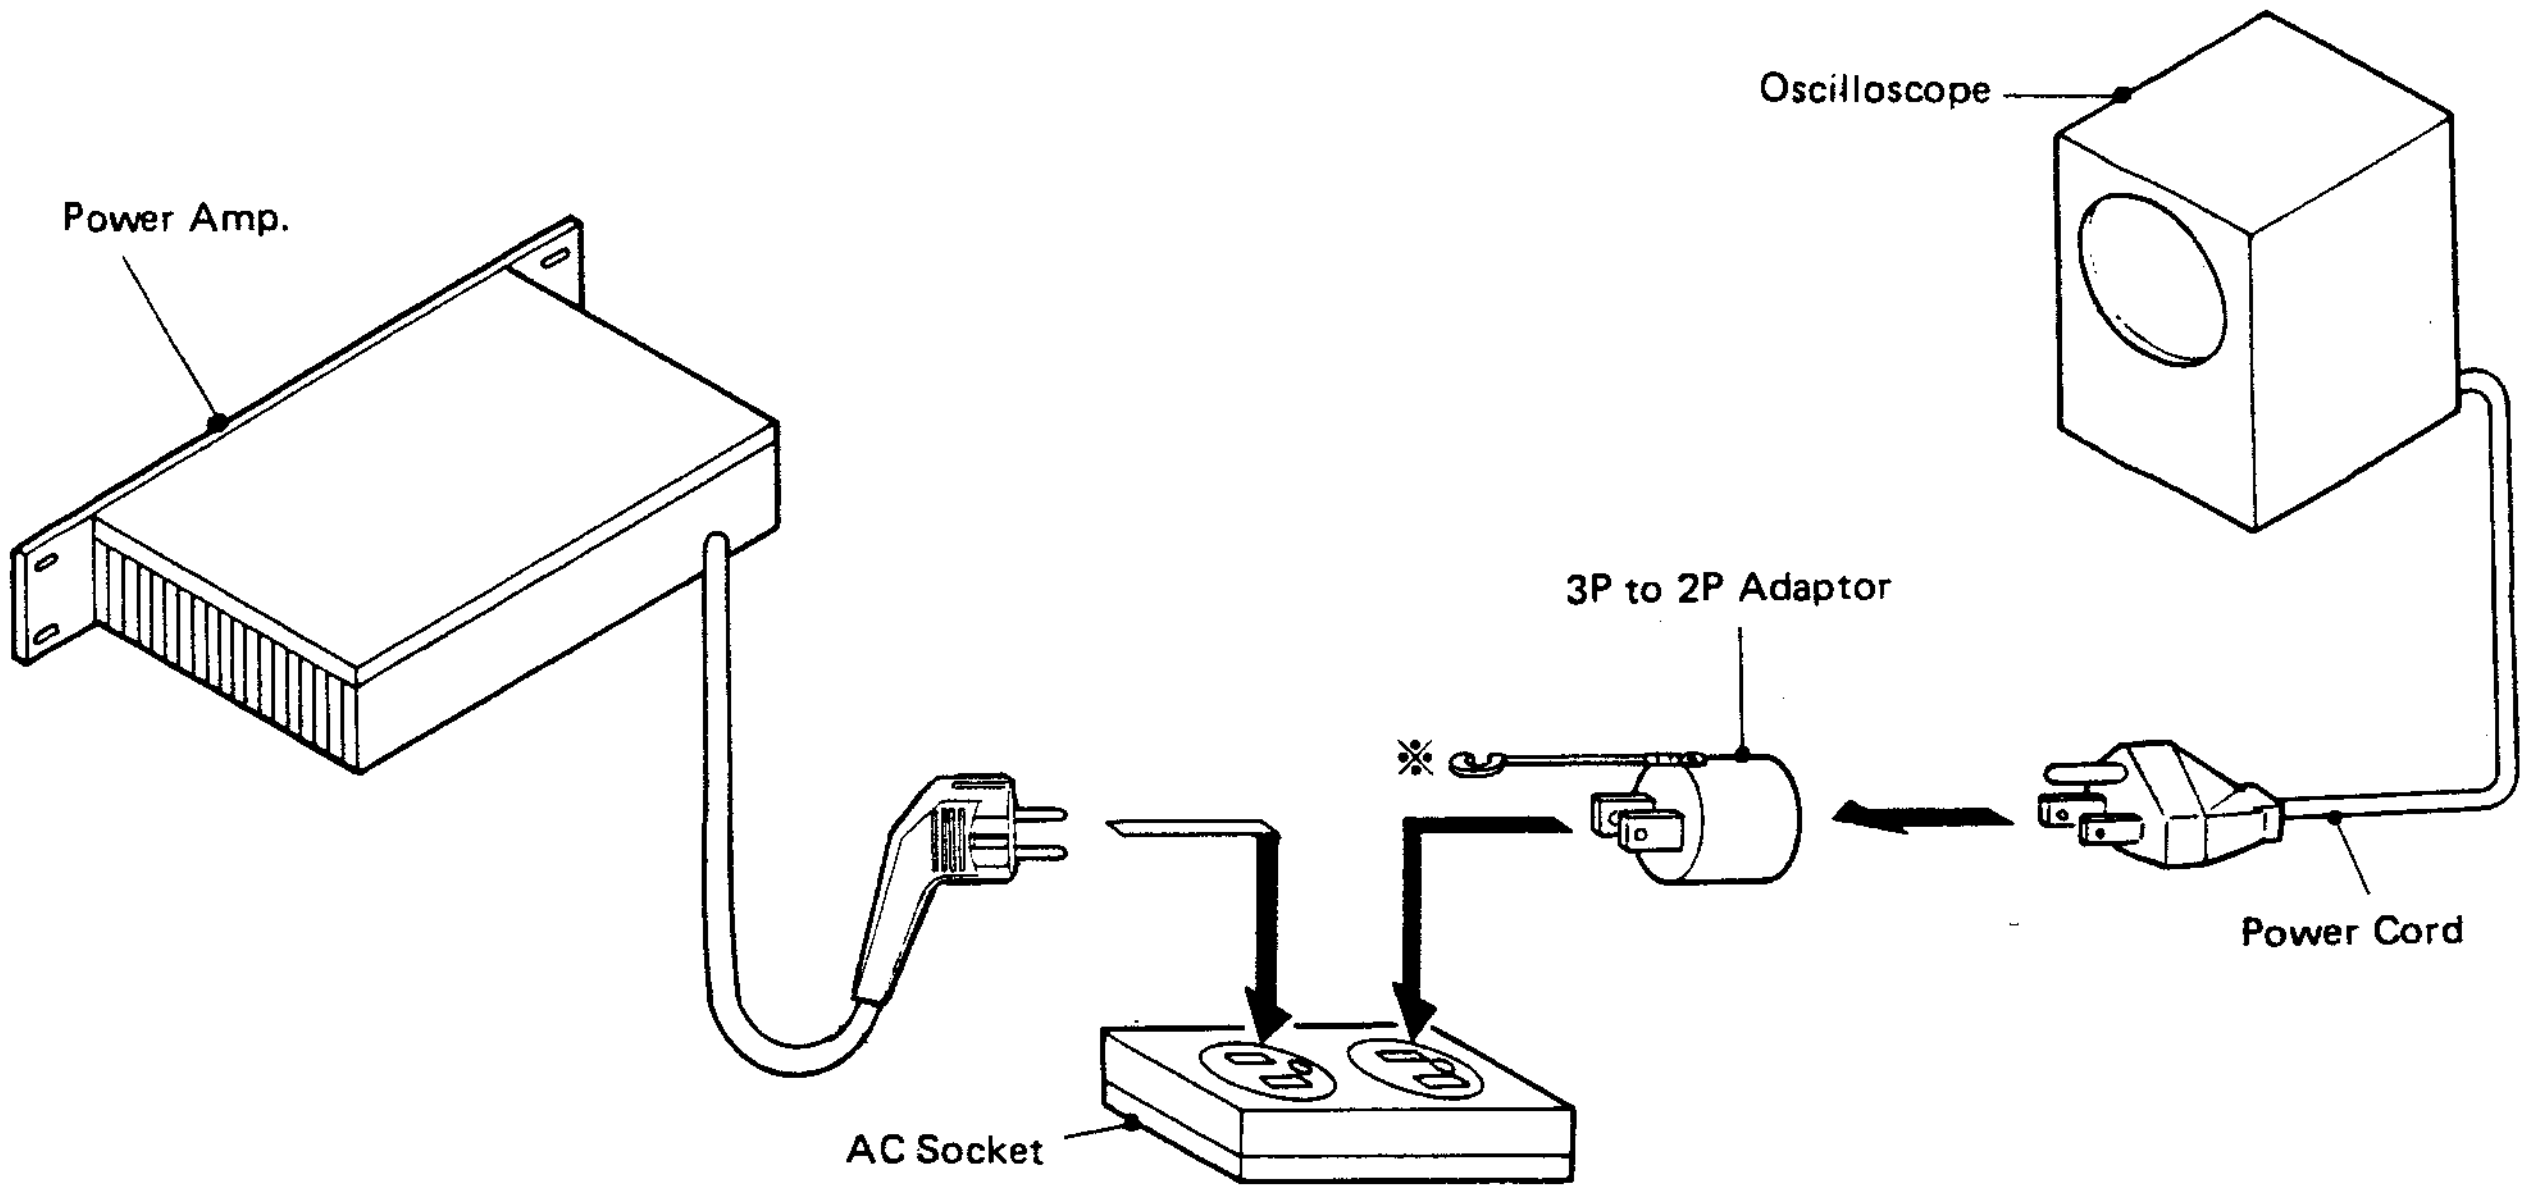
Oscilloscope
Power Amp.
3P to 2P Adaptor
※
Power Cord
AC Socket

※ This terminal must not contact any part of the outlet or plate.

DISASSEMBLY PROCEDURE

■ UPPER COVER REMOVAL

- Remove the eight screws ① and remove the upper cover.

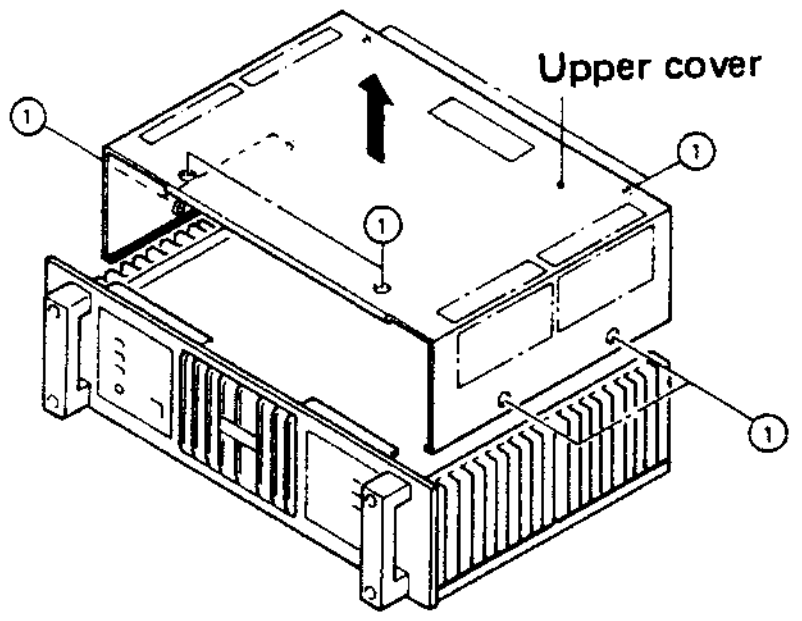
Upper cover
①
①
①
①

■ FRONT PANEL REMOVAL

- Remove the four screws ② and four washers ③, and remove the handles.
- Remove the four screws ④ and remove the front panel.

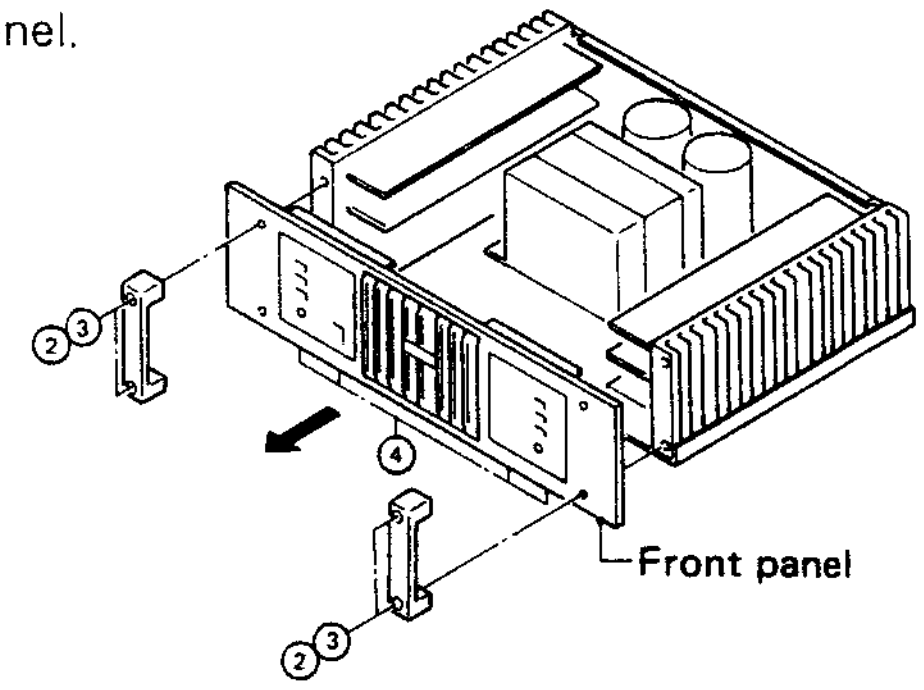
②③
④
Front panel
②③

■ REAR PANEL REMOVAL

- Remove the four screws ⑤ and remove the cable hook.
- Remove the seven screws ⑥ (WP-9220C) of five screws (WP-9110C) and remove the rear panel.

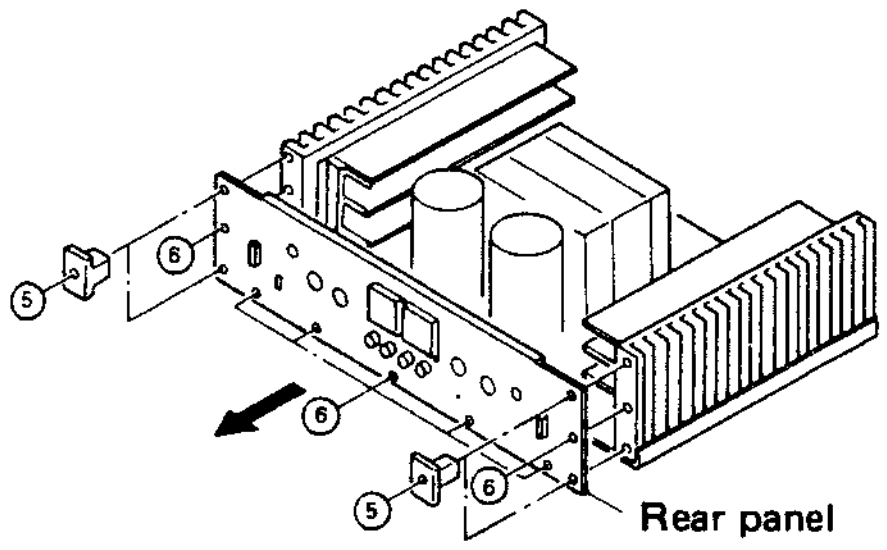
⑤
⑥
⑥
⑤
⑥
Rear panel

■ HEATSINK BLOCK REMOVAL

- Remove the three screws ⑦ and remove the A channel heatsink block.
- Remove the three screws ⑧ and remove the B channel heatsink block.

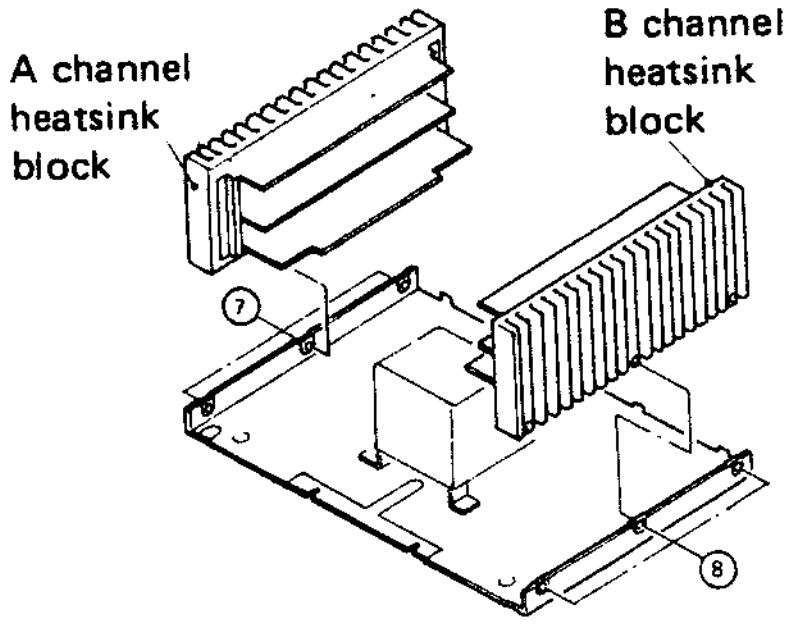
A channel heatsink block
B channel heatsink block
⑦
⑧

■ CIRCUIT BOARD REMOVAL

(1) POWER CIRCUIT BOARD REMOVAL

- Remove the twelve screws ⑨ and remove the A channel power circuit board.
- The B channel power circuit board can be removed in the same way.

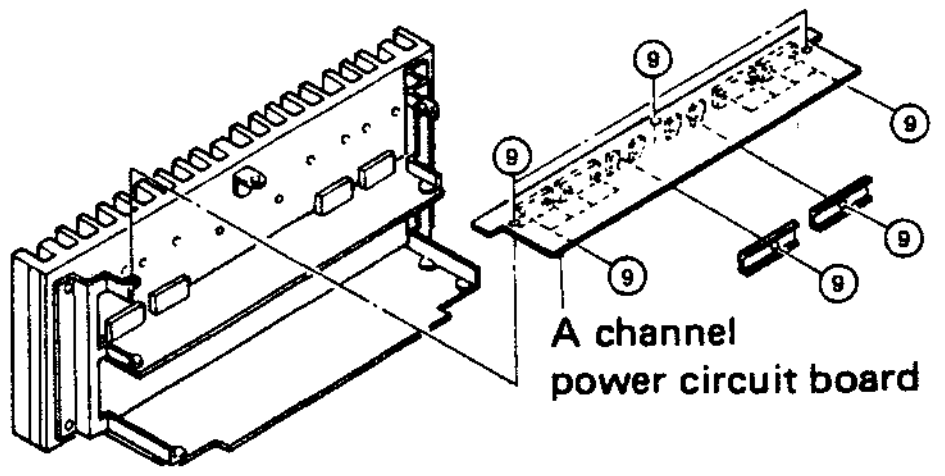
⑨
⑨
⑨
⑨
⑨
⑨
A channel power circuit board

(2) DRIVER CIRCUIT BOARD REMOVAL

- Remove the five screws ⑩ and remove the A channel driver circuit board.
- The A channel driver circuit board can be removed in the same way.

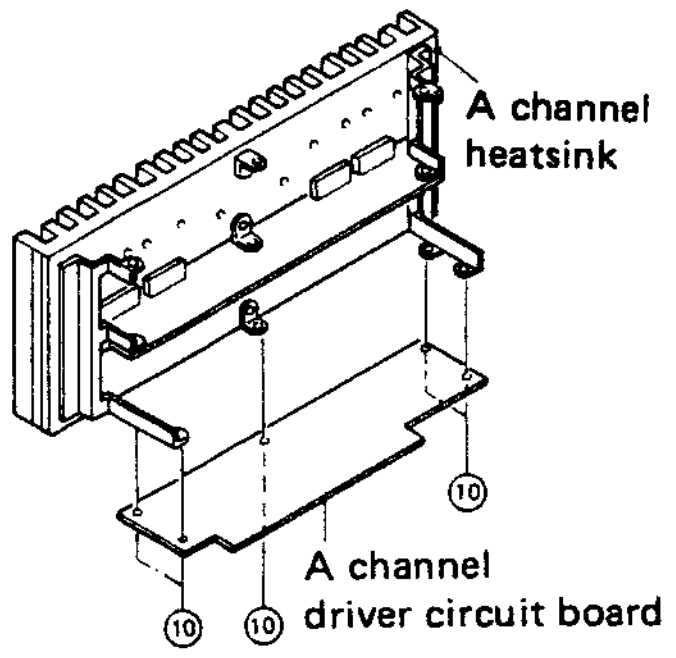
A channel heatsink
⑩
A channel driver circuit board
⑩
⑩

(3) POWER TRANSISTOR CIRCUIT BOARD (WP-9220 ONLY)

- Remove the eleven screws ⑪ and remove the A channel power driver circuit board.
- The B channel power driver circuit board can be removed in the same way.

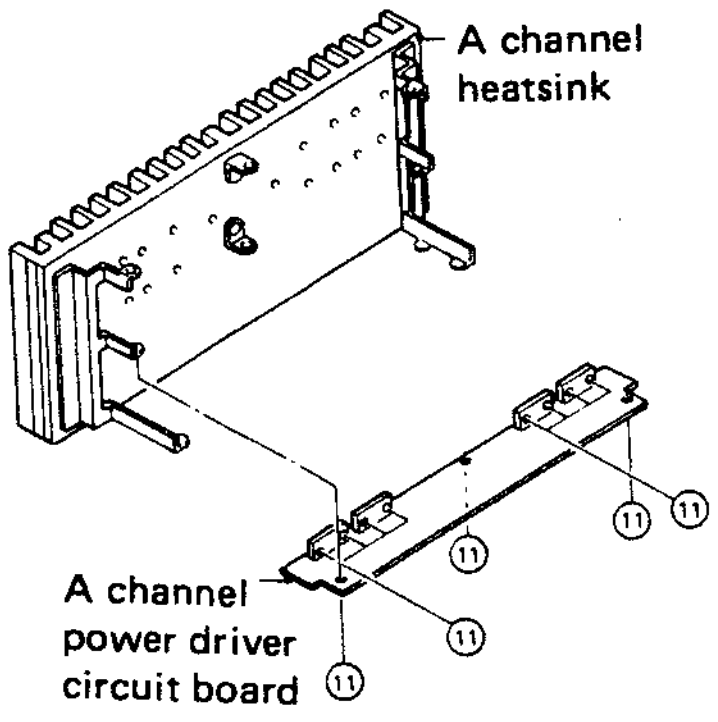
A channel heatsink
⑪
⑪
⑪
A channel power driver circuit board
⑪
⑪

PERFORMANCE CHECK

After performing any repairs to the power amplifier, make the following measurements. Should the measured results differ from those shown, then refer to the adjustment procedures on the indicated pages.

MEASUREMENT	CHANNEL	TEST POINT	RESULT
1. DC OFFSET (Adjustment procedure : page18)	CH.A	Voltage between TP303 and TP302	0 Volts
	CH.B	Voltage between TP603 and TP602	
2. BIAS (Adjustment procedure : page 18)	CH.A	Voltage between TP301 and TP303	13.5 millivolts
	CH.B	Voltage between TP601 and TP603	

3. POWER OUTPUT/THD

Procedure :
- a). Connect a 4-ohm load across the CHANNEL A speaker output terminals.
- b). Set attenuator control on front panel to "0" (maximum).
- c). Apply a 20kHz sine wave to the CHANNEL A input. (Stereo Mode).
- d). Adjust the signal level so that the voltage across the 4-ohm load indicates that the amplifier is at its rated output.

  Power level : WP-9110C.......24.5 Volts (150 Watts)
  WP-9220C.......34.6 Volts (300 Watts)
- e). Measure THD at the output.

  THD should be .1% or less.
- f). Repeat steps a)-e) for Channel B.

4. After completing measurements 1-3, repeat DC offset measurement, and readjust if necessary.

7

TECHNICAL EXPLANATION

■ SUPERRAIL SYSTEM

Two separate power supply voltages are used; a ±74 volt supply for the front-end/drive circuit, and a ±65 volt supply for the output circuit. This high-voltage drive stage greatly reduces the possibility of a signal becoming distorted before it even reaches the output stage.

Since the inherent distortion is so low, the amount of negative feedback used is kept to a minimum.

Negative feedback is commonly used to improve the stability of an amplifier, but in doing so may cause some degradation of the sound quality. So by using the superrail system and minimal negative feedback, the sound quality is good even when the amplifier is driven to clipping level, and the high level of stability results in more reliable operation and longer amplifier life.

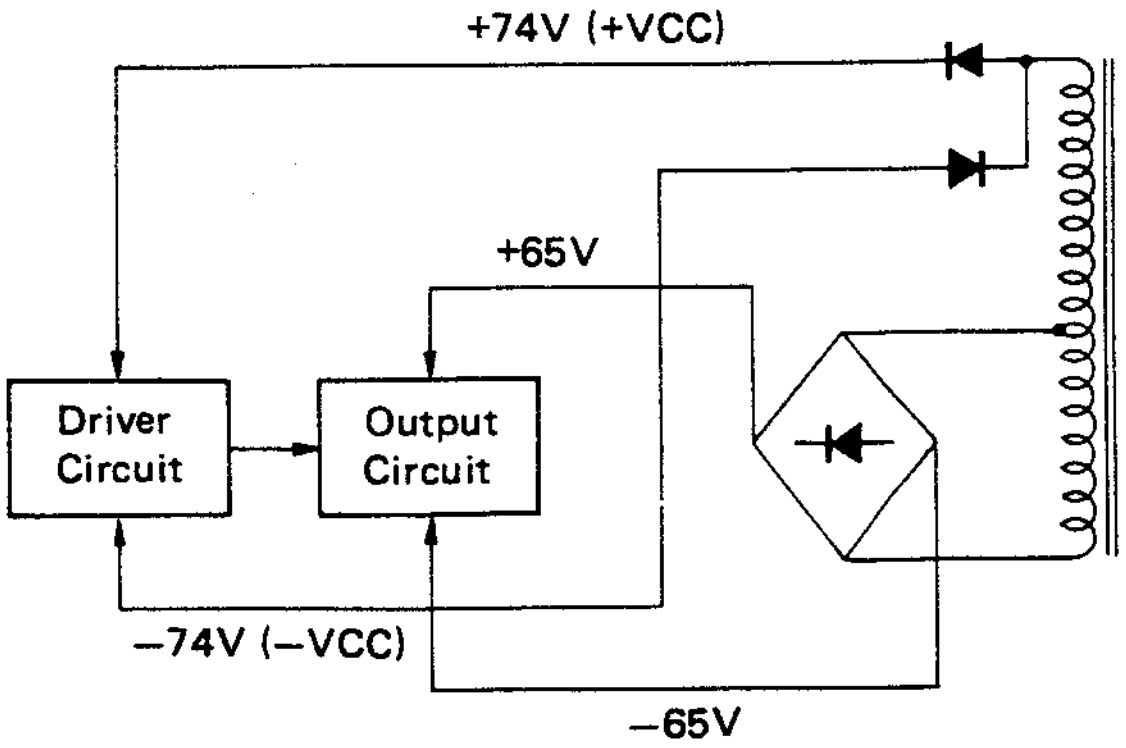
+74V (+VCC)
+65V
Driver Circuit
Output Circuit
−74V (−VCC)
−65V

(Fig. 1)

■ FAN CONTROL CIRCUIT

At normal operating temperature, the resistance of the thermistor is low. The resulting low voltage at pin 6 of IC551 causes the voltage of pin 7 to go high. This turns Q1 on, effectively putting a short-circuit across zener diode D2. The voltage across D1 is then applied to the base of Q2, which supplies the low level of current required to run the fan at low speed.

As the amplifier heats up, the resistance of the thermistor increases, causing the voltage at pin 6 of IC551 to rise to the point at which pin 7 goes low. This turns Q1 off, causing the voltage across D1 + D2 to be applied to the base of Q2. This increase in forward-bias results in a higher current flow which rotates the fan at high speed.

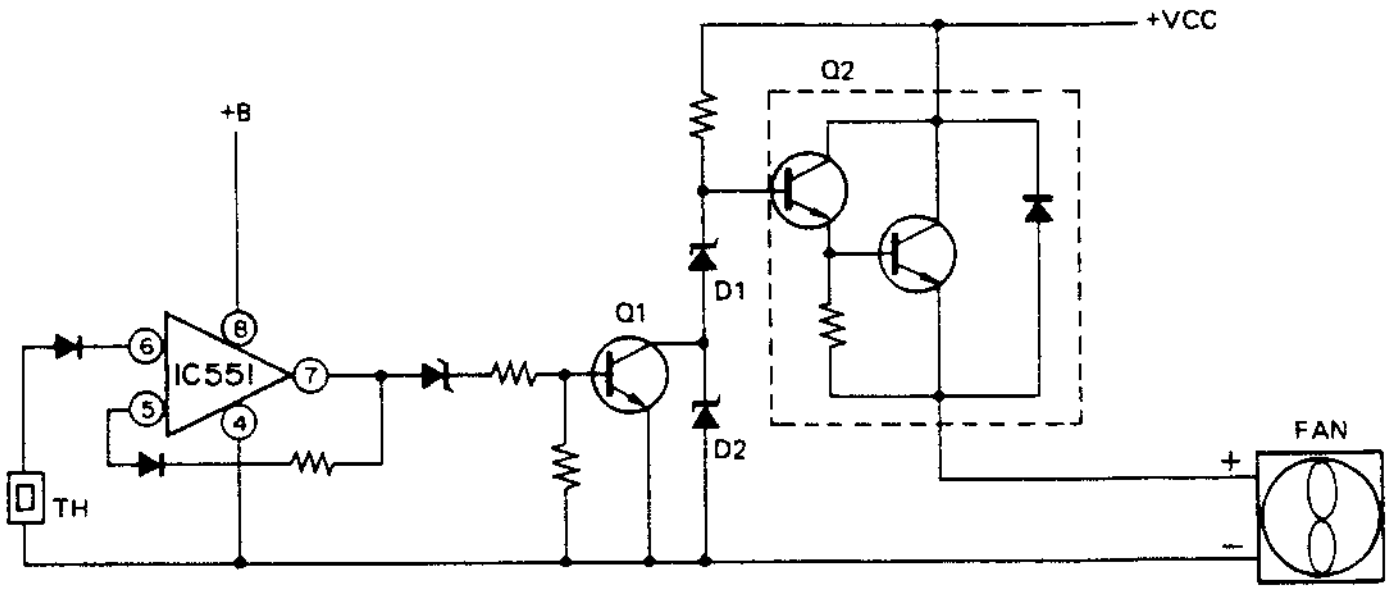
+VCC
Q2
+B
D1
Q1
IC551
⑥
⑤
⑧
⑦
④
D2
TH
FAN
+
−

(Fig.5)

■ Voltage/Current Detection Protection Circuit

This circuit protects the output transistors.

If there is an overload or output short by allowing a portion of the input signal to bypass the output transistors.

NOTE: Output transistors Q310, 311 (WP-9110C/9220C) and Q312-315 (WP-9220C only) are not shown.

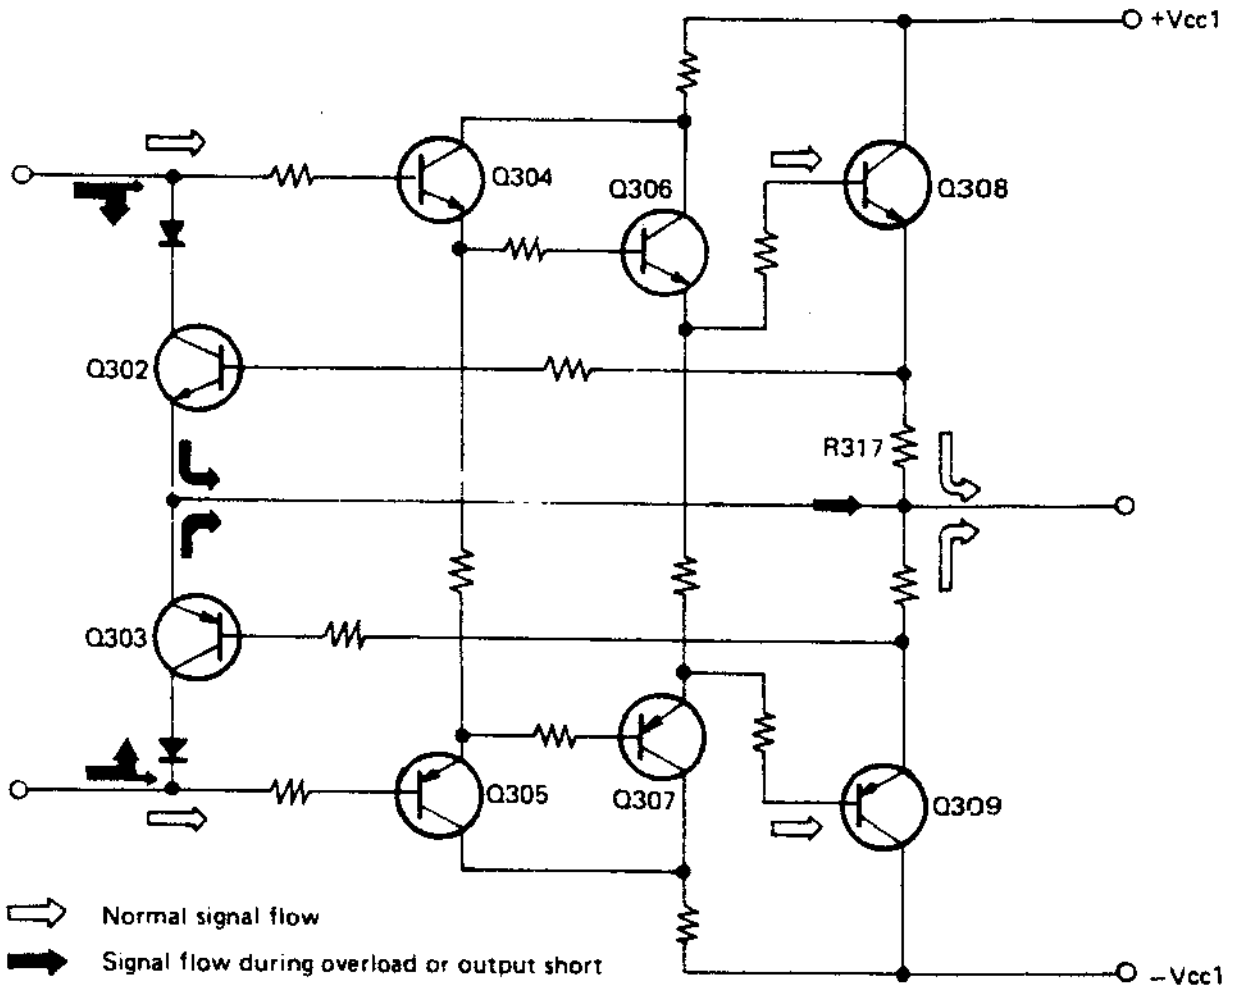
+Vcc1
Q304
Q306
Q308
Q302
R317
Q303
Q305
Q307
Q309
−Vcc1
Normal signal flow
Signal flow during overload or output short

Fig. 1

Overload or output short

↓

Excessive current flows through output transistors.

↓

Voltage across R317 and R318 increase.

↓

Q302 and Q303 turn on.

↓

Input signal flows through Q302 and Q303.

↓

Output transistors input signal decreases.

↓

Current flow through output transistors decreases.

NOTE: The above diagrams refer to "A" channel only. Operation of "B" channel Voltage/Current Detection Protection Circuit is the same. Refer to schematic diagram for correct component reference numbers.

■ Muting Circuit

The amplifier output is operational 5 to 8 seconds after the power switch is turned on, and is disconnected immediately when the power switch is turned off. This prevents any electrical click noise from occurring when the amplifier is turned on and off.

Power switch is turned on

↓

IC252 Pin ⑥ goes high

↓

Q251 is turned off

↓

Relay RL251 is open

↓

C254 starts to charge

↓

IC252 Pin ⑧ voltage gradually increases

↓

After 4 to 6 seconds, IC252 Pin ⑧ reaches its reference level (approx. 1.4 volts)

↓

IC252 Pin ⑥ goes low

↓

Q251 turns on

↓

Relay RL251 closes, allowing signal to pass to output

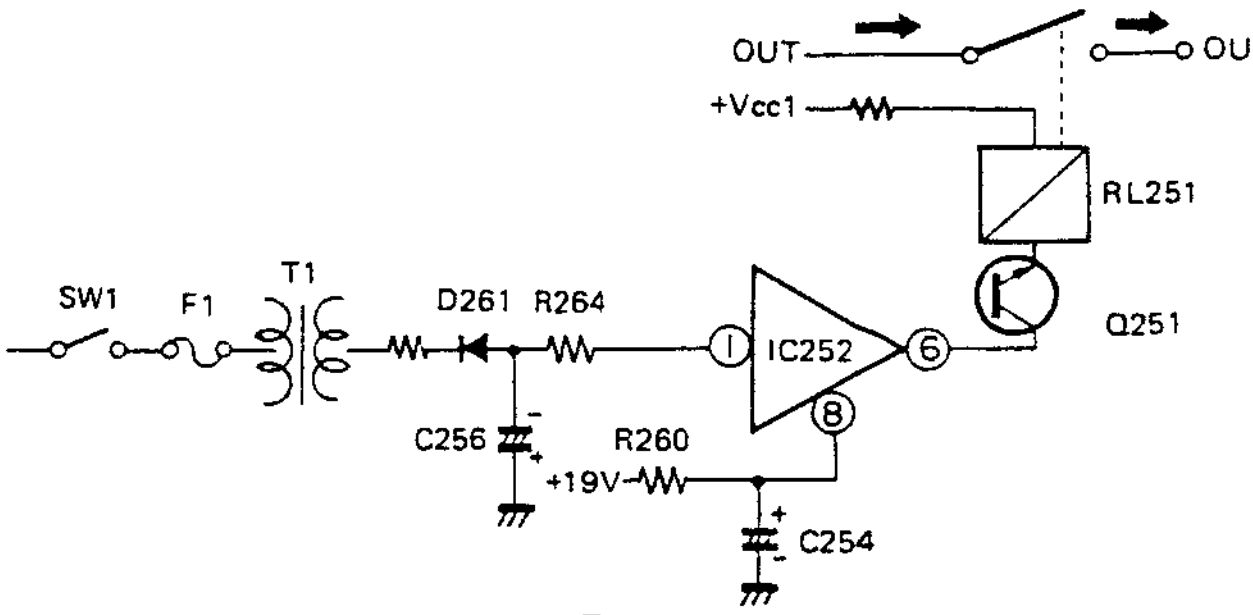

Fig. 2

Power switch is turned off

↓

IC252 Pin ① voltage goes positive

↓

IC252 Pin ⑥ goes high

↓

Q251 turns off

↓

RL251 opens, disconnecting signal from output

↓

Amplifier main power supply discharges

NOTE: The above diagrams refer to "A" channel only. Operation of "B" channel Muting Circuit is the same. Refer to schematic diagram for correct component reference numbers.

DC Detection Circuit

This circuit protects the speakers by disconnecting the output if a DC component is present at the output.

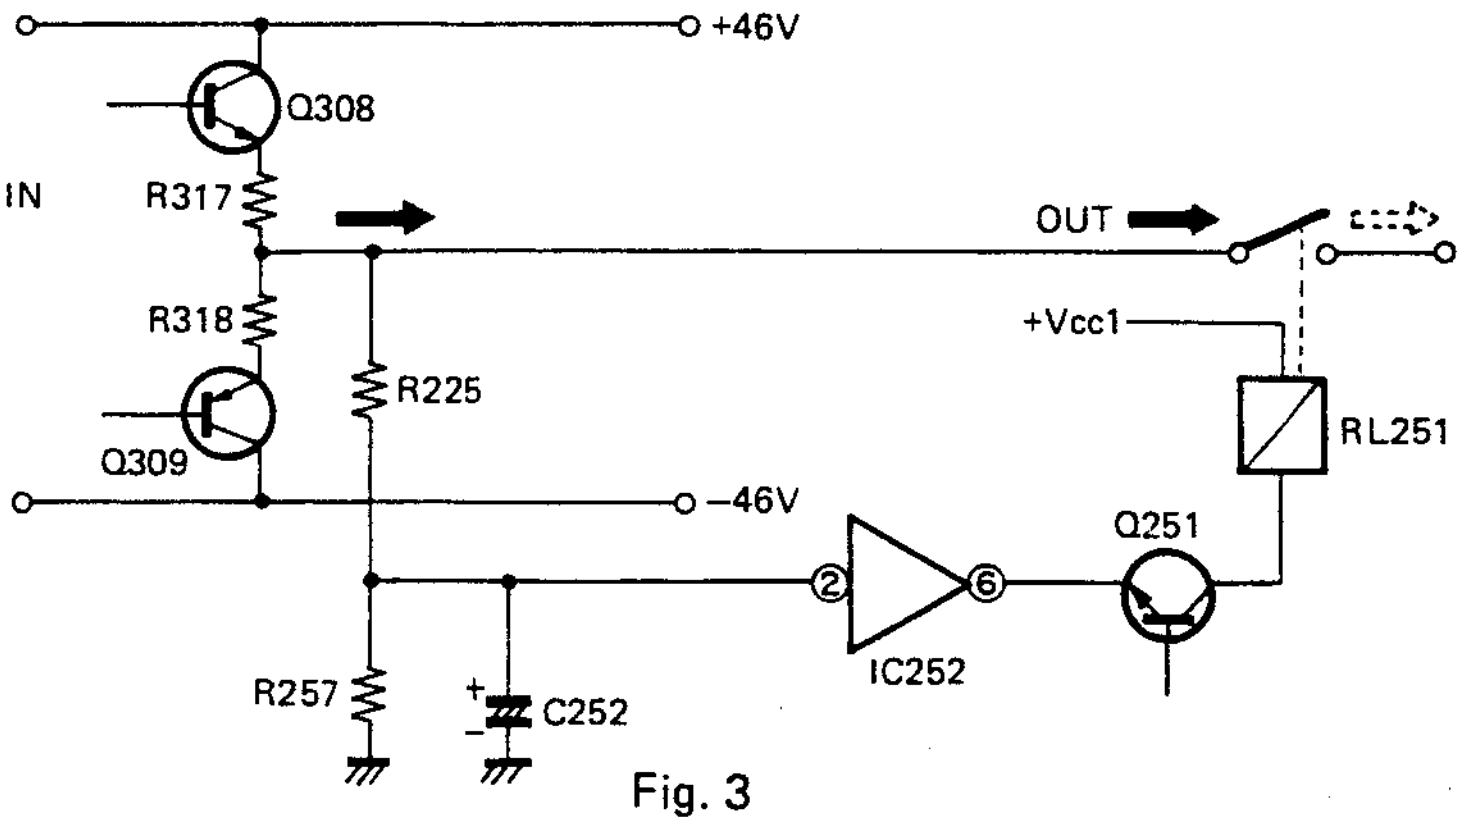
+46V
Q308
IN
R317
OUT
R318
+Vcc1
R225
RL251
Q309
−46V
Q251
②
⑥
IC252
R257
C252

Fig. 3

DC component is present at output

↓

C252 becomes charged

↓

IC252 Pin ② voltage increases (Approx. 0.6V)

↓

IC252 Pin ⑥ goes high

↓

Q251 turns off

↓

RL251 opens

↓

Output is disconnected

NOTE: The above diagrams refer to "A" channel only. Operation of "B" channel DC Detection is the same.
Refer to schematic diagram for correct component reference numbers.

Temp. Detection Circuit

This circuit protects the output transistors and power transformer by disconnecting the output if they begin to overheat.

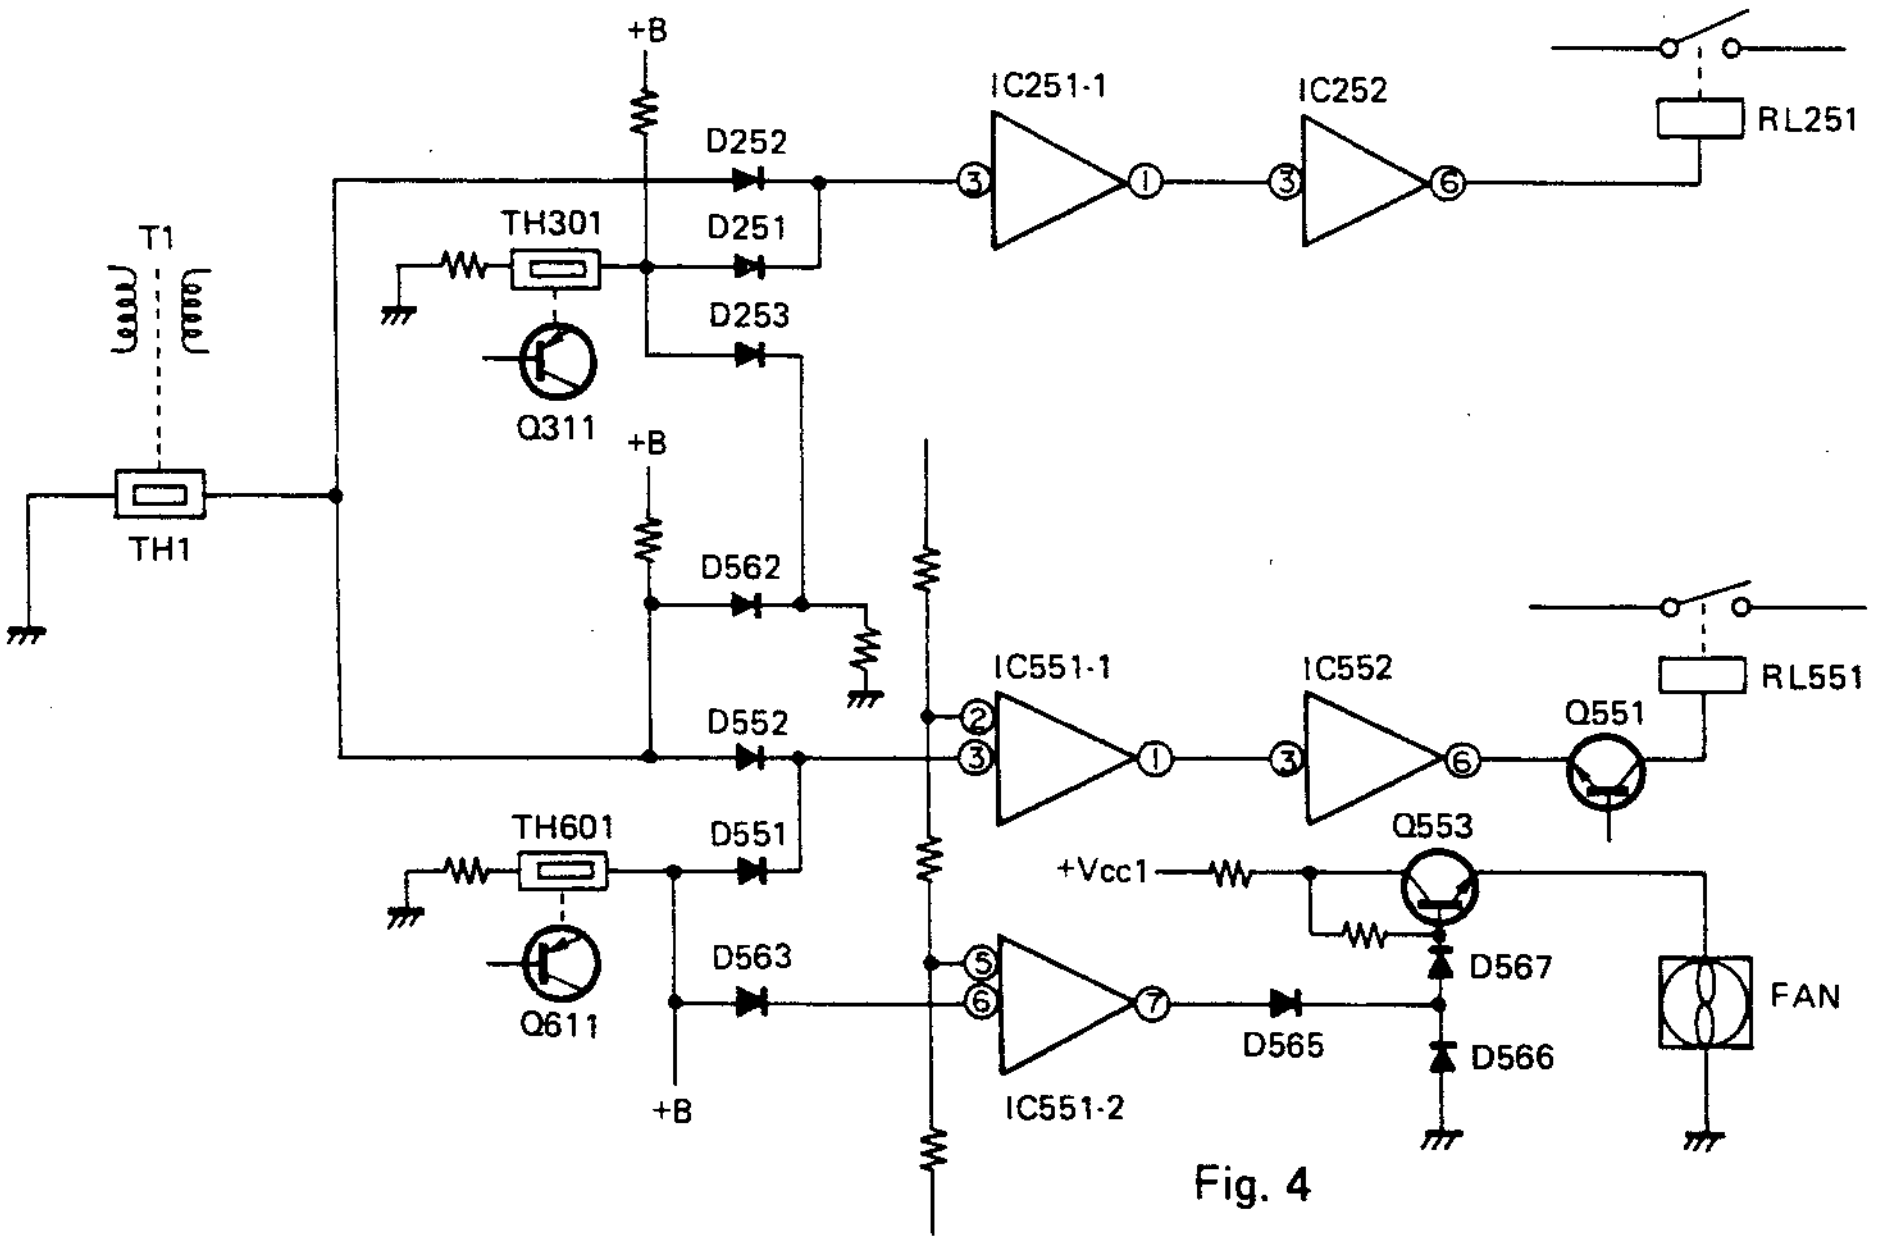
+B
IC251-1
IC252
RL251
D252
T1
TH301
D251
D253
Q311
+B
TH1
D562
IC551-1
IC552
RL551
D552
Q551
TH601
D551
Q553
+Vcc1
D563
D567
FAN
D565
D566
IC551-2
+B
Q611

Fig. 4

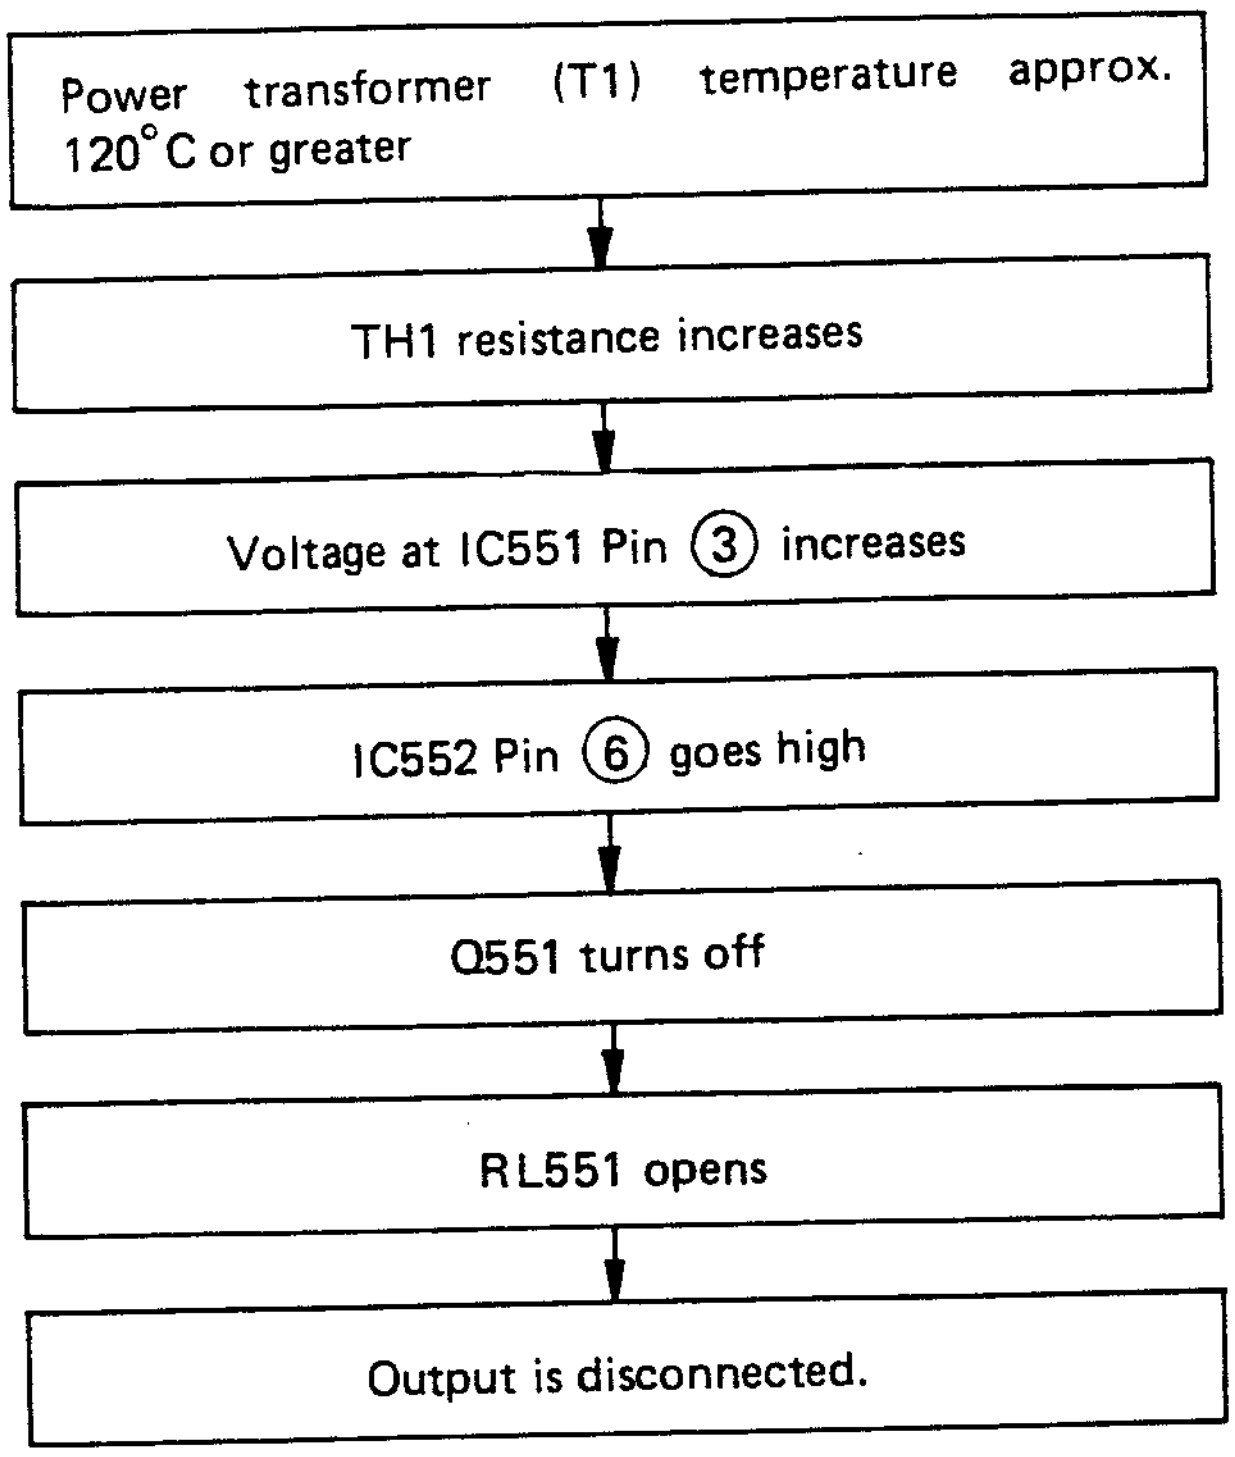
Power transformer (T1) temperature approx. 120°C or greater

TH1 resistance increases

Voltage at IC551 Pin ③ increases

IC552 Pin ⑥ goes high

Q551 turns off

RL551 opens

Output is disconnected.

The above diagram refers to "B" channel only.
TH1 also affects "A" channel.
Refer to schematic diagram for correct component reference numbers.

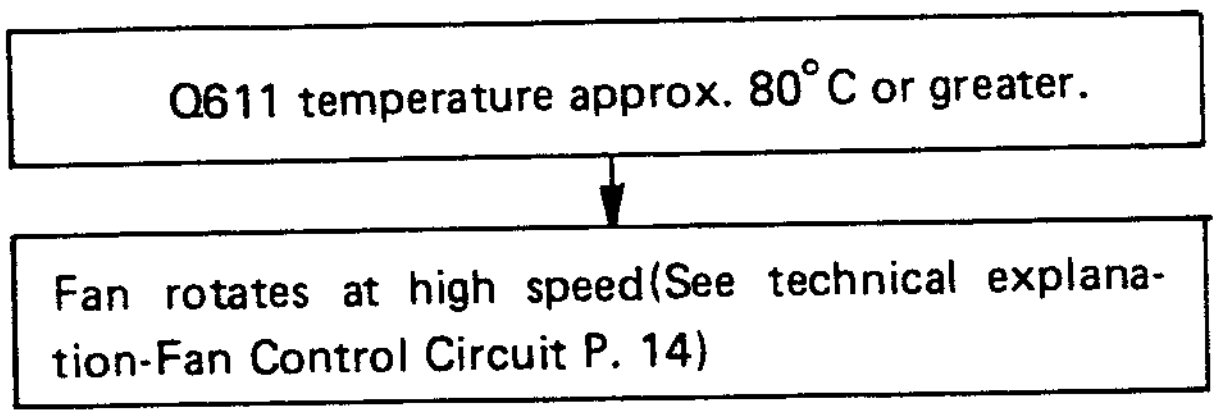
Q611 temperature approx. 80°C or greater.

Fan rotates at high speed(See technical explanation-Fan Control Circuit P. 14)

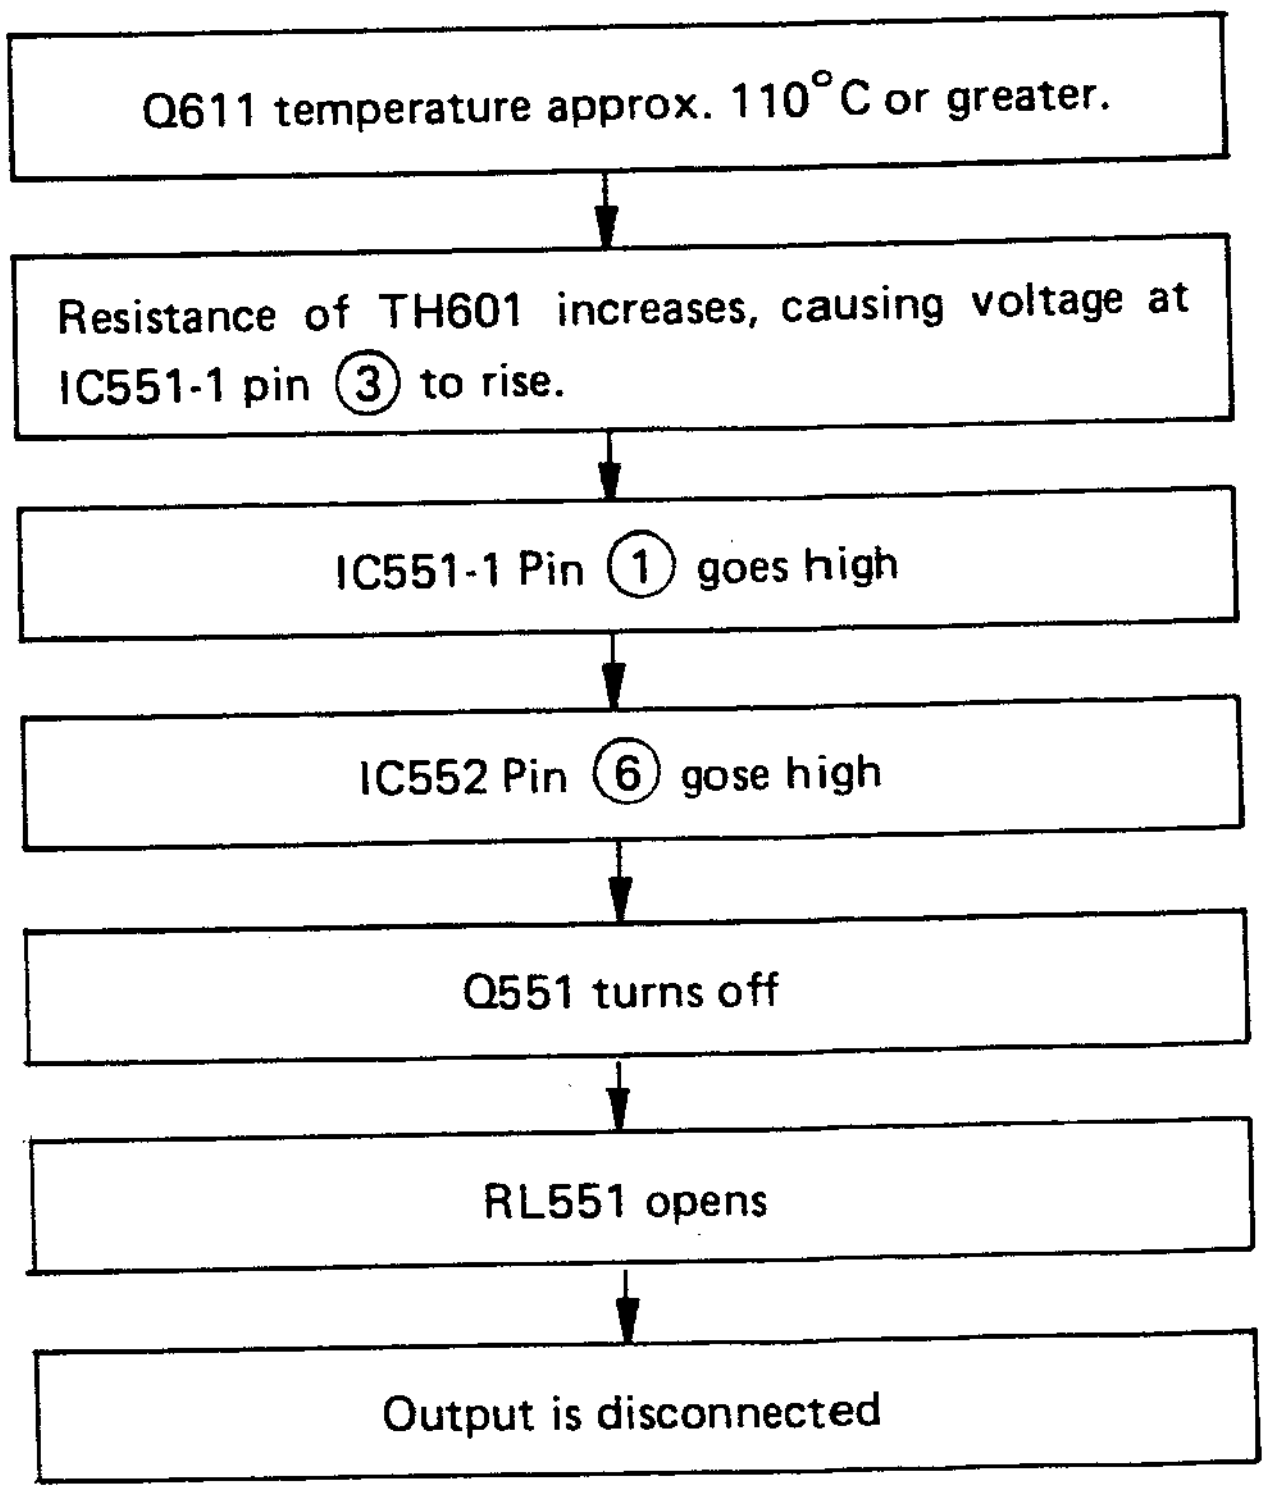
Q611 temperature approx. 110°C or greater.

Resistance of TH601 increases, causing voltage at IC551-1 pin ③ to rise.

IC551-1 Pin ① goes high

IC552 Pin ⑥ gose high

Q551 turns off

RL551 opens

Output is disconnected

NOTE: The above diagrams refer to "B" channel only. Operation of "A" channel Temp, Detection Circuit is the same. Refer to schematic diagram for correct component reference numbers.

ADJUSTMENT PROCEDURE

EQUIPMENT NEEDED : DIGITAL DC VOLTMETER

PREPARATION

1. Remove the upper cover. (Refer to "Disassembly")
2. Do not connect any audio signal to the INPUT TERMINAL.
3. Disconnect the speakers from the output terminals.
4. Then turn the power switch on and allow the amplifiers to warm up for a few minutes.

BIAS ADJUSTMENT

This adjustment must be performed when amplifier is cold.

1. Under no signal and no load condition, connect the ⊕ terminal of the digital DC voltmeter to TP301 and the ⊖ terminal to TP303 on the Power A Circuit Board.
2. Adjust VR102 on the Driver A Circuit Board so that the voltage becomes +13.5mV.
3. Repeat the adjustment on the Power B Circuit Board by connecting the ⊕ terminal of the DC voltmeter to TP601 and the ⊖ terminal to TP603. Adjust VR402 so that the voltage becomes +13.5mV.

DC OFFSET ADJUSTMENT

1. Connect the digital DC voltmeter between TP303 and TP302 on the Power A Circuit Board.
2. Adjust VR101 in the Driver A Circuit Board so that voltage becomes 0V.
3. Repeat the adjustment on the Power B Circuit Board by connecting the digital DC voltmeter between TP603 and TP602.
   Adjust VR401 on the Driver B Circuit Board so that voltage becomes 0V.

CHECK POINTS AND CONTROLS LOCATION (Components View)

Power A Circuit Board

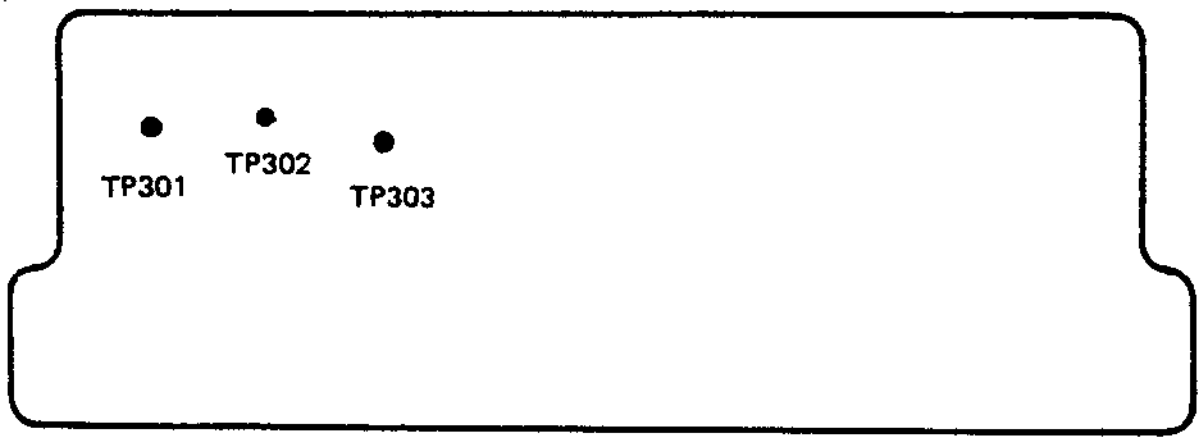

Power B Circuit Board

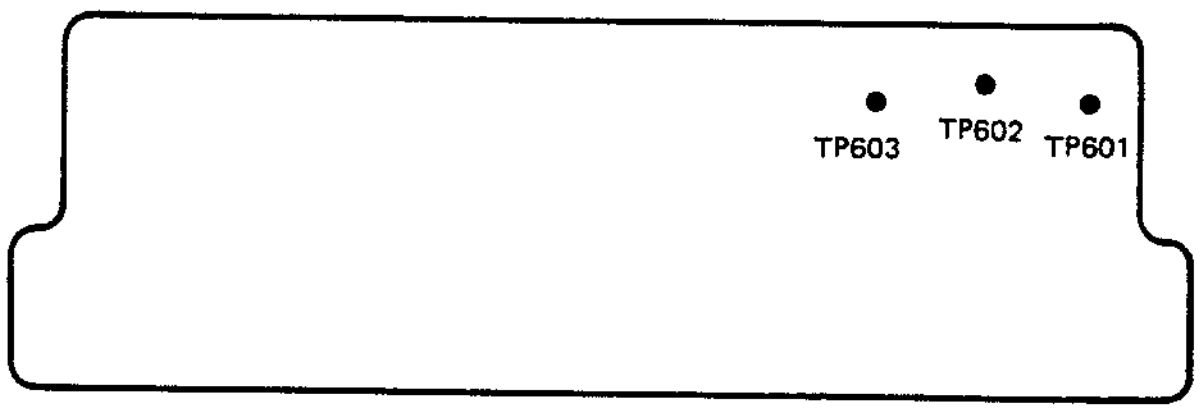

Driver A Circuit Board

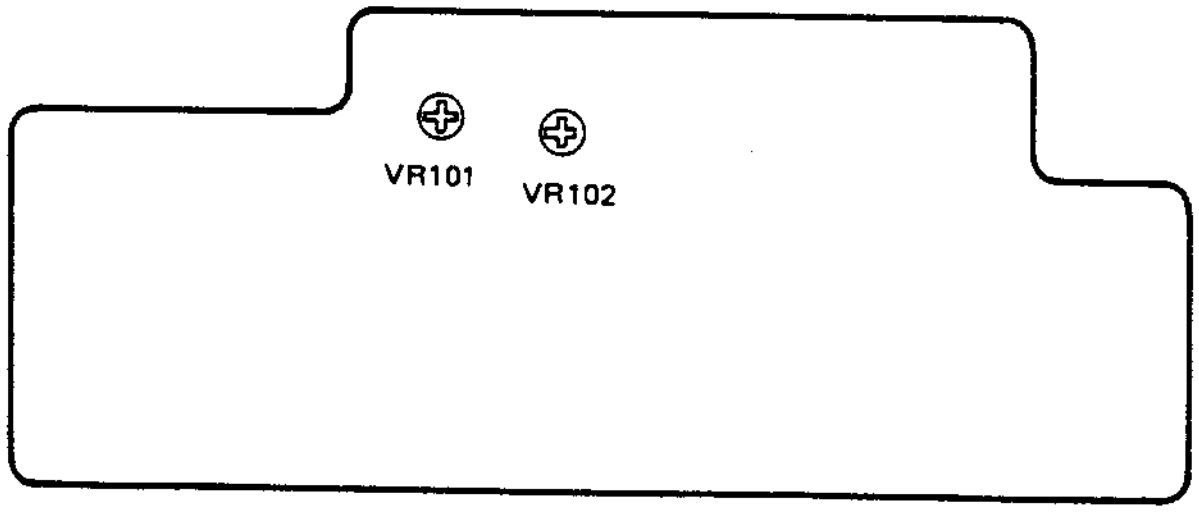

Driver B Circuit Board

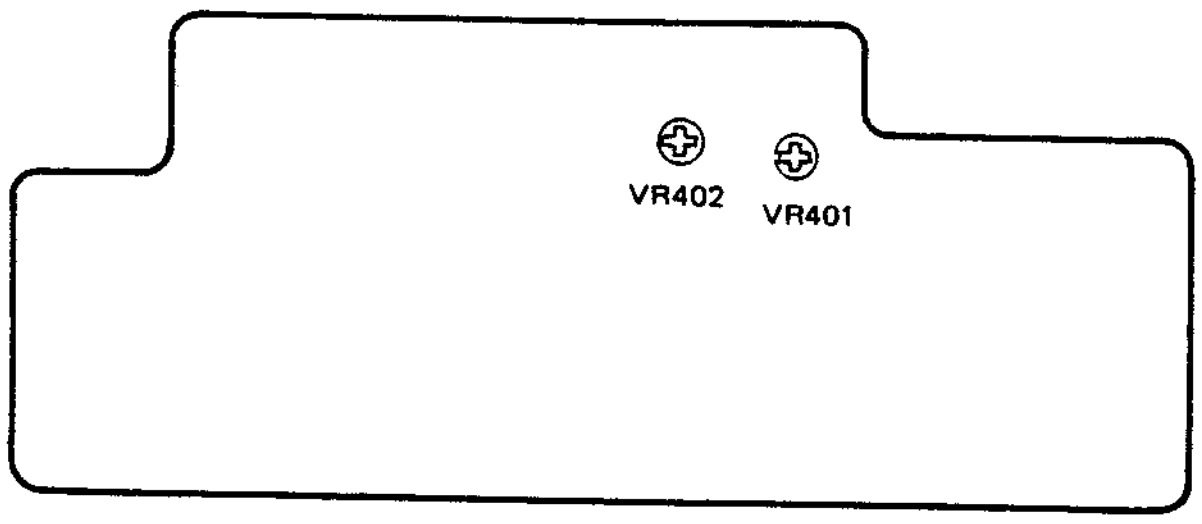

EX

○ **Numbers Show Screws, Bolts and Washers.**

No.	Screws	Discriptions
①	XSB2.6+4FX	Binding Head Machine Screws
②	XSB3+6FX	Binding Head Machine Screws
③	XSB3+6FZ	Binding Head Machine Screws
④	XSB3+6FFX	Binding Head Machine Screws
⑤	XTB3+6FFX	Binding Head Tapping Screws
⑥	XTC3+8FFN	Cross-recessed Oval Countersunk Head Tapping Screws
⑦	XTB3+8FFZ	Binding Head Tapping Screws
⑧	XTB3+20FFZ	Binding Head Tapping Screws
⑨	XSB4+6FN	Binding Head Machine Screws
⑩	XSB4+6FZ	Binding Head Machine Screws
⑪	XVE4B6FN	Hexagon Heads Bolts
⑫	XSB4+8FX	Binding Head Machine Screws
⑬	XSB4+8FZ	Binding Head Machine Screws
⑭	XYM4+E8FZ	Binding Head Machine Screw and Washer Assemblies
⑮	XSN4+18FX	Pan Head Machine Screws
⑯	XSB4+30FZ	Binding Head Machine Screws
⑰	XYN5+F10FX	Binding Head Machine Screws
⑱	XSB5+55FZ	Binding Head Machine Screws
⑲	XYA38FX	Binding Head Tapping Screws
⑳	XWA4AFZ	Spring Lock Washers
㉑	XWA5BFX	Spring Lock Washers
㉒	XWA5BFZ	Spring Lock Washers
㉓	XTB3+8JFX	Binding Head Tapping Screws
㉔	XYN3+12FX	Pan Head Machine Screws
㉕	XYN3+15FX	Pan Head Machine Screws
㉖	XYN3+C15FX	Pan Head Machine Screws
㉗	XWC4AFX	Internal Toothed Lock Washers
㉘	XTB3+6FFZ	Binding Head Tapping Screws
㉙	XSB3+8FX	Binding Head Machine Screws
㉚	XTB+3FFX	Binding Head Tapping Screws
㉛	XSB4+6FX	Binding Head Machine Screws

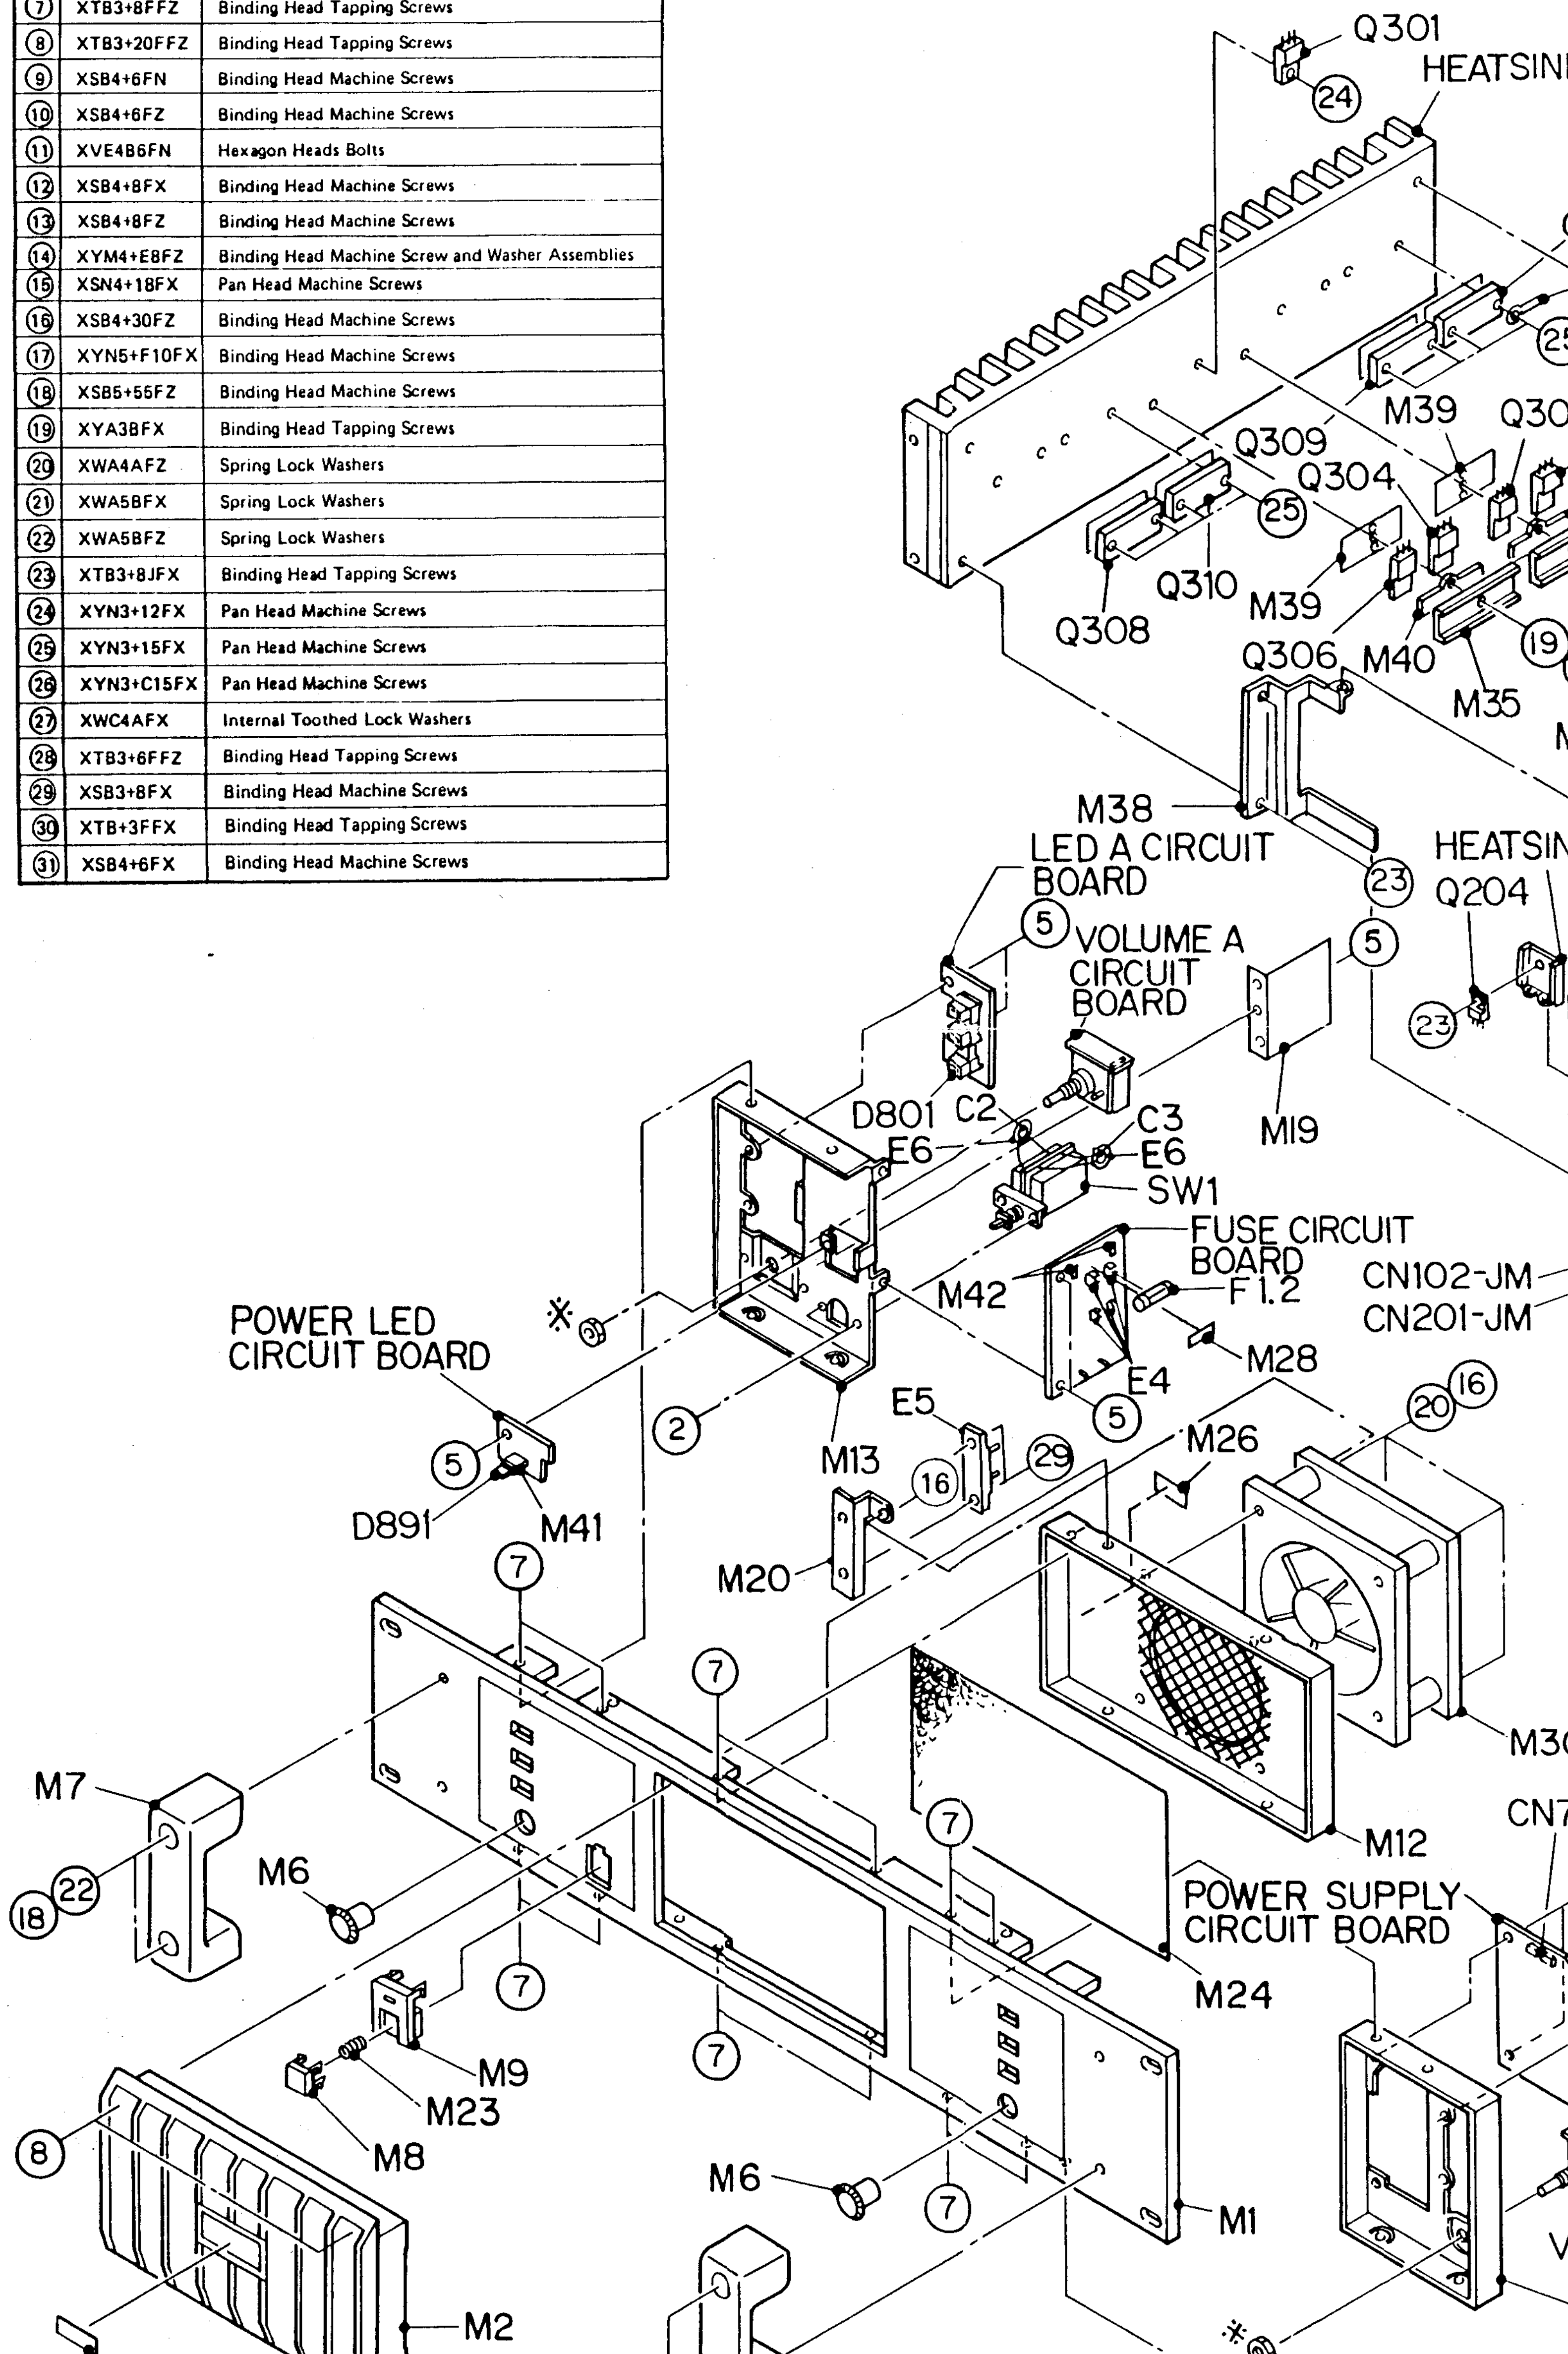
Q301
㉔
HEATSIN
㉕
M39
Q30
Q309
Q304
㉕
Q310
M39
Q308
Q306
M40
M35
⑲
M
M38
LED A CIRCUIT
BOARD
⑤
㉓
HEATSIN
Q204
㉓
VOLUME A
CIRCUIT
BOARD
⑤
M19
D801
C2
E6
C3
E6
SW1
FUSE CIRCUIT
BOARD
F1.2
M42
CN102-JM
CN201-JM
M28
E4
⑤
POWER LED
CIRCUIT BOARD
※
②
M13
E5
㉙
⑯
M26
⑳
⑯
⑤
D891
M41
M20
⑦
⑦
M30
M7
㉒
⑱
M6
⑦
M12
CN7
POWER SUPPLY
CIRCUIT BOARD
⑦
M24
M9
M23
M8
⑦
⑧
M6
⑦
M1
M2
※
V

⑦	XTB3+8FFZ	Binding Head Tapping Screws
⑧	XTB3+20FFZ	Binding Head Tapping Screws
⑨	XSB4+6FN	Binding Head Machine Screws
⑩	XSB4+6FZ	Binding Head Machine Screws
⑪	XVE4B6FN	Hexagon Heads Bolts
⑫	XSB4+8FX	Binding Head Machine Screws
⑬	XSB4+8FZ	Binding Head Machine Screws
⑭	XYM4+E8FZ	Binding Head Machine Screw and Washer Assemblies
⑮	XSN4+18FX	Pan Head Machine Screws
⑯	XSB4+30FZ	Binding Head Machine Screws
⑰	XYN5+F10FX	Binding Head Machine Screws
⑱	XSB5+55FZ	Binding Head Machine Screws
⑲	XYA3BFX	Binding Head Tapping Screws
⑳	XWA4AFZ	Spring Lock Washers
㉑	XWA5BFX	Spring Lock Washers
㉒	XWA5BFZ	Spring Lock Washers
㉓	XTB3+8JFX	Binding Head Tapping Screws
㉔	XYN3+12FX	Pan Head Machine Screws
㉕	XYN3+15FX	Pan Head Machine Screws
㉖	XYN3+C15FX	Pan Head Machine Screws
㉗	XWC4AFX	Internal Toothed Lock Washers
㉘	XTB3+6FFZ	Binding Head Tapping Screws
㉙	XSB3+8FX	Binding Head Machine Screws
㉚	XTB+3FFX	Binding Head Tapping Screws
㉛	XSB4+6FX	Binding Head Machine Screws

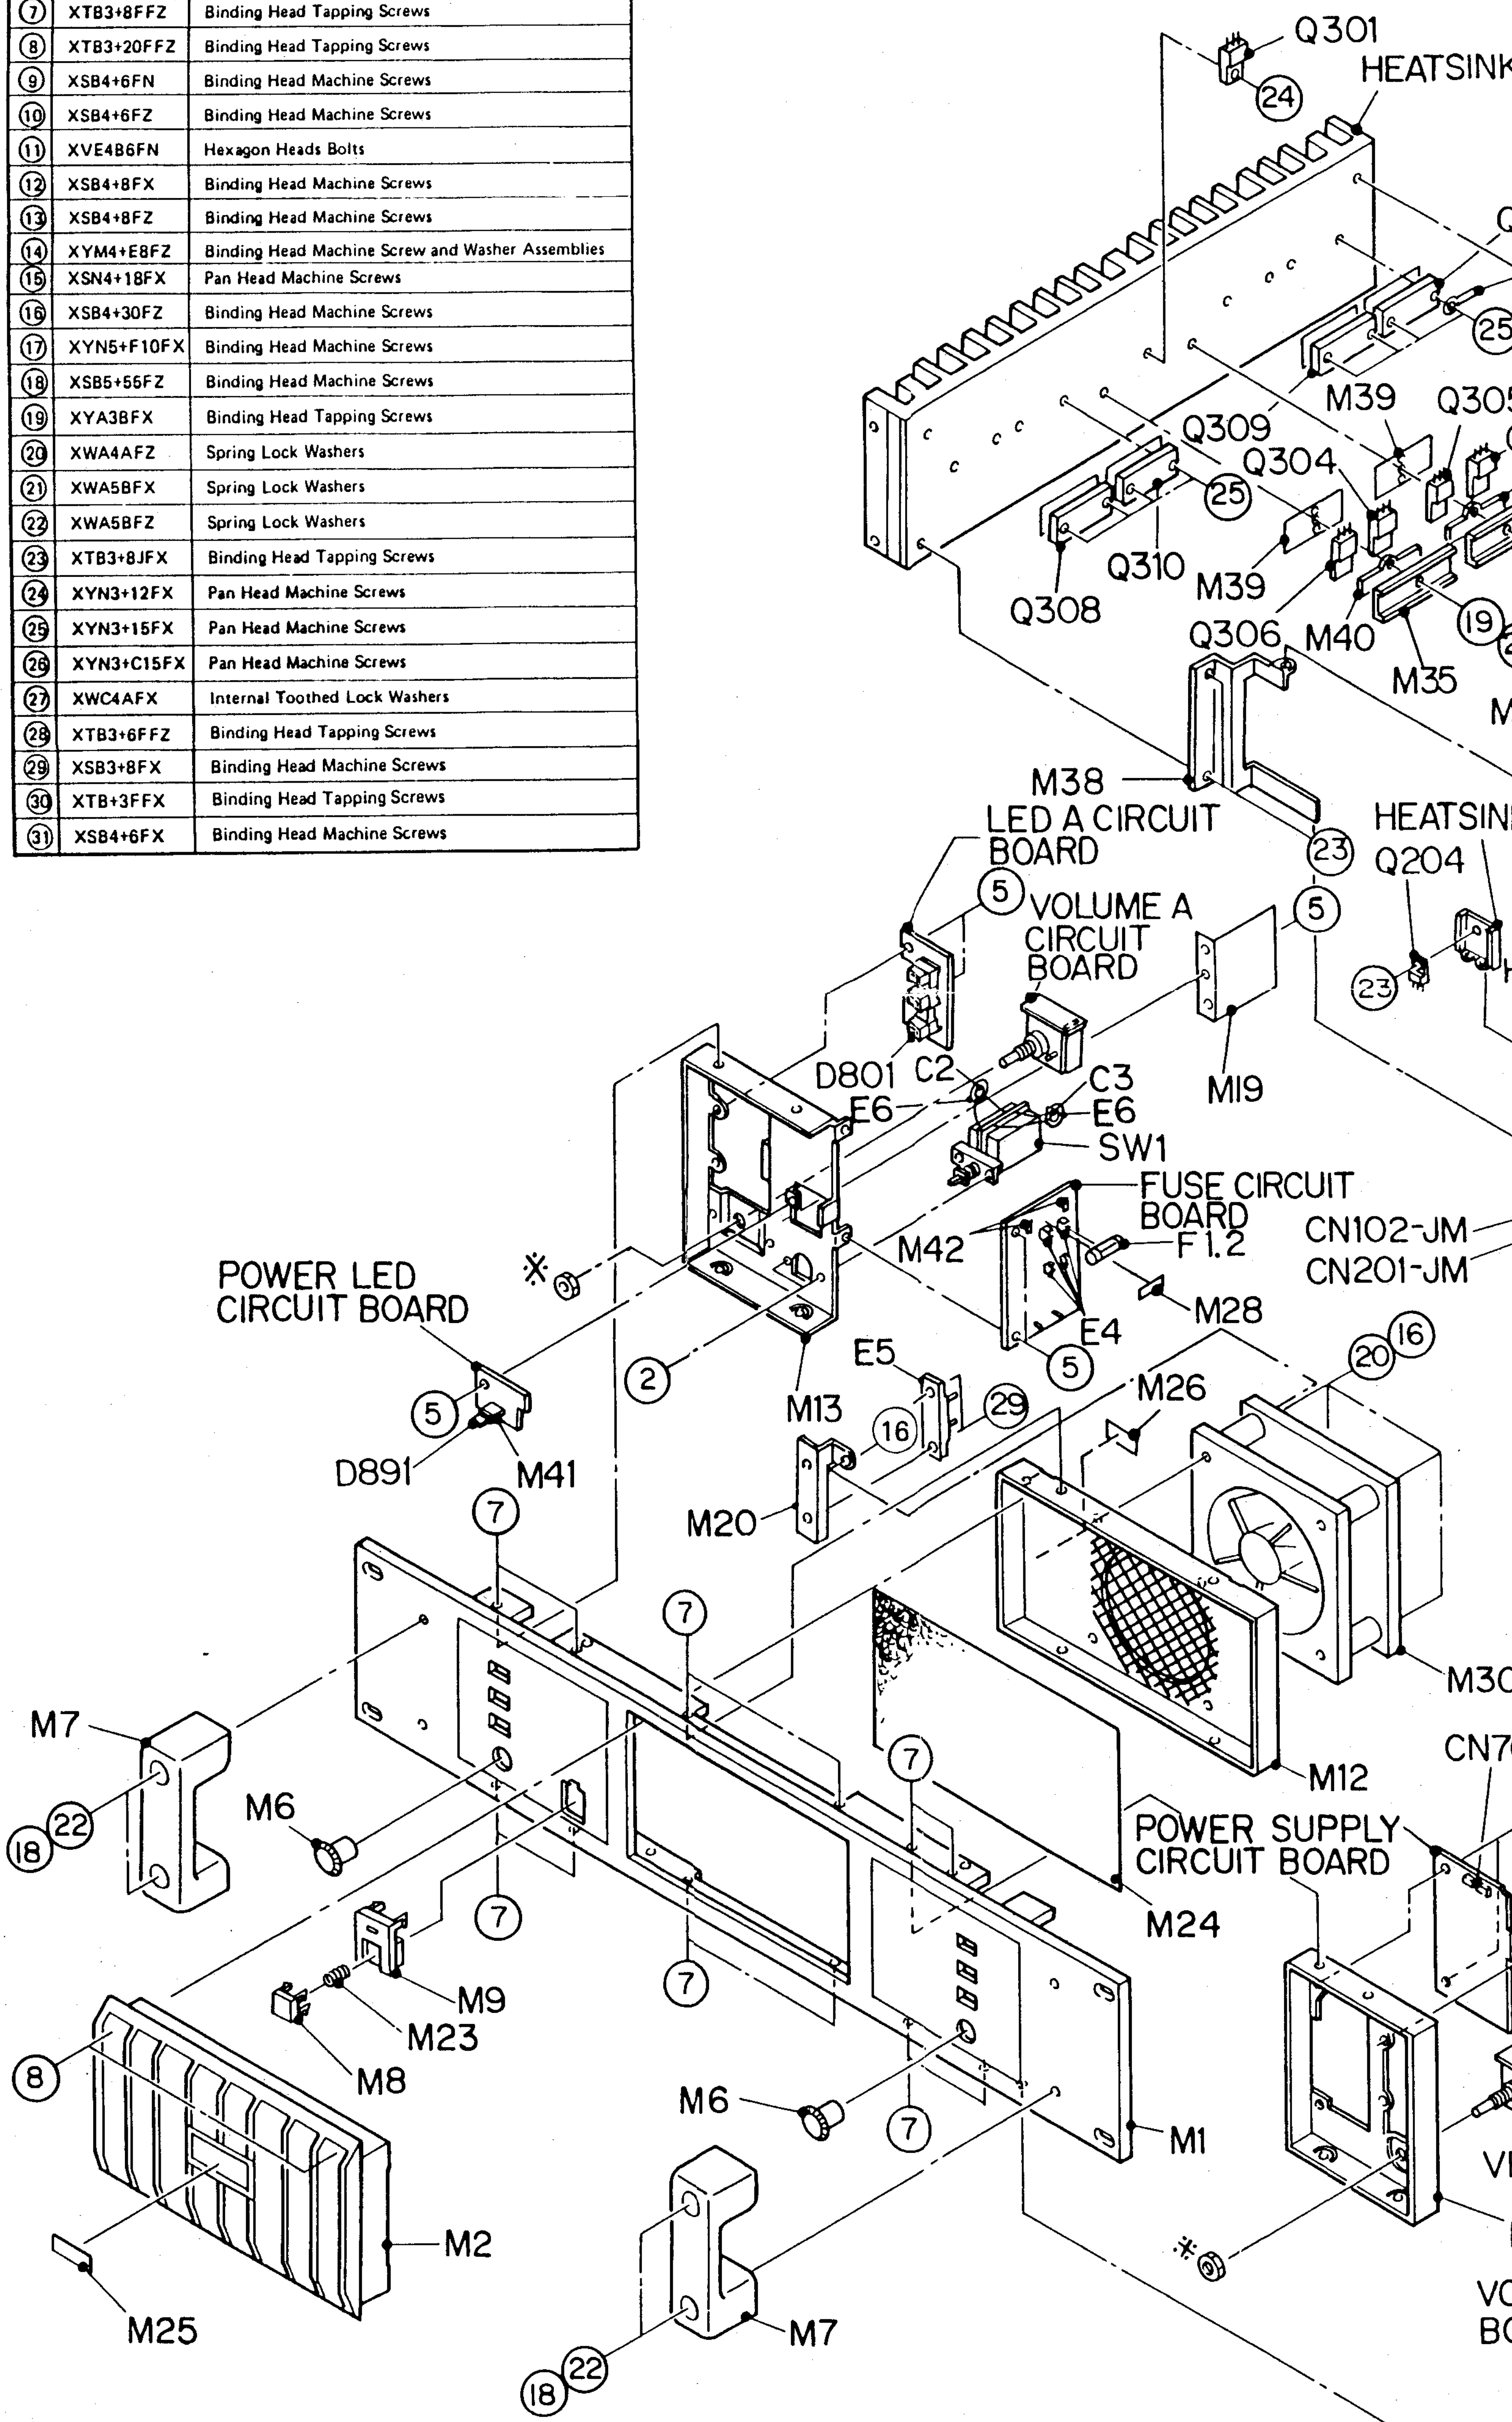
Q301
HEATSINK
㉔
㉕
M39
Q305
Q309
Q304
㉕
Q310
M39
Q308
Q306
M40
⑲
M35
M38
LED A CIRCUIT BOARD
㉓
HEATSINK
Q204
㉓
⑤
VOLUME A CIRCUIT BOARD
⑤
M19
D801
C2
C3
E6
E6
SW1
FUSE CIRCUIT BOARD
F1.2
M42
CN102-JM
CN201-JM
※
POWER LED CIRCUIT BOARD
E4
M28
⑤
②
M13
E5
⑯
㉙
M26
⑳
⑯
⑤
D891
M41
M20
⑦
⑦
M30
M7
M12
CN7
㉒
⑱
M6
⑦
POWER SUPPLY CIRCUIT BOARD
M24
⑦
M9
⑦
M23
M8
⑧
M6
⑦
M1
M2
VO
※
M25
VO
BO
M7
㉒
⑱

※ These nuts and washers come with respective jack, terminals, etc.

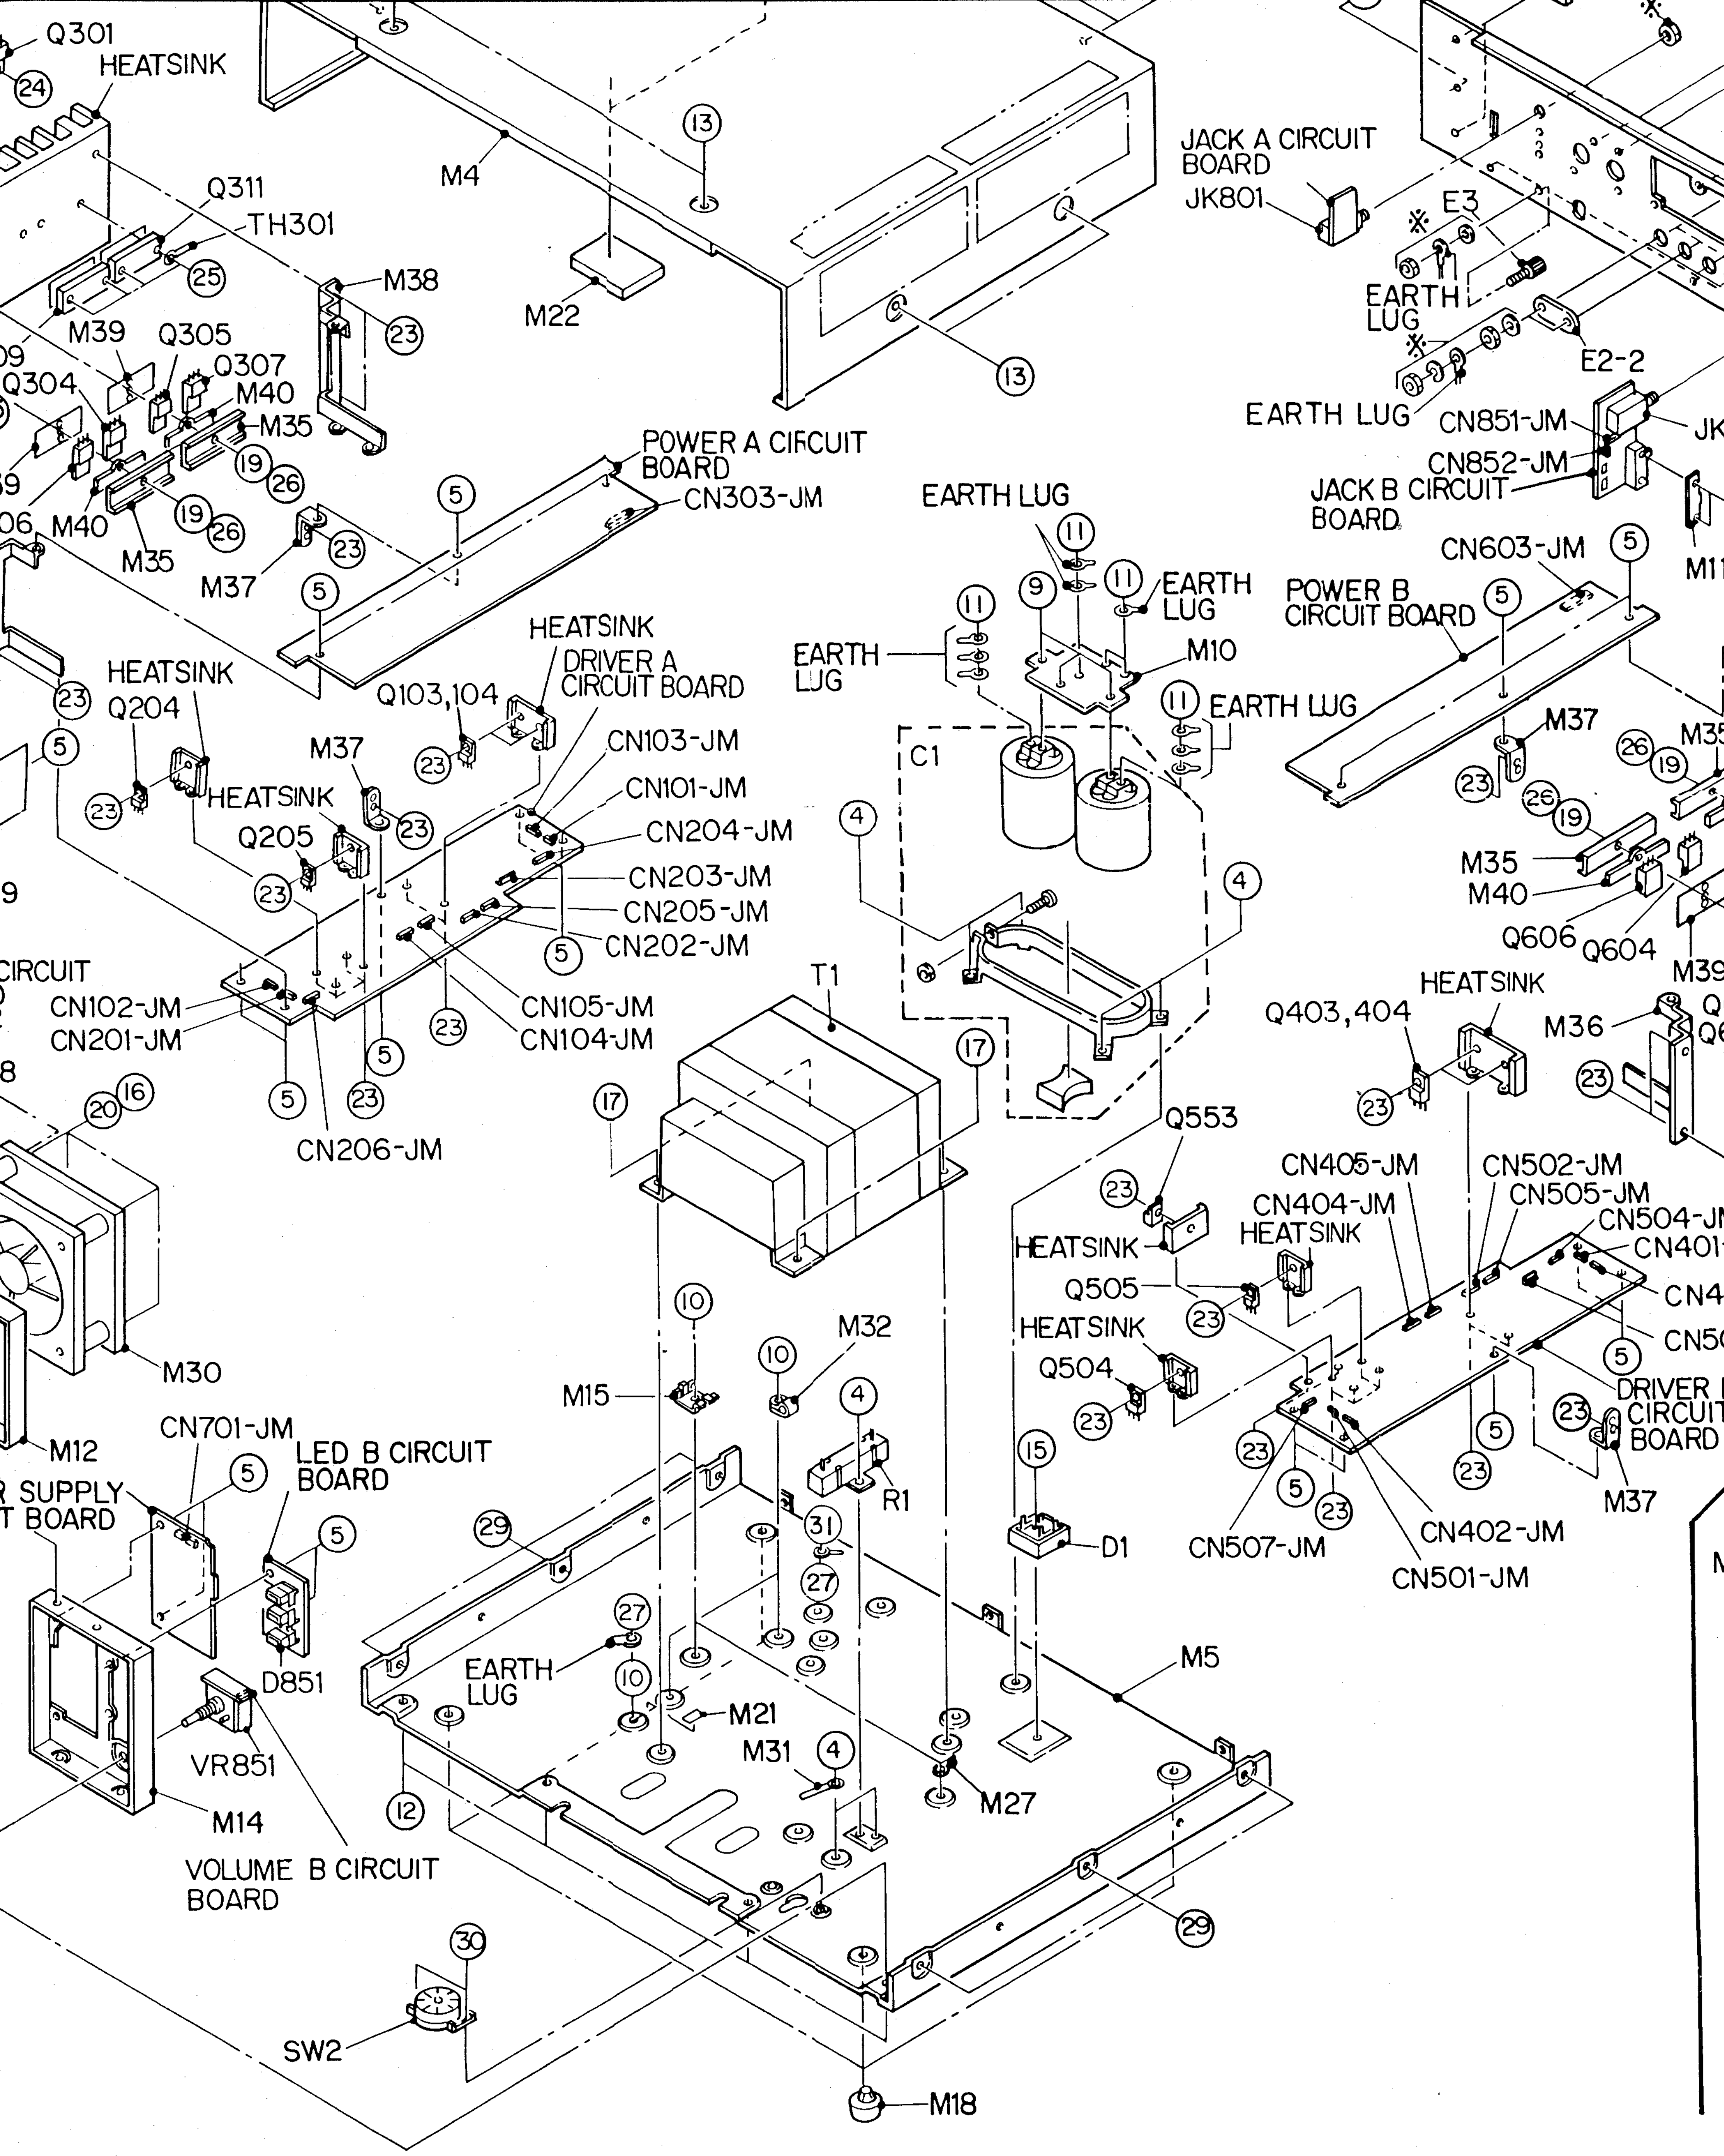
Q301
HEATSINK
M4
⑬
M22
⑬
JACK A CIRCUIT BOARD
JK801
E3
EARTH LUG
E2-2
EARTH LUG
CN851-JM
CN852-JM
JACK B CIRCUIT BOARD
Q311
TH301
M38
M39
Q305
Q307
Q304
M40
M35
M40
M35
M37
POWER A CIRCUIT BOARD
CN303-JM
EARTH LUG
EARTH LUG
M10
EARTH LUG
EARTH LUG
C1
CN603-JM
POWER B CIRCUIT BOARD
M37
M35
M40
Q606
Q604
HEATSINK
Q204
HEATSINK
DRIVER A CIRCUIT BOARD
Q103,104
M37
CN103-JM
CN101-JM
HEATSINK
Q205
CN204-JM
CN203-JM
CN205-JM
CN202-JM
CN102-JM
CN201-JM
CN105-JM
CN104-JM
CN206-JM
T1
HEATSINK
Q403,404
M36
Q553
CN405-JM
CN502-JM
CN404-JM
CN505-JM
CN504-JM
CN401
HEATSINK
HEATSINK
Q505
HEATSINK
Q504
DRIVER CIRCUIT BOARD
M37
CN507-JM
CN402-JM
CN501-JM
M30
M15
M32
R1
D1
M12
CN701-JM
LED B CIRCUIT BOARD
SUPPLY BOARD
D851
EARTH LUG
M21
M5
VR851
M31
M27
M14
VOLUME B CIRCUIT BOARD
SW2
M18
④
⑤
⑨
⑩
⑪
⑫
⑮
⑯
⑰
⑲
⑳
㉓
㉔
㉕
㉖
㉗
㉙
㉚
㉛

EXPLODED VIEW/PACKING OF VP-9110C

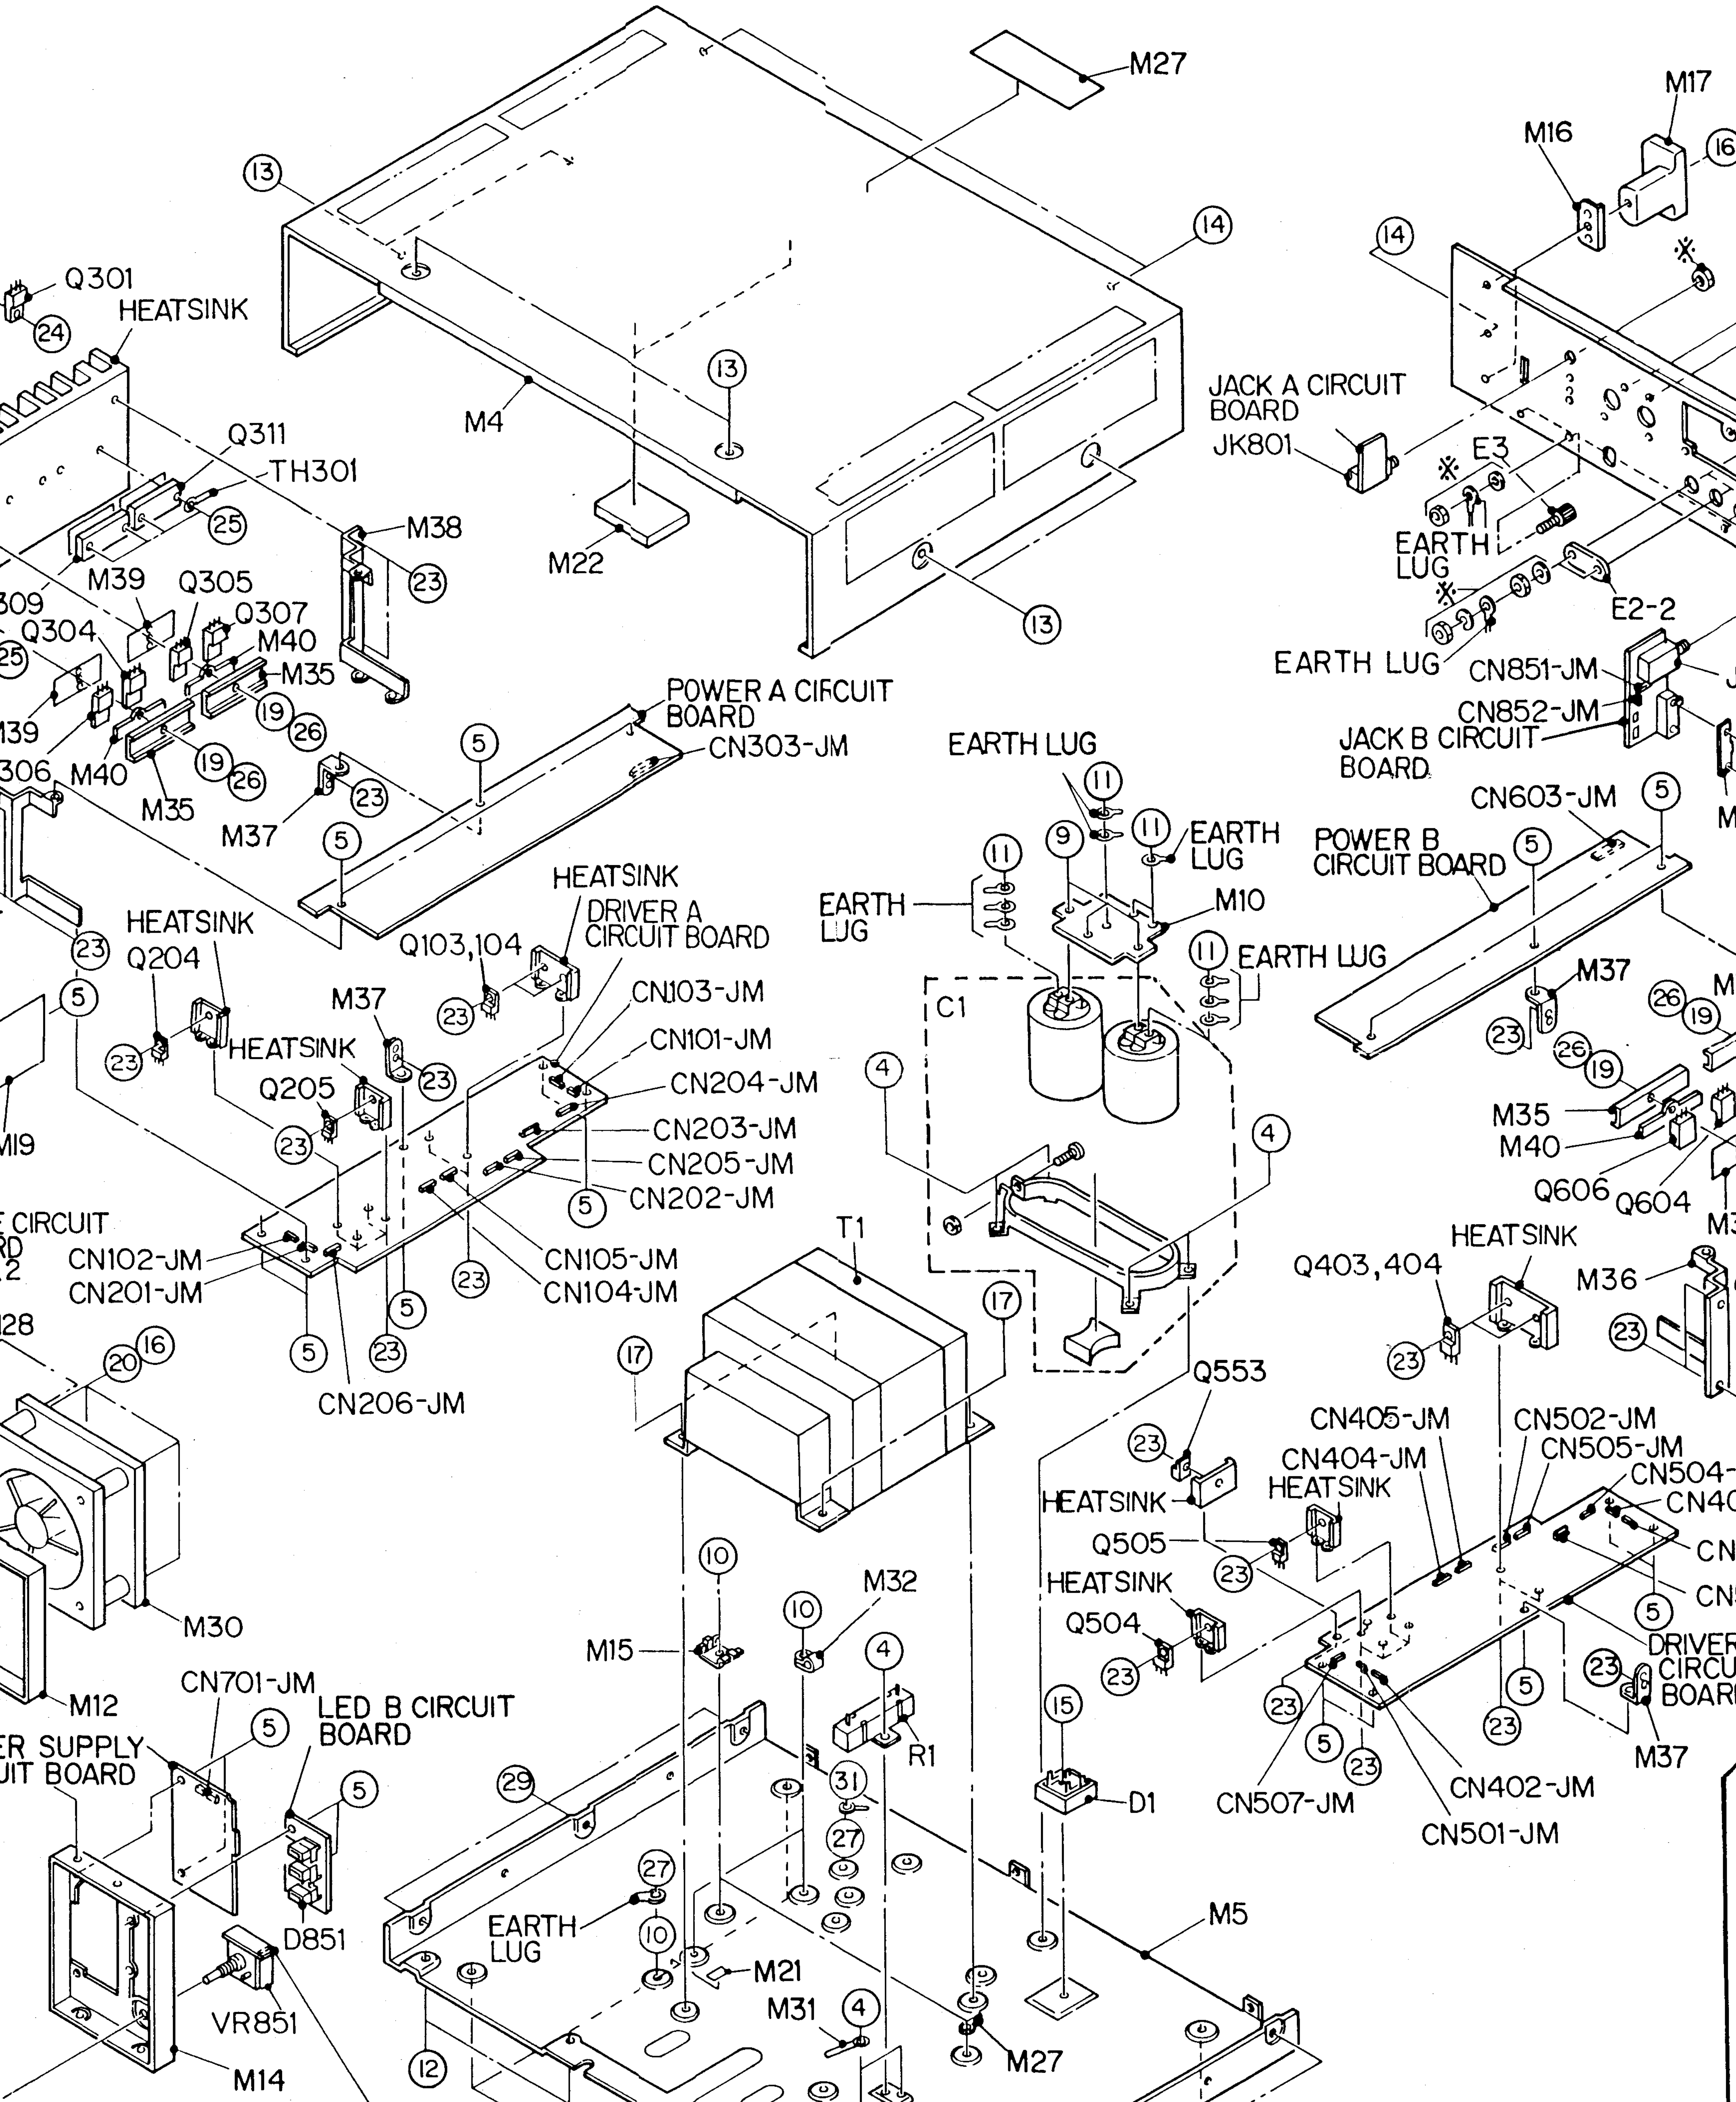
M27
M17
M16
⑬
⑭
⑭
Q301
㉔
HEATSINK
⑬
M4
Q311
TH301
㉕
M38
㉓
M22
⑬
JACK A CIRCUIT BOARD
JK801
※ E3
EARTH LUG
※
E2-2
EARTH LUG
CN851-JM
CN852-JM
JACK B CIRCUIT BOARD
M39
Q305
Q307
Q304
M40
M35
⑲
㉖
POWER A CIRCUIT BOARD
CN303-JM
⑤
M40
M35
⑲
㉖
M37
㉓
⑤
EARTH LUG
⑪
⑨
⑪
EARTH LUG
⑪
EARTH LUG
M10
⑪
EARTH LUG
C1
CN603-JM
⑤
POWER B CIRCUIT BOARD
⑤
M37
㉓
㉖
⑲
㉖
⑲
M35
M40
Q606
Q604
HEATSINK
DRIVER A CIRCUIT BOARD
Q103,104
㉓
HEATSINK
Q204
㉓
M37
㉓
HEATSINK
Q205
㉓
CN103-JM
CN101-JM
CN204-JM
CN203-JM
CN205-JM
CN202-JM
⑤
CN105-JM
CN104-JM
㉓
CN102-JM
CN201-JM
⑤
㉓
⑤
CN206-JM
M19
㉓
⑤
④
④
T1
⑰
⑰
HEATSINK
Q403,404
㉓
M36
㉓
Q553
㉓
HEATSINK
Q505
㉓
HEATSINK
Q504
㉓
CN405-JM
CN404-JM
HEATSINK
CN502-JM
CN505-JM
CN504-
CN40
CN
CN
⑤
DRIVER
CIRCU
BOARD
㉓
M37
⑤
㉓
㉓
⑤
㉓
CN507-JM
CN402-JM
CN501-JM
⑳
⑯
M30
M12
CN701-JM
⑤
LED B CIRCUIT BOARD
⑤
ER SUPPLY
UIT BOARD
D851
VR851
M14
⑩
M15
⑩
M32
④
R1
㉙
㉛
㉗
㉗
⑩
EARTH LUG
M21
M31
④
M27
⑫
⑮
D1
M5

OF VP-9110C

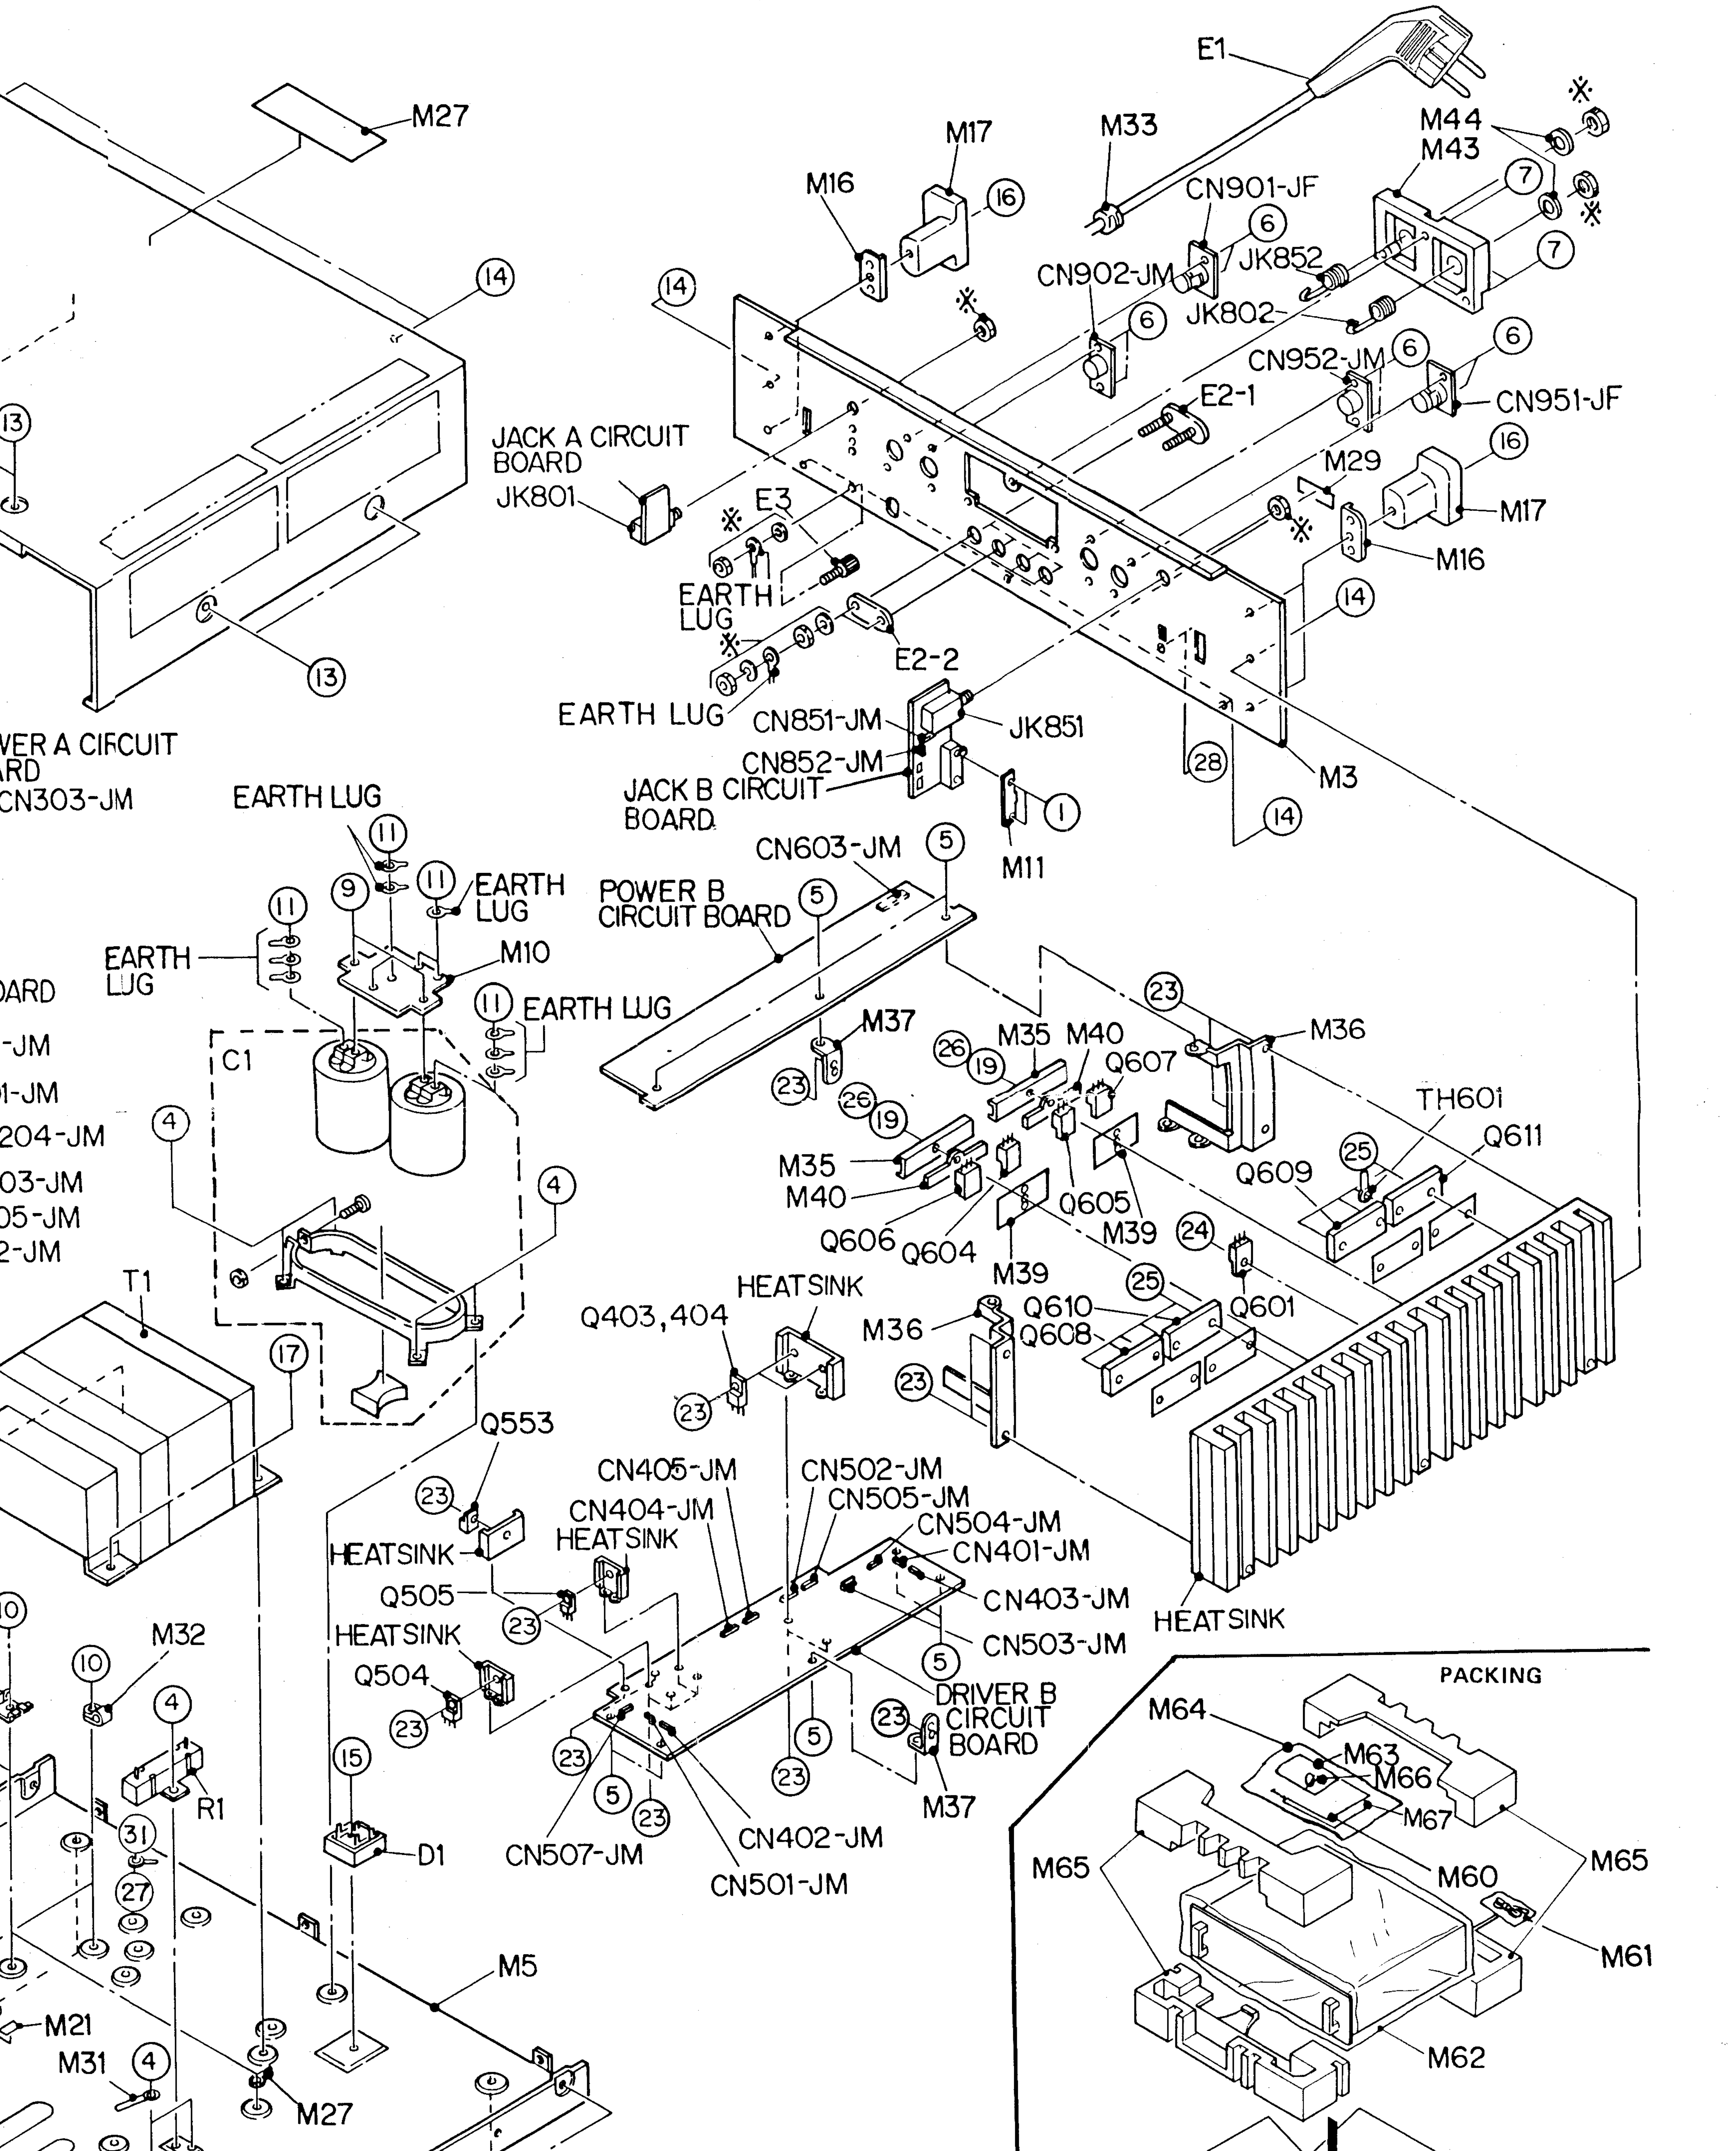
E1
M27
M17
M33
M44
※
M43
M16
16
CN901-JF
7
6
※
14
14
JK852
CN902-JM
6
※
JK802
7
CN952-JM
6
6
E2-1
CN951-JF
13
JACK A CIRCUIT BOARD
M29
16
JK801
E3
※
M17
※
M16
EARTH LUG
※
14
E2-2
13
EARTH LUG
CN851-JM
JK851
WER A CIRCUIT
RD
CN303-JM
CN852-JM
28
M3
JACK B CIRCUIT BOARD
1
EARTH LUG
11
M11
14
CN603-JM
5
11
EARTH LUG
POWER B CIRCUIT BOARD
5
9
M10
11
EARTH LUG
DARD
11
EARTH LUG
23
M36
-JM
C1
M37
M35
M40
26
19
Q607
1-JM
23
26
TH601
204-JM
4
19
Q611
03-JM
4
M35
Q609
25
05-JM
M40
Q605
2-JM
M39
Q606
Q604
24
T1
M39
25
HEATSINK
Q610
Q601
Q403,404
M36
Q608
17
23
23
Q553
CN405-JM
CN502-JM
23
CN505-JM
CN404-JM
CN504-JM
HEATSINK
HEATSINK
CN401-JM
Q505
CN403-JM
10
23
HEATSINK
HEATSINK
M32
CN503-JM
10
Q504
5
PACKING
4
DRIVER B CIRCUIT BOARD
M64
15
23
M63
23
M66
R1
23
5
M67
5
23
M37
31
23
M65
D1
CN402-JM
M60
M65
27
CN507-JM
CN501-JM
M61
M5
M21
M62
M31
4
M27

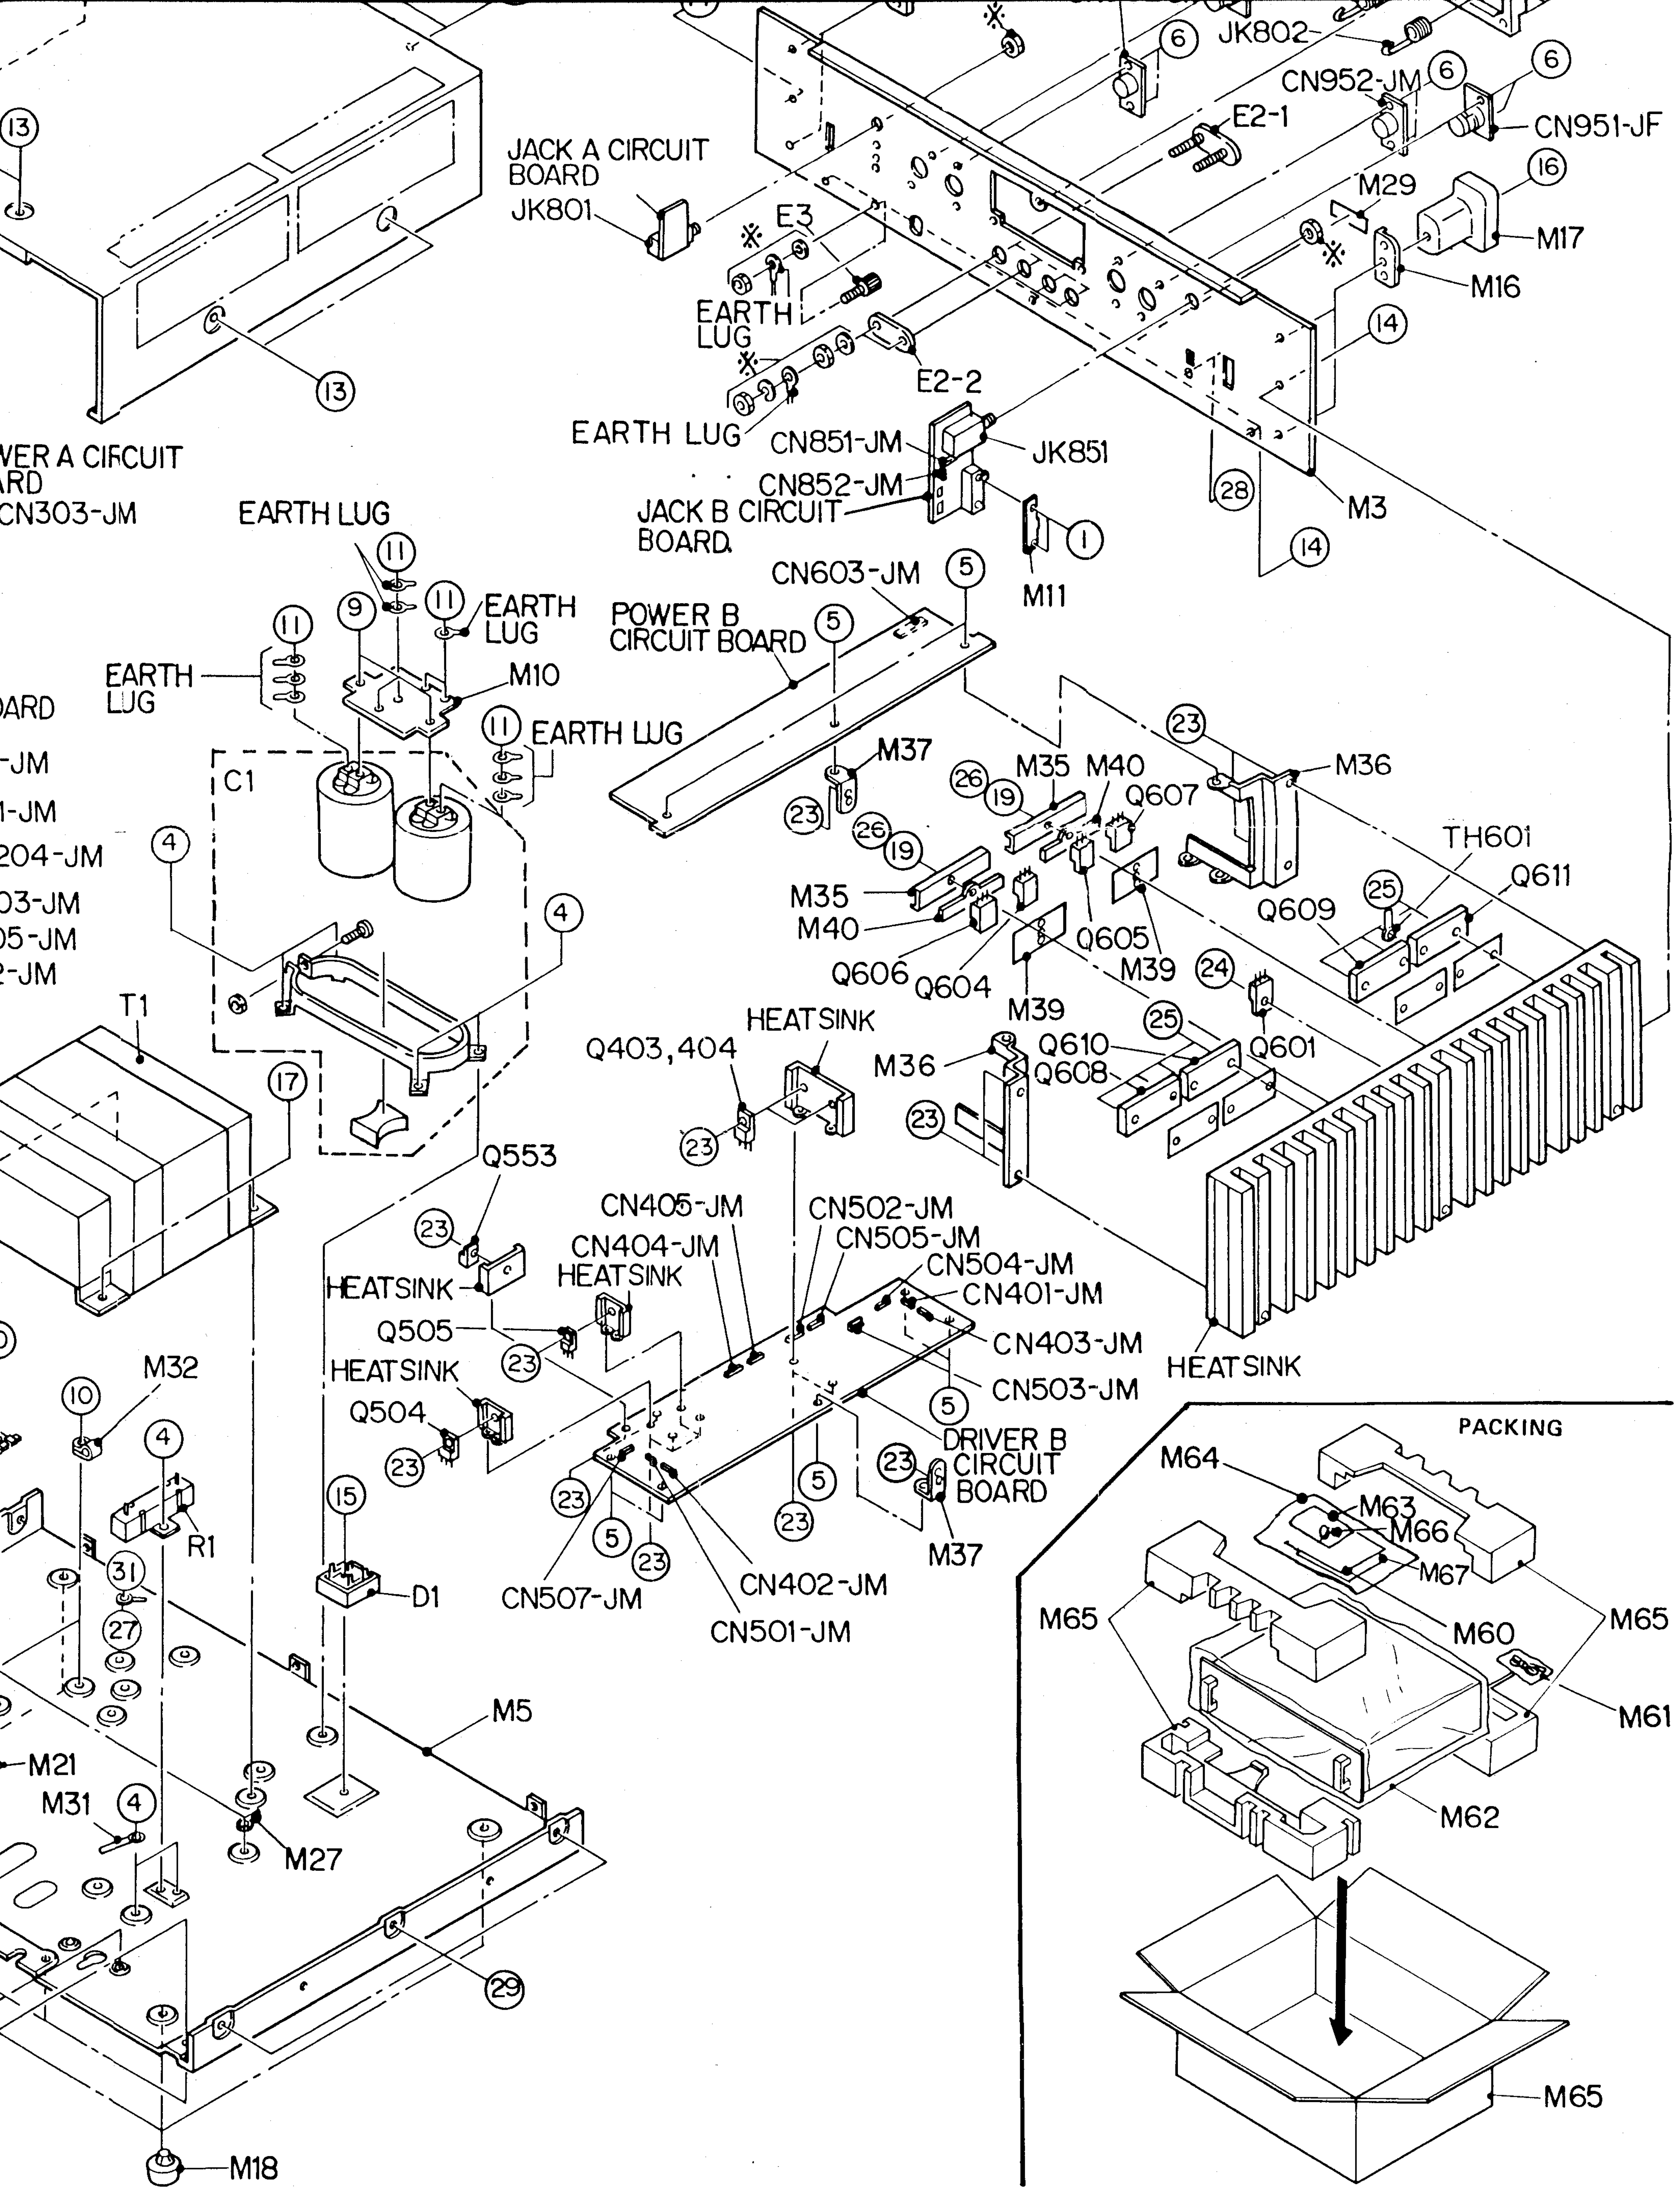
JK802
CN952-JM
CN951-JF
E2-1
JACK A CIRCUIT BOARD
JK801
E3
EARTH LUG
M29
M17
M16
E2-2
EARTH LUG
CN851-JM
JK851
CN852-JM
JACK B CIRCUIT BOARD
M11
M3
VER A CIRCUIT
ARD
CN303-JM
EARTH LUG
EARTH LUG
EARTH LUG
M10
EARTH LUG
ARD
-JM
1-JM
204-JM
03-JM
05-JM
2-JM
C1
T1
POWER B CIRCUIT BOARD
CN603-JM
M37
M35
M40
Q607
M36
TH601
Q611
Q609
M35
M40
Q605
M39
Q606
Q604
M39
Q610
Q608
Q601
M36
HEATSINK
Q403,404
Q553
HEATSINK
CN405-JM
CN404-JM
HEATSINK
CN502-JM
CN505-JM
CN504-JM
CN401-JM
CN403-JM
CN503-JM
Q505
HEATSINK
Q504
DRIVER B CIRCUIT BOARD
M37
CN507-JM
CN402-JM
CN501-JM
HEATSINK
M32
R1
D1
M5
M21
M31
M27
M18
PACKING
M64
M63
M66
M67
M65
M60
M65
M61
M62
M65
※
1
4
5
6
9
10
11
13
14
15
16
17
19
23
24
25
26
27
28
29
31

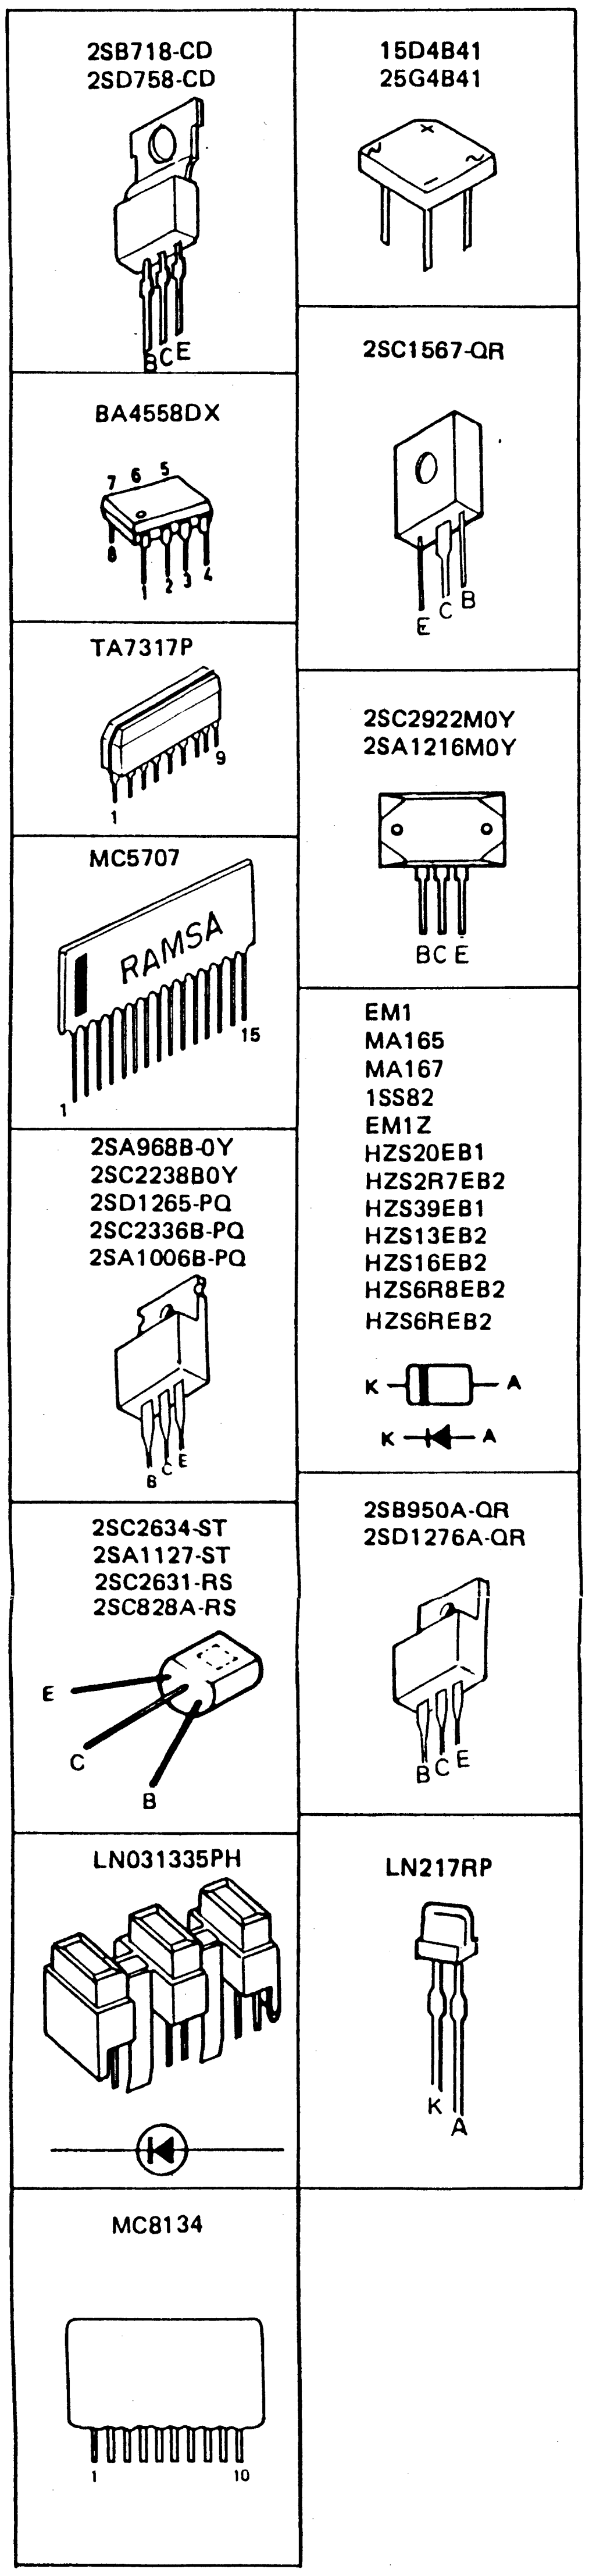
2SB718-CD
2SD758-CD
BCE
15D4B41
25G4B41
BA4558DX
7 6 5
8 1 2 3 4
2SC1567-QR
E C B
TA7317P
1
9
2SC2922M0Y
2SA1216M0Y
BC E
MC5707
RAMSA
1
15
EM1
MA165
MA167
1SS82
EM1Z
HZS20EB1
HZS2R7EB2
HZS39EB1
HZS13EB2
HZS16EB2
HZS6R8EB2
HZS6REB2
K
A
2SA968B-0Y
2SC2238B0Y
2SD1265-PQ
2SC2336B-PQ
2SA1006B-PQ
B C E
2SB950A-QR
2SD1276A-QR
BCE
2SC2634-ST
2SA1127-ST
2SC2631-RS
2SC828A-RS
E
C
B
LN031335PH
LN217RP
K
A
MC8134
1
10

CIRCUIT BOA

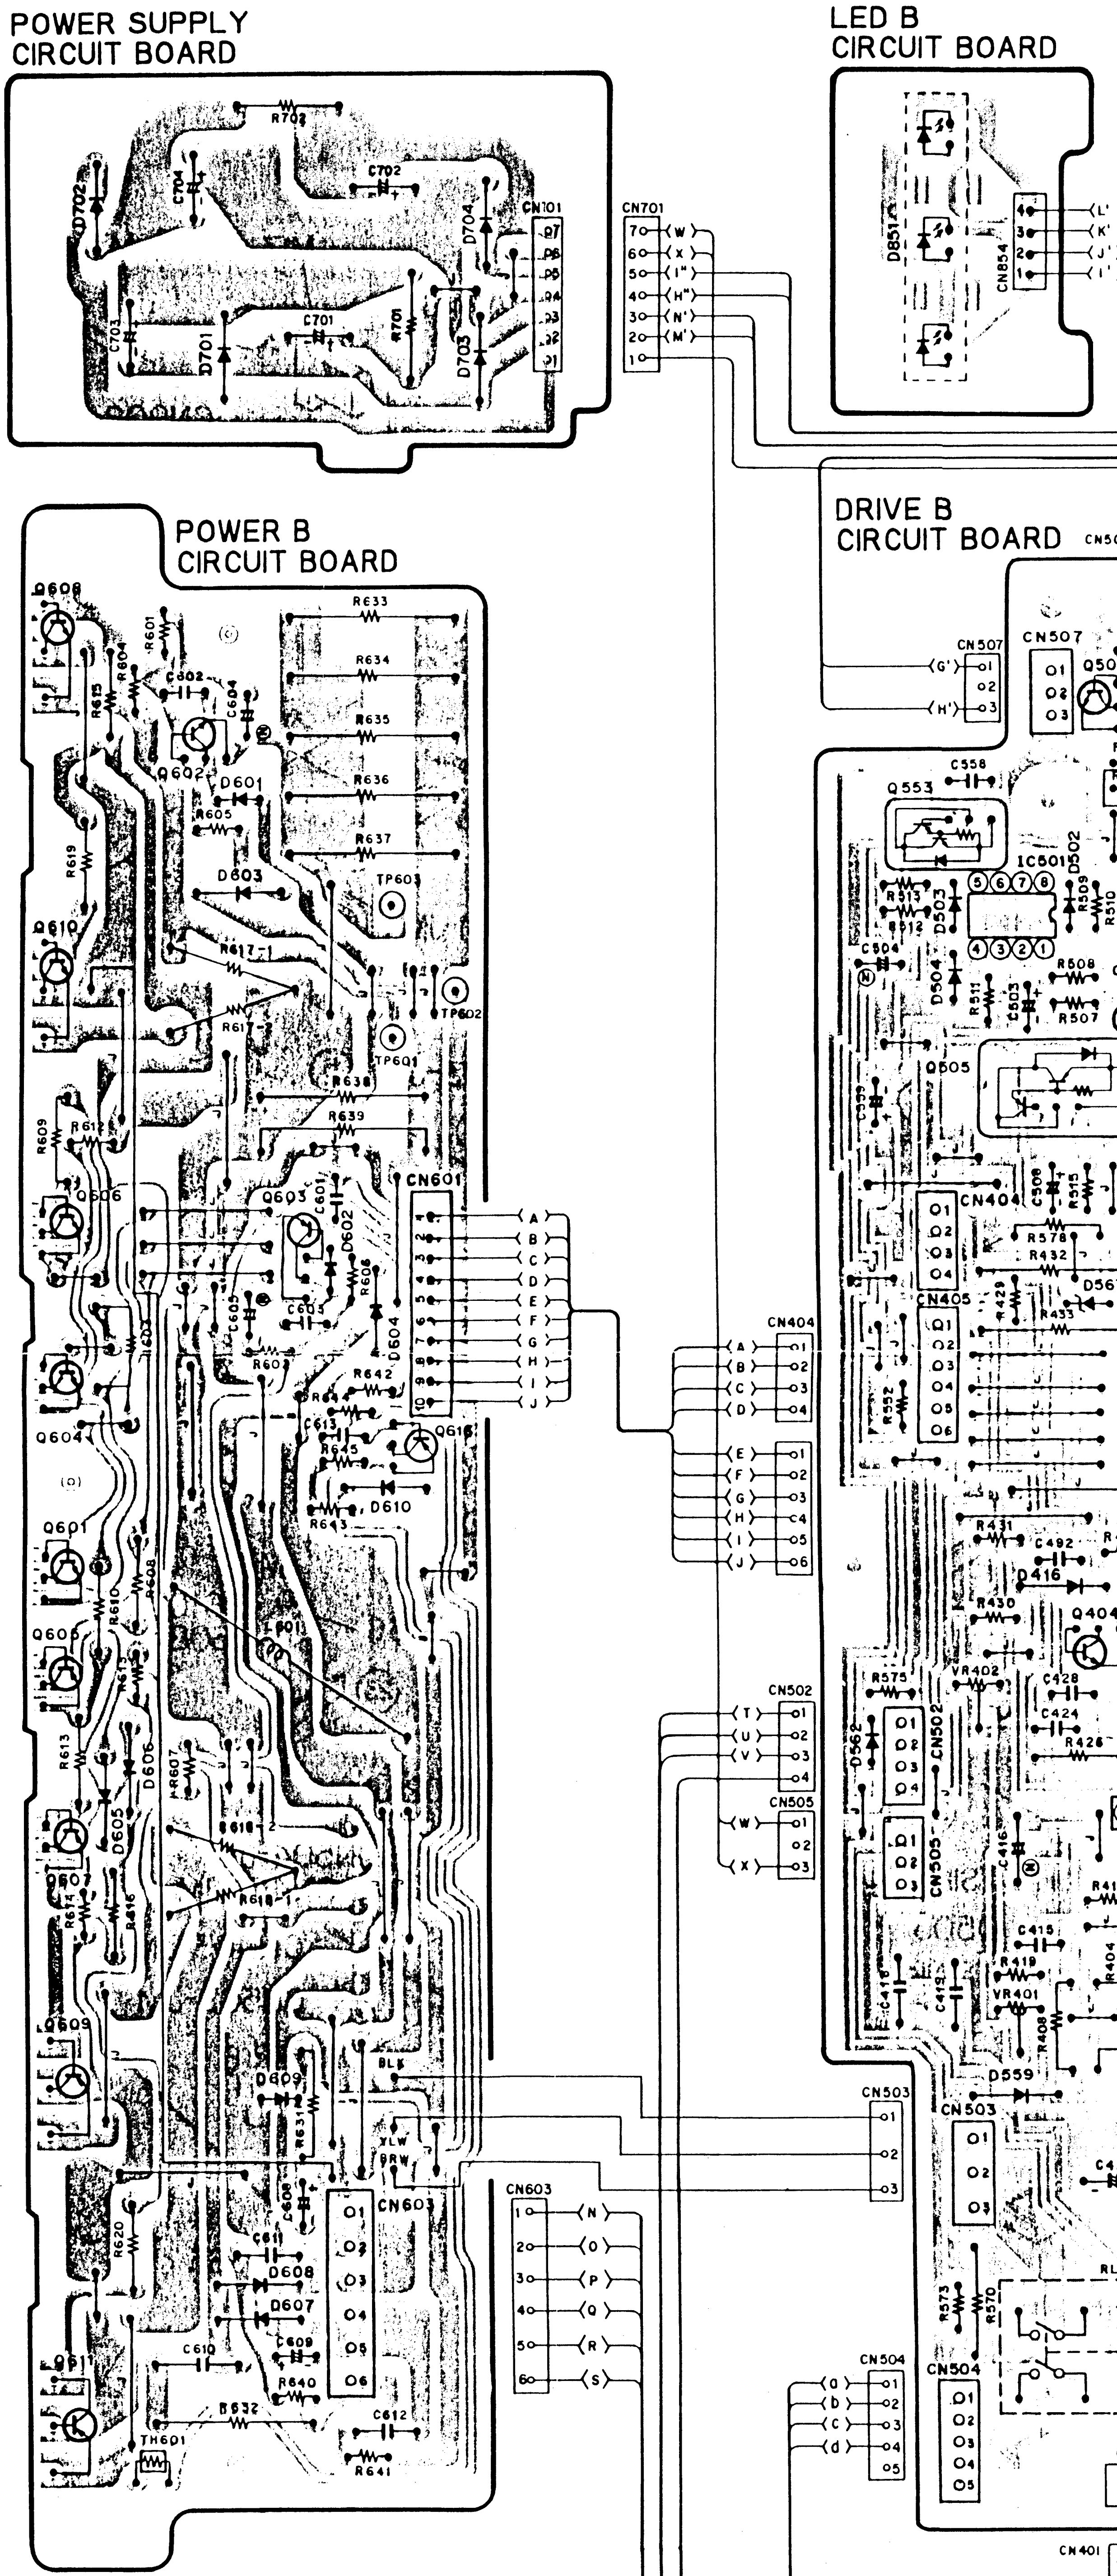
POWER SUPPLY
CIRCUIT BOARD
LED B
CIRCUIT BOARD
POWER B
CIRCUIT BOARD
DRIVE B
CIRCUIT BOARD
R702
C702
C704
D702
D704
CN701
C701
D701
R701
D703
D851
CN854
CN507
Q608
R601
R604
R615
C602
C604
Q602
D601
R605
D603
R633
R634
R635
R636
R637
TP603
R619
Q610
R617
TP602
TP601
R638
R639
R609
R612
Q606
Q603
C601
D602
CN601
C605
C603
R606
D604
R603
R644
R642
C613
Q616
Q604
R645
D610
R643
Q601
R608
Q605
R610
F601
R613
D606
R607
D605
R611
Q607
R614
R616
R618
Q609
D609
R631
BLK
YLW
BRN
CN603
C608
C611
D608
D607
C609
R640
R620
C610
R632
C612
R641
TH601
Q611
CN404
CN502
CN505
CN503
CN504
Q553
C558
IC501
D502
R513
R512
D503
R509
R510
C504
R508
D504
R511
C503
R507
Q505
C506
R515
R578
R432
D561
CN405
R429
R433
R552
R431
C492
D416
R430
Q404
R575
VR402
C428
C424
R426
D562
C416
C415
R419
VR401
R408
R404
D559
R573
R570
CN401
A
B
C
D
E
F
G
H
I
J
T
U
V
W
X
N
O
P
Q
R
S
a
b
c
d
G'
H'
L'
K'
J'
I'
M'
N'
H"
I"

BA4558DX

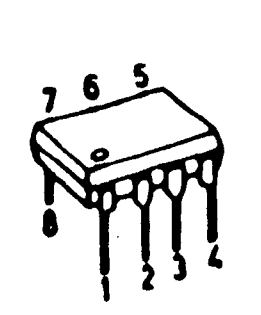

TA7317P

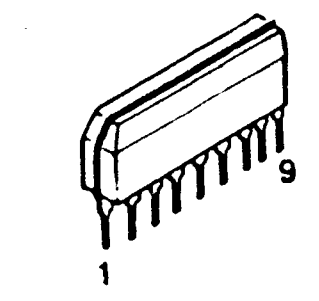

MC5707

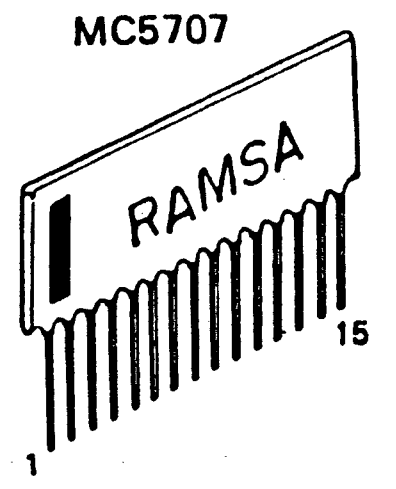

2SA968B-0Y
2SC2238B0Y
2SD1265-PQ
2SC2336B-PQ
2SA1006B-PQ



2SC2634-ST
2SA1127-ST
2SC2631-RS
2SC828A-RS

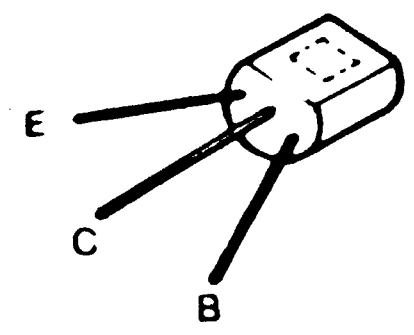

LN031335PH

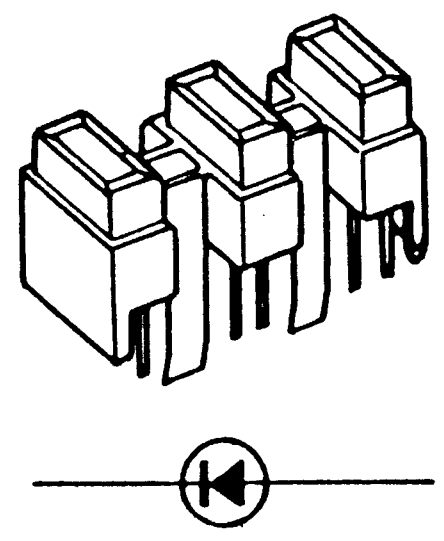

MC8134

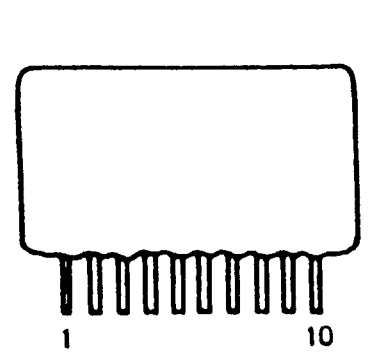



2SC2922M0Y
2SA1216M0Y

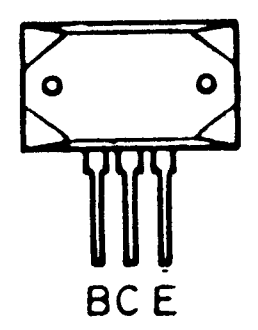

EM1
MA165
MA167
1SS82
EM1Z
HZS20EB1
HZS2R7EB2
HZS39EB1
HZS13EB2
HZS16EB2
HZS6R8EB2
HZS6REB2



2SB950A-QR
2SD1276A-QR



LN217RP



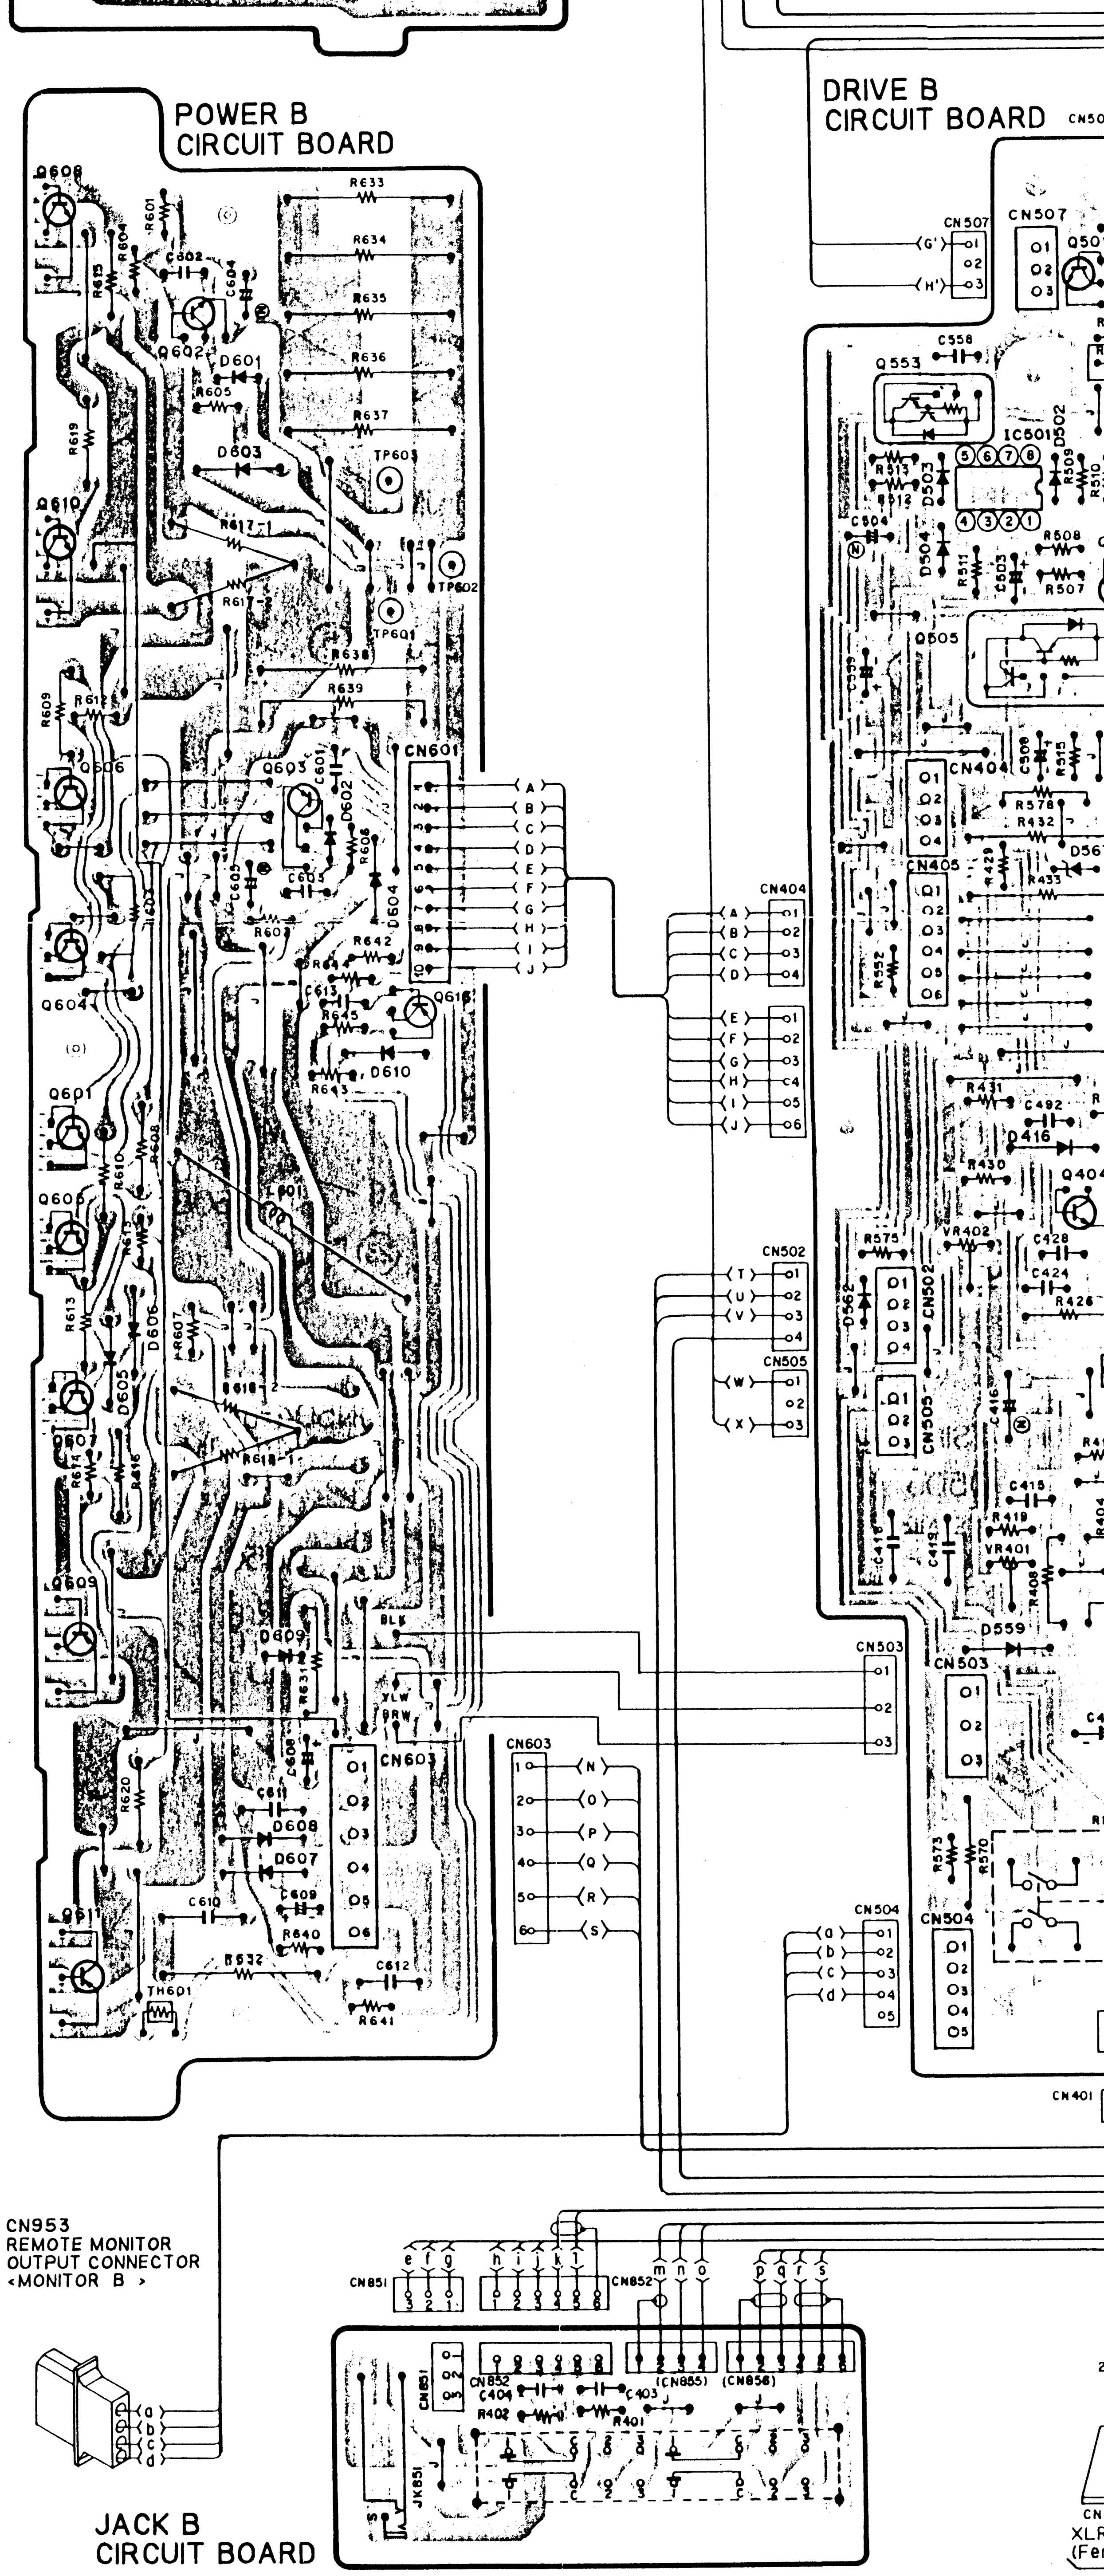
POWER B
CIRCUIT BOARD
DRIVE B
CIRCUIT BOARD
JACK B
CIRCUIT BOARD
CN953
REMOTE MONITOR
OUTPUT CONNECTOR
<MONITOR B >
Q608
R601
R604
R615
C602
C604
Q602
D601
R605
R633
R634
R635
R636
R637
R619
D603
TP603
Q610
R617
TP602
TP601
R638
R639
R609
R612
Q606
Q603
C601
D602
R606
CN601
C602
C605
D604
R603
R642
R644
C613
R645
Q616
Q604
D610
R643
Q601
R610
R608
Q605
R611
R613
D606
R607
D605
R616
R618
R614
R416
Q609
D609
R631
BLK
YLW
BRW
R620
C606
C611
D608
D607
C609
CN603
C610
R640
R632
C612
TH601
R641
Q611
CN404
CN502
CN505
CN503
CN504
CN507
Q553
C558
IC501
D502
R513
R512
D503
R509
R510
C504
D504
R511
C503
R508
R507
Q505
C506
R515
R578
R432
R429
R433
R352
CN405
R431
C492
D416
R430
Q404
R575
VR402
C428
C424
R426
D562
C416
C415
R419
VR401
R408
C418
C413
D559
R573
R570
CN401
CN851
CN852
CN855
CN856
C404
C403
R402
R401
JK851
XLR

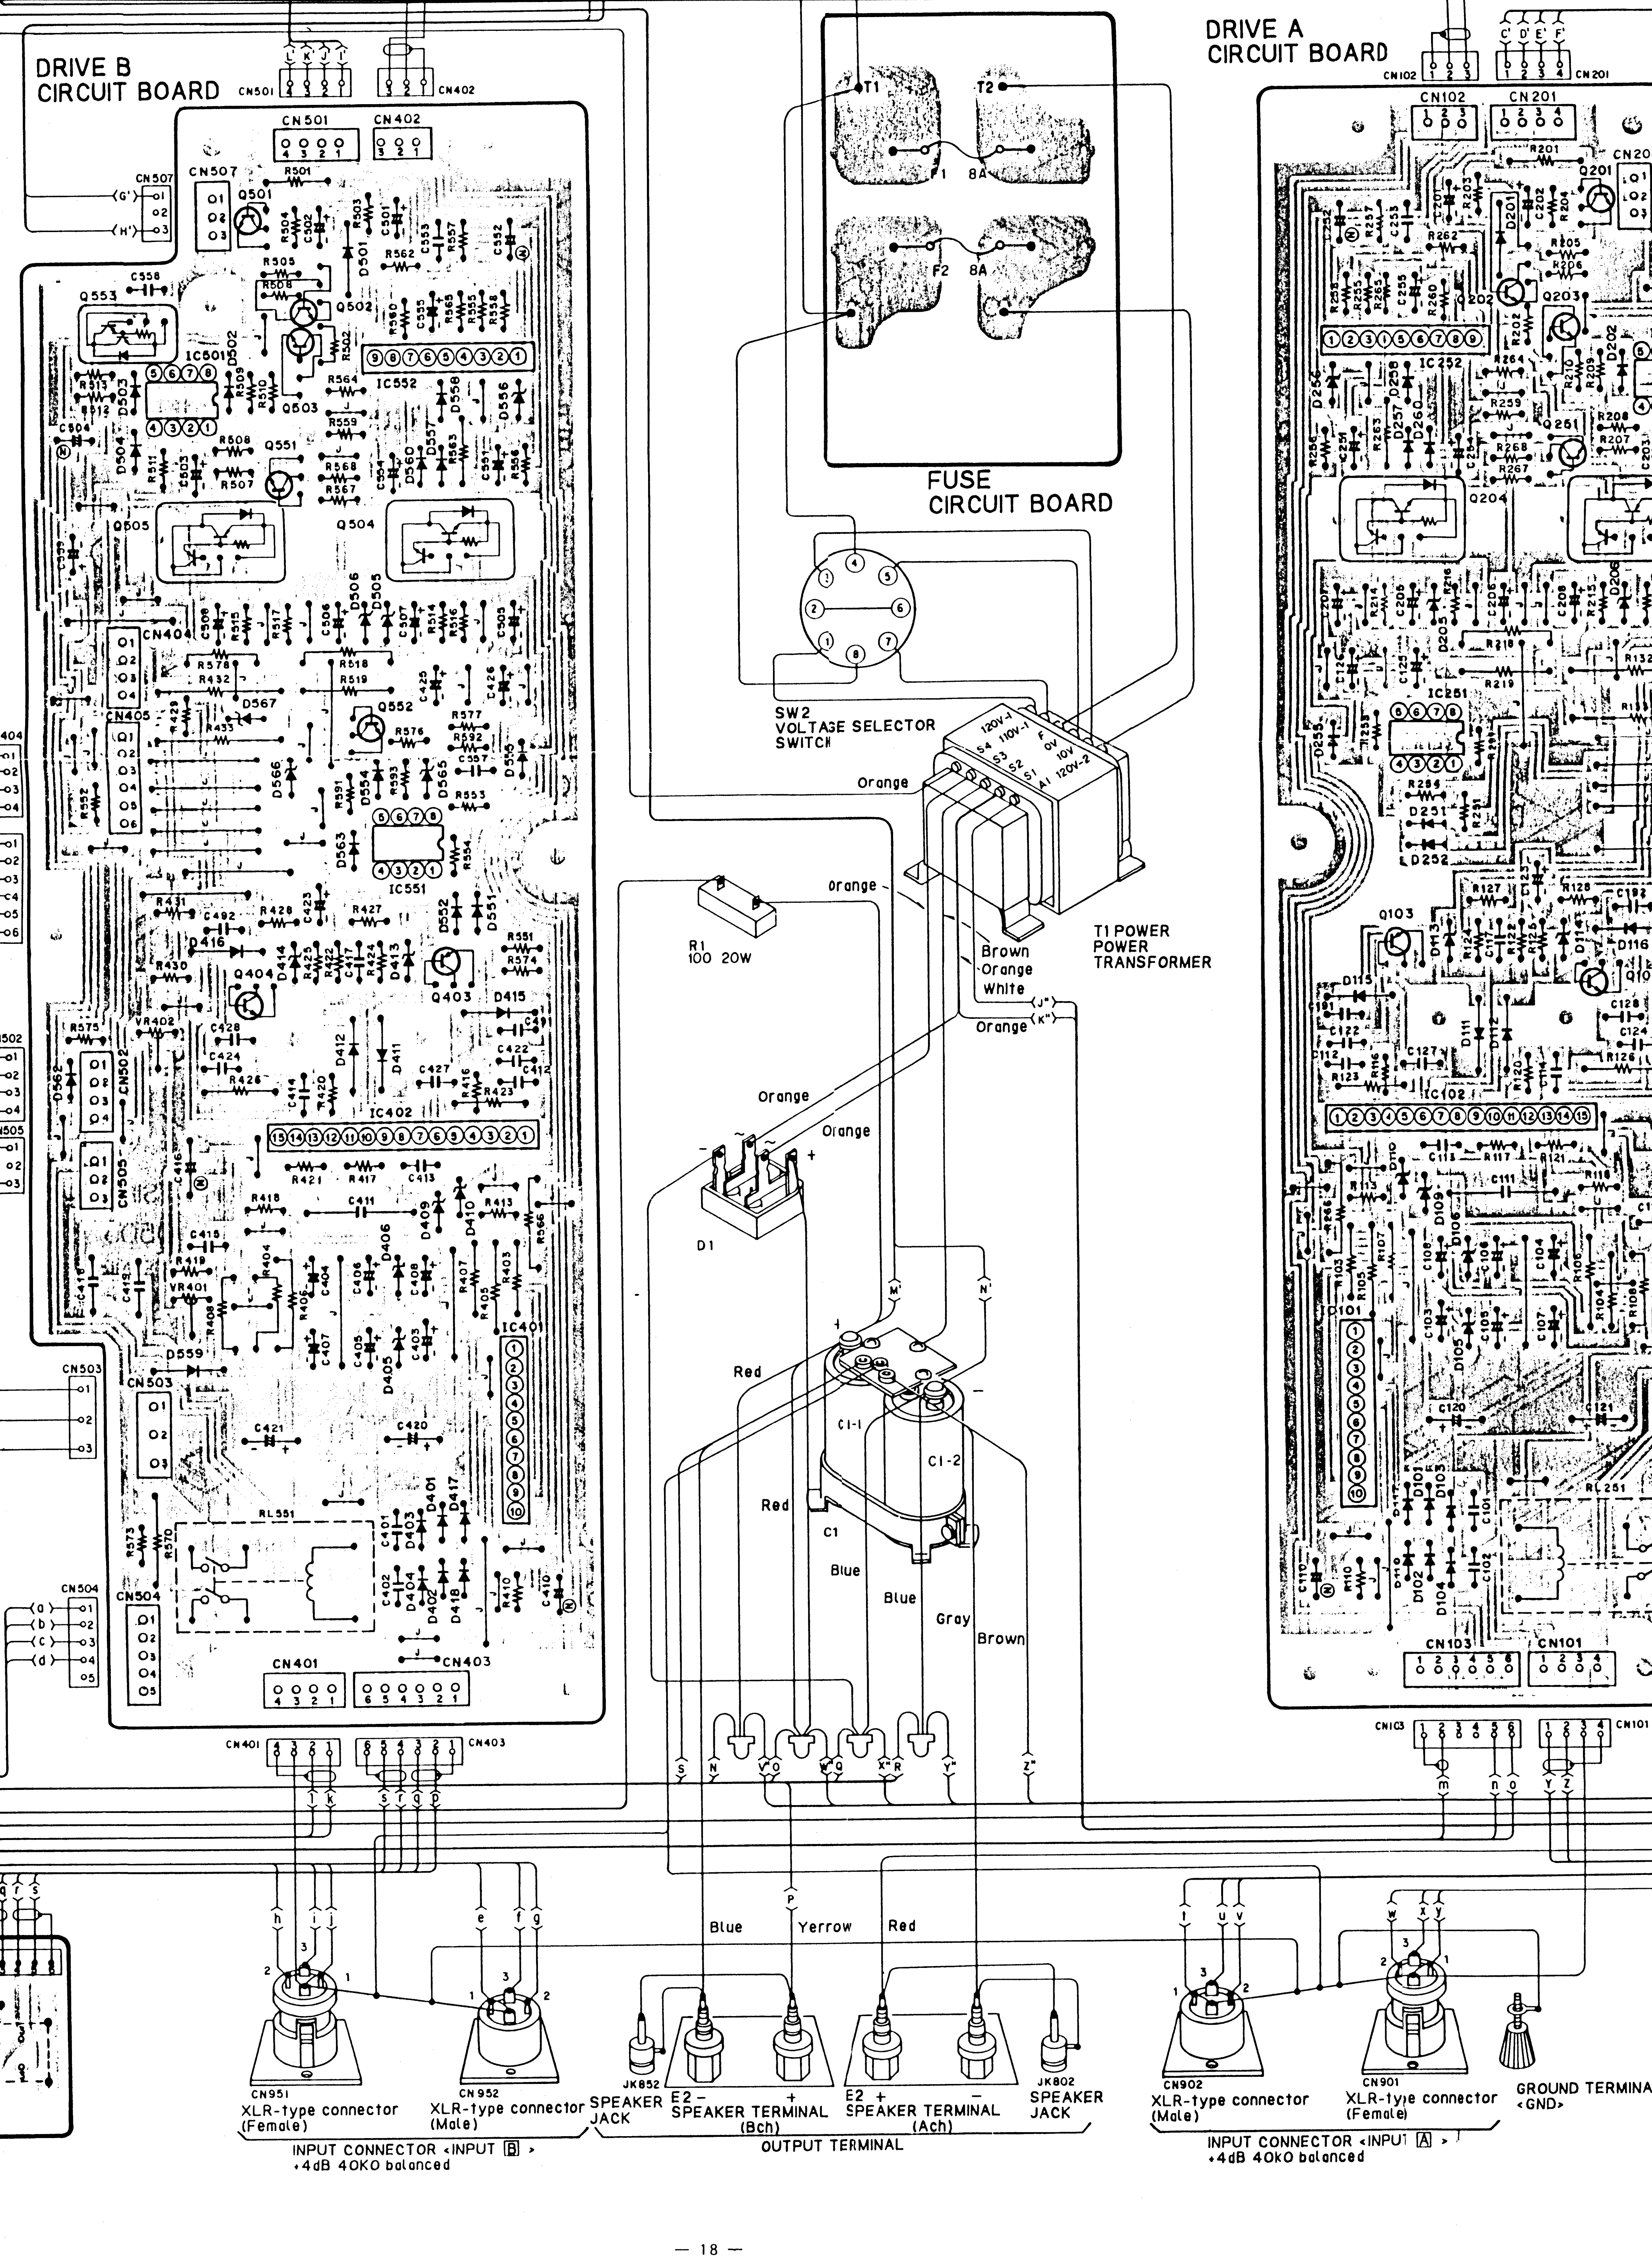
DRIVE B CIRCUIT BOARD
DRIVE A CIRCUIT BOARD
FUSE CIRCUIT BOARD
T1
T2
F1 8A
F2 8A
SW2 VOLTAGE SELECTOR SWITCH
T1 POWER POWER TRANSFORMER
120V-1
110V-1
0V
10V
120V-2
S4
S3
S2
S1
A1
Orange
Brown
Orange
White
Orange
R1 100 20W
D1
C1
C1-1
C1-2
Red
Red
Blue
Blue
Gray
Brown
Blue
Yerrow
Red
CN951 XLR-type connector (Female)
CN952 XLR-type connector (Male)
INPUT CONNECTOR <INPUT B> +4dB 40KO balanced
JK852 SPEAKER JACK
E2 − + SPEAKER TERMINAL (Bch)
E2 + − SPEAKER TERMINAL (Ach)
JK802 SPEAKER JACK
OUTPUT TERMINAL
CN902 XLR-type connector (Male)
CN901 XLR-type connector (Female)
INPUT CONNECTOR <INPUT A> +4dB 40KO balanced
GROUND TERMINA <GND>
CN501
CN402
CN507
CN401
CN403
CN404
CN405
CN502
CN505
CN503
CN504
IC501
IC552
IC551
IC402
IC401
RL551
Q501
Q502
Q503
Q551
Q553
Q505
Q504
Q552
Q404
Q403
VR402
VR401
CN102
CN201
CN103
CN101
IC252
IC251
IC102
IC101
RL251
Q201
Q202
Q203
Q251
Q204
Q103

CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM OF WP-9110C

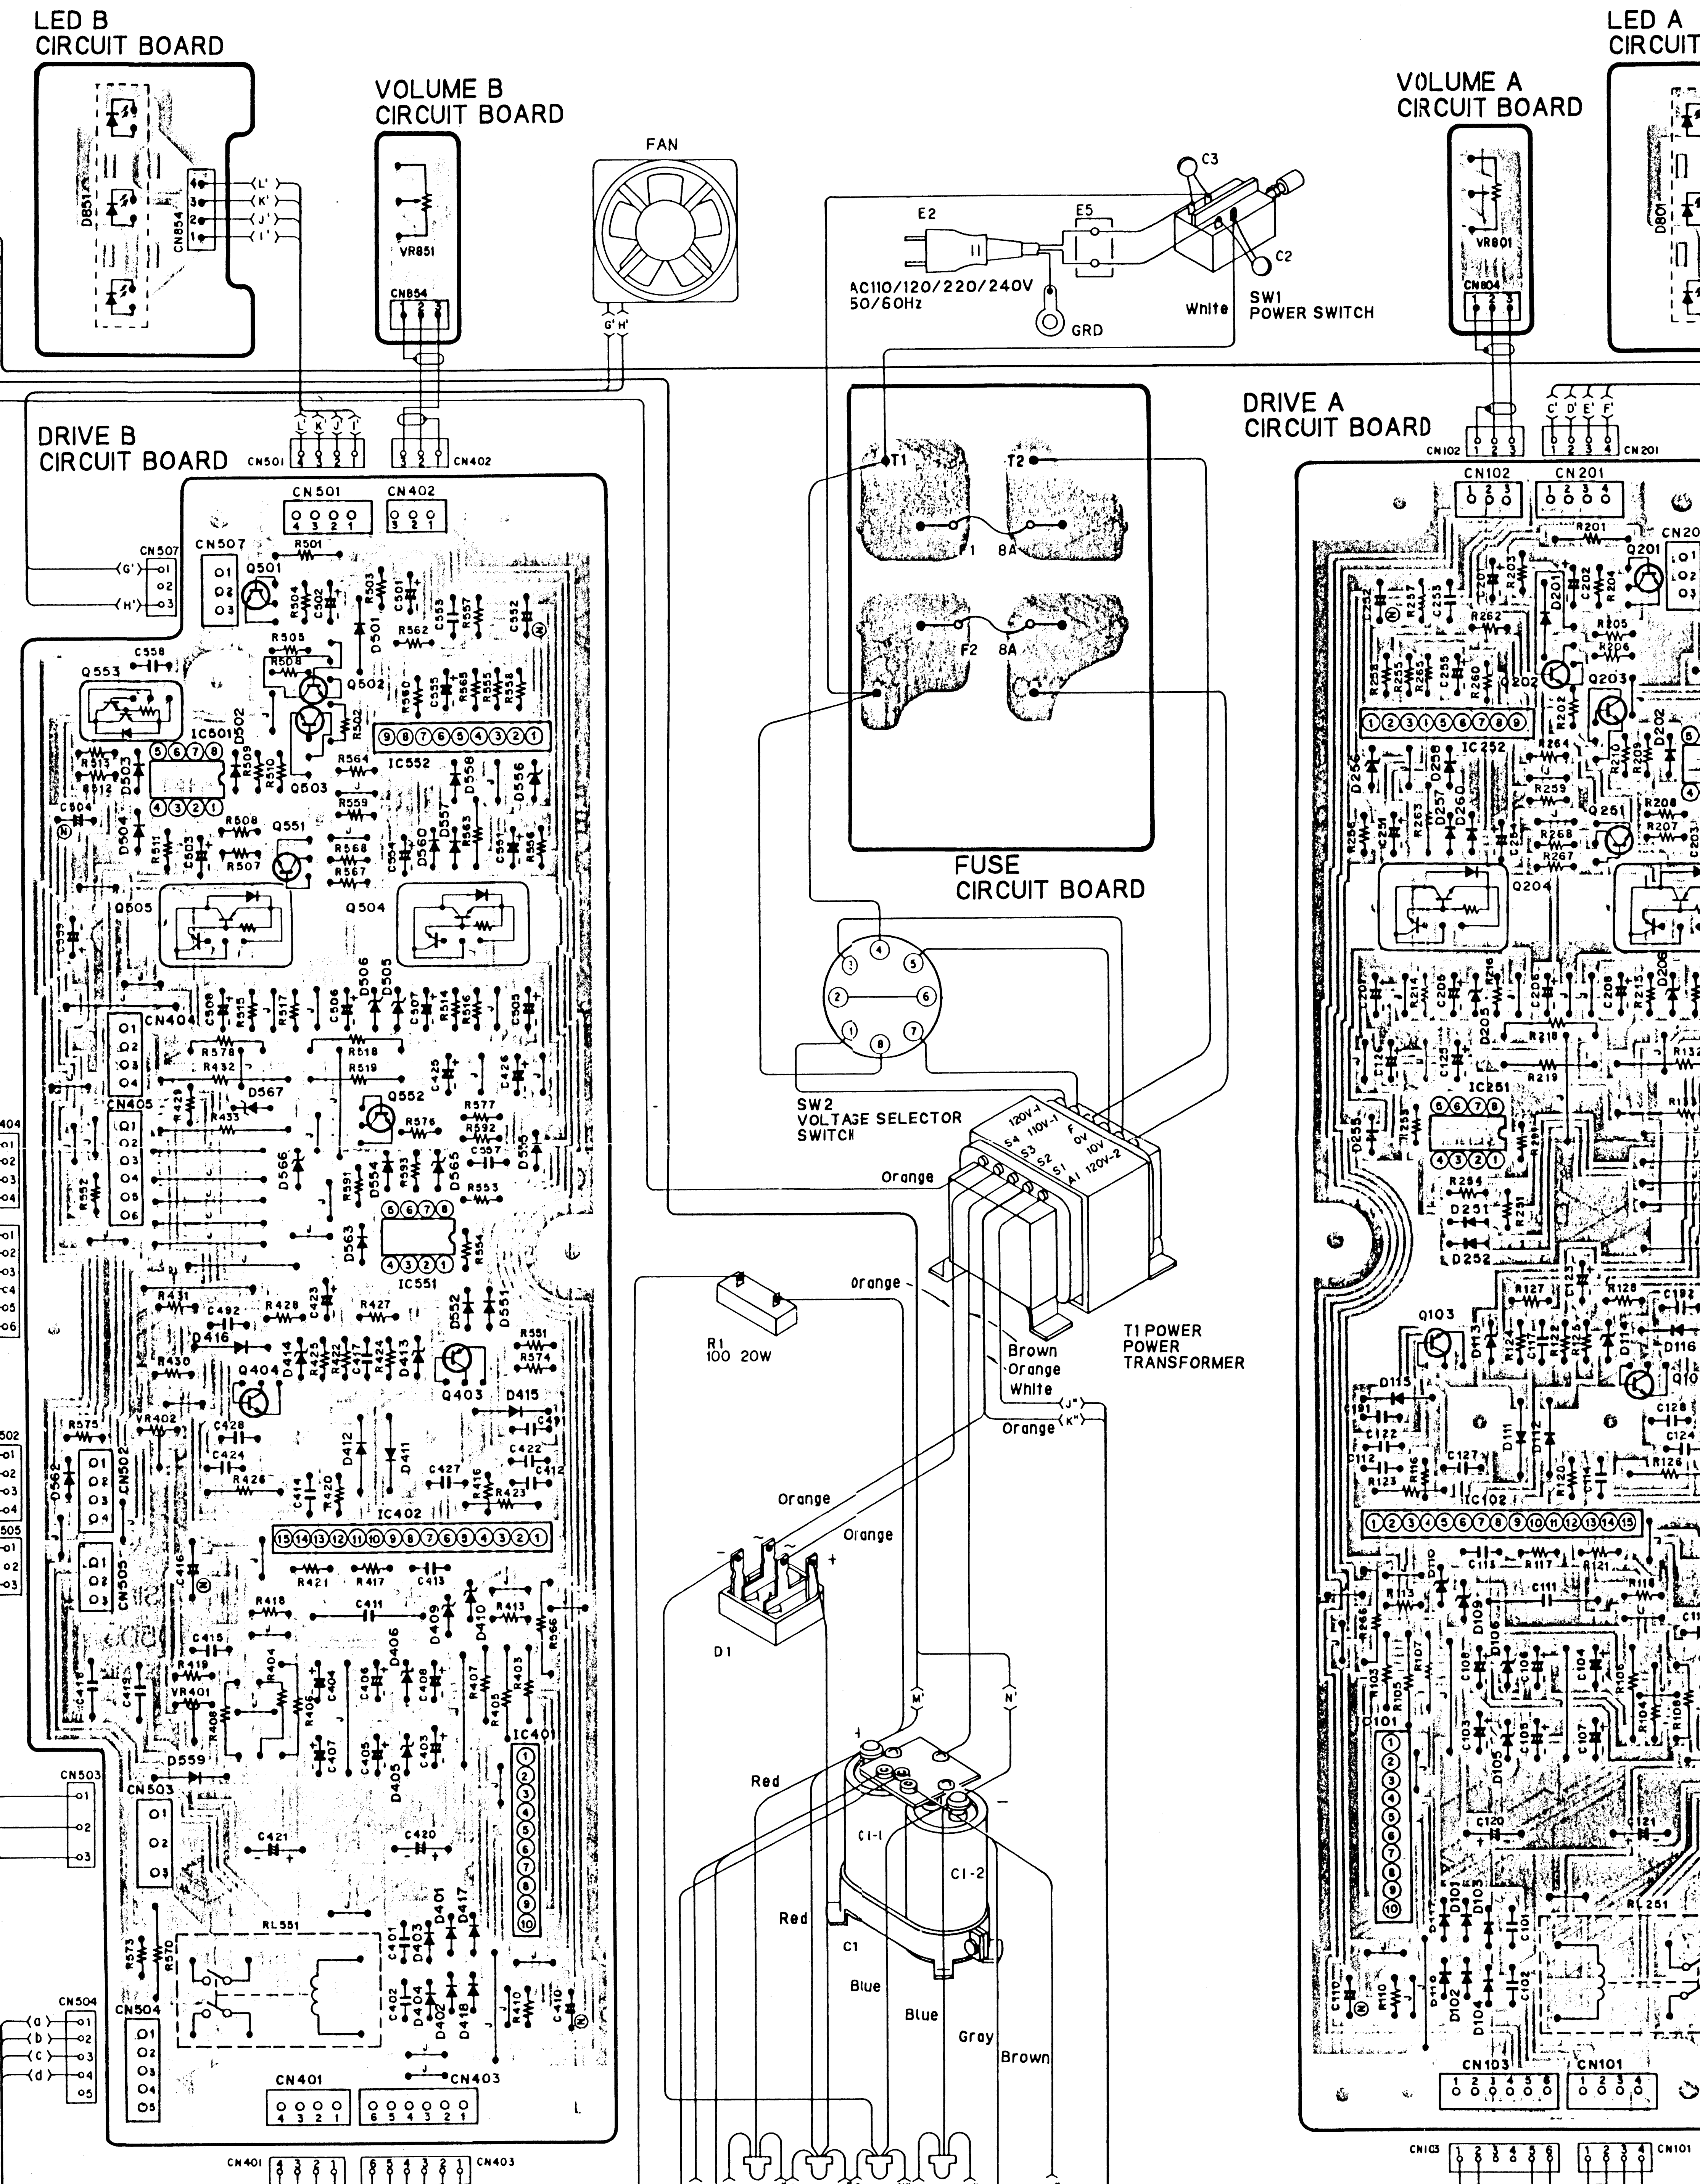
LED B
CIRCUIT BOARD
D851
CN854
VOLUME B
CIRCUIT BOARD
VR851
CN854
FAN
E2
E5
C3
C2
AC110/120/220/240V
50/60Hz
GRD
White
SW1
POWER SWITCH
VOLUME A
CIRCUIT BOARD
VR801
CN804
LED A
CIRCUIT
D801
DRIVE B
CIRCUIT BOARD
CN501
CN402
CN507
Q501
Q502
Q503
Q551
Q552
Q553
Q504
Q505
IC501
IC552
IC551
IC402
IC401
CN404
CN405
CN502
CN503
CN504
CN505
CN401
CN403
RL551
VR401
VR402
Q403
Q404
FUSE
CIRCUIT BOARD
T1
T2
F1
F2
8A
SW2
VOLTAGE SELECTOR
SWITCH
120V-1
110V-1
S4
S3
S2
S1
F
0V
10V
120V-2
A1
T1 POWER
POWER
TRANSFORMER
Orange
Brown
White
R1
100 20W
D1
Red
Blue
Gray
C1
C1-1
C1-2
DRIVE A
CIRCUIT BOARD
CN102
CN201
CN103
CN101
Q201
Q202
Q203
Q204
Q103
IC252
IC251
IC102
IC101
D252

M OF WP-9110C

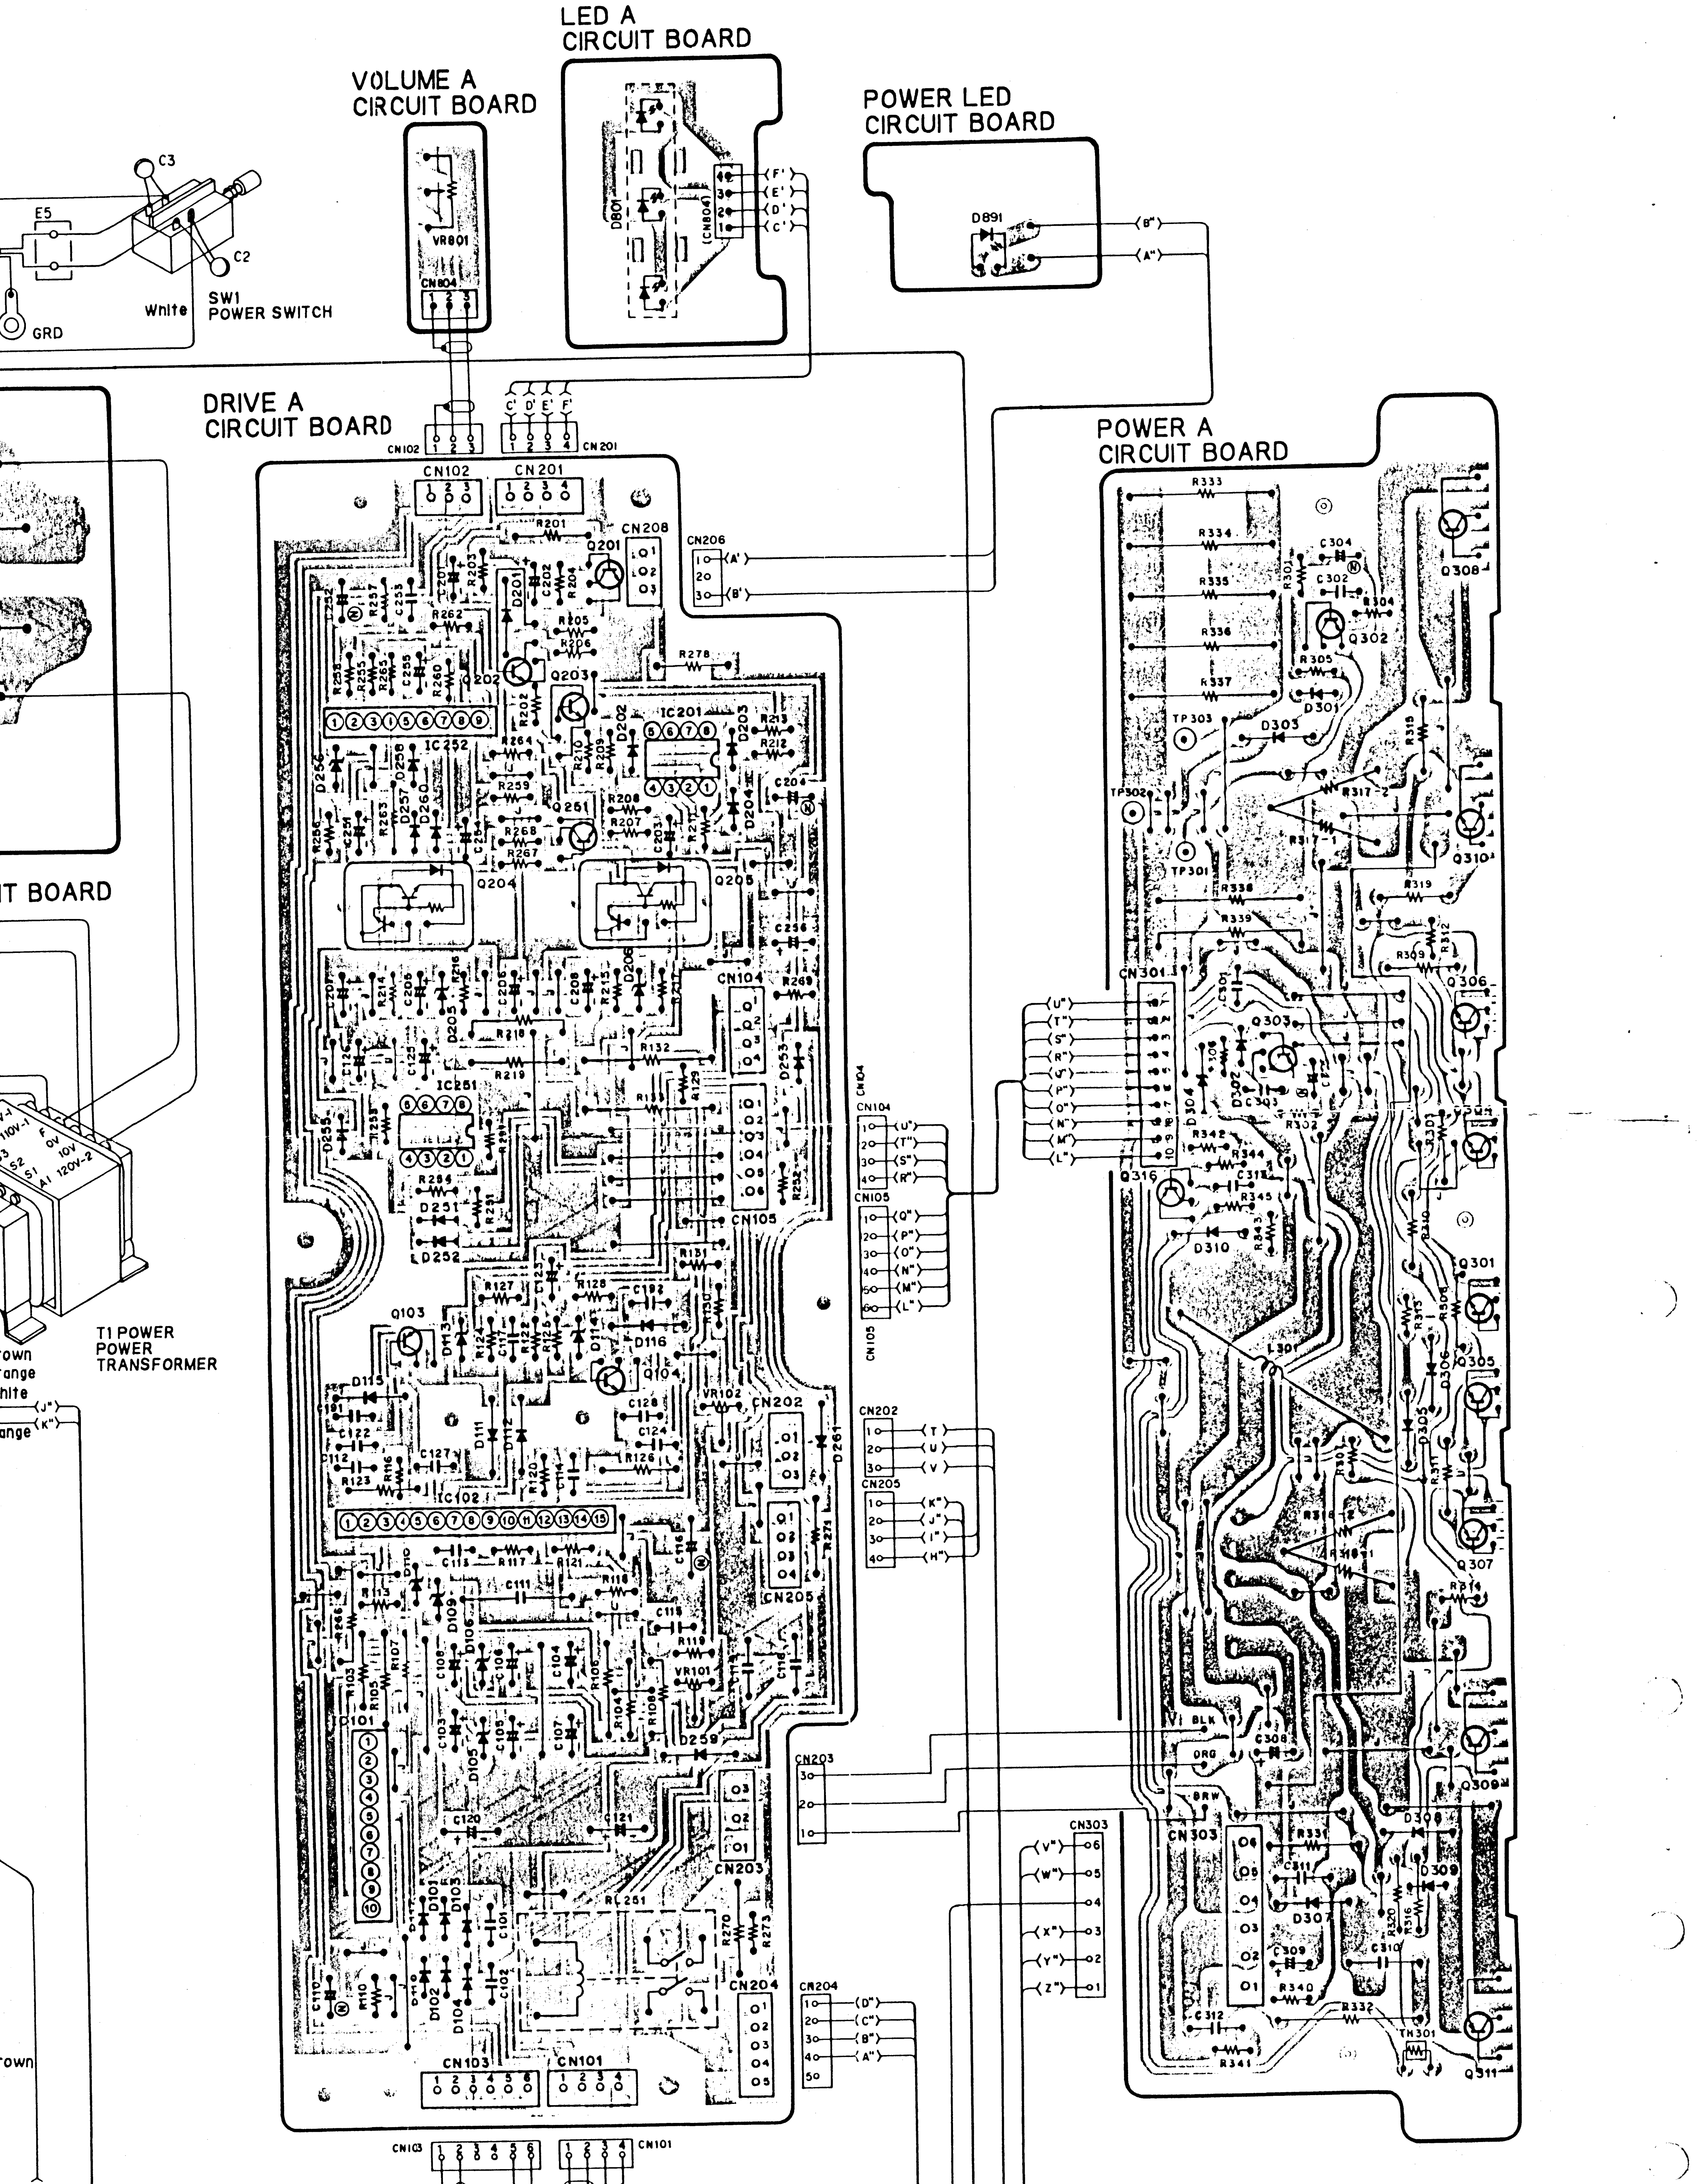
VOLUME A CIRCUIT BOARD
LED A CIRCUIT BOARD
POWER LED CIRCUIT BOARD
DRIVE A CIRCUIT BOARD
POWER A CIRCUIT BOARD
IT BOARD
SW1 POWER SWITCH
White
GRD
E5
C3
C2
VR801
CN804
D801
CN804
D891
T1 POWER POWER TRANSFORMER
own
ange
hite
ange
own
CN102
CN201
CN208
CN206
CN104
CN105
CN202
CN205
CN203
CN204
CN103
CN101
CN301
CN303
IC201
IC251
IC252
IC102
Q201
Q202
Q203
Q204
Q205
Q251
Q103
Q104
Q301
Q302
Q303
Q304
Q305
Q306
Q307
Q308
Q309
Q310
Q311
Q316
TP301
TP302
TP303
TH301
L301
VR101
VR102
RL251
BLK
ORG
BRW

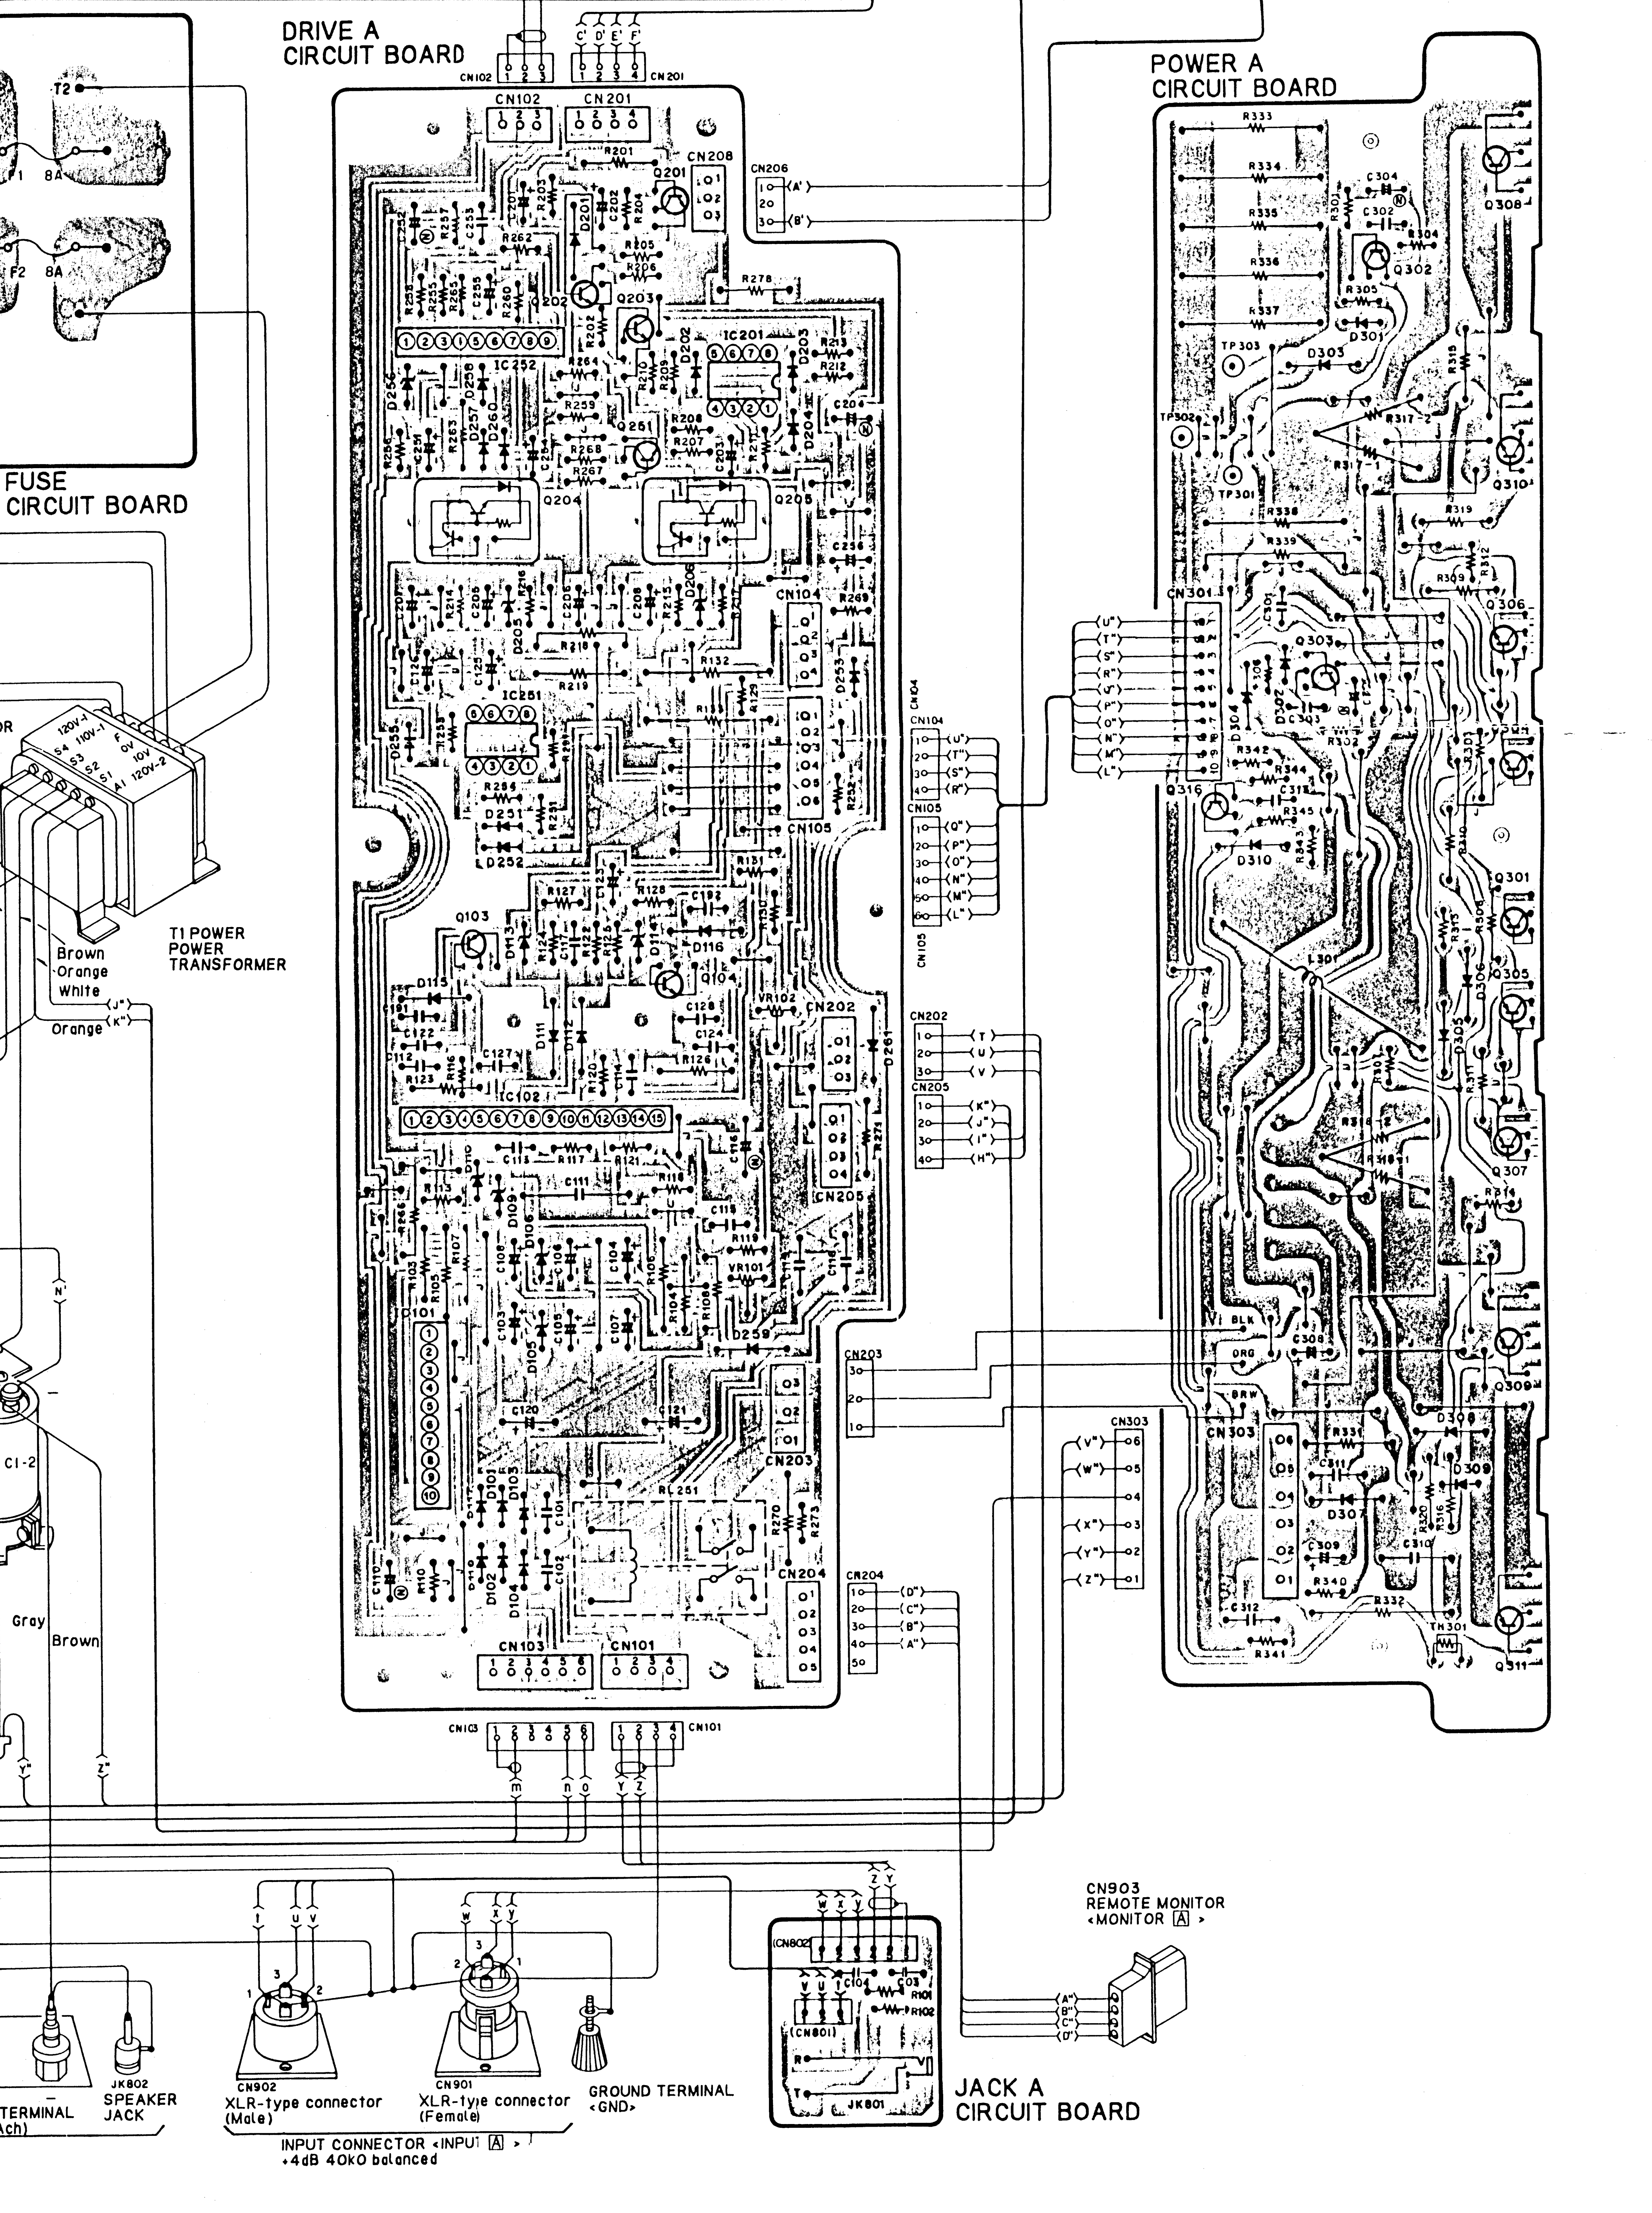
DRIVE A CIRCUIT BOARD
POWER A CIRCUIT BOARD
FUSE CIRCUIT BOARD
JACK A CIRCUIT BOARD
T1 POWER POWER TRANSFORMER
Brown
Orange
White
Orange
Gray
Brown
CN102
CN201
CN206
CN208
CN104
CN105
CN202
CN205
CN203
CN204
CN103
CN101
CN301
CN303
CN802
CN801
IC201
IC252
IC251
IC102
RL251
L301
TH301
JK801
JK802
SPEAKER JACK
TERMINAL
CN902
XLR-type connector (Male)
CN901
XLR-type connector (Female)
GROUND TERMINAL <GND>
INPUT CONNECTOR <INPUT A>
+4dB 40kΩ balanced
CN903
REMOTE MONITOR
<MONITOR A>

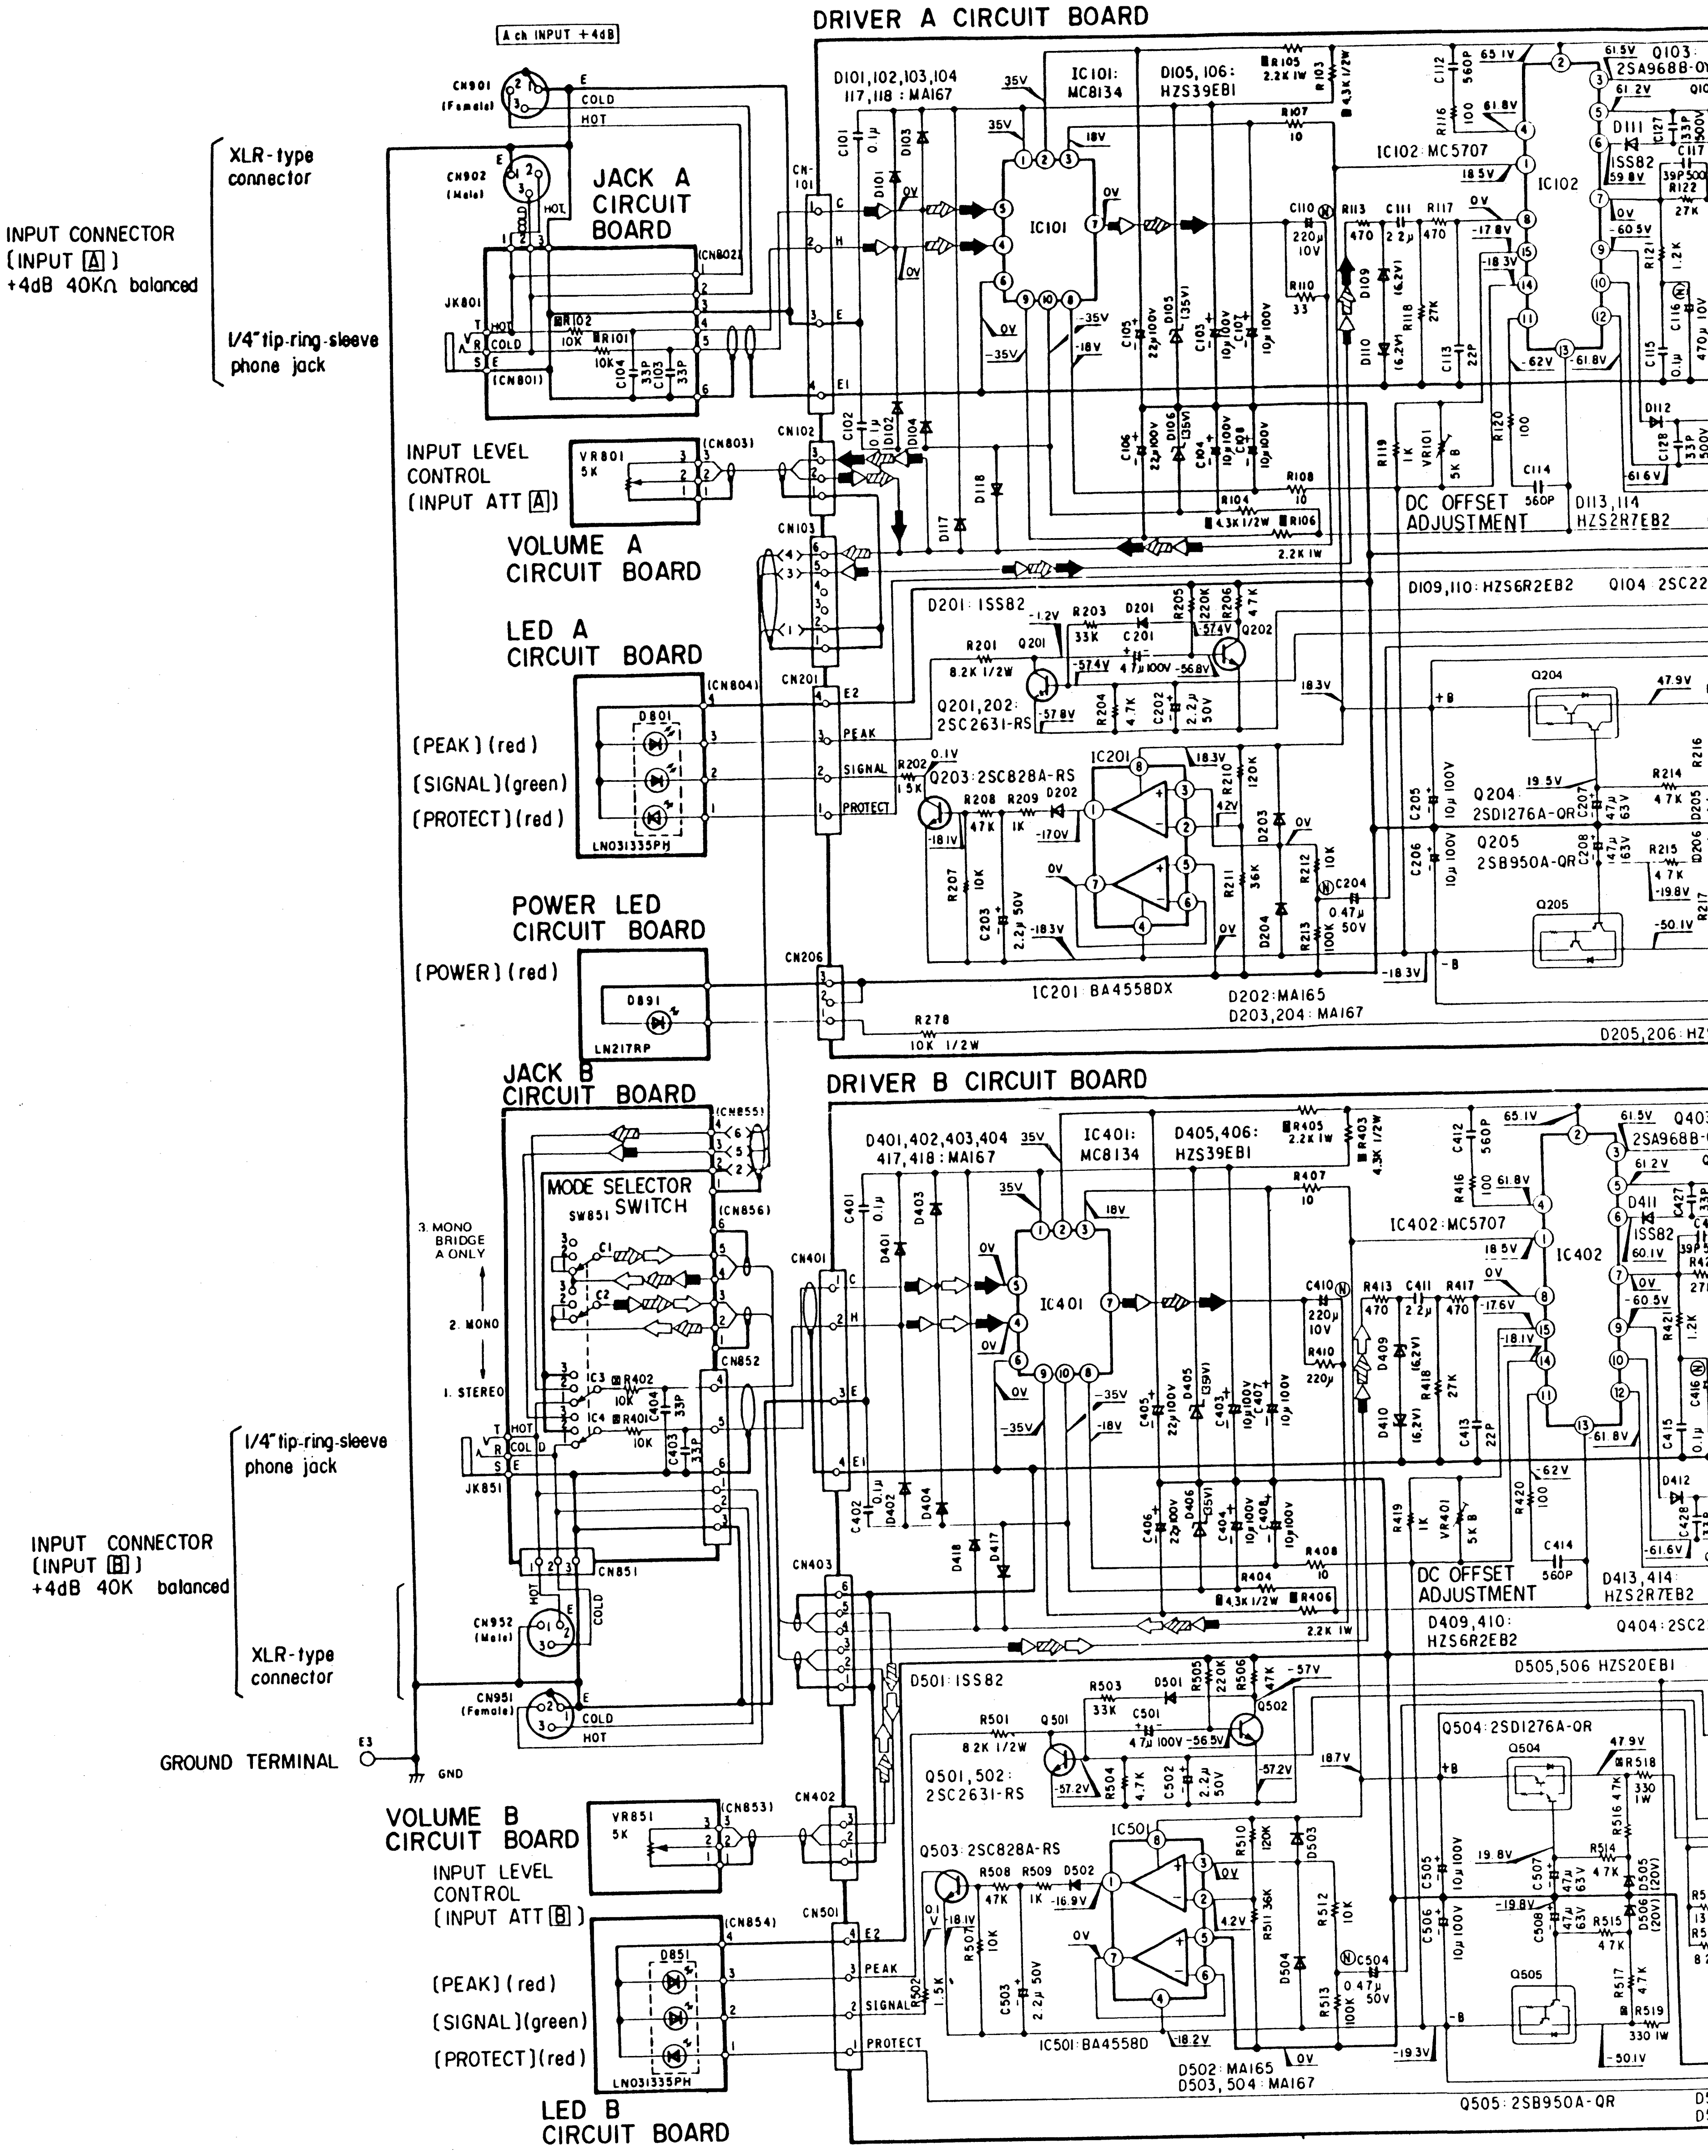
DRIVER A CIRCUIT BOARD
DRIVER B CIRCUIT BOARD
A ch INPUT +4dB
INPUT CONNECTOR
(INPUT [A])
+4dB 40KΩ balanced
XLR-type connector
1/4" tip-ring-sleeve phone jack
CN901 (Female)
CN902 (Male)
JK801
JACK A CIRCUIT BOARD
COLD
HOT
E
INPUT LEVEL CONTROL
(INPUT ATT [A])
VR801 5K
VOLUME A CIRCUIT BOARD
LED A CIRCUIT BOARD
(PEAK) (red)
(SIGNAL) (green)
(PROTECT) (red)
D801
LN031335PH
POWER LED CIRCUIT BOARD
(POWER) (red)
D891
LN217RP
D101,102,103,104 117,118 : MA167
IC101: MC8134
D105,106: HZS39EB1
IC102 MC5707
Q103 2SA968B
D111 1SS82
DC OFFSET ADJUSTMENT
D113,114 HZS2R7EB2
D109,110: HZS6R2EB2
Q104 2SC22
D201 1SS82
Q201,202: 2SC2631-RS
Q203: 2SC828A-RS
IC201
IC201 BA4558DX
D202: MA165
D203,204: MA167
Q204 2SD1276A-QR
Q205 2SB950A-QR
D205,206 HZ
R278 10K 1/2W
JACK B CIRCUIT BOARD
MODE SELECTOR SWITCH
SW851
3. MONO BRIDGE A ONLY
2. MONO
1. STEREO
JK851
CN851
CN952 (Male)
CN951 (Female)
INPUT CONNECTOR
(INPUT [B])
+4dB 40K balanced
GROUND TERMINAL
E3
GND
VOLUME B CIRCUIT BOARD
VR851 5K
INPUT LEVEL CONTROL
(INPUT ATT [B])
LED B CIRCUIT BOARD
D851
LN031335PH
D401,402,403,404 417,418 : MA167
IC401: MC8134
D405,406: HZS39EB1
IC402: MC5707
Q403 2SA968B
D411 1SS82
D413,414 HZS2R7EB2
D409,410: HZS6R2EB2
Q404 2SC2
D501 1SS82
Q501,502: 2SC2631-RS
Q503 2SC828A-RS
IC501
IC501 BA4558D
D502 MA165
D503,504 MA167
D505,506 HZS20EB1
Q504 2SD1276A-QR
Q505 2SB950A-QR
35V
-35V
18V
-18V
0V
61.5V
61.2V
-60.5V
-61.8V
-62V
47.9V
-50.1V
-18.3V
18.3V
-1.2V
-57.4V
-56.8V
-57.8V
-18.1V
-17.0V
-18.2V
19.8V
-19.8V
-19.3V
18.7V

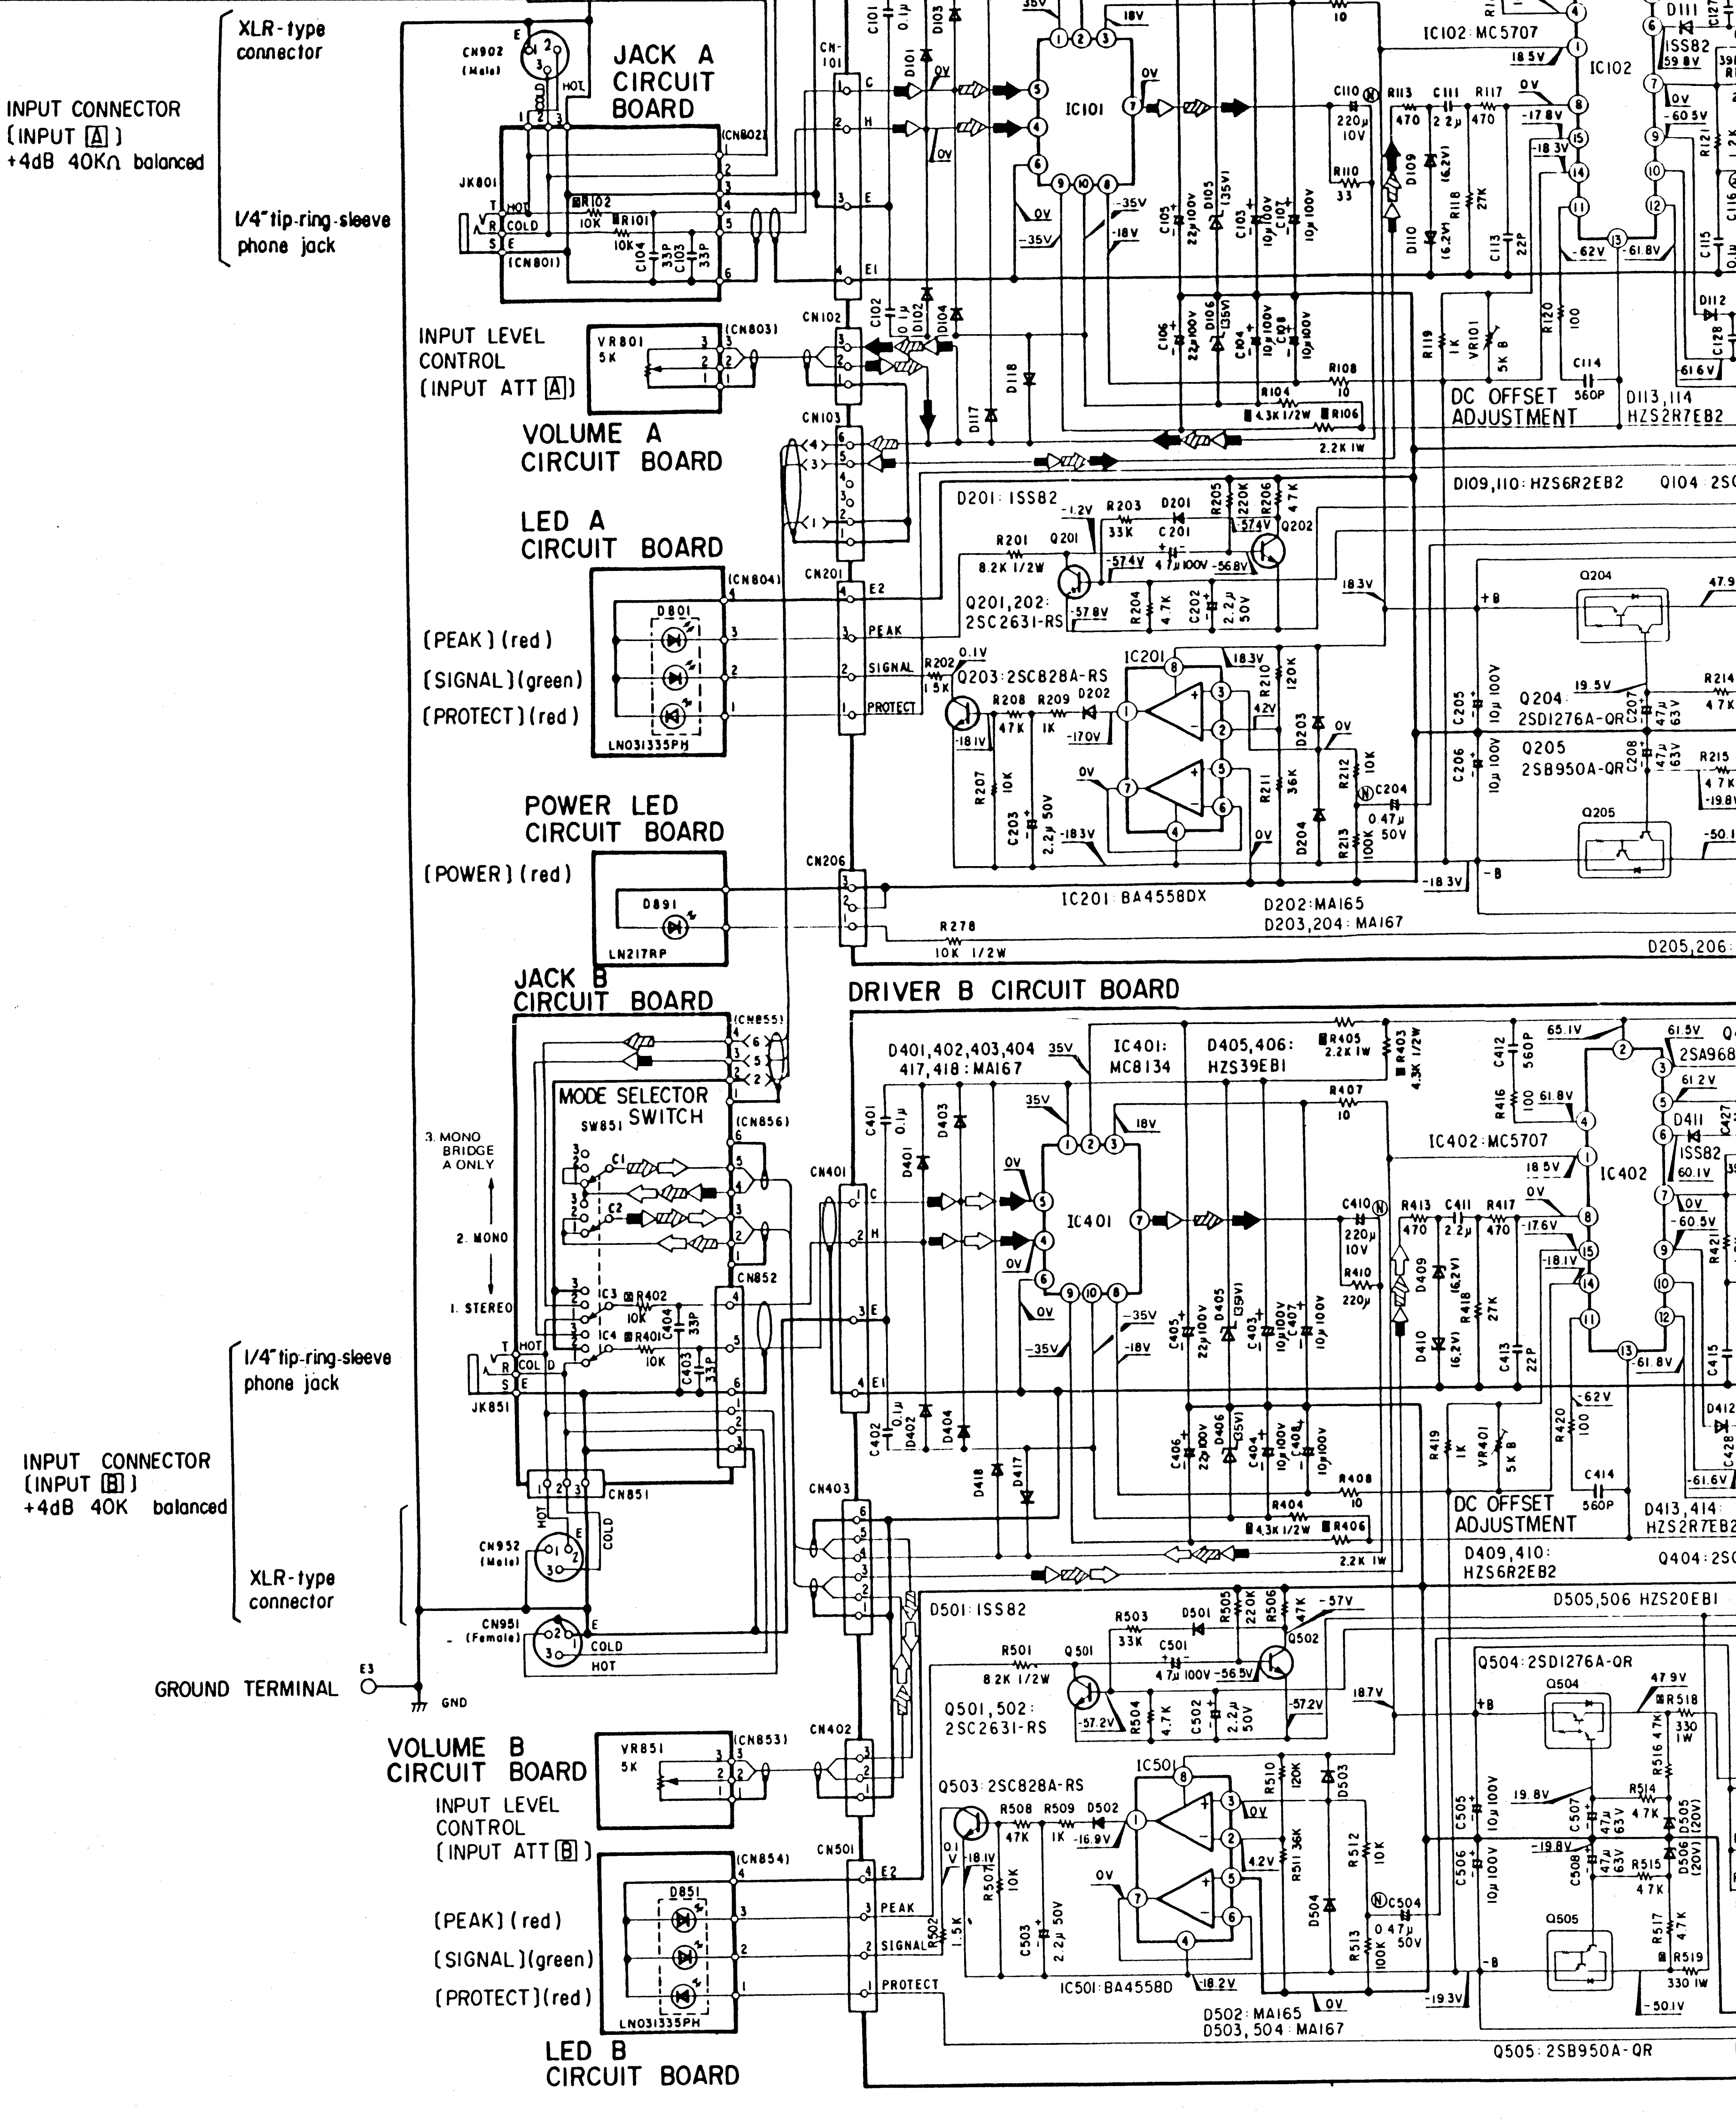
XLR-type connector
INPUT CONNECTOR
(INPUT A)
+4dB 40KΩ balanced
1/4" tip-ring-sleeve phone jack
JACK A CIRCUIT BOARD
CN902 (Male)
JK801
CN801
CN802
INPUT LEVEL CONTROL (INPUT ATT A)
VR801 5K
CN803
VOLUME A CIRCUIT BOARD
LED A CIRCUIT BOARD
CN804
D801
(PEAK) (red)
(SIGNAL) (green)
(PROTECT) (red)
LN031335PH
POWER LED CIRCUIT BOARD
(POWER) (red)
D891
LN217RP
CN101
CN102
CN103
CN201
CN206
IC101
IC102 MC5707
IC201 BA4558DX
D201 1SS82
Q201,202: 2SC2631-RS
Q203: 2SC828A-RS
Q204 2SD1276A-QR
Q205 2SB950A-QR
D202: MA165
D203,204: MA167
DC OFFSET ADJUSTMENT
D113,114 HZS2R7EB2
D109,110: HZS6R2EB2
DRIVER B CIRCUIT BOARD
D401,402,403,404 417,418: MA167
IC401: MC8134
D405,406: HZS39EB1
IC402 MC5707
IC401
D409,410: HZS6R2EB2
D413,414 HZS2R7EB2
D501: 1SS82
Q501,502: 2SC2631-RS
Q503: 2SC828A-RS
IC501 BA4558D
D502: MA165
D503,504: MA167
Q504: 2SD1276A-QR
Q505: 2SB950A-QR
D505,506 HZS20EB1
JACK B CIRCUIT BOARD
CN855
CN856
CN852
CN851
MODE SELECTOR SWITCH
SW851
3. MONO BRIDGE A ONLY
2. MONO
1. STEREO
JK851
INPUT CONNECTOR
(INPUT B)
+4dB 40K balanced
1/4" tip-ring-sleeve phone jack
XLR-type connector
CN952 (Male)
CN951 (Female)
HOT
COLD
GROUND TERMINAL
E3
GND
VOLUME B CIRCUIT BOARD
VR851 5K
CN853
INPUT LEVEL CONTROL (INPUT ATT B)
CN401
CN402
CN403
CN501
CN854
D851
(PEAK) (red)
(SIGNAL) (green)
(PROTECT) (red)
LN031335PH
LED B CIRCUIT BOARD

<SIGNAL CHART>

➡ Ach Input Signal

▨ Monoral Input Signal

■▷ Mono Bridge Input Signal

⇨ Bch Input Signal

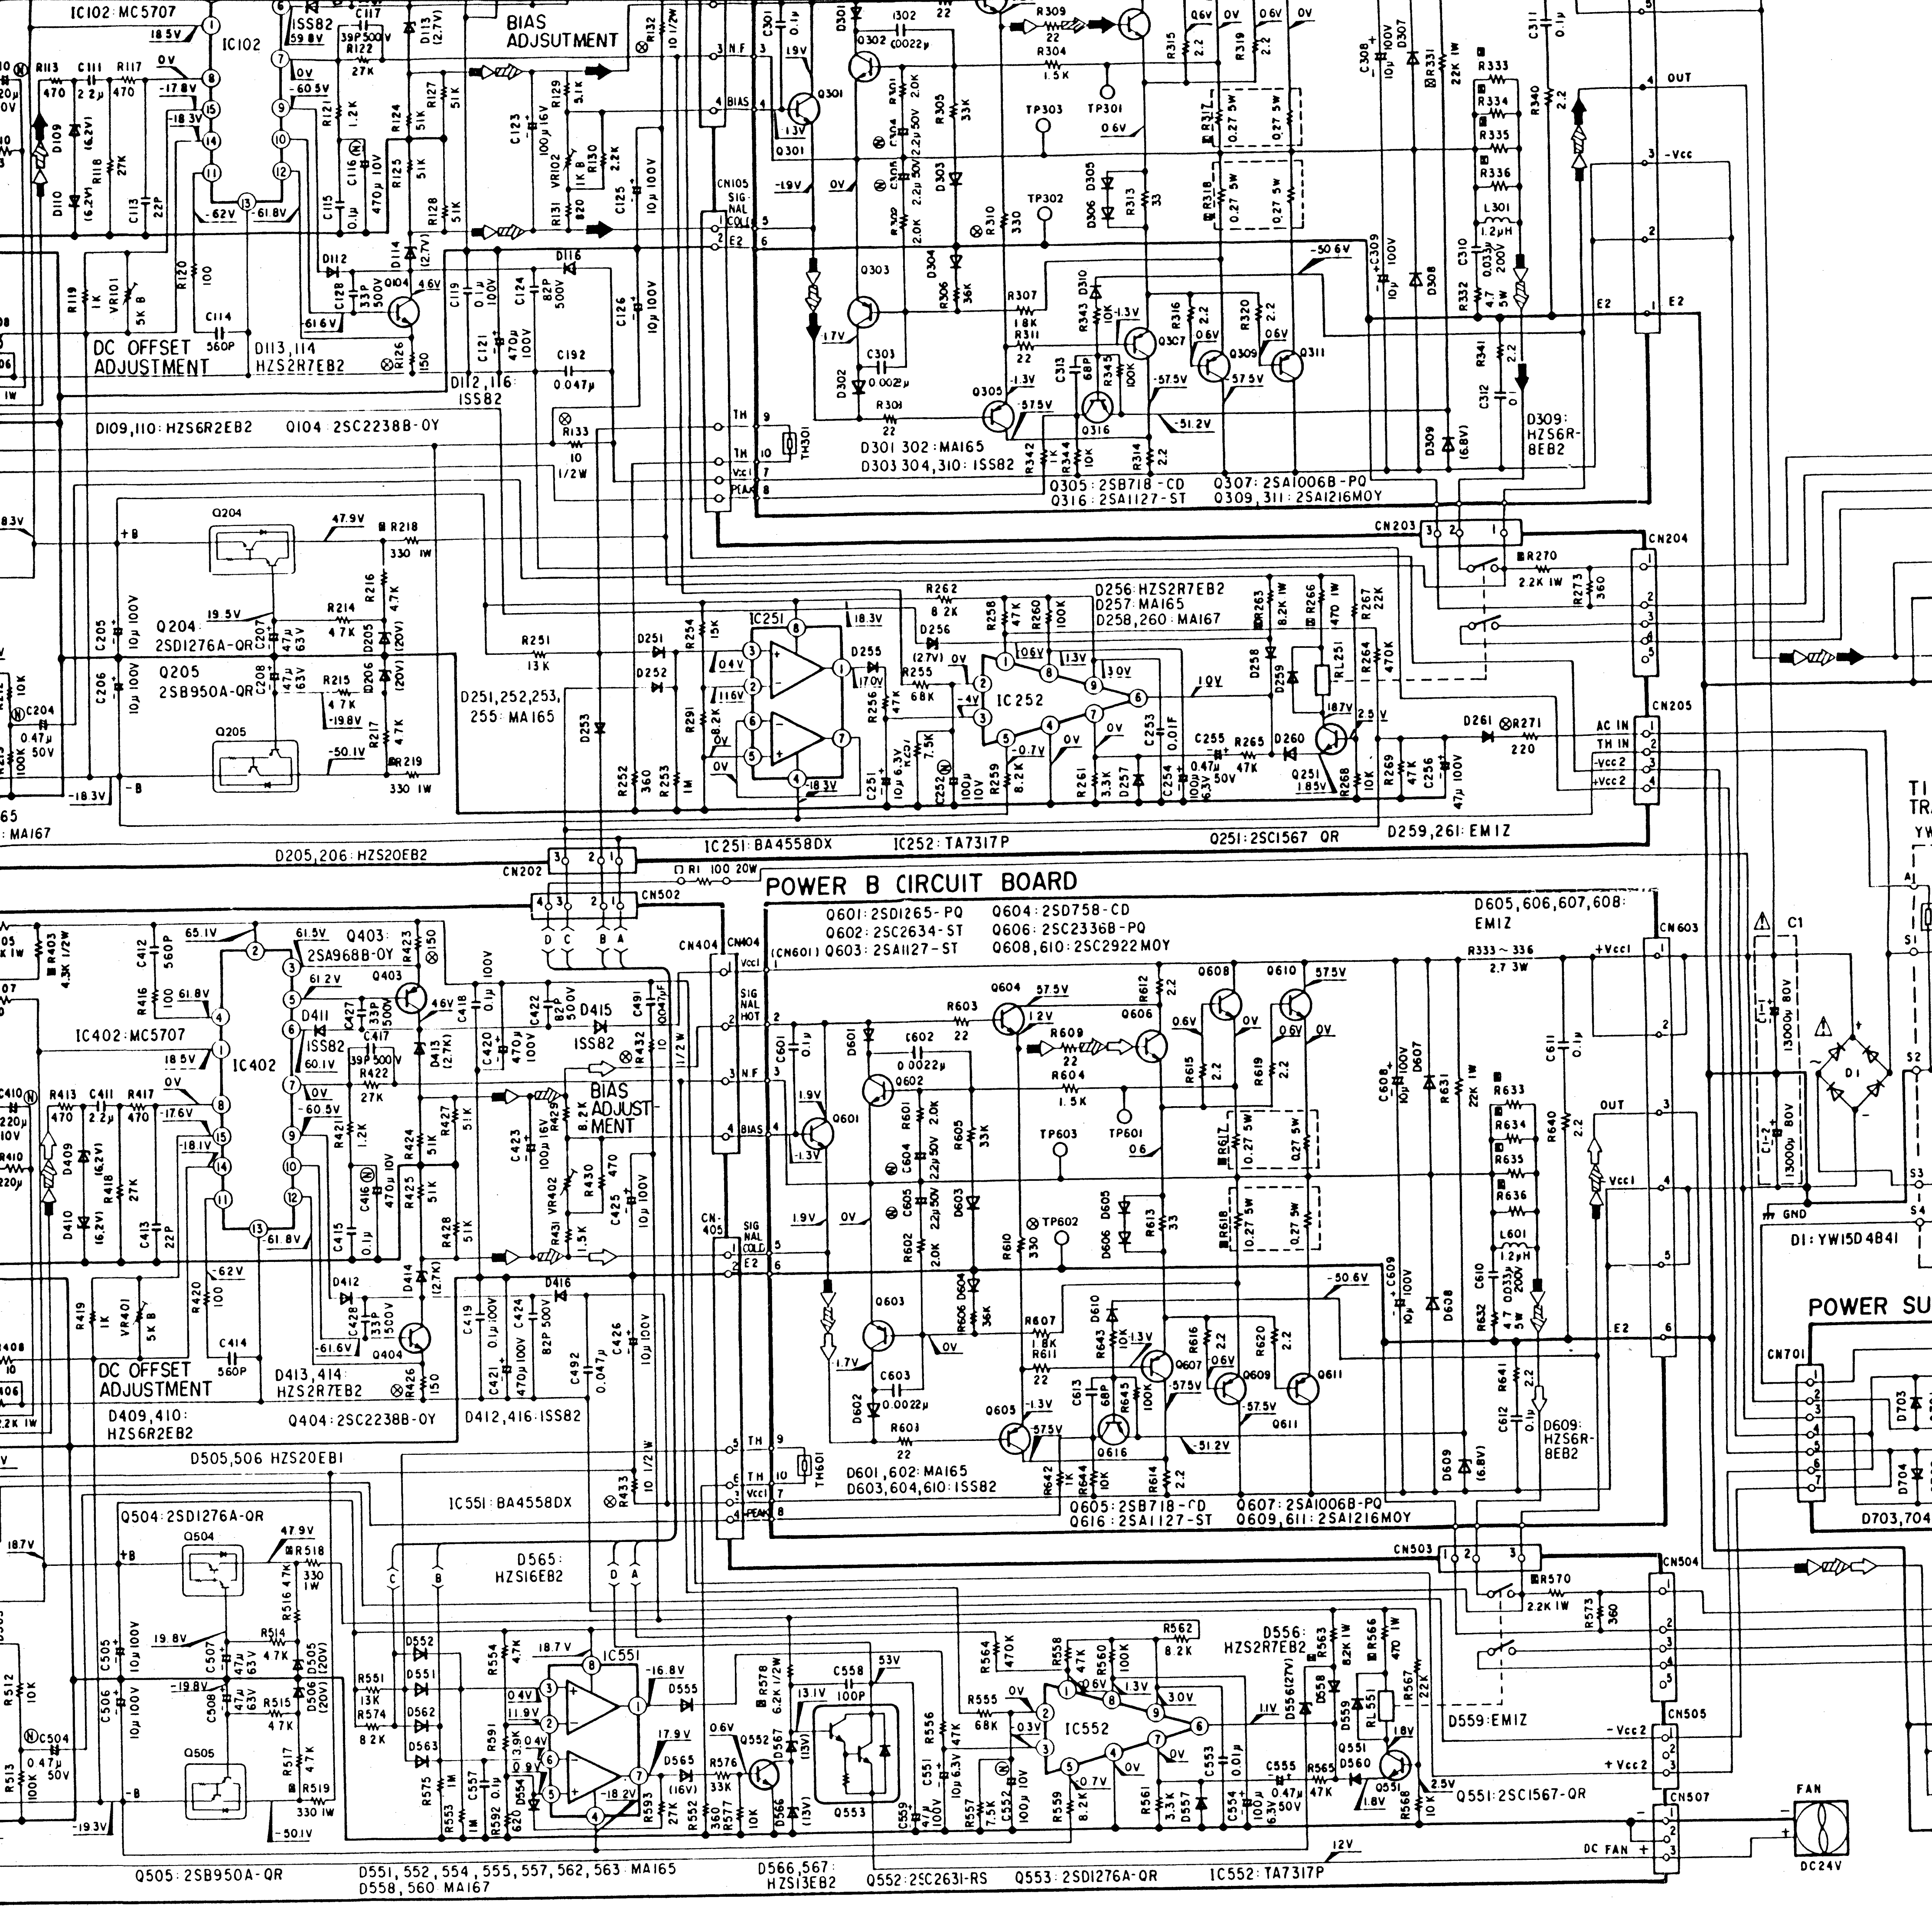
IC102: MC5707
BIAS ADJUSTMENT
DC OFFSET ADJUSTMENT
D113, 114 HZS2R7EB2
D112, 116 1SS82
D109, 110: HZS6R2EB2
Q104: 2SC2238B-OY
D301, 302: MA165
D303, 304, 310: 1SS82
Q305: 2SB718-CD
Q316: 2SA1127-ST
Q307: 2SA1006B-PQ
Q309, 311: 2SA1216MOY
D309: HZS6R-8EB2
Q204: 2SD1276A-QR
Q205: 2SB950A-QR
D251, 252, 253, 255: MA165
D256: HZS2R7EB2
D257: MA165
D258, 260: MA167
IC251: BA4558DX
IC252: TA7317P
Q251: 2SC1567 QR
D259, 261: EM1Z
D205, 206: HZS20EB2
POWER B CIRCUIT BOARD
Q601: 2SD1265-PQ
Q602: 2SC2634-ST
Q603: 2SA1127-ST
Q604: 2SD758-CD
Q606: 2SC2336B-PQ
Q608, 610: 2SC2922MOY
D605, 606, 607, 608: EM1Z
IC402: MC5707
D413, 414 HZS2R7EB2
D409, 410: HZS6R2EB2
Q404: 2SC2238B-OY
D412, 416: 1SS82
D505, 506 HZS20EB1
D601, 602: MA165
D603, 604, 610: 1SS82
Q605: 2SB718-CD
Q616: 2SA1127-ST
Q607: 2SA1006B-PQ
Q609, 611: 2SA1216MOY
D609: HZS6R-8EB2
IC551: BA4558DX
Q504: 2SD1276A-QR
D565: HZS16EB2
D556: HZS2R7EB2
D559: EM1Z
Q551: 2SC1567-QR
Q505: 2SB950A-QR
D551, 552, 554, 555, 557, 562, 563: MA165
D558, 560 MA167
D566, 567: HZS13EB2
Q552: 2SC2631-RS
Q553: 2SD1276A-QR
IC552: TA7317P
DC FAN
FAN
DC24V
D1: YW15D4B41
POWER SU
D703, 704

MC8134

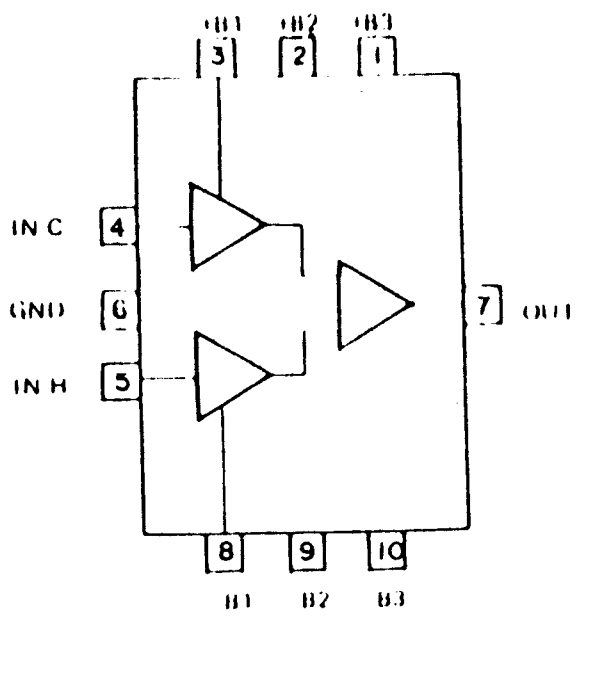
IN C
GND
IN H
OUT

BA4558DX
NJM4560DX

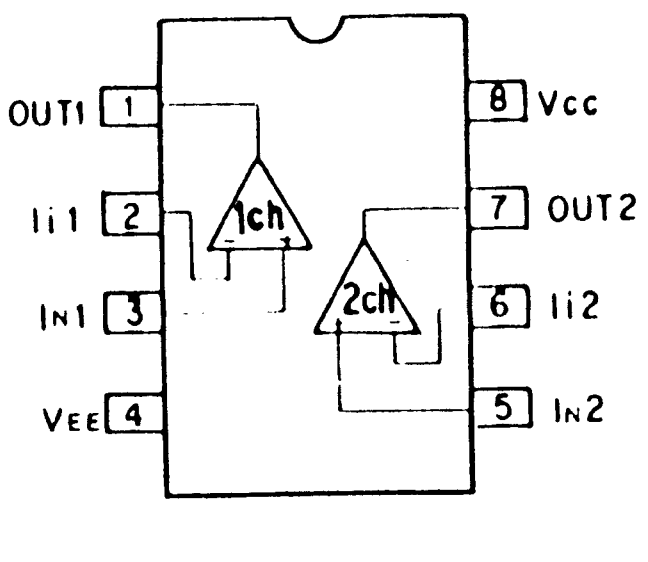
OUT1
Ii1
In1
VEE
Vcc
OUT2
Ii2
In2
1ch
2ch

MC5707

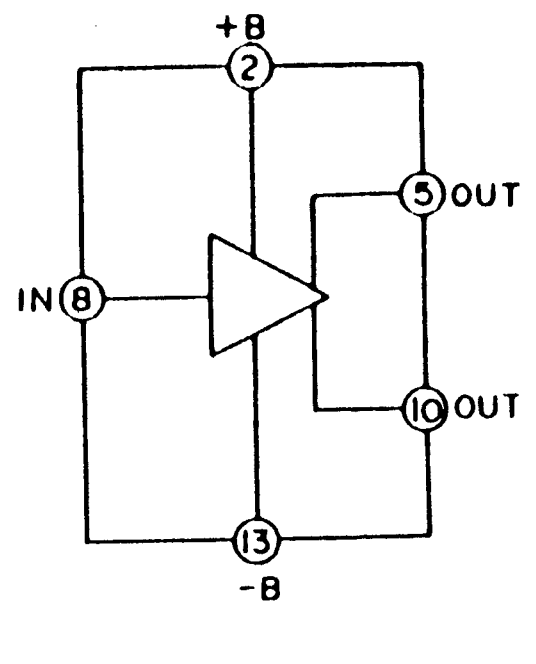
+B
IN
OUT
OUT
-B

TA7317P

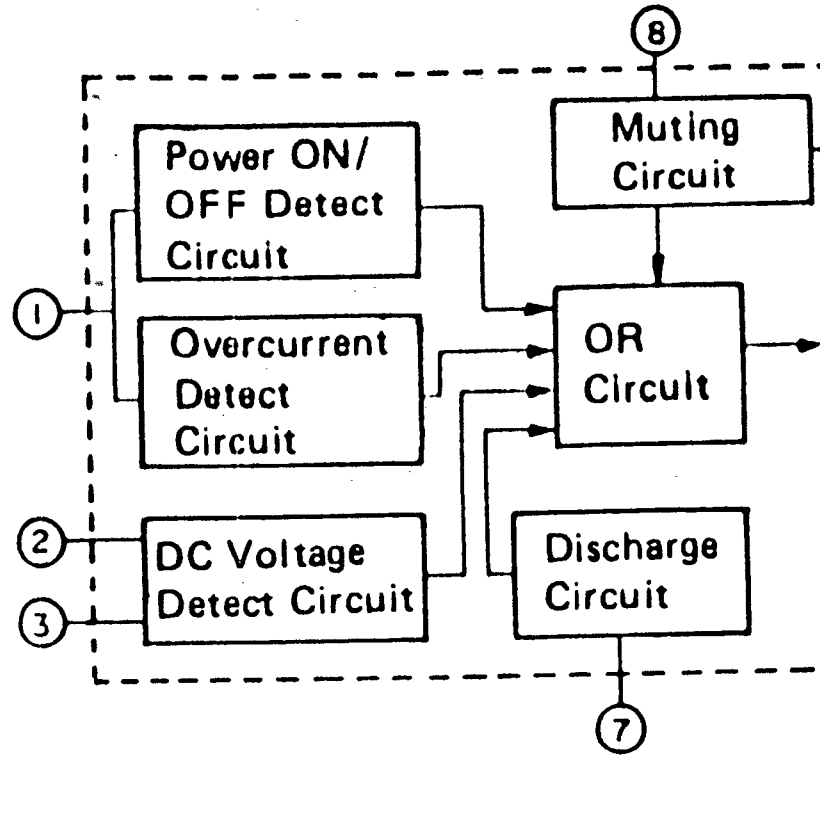
Power ON/ OFF Detect Circuit
Muting Circuit
Overcurrent Detect Circuit
OR Circuit
DC Voltage Detect Circuit
Discharge Circuit

SCHEMATIC DIAGRAM OF WP-9110C

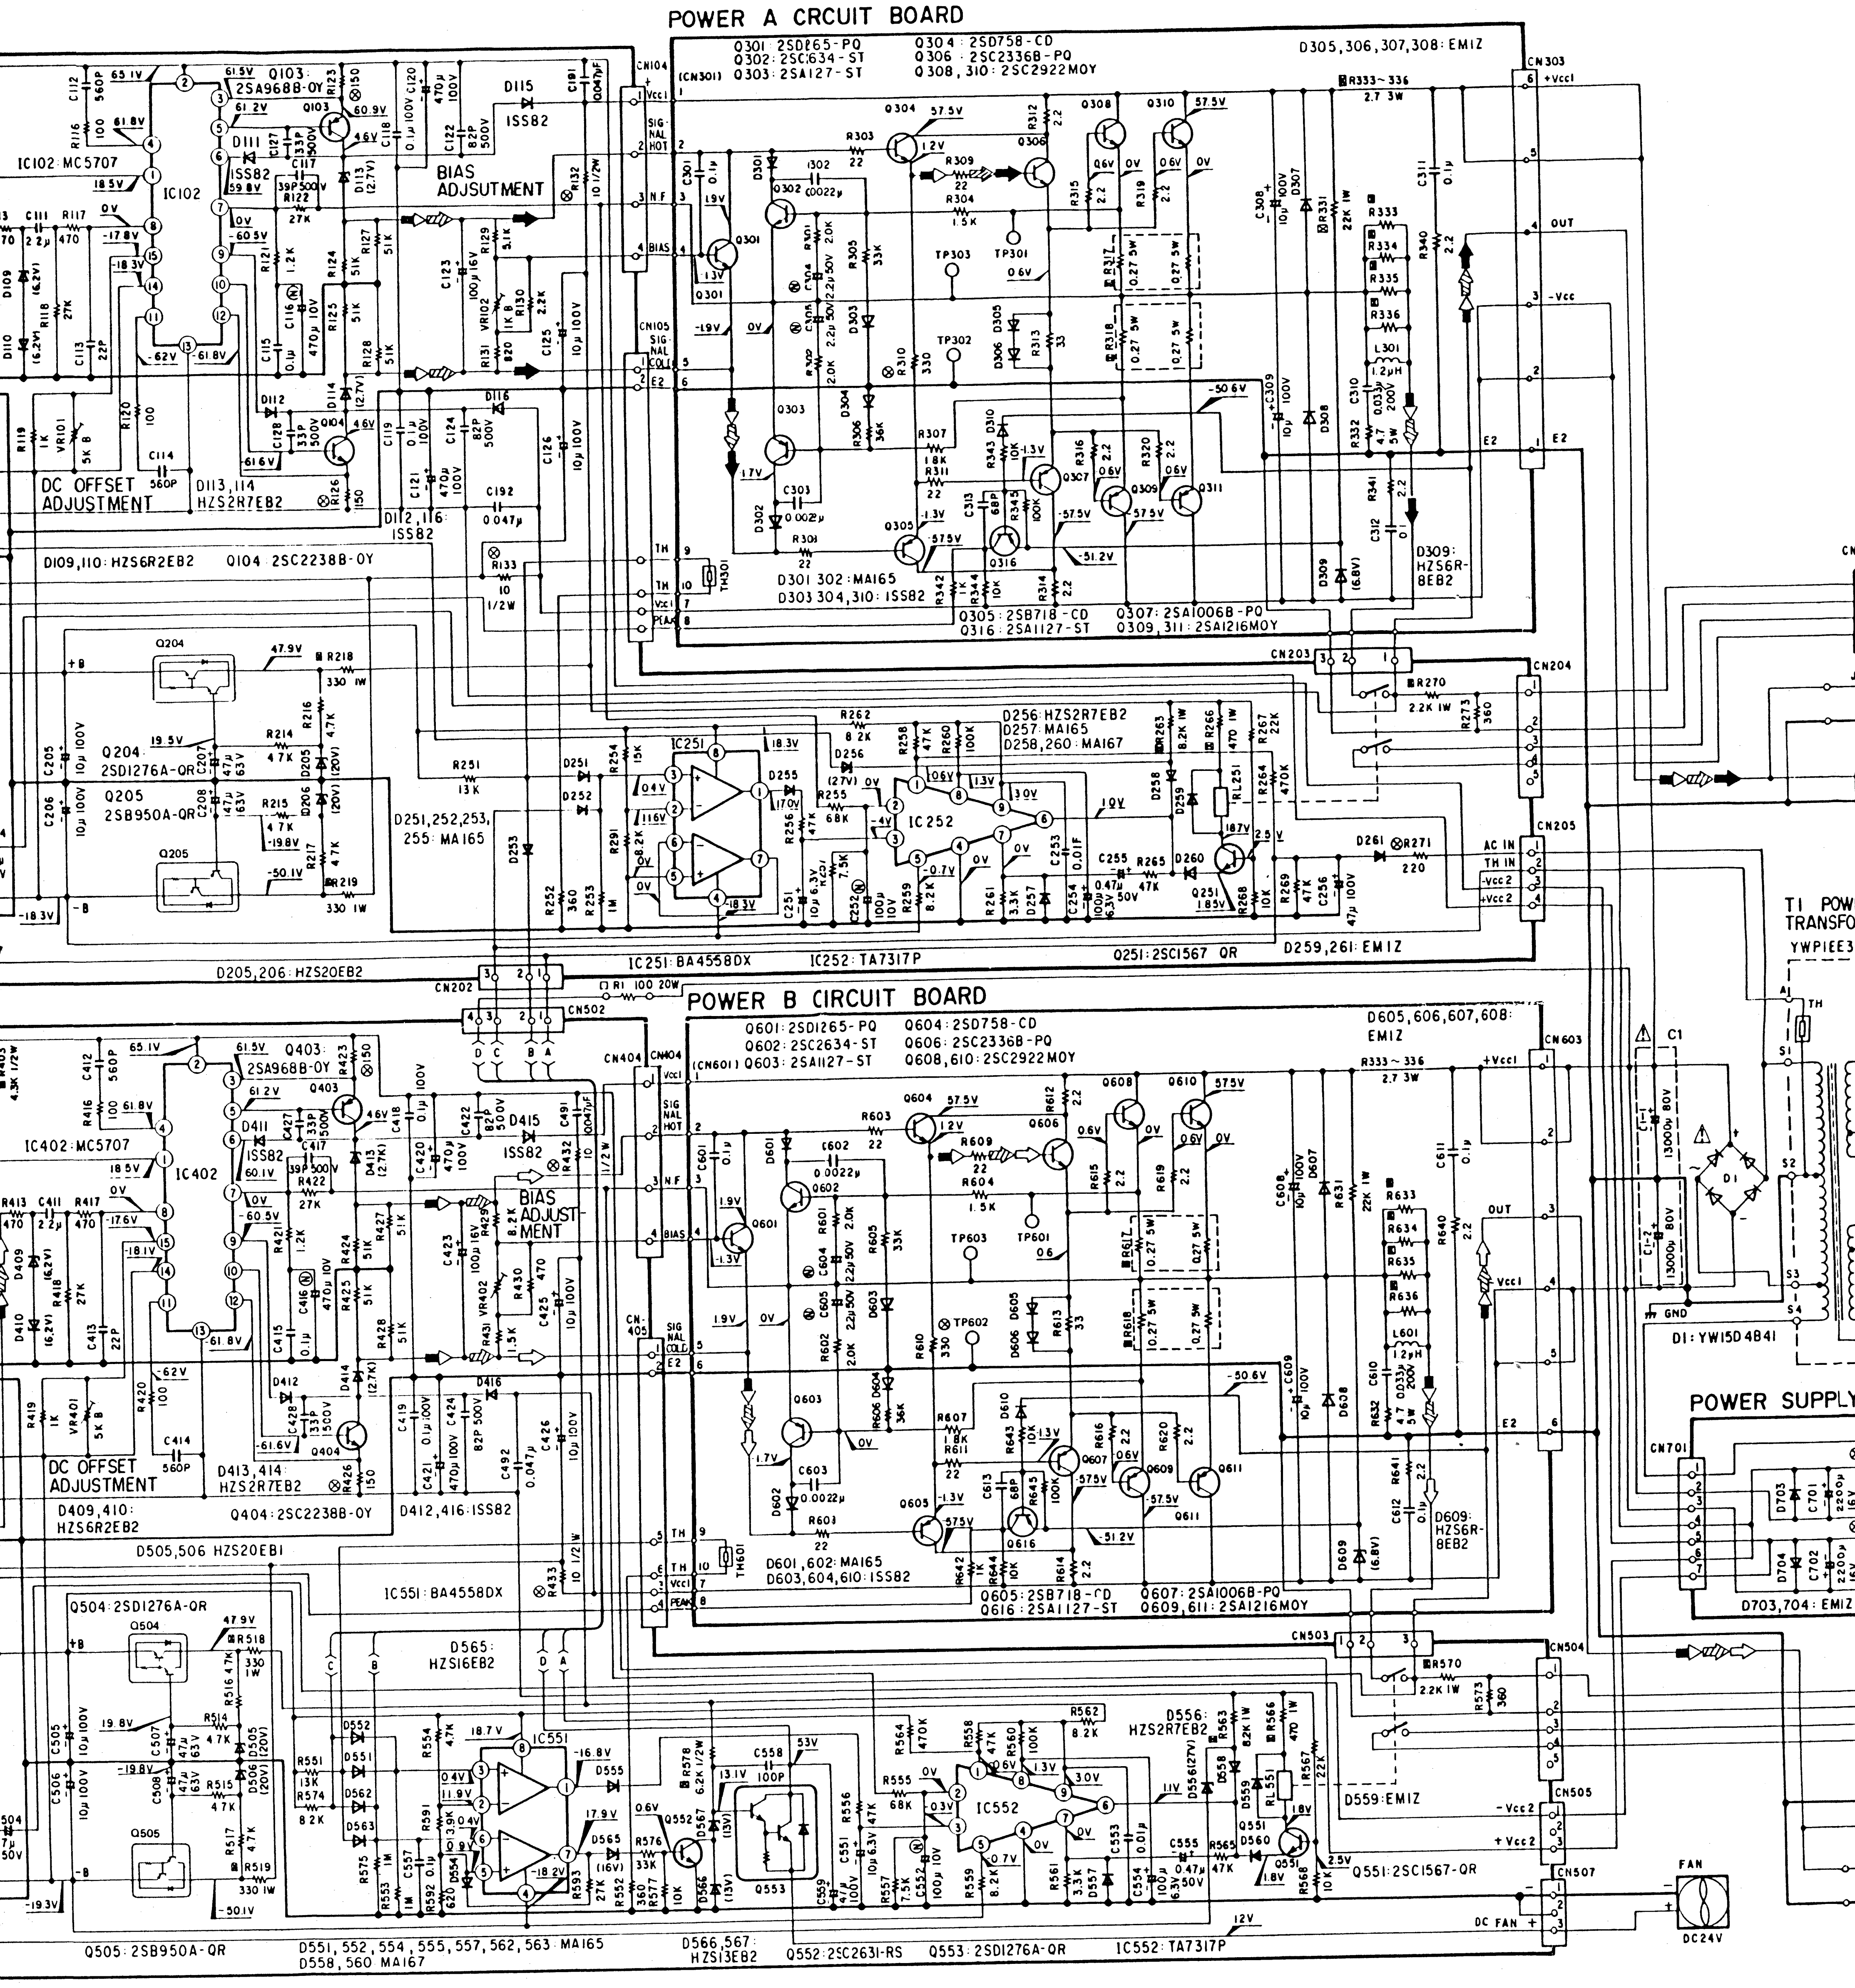
POWER A CRCUIT BOARD
Q301 2SD265-PQ
Q302 2SC634-ST
Q303 2SA127-ST
Q304 2SD758-CD
Q306 2SC2336B-PQ
Q308, 310 2SC2922MOY
D305,306,307,308: EMIZ
IC102: MC5707
BIAS ADJSUTMENT
DC OFFSET ADJUSTMENT
D113,114 HZS2R7EB2
D112,116 ISS82
D109,110: HZS6R2EB2
Q104 2SC2238B-OY
D301 302: MA165
D303 304,310: ISS82
Q305: 2SB718-CD
Q316: 2SA1127-ST
Q307: 2SA1006B-PQ
Q309, 311: 2SA1216MOY
D309: HZS6R-8EB2
Q204 2SD1276A-QR
Q205 2SB950A-QR
D251,252,253, 255: MA165
D256: HZS2R7EB2
D257: MA165
D258,260: MA167
IC251: BA4558DX
IC252: TA7317P
Q251: 2SC1567 QR
D259,261: EMIZ
D205,206: HZS20EB2
T1 POWER TRANSFO
YWP1EE3
POWER B CIRCUIT BOARD
Q601: 2SD1265-PQ
Q602: 2SC2634-ST
Q603: 2SA1127-ST
Q604: 2SD758-CD
Q606: 2SC2336B-PQ
Q608, 610: 2SC2922MOY
D605,606,607,608: EMIZ
IC402: MC5707
BIAS ADJUST-MENT
DC OFFSET ADJUSTMENT
D409,410: HZS6R2EB2
D413,414: HZS2R7EB2
Q404: 2SC2238B-OY
D412,416: ISS82
D601,602: MA165
D603,604,610: ISS82
Q605: 2SB718-CD
Q616: 2SA1127-ST
Q607: 2SA1006B-PQ
Q609,611: 2SA1216MOY
D609: HZS6R-8EB2
D1: YW15D4B41
POWER SUPPLY
D703,704: EMIZ
D505,506 HZS20EB1
Q504: 2SD1276A-QR
IC551: BA4558DX
D565: HZS16EB2
D556: HZS2R7EB2
D559: EMIZ
Q551: 2SC1567-QR
Q505: 2SB950A-QR
D551, 552, 554, 555, 557, 562, 563: MA165
D558, 560 MA167
D566,567: HZS13EB2
Q552: 2SC2631-RS
Q553: 2SD1276A-QR
IC552: TA7317P
FAN
DC24V
DC FAN

DC

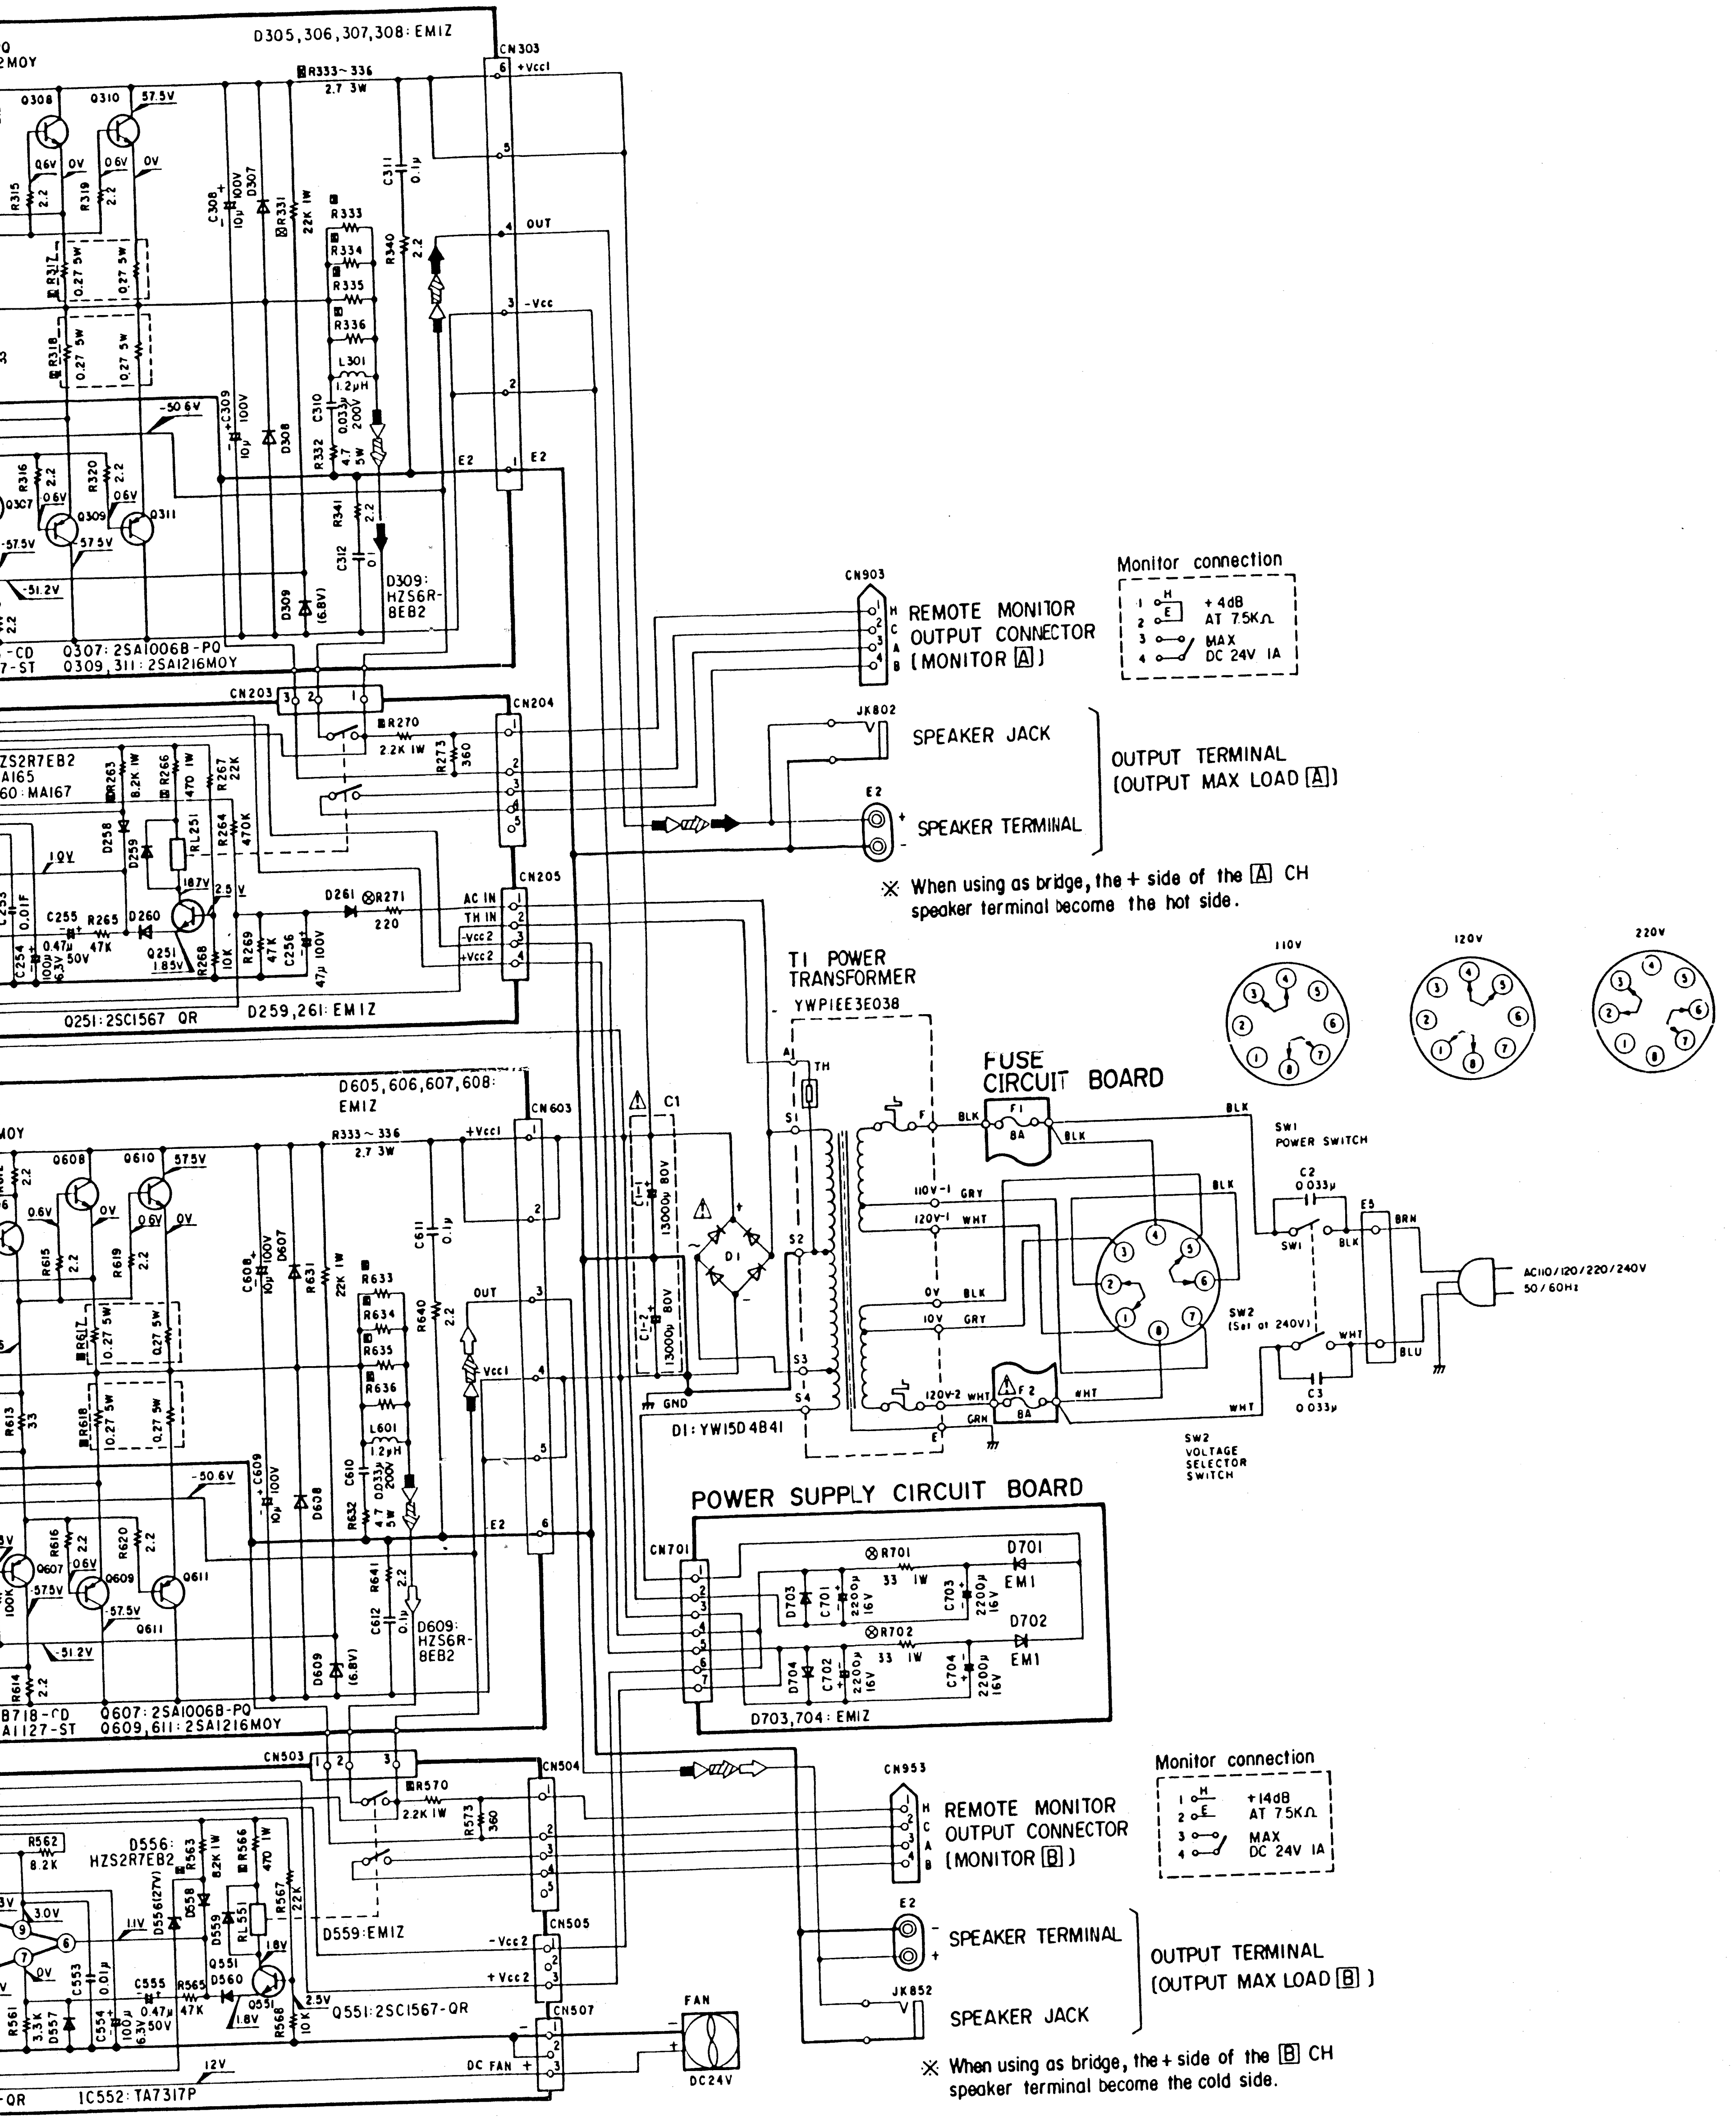

D305,306,307,308: EMIZ
CN303
+Vcc1
OUT
-Vcc
E2
D309: HZS6R-8EB2
0307: 2SA1006B-PQ
0309, 311: 2SA1216MOY
CN203
CN204
CN205
AC IN
TH IN
-Vcc2
+Vcc2
Q251: 2SC1567 QR
D259,261: EMIZ
CN903
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR [A])
Monitor connection
+4dB AT 7.5KΩ
MAX DC 24V 1A
JK802
SPEAKER JACK
E2
SPEAKER TERMINAL
OUTPUT TERMINAL (OUTPUT MAX LOAD [A])
※ When using as bridge, the + side of the [A] CH speaker terminal become the hot side.
110V
120V
220V
T1 POWER TRANSFORMER
YWP1EE3E038
FUSE CIRCUIT BOARD
F1
F2
SW1 POWER SWITCH
C2 0.033μ
C3 0.033μ
SW2 (Set at 240V)
SW2 VOLTAGE SELECTOR SWITCH
AC110/120/220/240V 50/60Hz
C1 13000μ 80V
D1: YW15D4841
D605,606,607,608: EMIZ
CN603
D609: HZS6R-8EB2
Q607: 2SA1006B-PQ
Q609, 611: 2SA1216MOY
POWER SUPPLY CIRCUIT BOARD
CN701
R701
R702
D701 EM1
D702 EM1
D703,704: EMIZ
CN503
CN504
CN505
CN507
D556: HZS2R7EB2
D559: EMIZ
Q551: 2SC1567-QR
IC552: TA7317P
DC FAN
FAN DC24V
CN953
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR [B])
Monitor connection
+14dB AT 7.5KΩ
MAX DC 24V 1A
SPEAKER TERMINAL
JK852
SPEAKER JACK
OUTPUT TERMINAL (OUTPUT MAX LOAD [B])
※ When using as bridge, the + side of the [B] CH speaker terminal become the cold side.

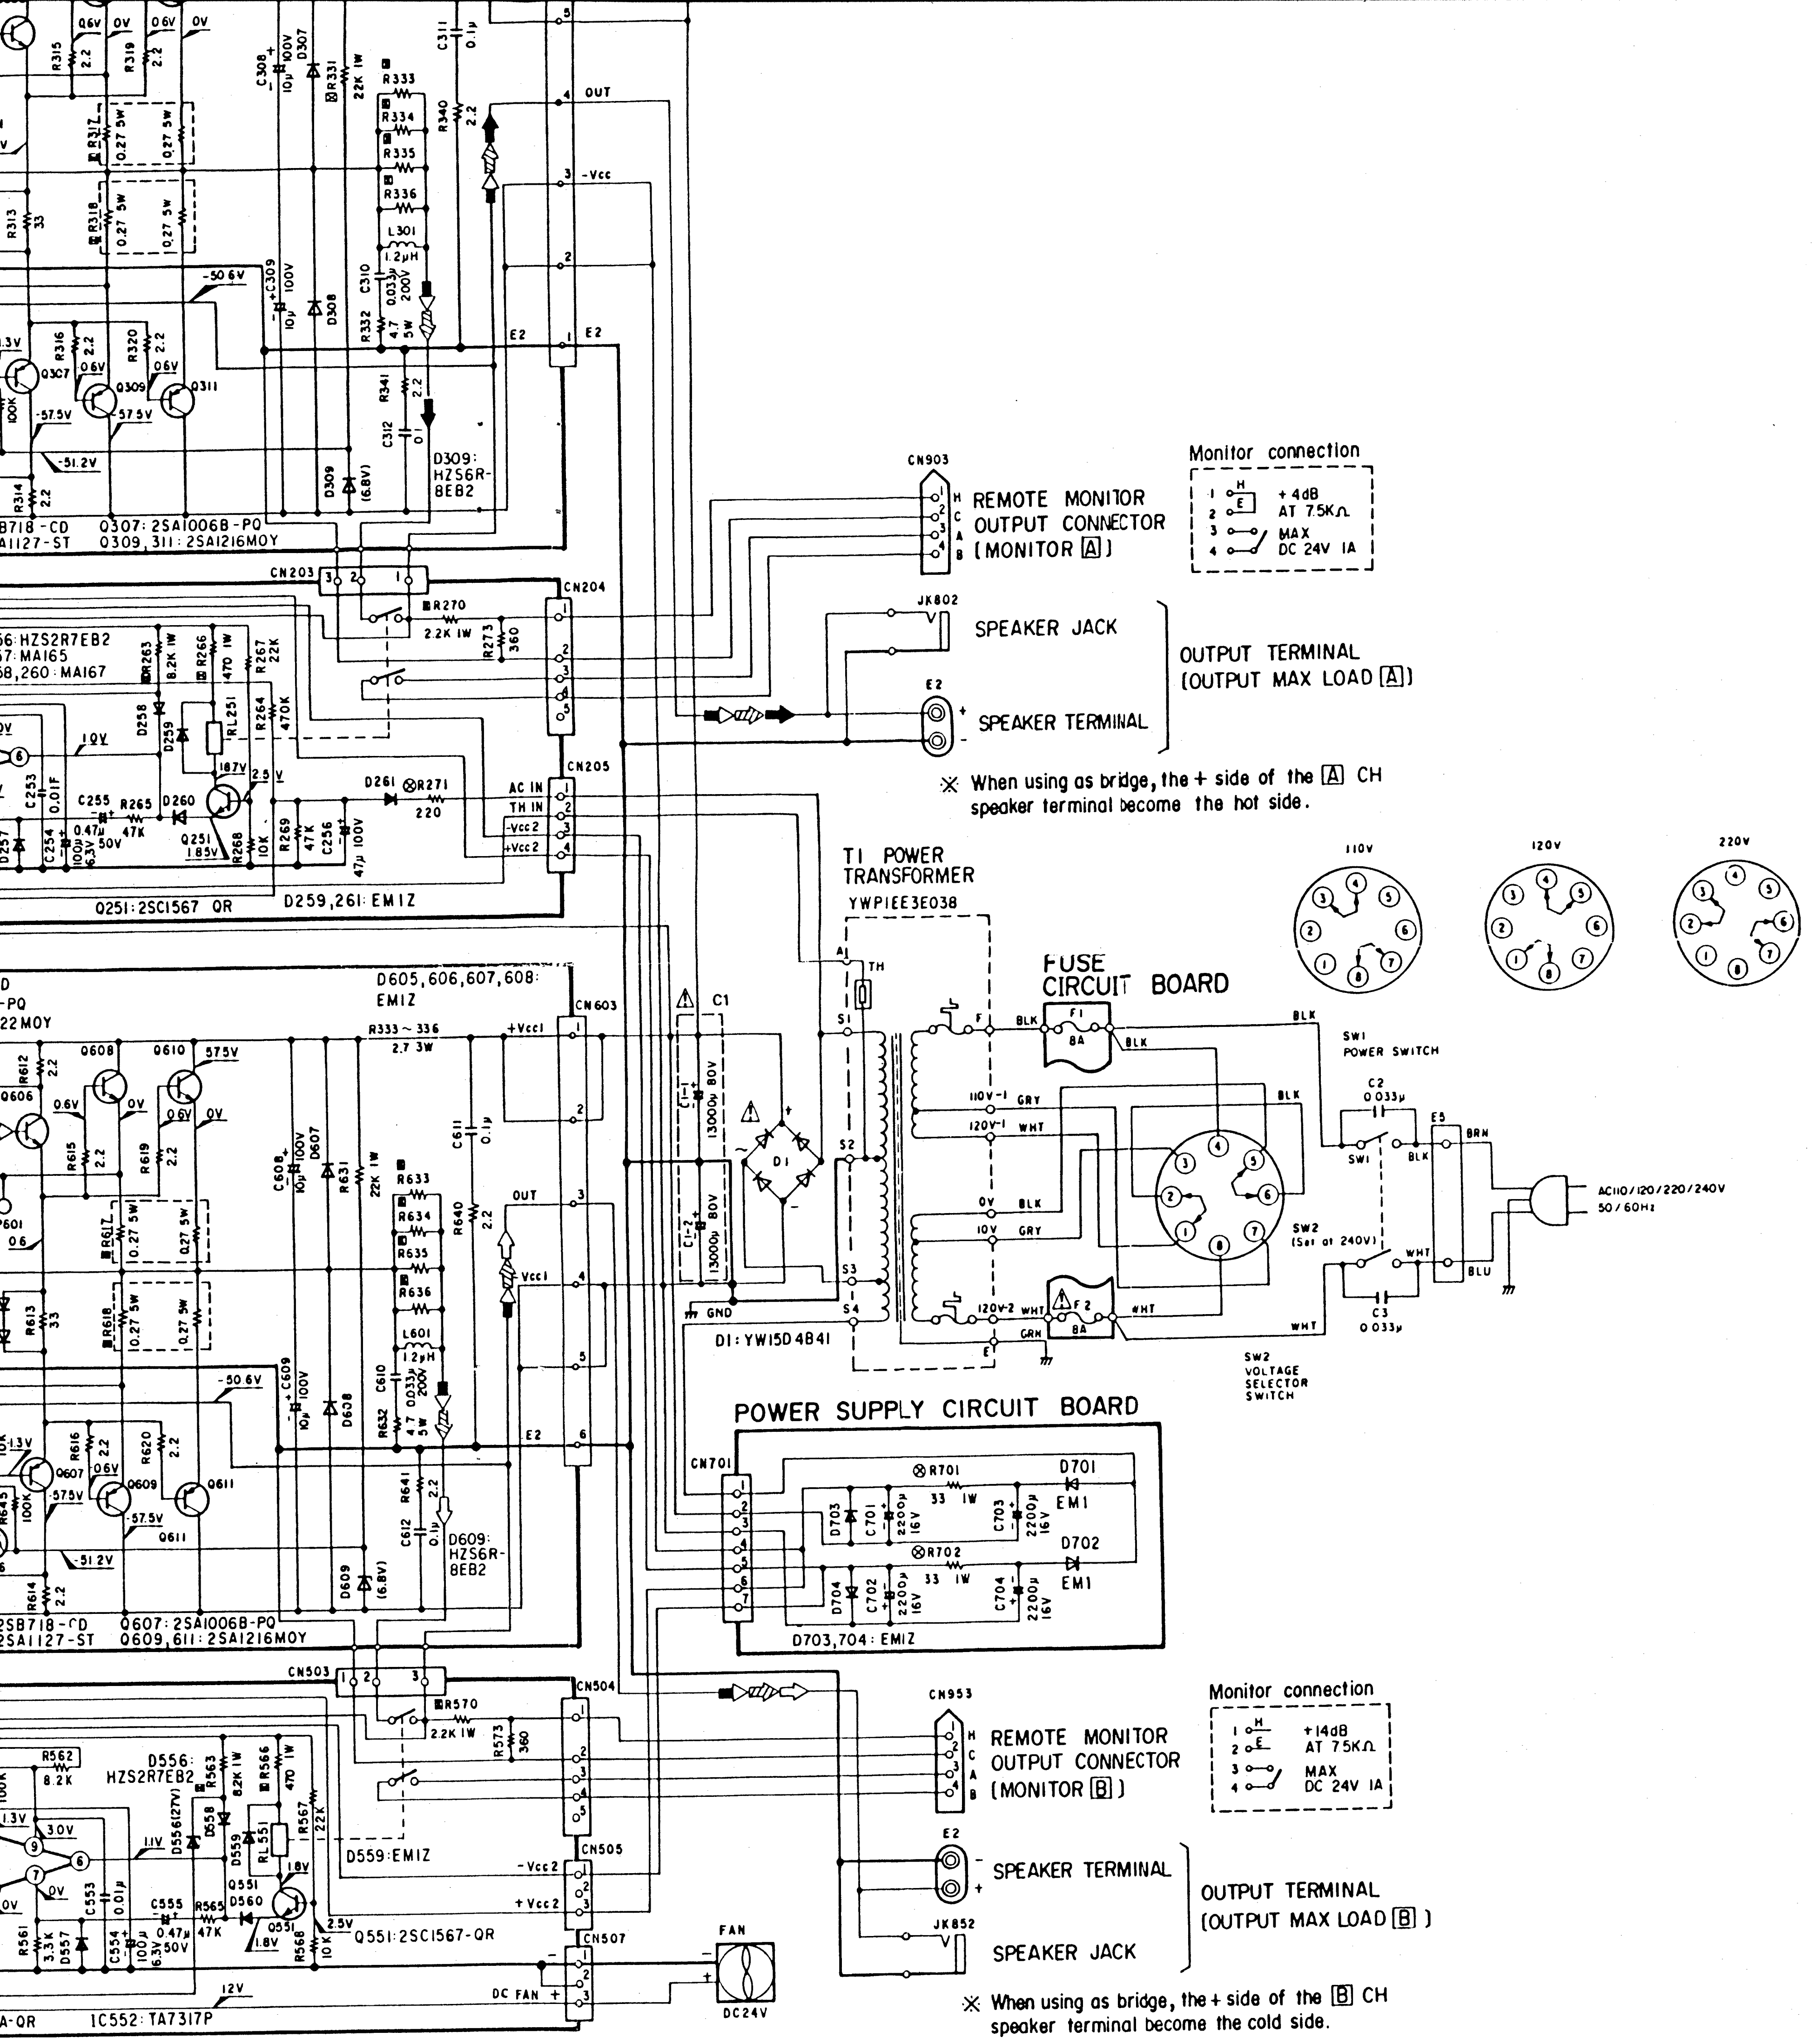
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR [A])
CN903
Monitor connection
+4dB AT 7.5KΩ
MAX DC 24V 1A
JK802
SPEAKER JACK
E2
SPEAKER TERMINAL
OUTPUT TERMINAL (OUTPUT MAX LOAD [A])
110V
120V
220V
T1 POWER TRANSFORMER
YWP1EE3E038
FUSE CIRCUIT BOARD
F1 8A
F2 8A
SW1 POWER SWITCH
SW2 (Set at 240V)
SW2 VOLTAGE SELECTOR SWITCH
C2 0.033μ
C3 0.033μ
AC110/120/220/240V 50/60Hz
BLK
GRY
WHT
BRN
BLU
GRN
C1
13000μ 80V
D1
D1: YW15D4B41
GND
POWER SUPPLY CIRCUIT BOARD
CN701
R701
R702
D701 EM1
D702 EM1
C701 2200μ 16V
C702 2200μ 16V
C703 2200μ 16V
C704 2200μ 16V
D703,704: EM1Z
CN203
CN204
CN205
R270 2.2K 1W
R273 360
RL251
D261
R271 220
AC IN
TH IN
-Vcc2
+Vcc2
Q251: 2SC1567 QR
D259,261: EM1Z
D256: HZS2R7EB2
D257: MA165
D258,260: MA167
Q307: 2SA1006B-PQ
Q309,311: 2SA1216MOY
D309: HZS6R-8EB2
R333~336 2.7 3W
L301 1.2μH
L601 1.2μH
D605,606,607,608: EM1Z
CN603
+Vcc1
OUT
Q607: 2SA1006B-PQ
Q609,611: 2SA1216MOY
D609: HZS6R-8EB2
CN503
CN504
CN505
CN507
R570 2.2K 1W
R573 360
RL551
D556: HZS2R7EB2
D559: EM1Z
Q551: 2SC1567-QR
IC552: TA7317P
DC FAN
FAN DC24V
CN953
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR [B])
+14dB AT 7.5KΩ
OUTPUT TERMINAL (OUTPUT MAX LOAD [B])

※ When using as bridge, the + side of the [A] CH speaker terminal become the hot side.

※ When using as bridge, the + side of the [B] CH speaker terminal become the cold side.

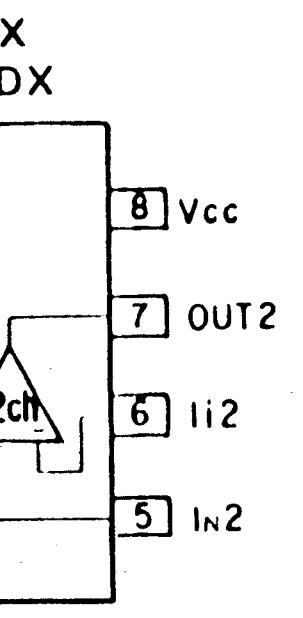
X
DX
8 Vcc
7 OUT2
6 Ii2
5 In2
2ch

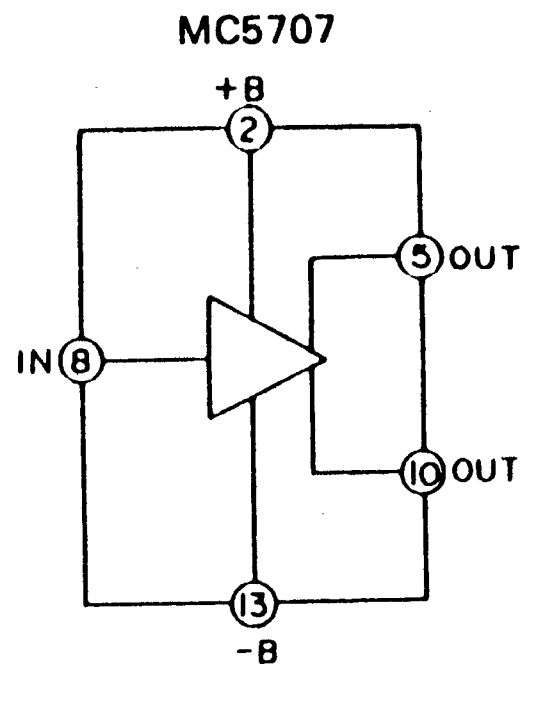
MC5707
+B
2
5 OUT
IN 8
10 OUT
13
-B

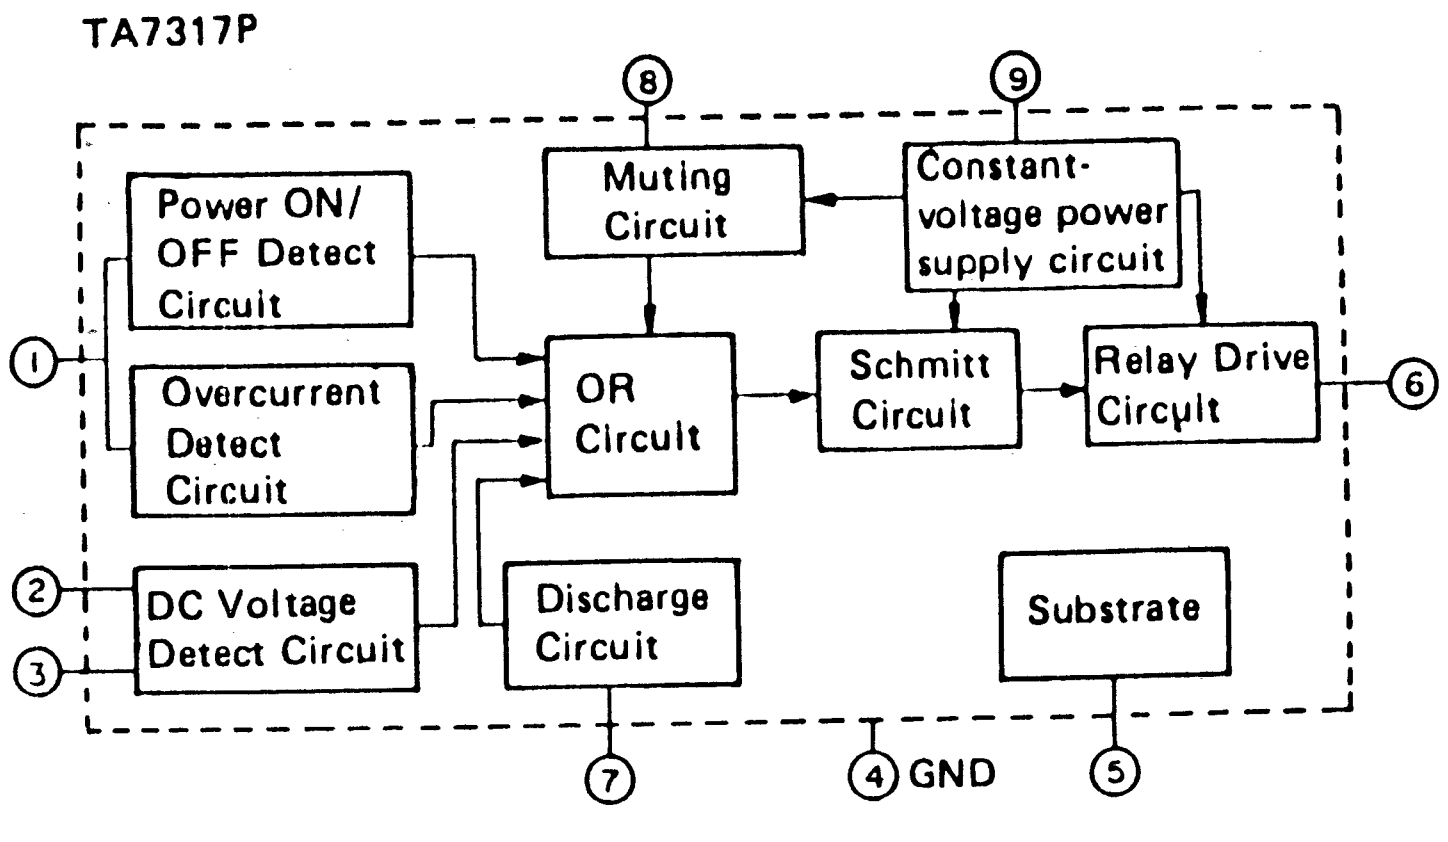
TA7317P
8
9
Power ON/OFF Detect Circuit
Muting Circuit
Constant-voltage power supply circuit
1
Overcurrent Detect Circuit
OR Circuit
Schmitt Circuit
Relay Drive Circuit
6
2
3
DC Voltage Detect Circuit
Discharge Circuit
Substrate
7
4 GND
5

Notes :

1. All resistor values are in ohms ¼W ± 5% unless otherwise specified. Ⓕ ......±1%
2. All capacitor values are in farads 50V unless otherwise specified.
3. The mark ⓧ
4. The mark ◎ shows metal film.
5. The mark □ shows wirewound.
6. The mark ☒ shows incombustible metal film.

CIRCUIT BOARD AND WI

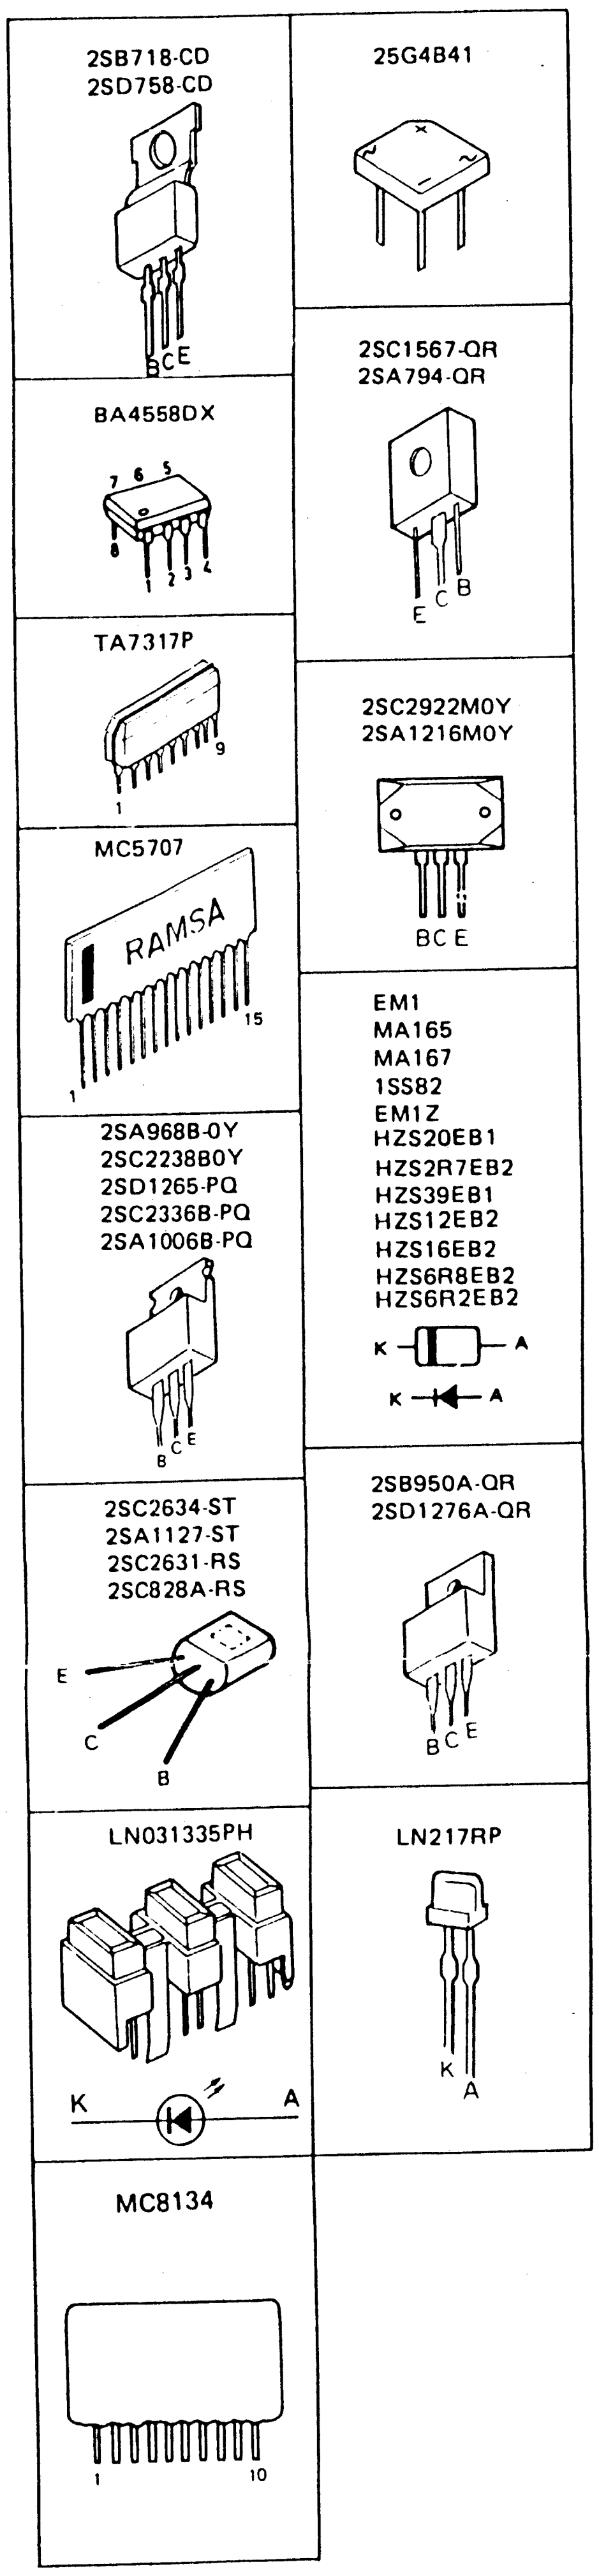
2SB718-CD
2SD758-CD
B C E
25G4B41
BA4558DX
2SC1567-QR
2SA794-QR
E C B
TA7317P
2SC2922M0Y
2SA1216M0Y
B C E
MC5707
RAMSA
EM1
MA165
MA167
1SS82
EM1Z
HZS20EB1
HZS2R7EB2
HZS39EB1
HZS12EB2
HZS16EB2
HZS6R8EB2
HZS6R2EB2
K A
2SA968B-0Y
2SC2238B0Y
2SD1265-PQ
2SC2336B-PQ
2SA1006B-PQ
B C E
2SC2634-ST
2SA1127-ST
2SC2631-RS
2SC828A-RS
E C B
2SB950A-QR
2SD1276A-QR
B C E
LN031335PH
K A
LN217RP
K A
MC8134
1 10

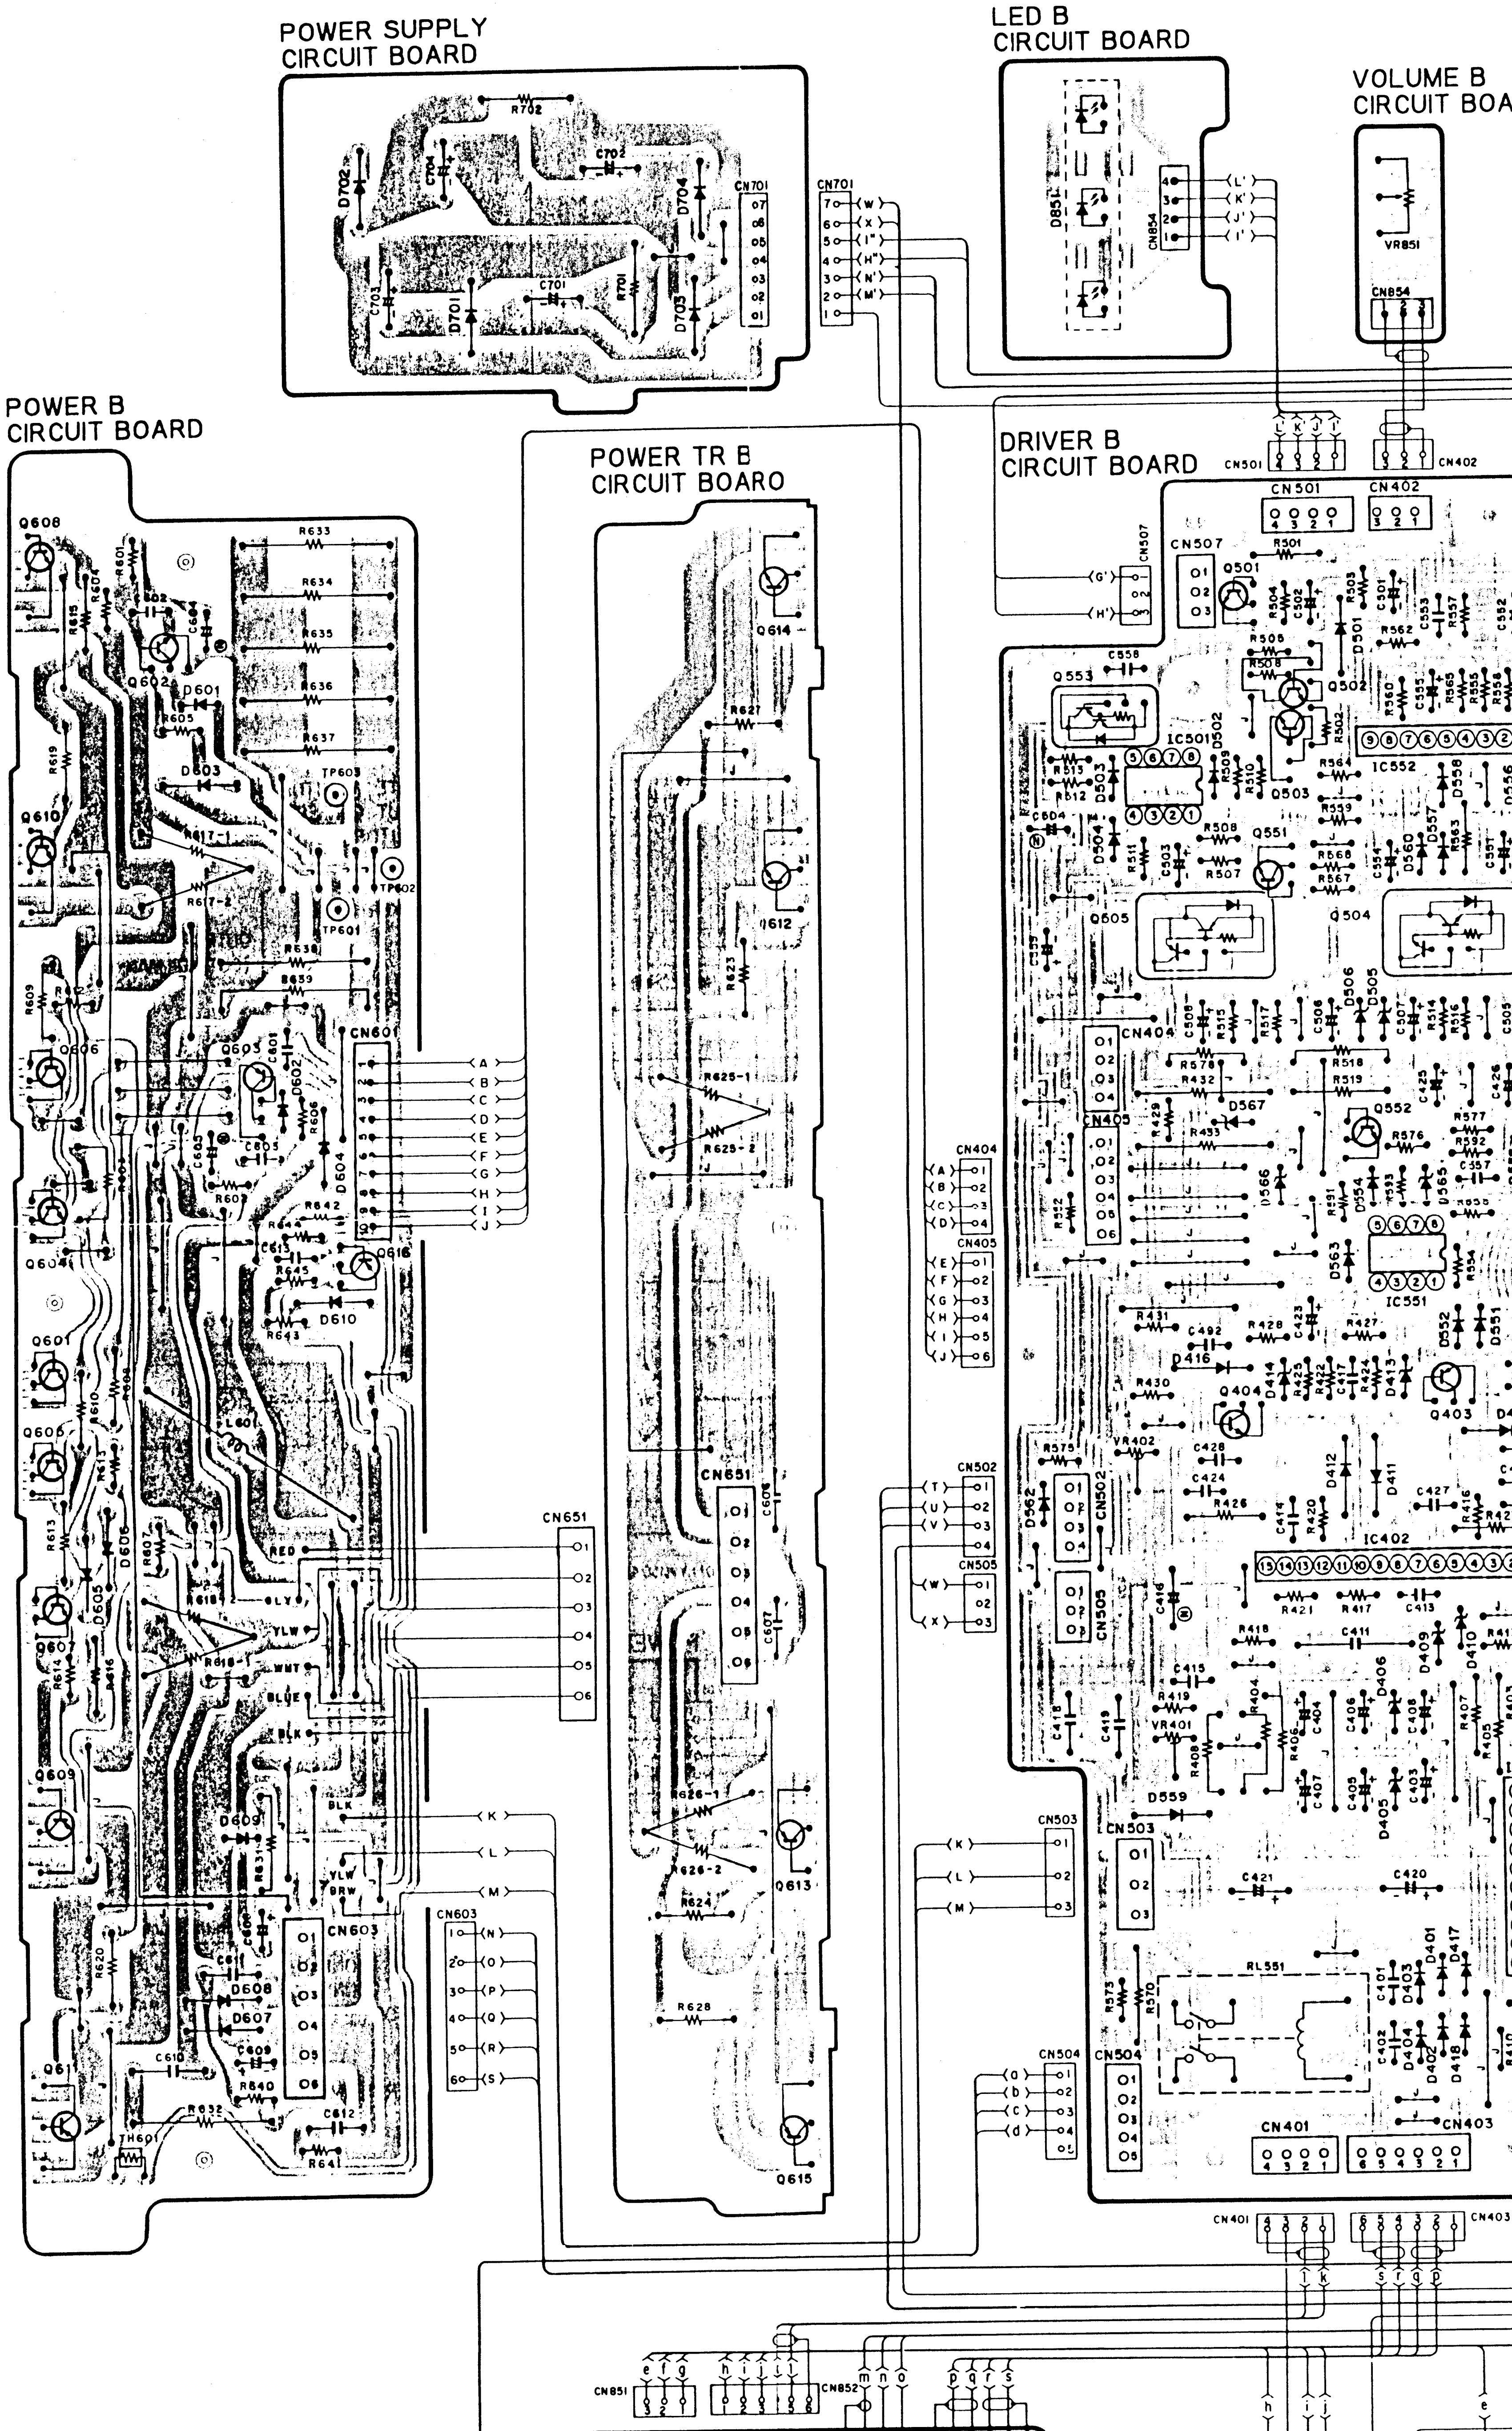
POWER SUPPLY CIRCUIT BOARD
LED B CIRCUIT BOARD
VOLUME B CIRCUIT BOA
POWER B CIRCUIT BOARD
POWER TR B CIRCUIT BOARO
DRIVER B CIRCUIT BOARD
CN701
CN601
CN651
CN603
CN404
CN405
CN502
CN505
CN503
CN504
CN501
CN402
CN507
CN401
CN403
CN854
CN851
CN852
VR851
IC501
IC552
IC551
IC402
RL551
Q608
Q602
Q610
Q606
Q603
Q604
Q601
Q605
Q607
Q609
Q611
Q616
Q614
Q612
Q613
Q615
Q553
Q501
Q502
Q503
Q551
Q505
Q504
Q552
Q404
Q403
TP601
TP602
TP603
TH601
RED
LY
YLW
WHT
BLUE
BLK
BRW

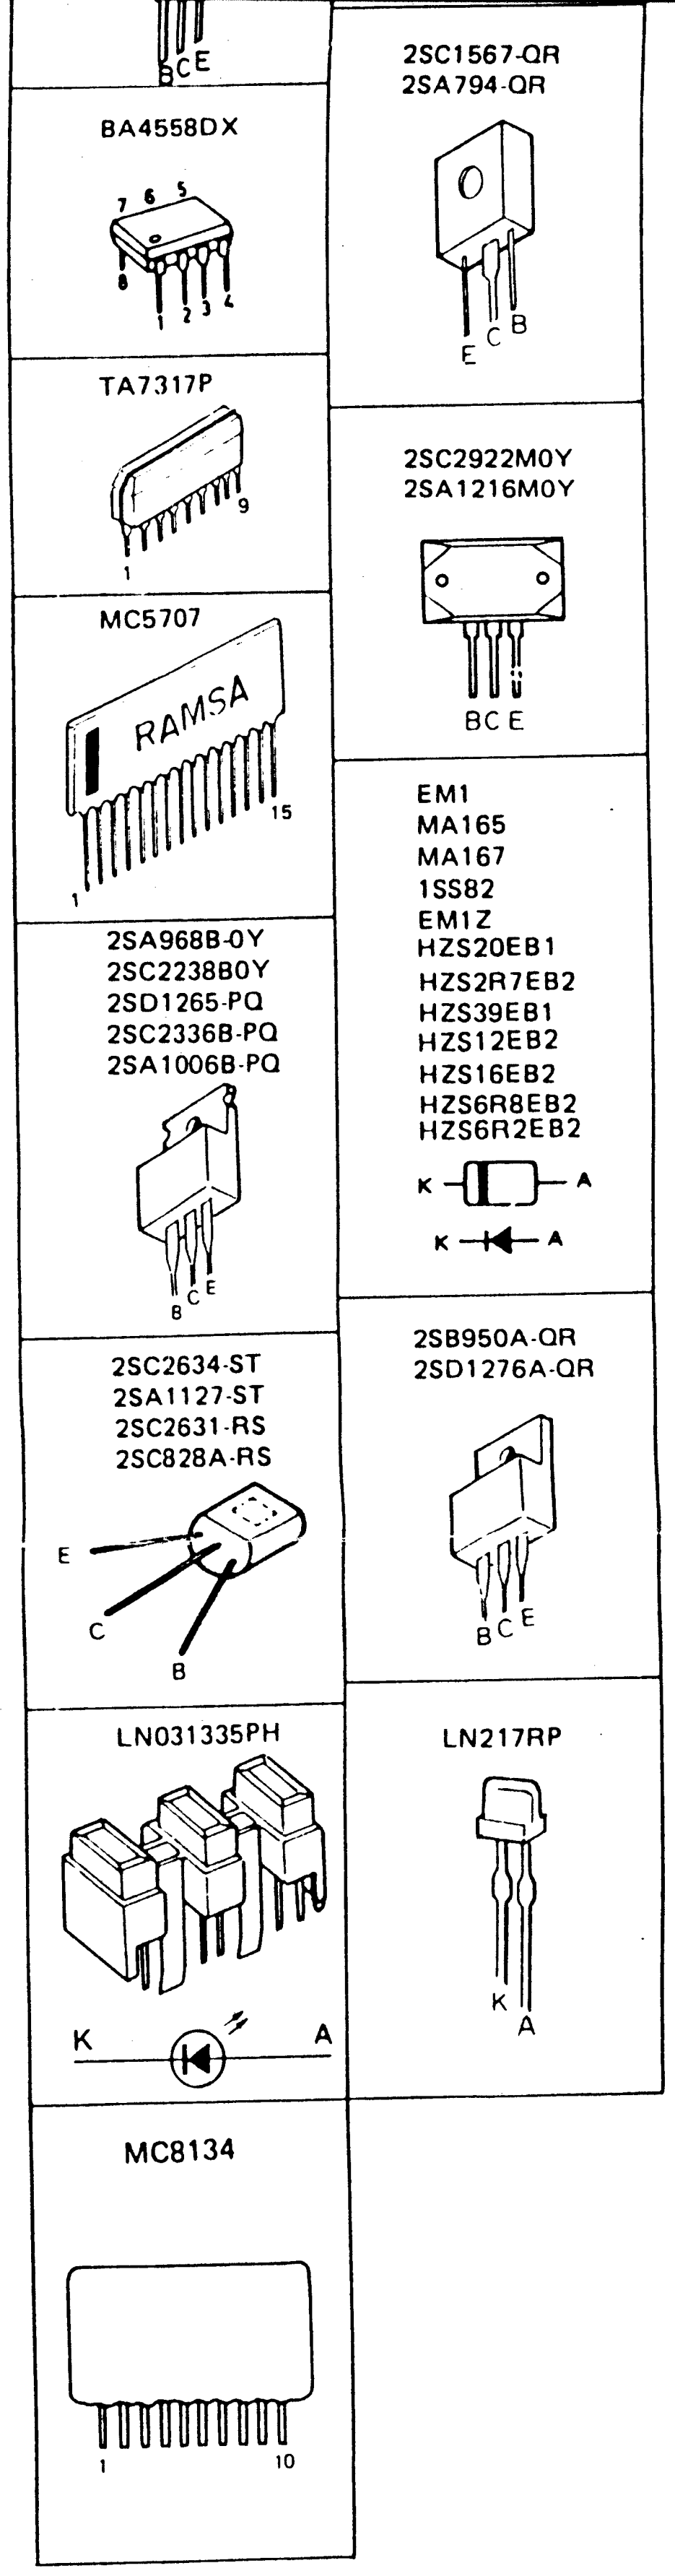

B C E
BA4558DX
TA7317P
MC5707
RAMSA
2SA968B-OY
2SC2238BOY
2SD1265-PQ
2SC2336B-PQ
2SA1006B-PQ
2SC2634-ST
2SA1127-ST
2SC2631-RS
2SC828A-RS
E C B
LN031335PH
K A
MC8134
2SC1567-QR
2SA794-QR
E C B
2SC2922M0Y
2SA1216M0Y
BC E
EM1
MA165
MA167
1SS82
EM1Z
HZS20EB1
HZS2R7EB2
HZS39EB1
HZS12EB2
HZS16EB2
HZS6R8EB2
HZS6R2EB2
K A
2SB950A-QR
2SD1276A-QR
B C E
LN217RP
K A

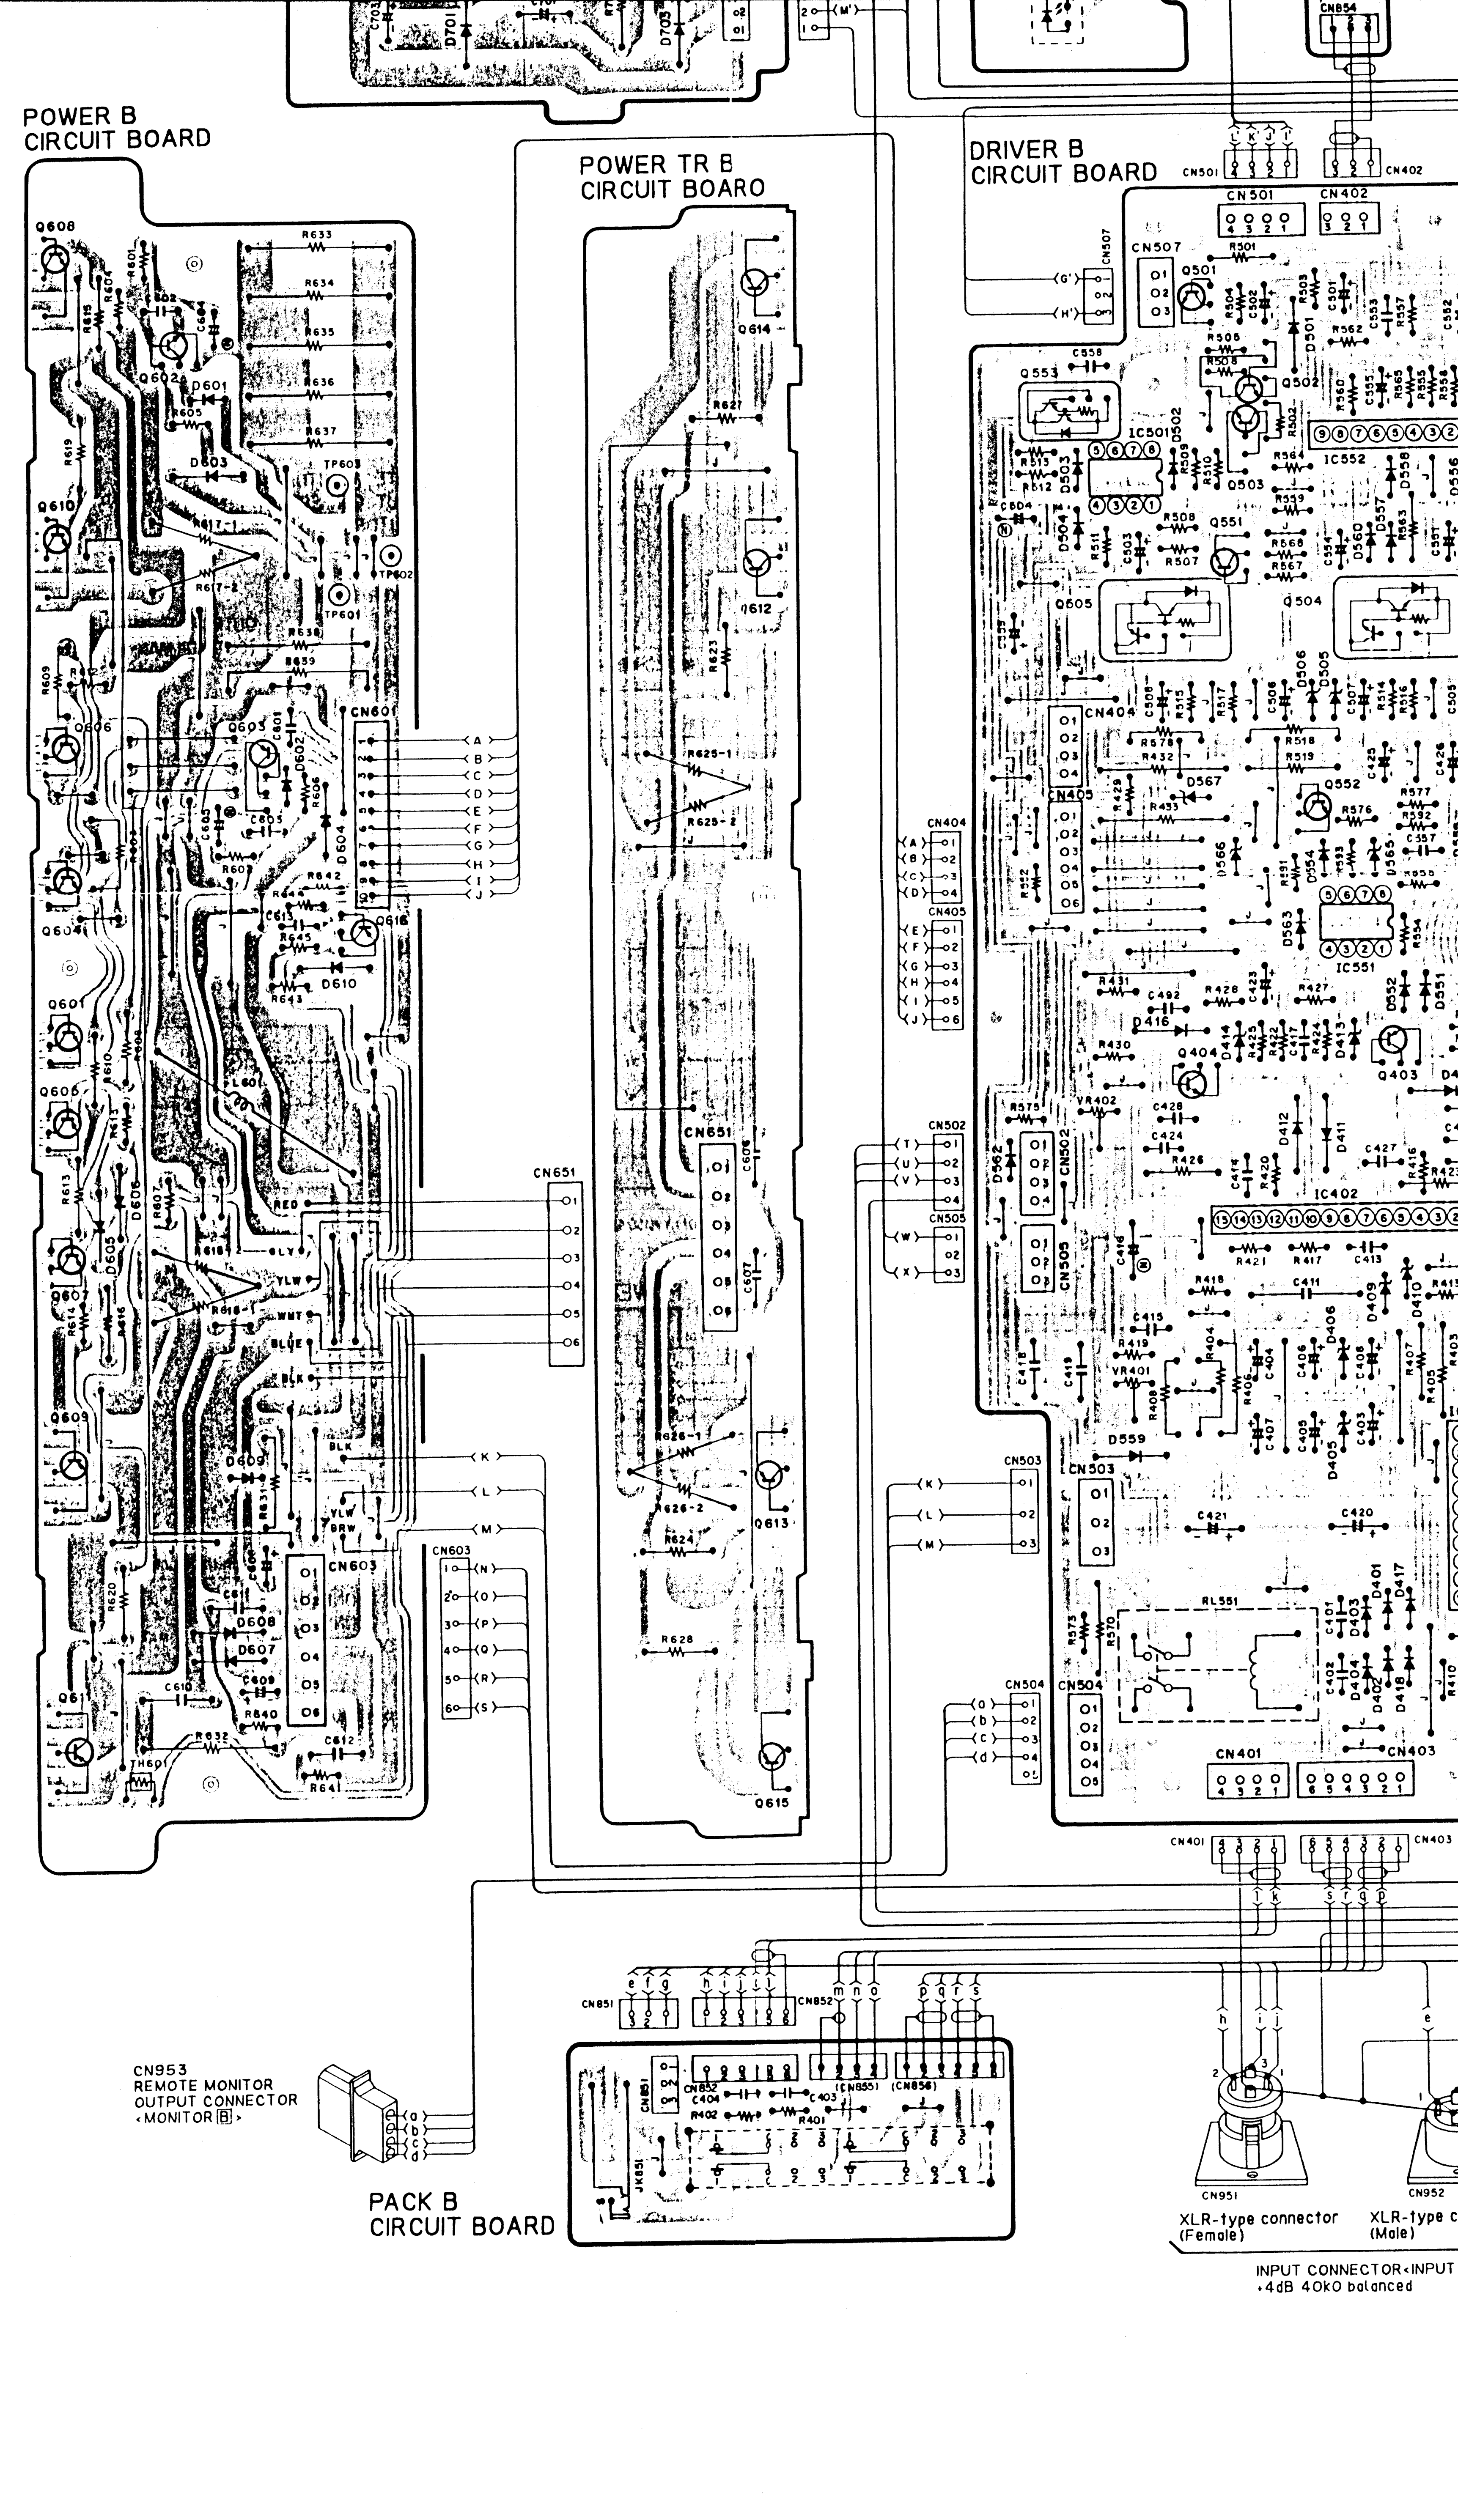

POWER B CIRCUIT BOARD
POWER TR B CIRCUIT BOARO
DRIVER B CIRCUIT BOARD
PACK B CIRCUIT BOARD
CN953
REMOTE MONITOR OUTPUT CONNECTOR
‹MONITOR B›
CN601
CN603
CN651
CN501
CN402
CN507
CN404
CN405
CN502
CN505
CN503
CN504
CN401
CN403
CN851
CN852
CN854
CN855
CN856
JK851
CN951
CN952
XLR-type connector (Female)
XLR-type c (Male)
INPUT CONNECTOR‹INPUT
+4dB 40kΩ balanced
Q601 Q602 Q603 Q604 Q605 Q606 Q607 Q608 Q609 Q610 Q611 Q612 Q613 Q614 Q615 Q616
D601 D602 D603 D604 D605 D606 D607 D608 D609 D610
TP601 TP602 TP603 TH601 L601
IC402 IC501 IC551 IC552 RL551
Q403 Q404 Q501 Q502 Q504 Q505 Q551 Q552 Q553
VR401 VR402
RED BLU YLW WHT BLUE BLK BRW

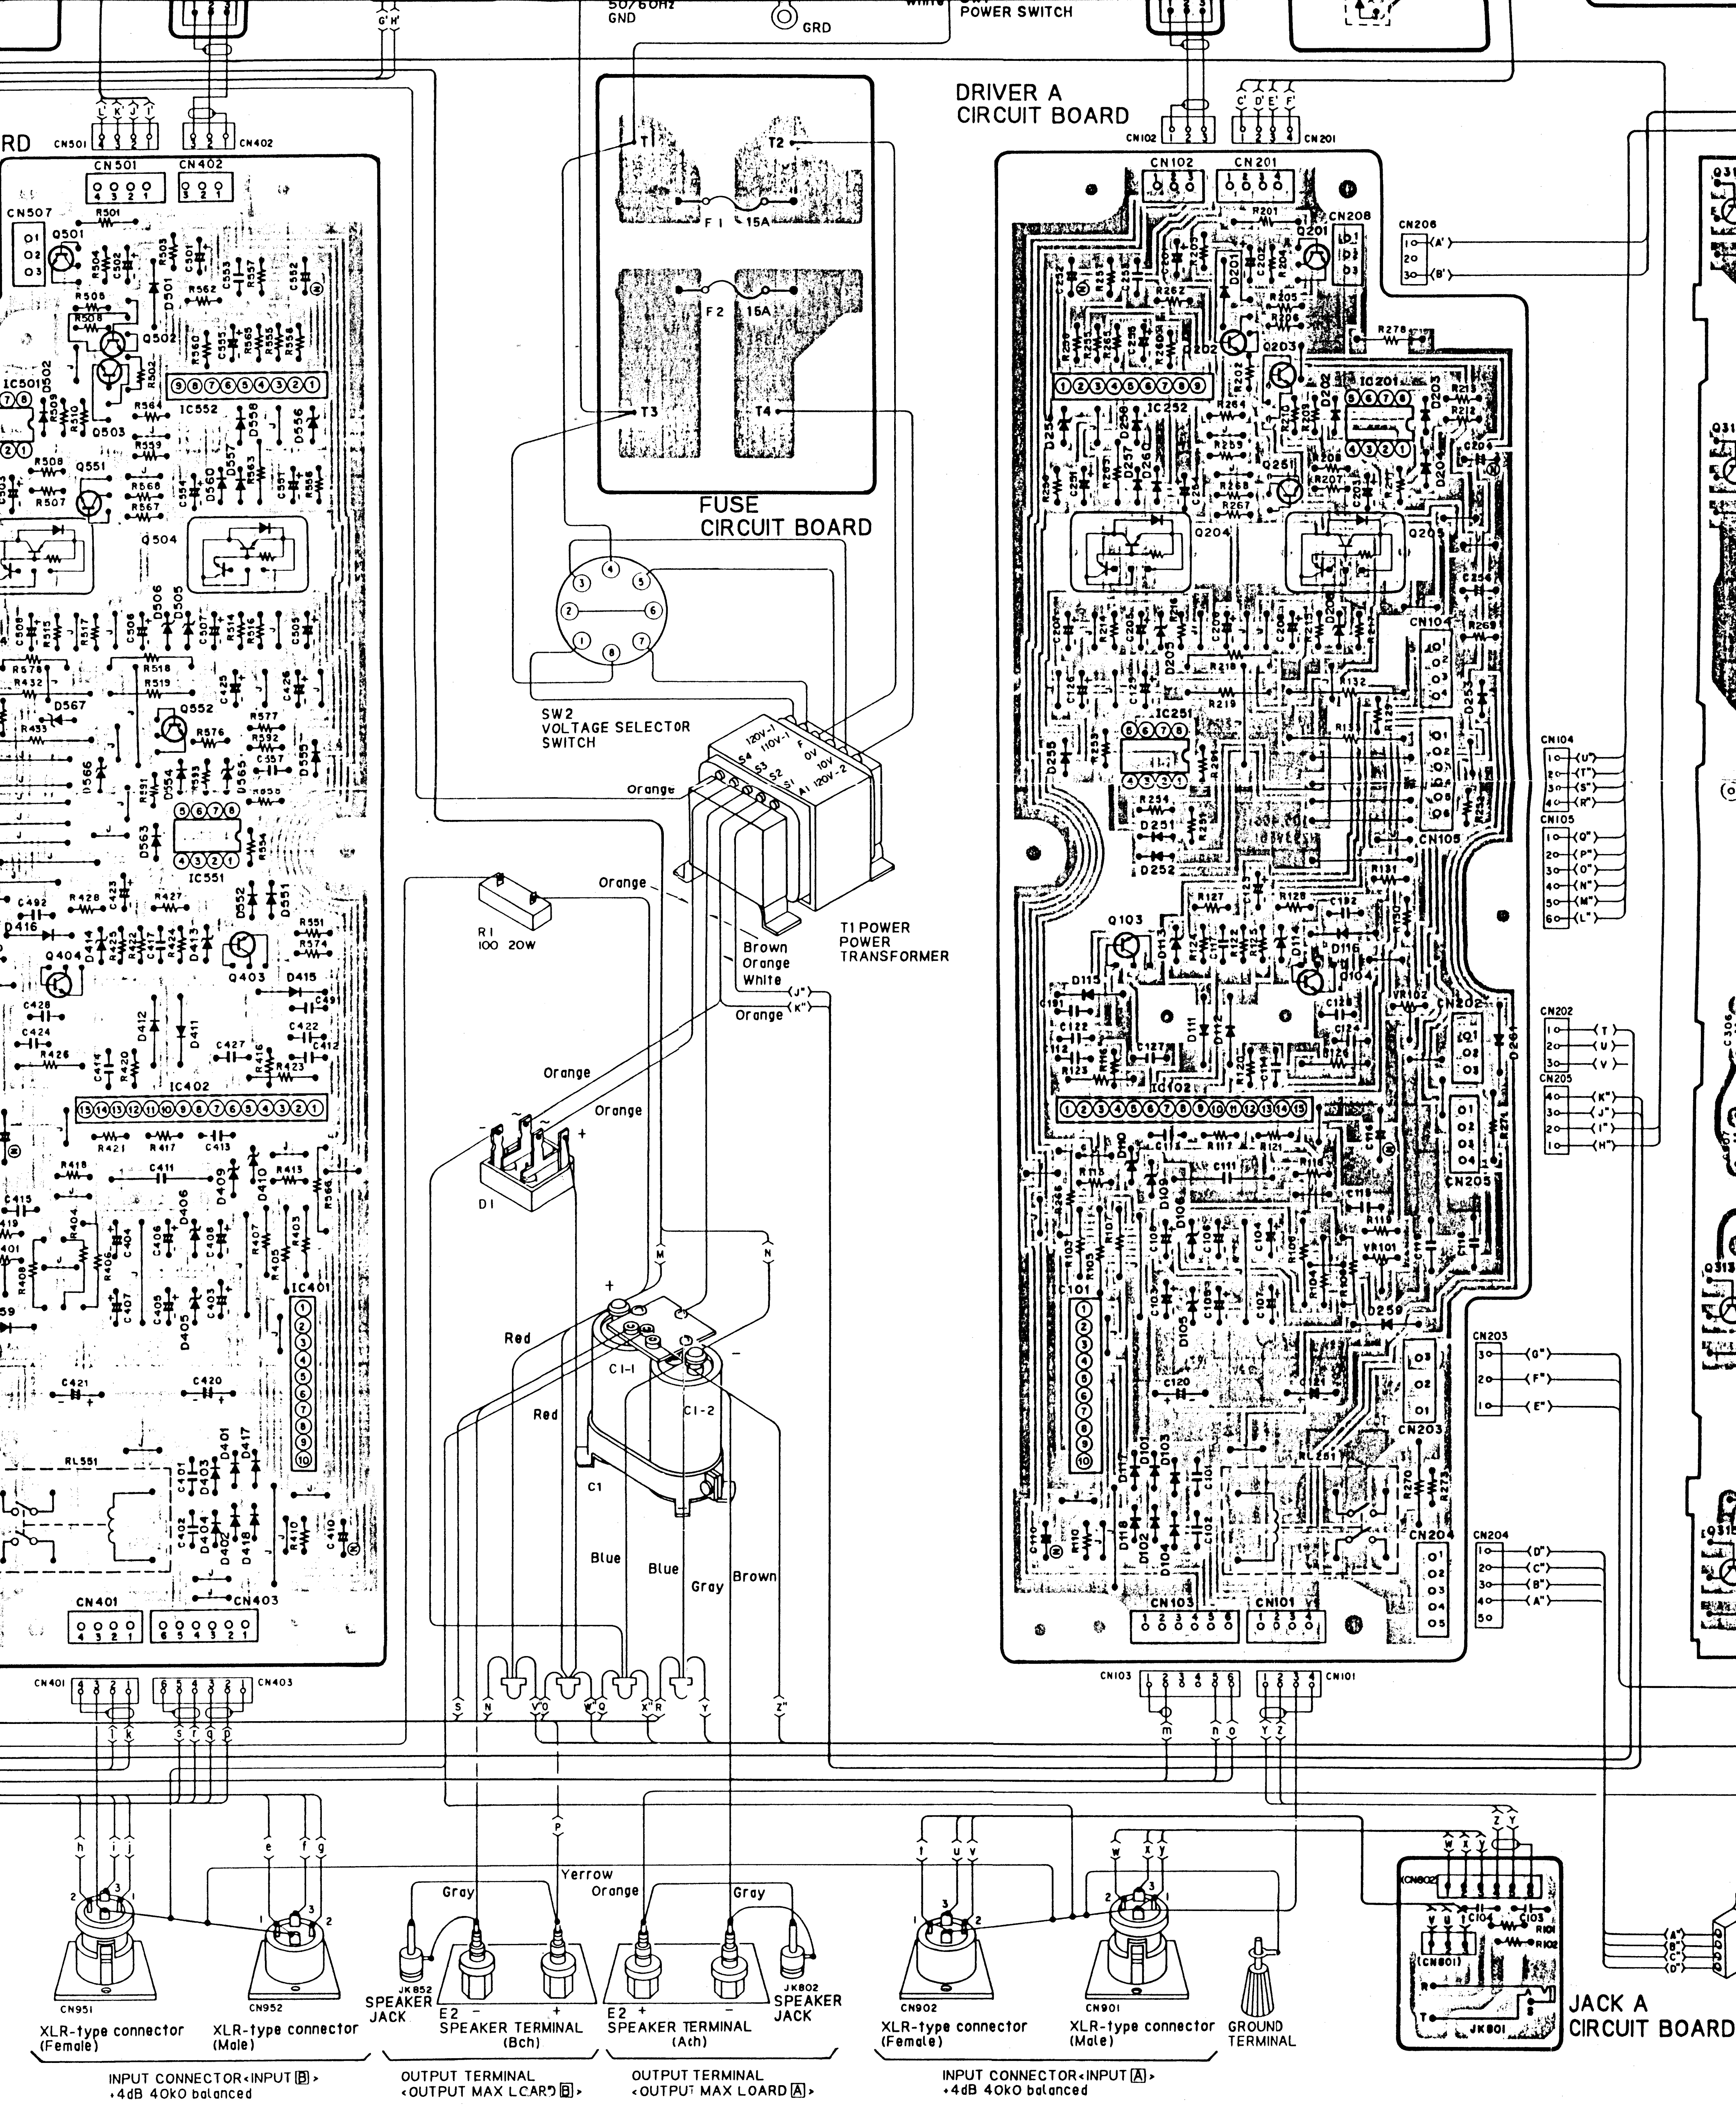
50/60Hz
GND
GRD
POWER SWITCH
DRIVER A
CIRCUIT BOARD
FUSE
CIRCUIT BOARD
F1 15A
F2 15A
T1
T2
T3
T4
SW2
VOLTAGE SELECTOR
SWITCH
120V-1
110V-1
F
0V
10V
120V-2
S4
S3
S2
S1
A1
T1 POWER
POWER
TRANSFORMER
R1
100 20W
D1
Orange
Brown
White
Red
Blue
Gray
Yerrow
C1-1
C1-2
C1
IC552
IC551
IC402
IC401
IC501
IC252
IC251
IC201
RL551
RL251
CN401
CN402
CN403
CN501
CN507
CN101
CN102
CN103
CN104
CN105
CN201
CN202
CN203
CN204
CN205
CN206
CN208
CN801
CN802
CN901
CN902
CN951
CN952
JK801
JK802
JK852
XLR-type connector
(Female)
XLR-type connector
(Male)
SPEAKER
JACK
E2
SPEAKER TERMINAL
(Bch)
(Ach)
GROUND
TERMINAL
JACK A
CIRCUIT BOARD
INPUT CONNECTOR<INPUT B>
+4dB 40kΩ balanced
OUTPUT TERMINAL
<OUTPUT MAX LCARD B>
OUTPUT TERMINAL
<OUTPUT MAX LOARD A>
INPUT CONNECTOR<INPUT A>
+4dB 40kΩ balanced

BOARD AND WIRING CONNECTION DIAGRAM OF WP-9220C

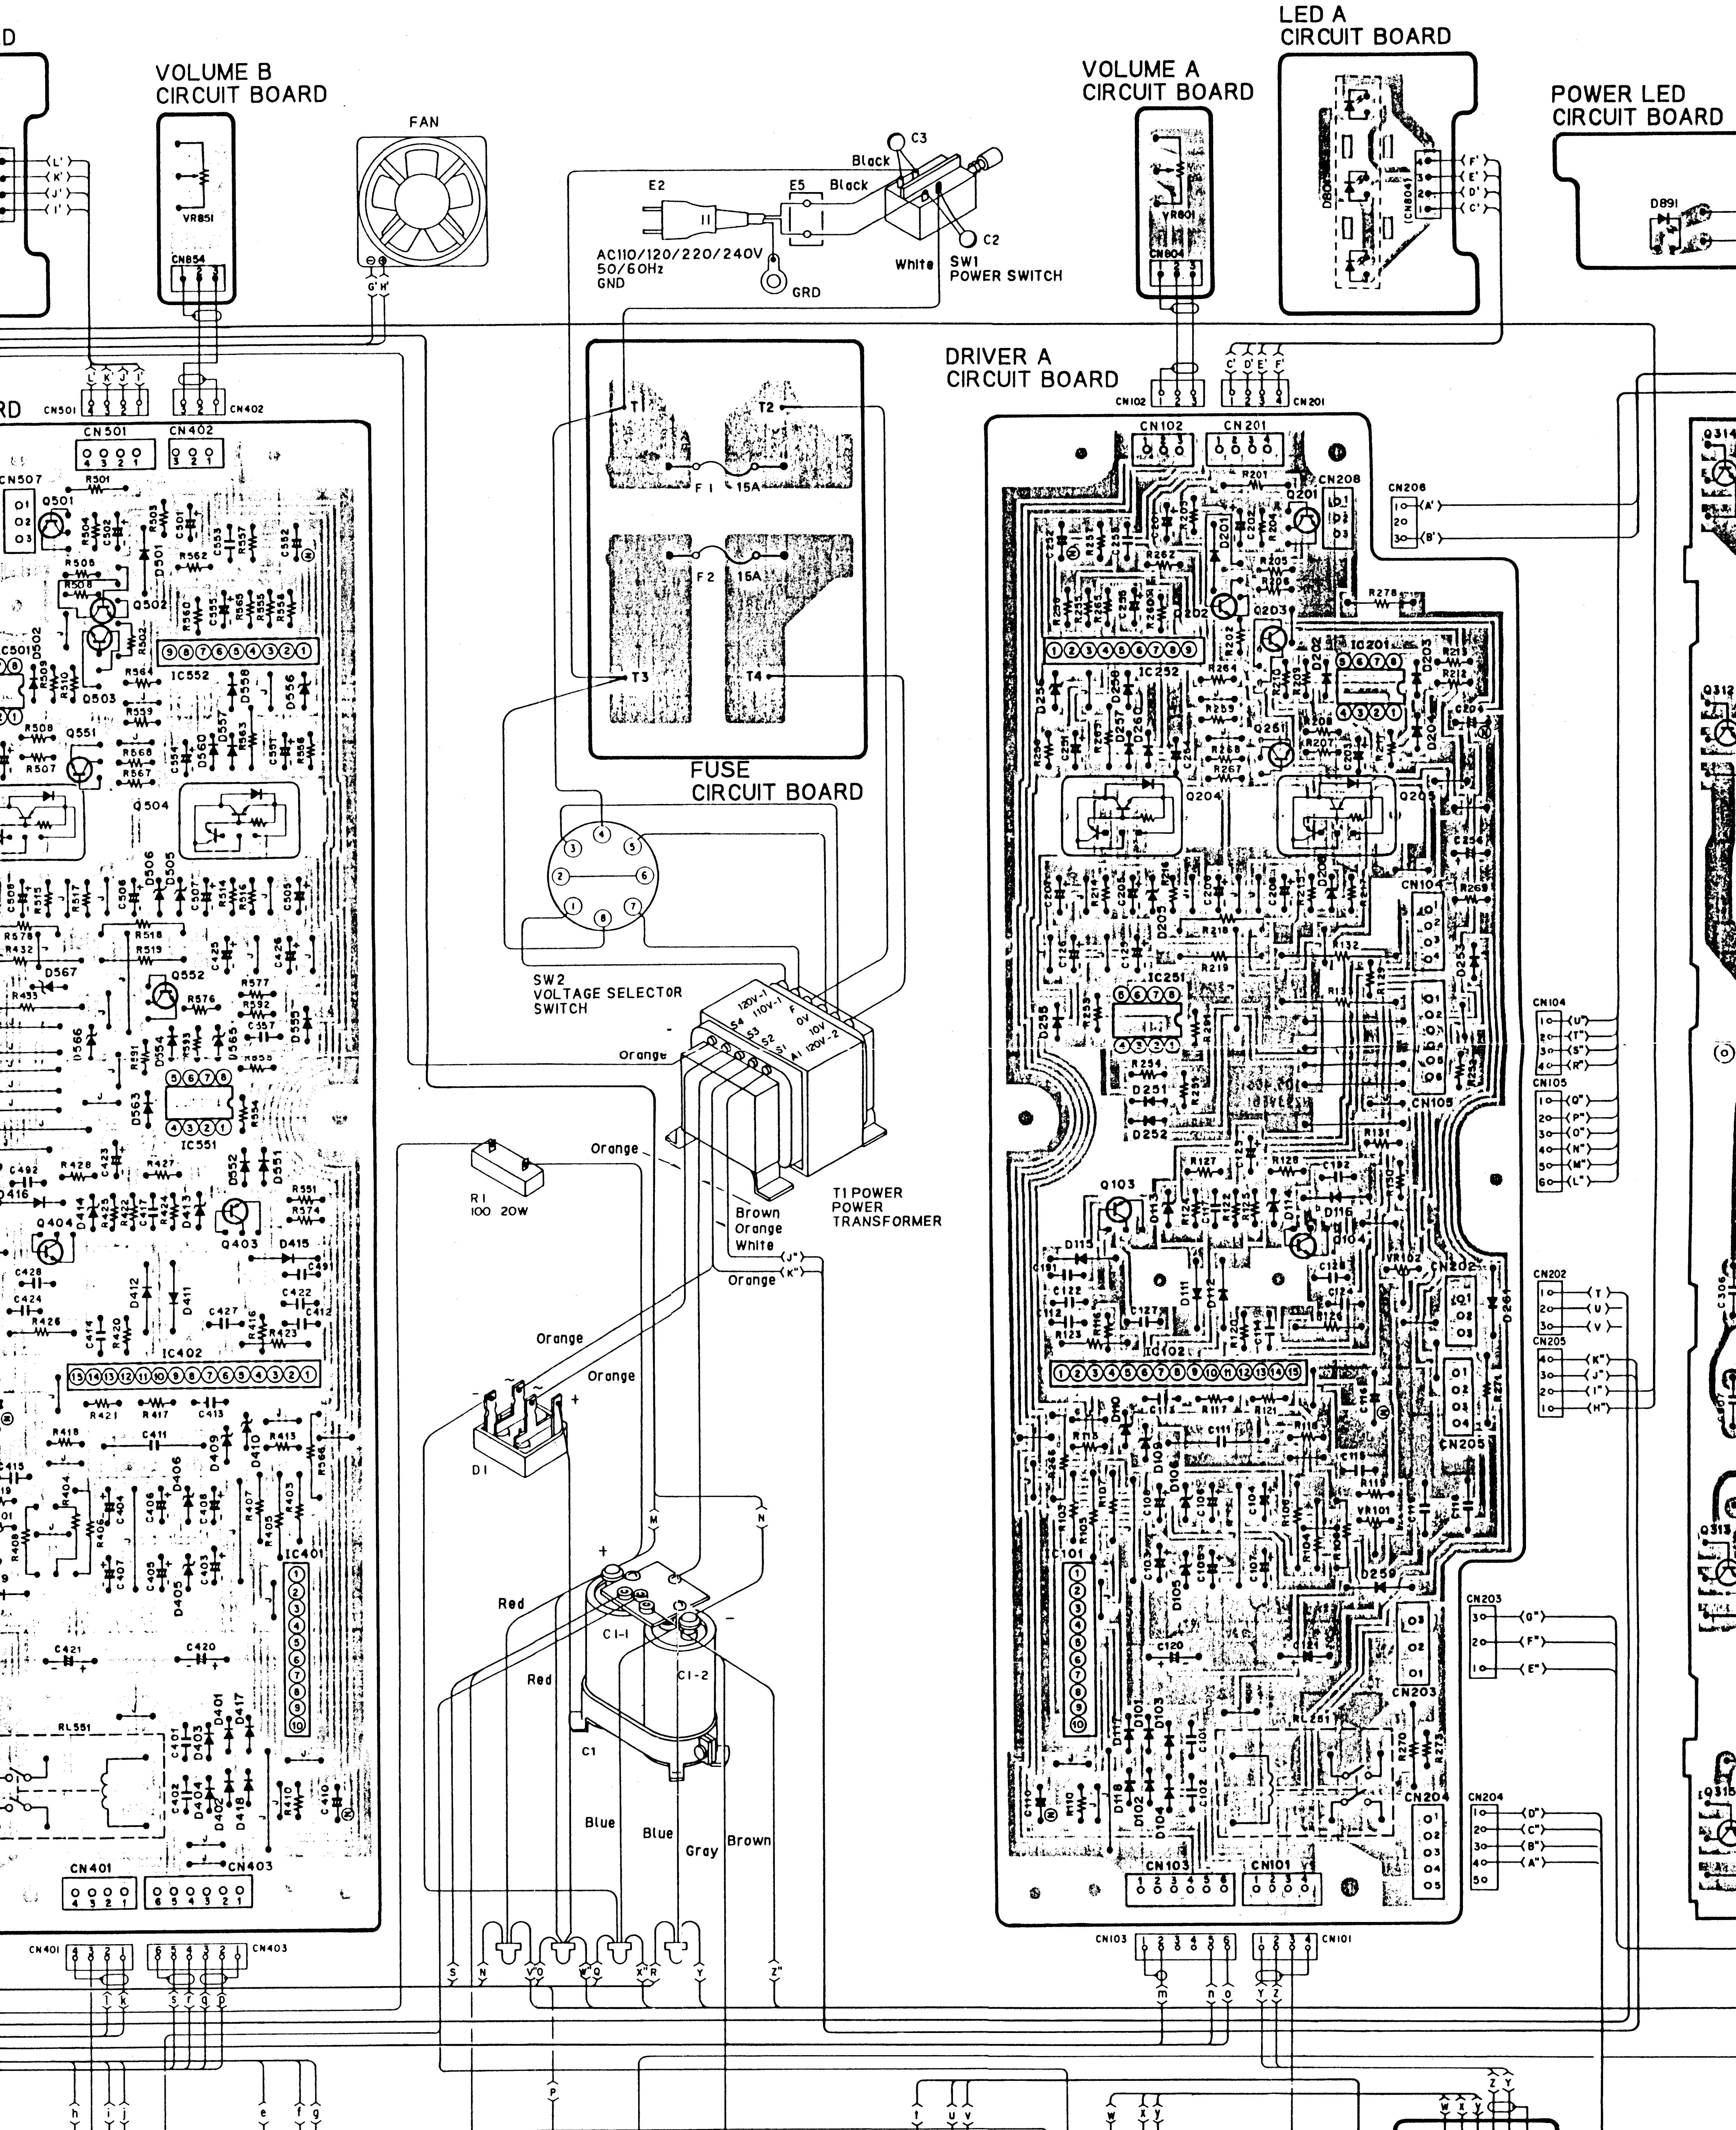
VOLUME B
CIRCUIT BOARD
VR851
CN854
FAN
E2
E5
Black
Black
C3
C2
White
SW1
POWER SWITCH
AC110/120/220/240V
50/60Hz
GND
GRD
VOLUME A
CIRCUIT BOARD
VR801
CN804
LED A
CIRCUIT BOARD
D801
CN804
POWER LED
CIRCUIT BOARD
D891
DRIVER A
CIRCUIT BOARD
CN102
CN201
CN208
CN206
CN501
CN402
CN507
T1
T2
T3
T4
F1
15A
F2
15A
FUSE
CIRCUIT BOARD
SW2
VOLTAGE SELECTOR
SWITCH
120V-1
110V-1
0V
120V-2
Orange
Brown
Orange
White
T1 POWER
POWER
TRANSFORMER
R1
100 20W
D1
Red
Red
Blue
Blue
Gray
Brown
C1-1
C1-2
C1
IC552
IC551
IC402
IC401
RL551
IC252
IC201
IC251
IC102
RL251
VR101
VR102
Q201
Q202
Q203
Q204
Q205
Q261
Q103
Q501
Q502
Q503
Q504
Q551
Q552
Q403
Q404
CN401
CN403
CN103
CN101
CN104
CN105
CN202
CN205
CN203
CN204
Q314
Q312
Q313
Q315

WP-9220C

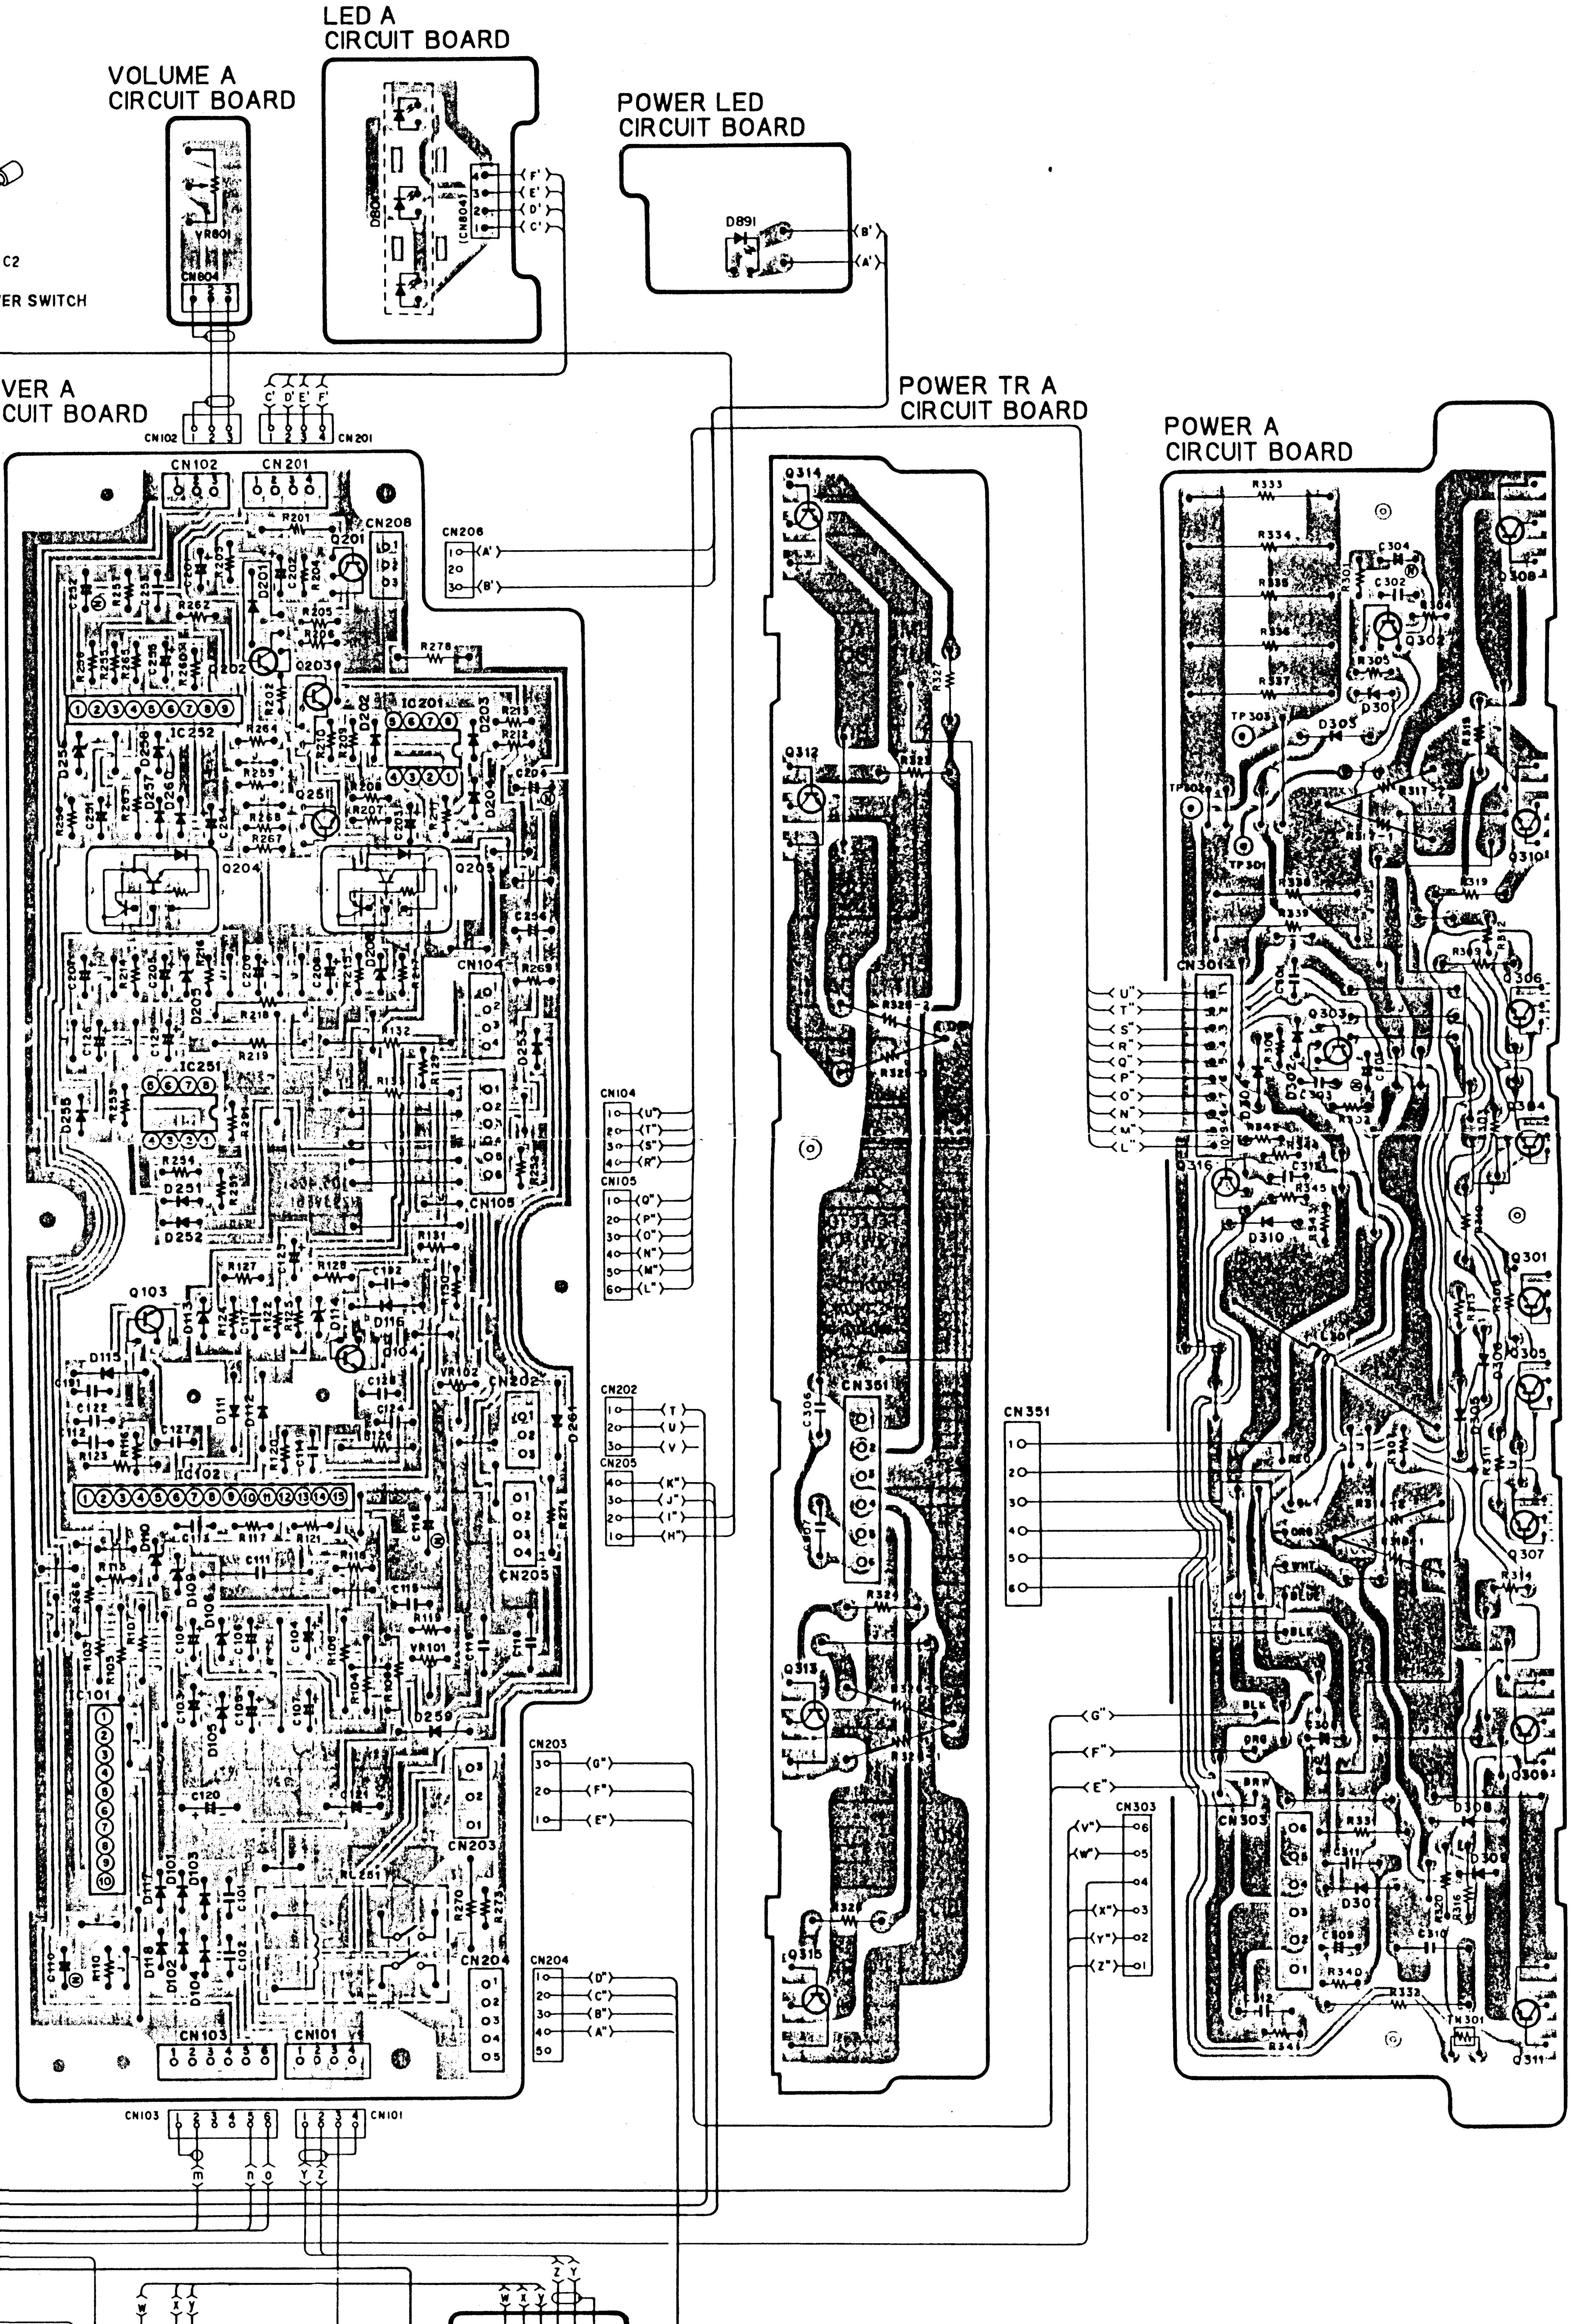
VOLUME A CIRCUIT BOARD
LED A CIRCUIT BOARD
POWER LED CIRCUIT BOARD
VER A CUIT BOARD
POWER TR A CIRCUIT BOARD
POWER A CIRCUIT BOARD
ER SWITCH
C2
VR801
CN804
D800
CN804
D891
CN102
CN201
CN208
CN206
CN104
CN105
CN202
CN205
CN203
CN204
CN103
CN101
IC201
IC252
IC251
IC102
Q201
Q202
Q203
Q204
Q205
Q251
Q103
Q314
Q312
Q313
Q315
CN351
CN301
CN303
Q301
Q302
Q303
Q305
Q306
Q307
Q308
Q309
Q310
Q311
Q316
TP301
TP302
TP303
TN301
R333
R334
R335
R336
R337
R338
R339
R340
R341
VR101
VR102
RL251

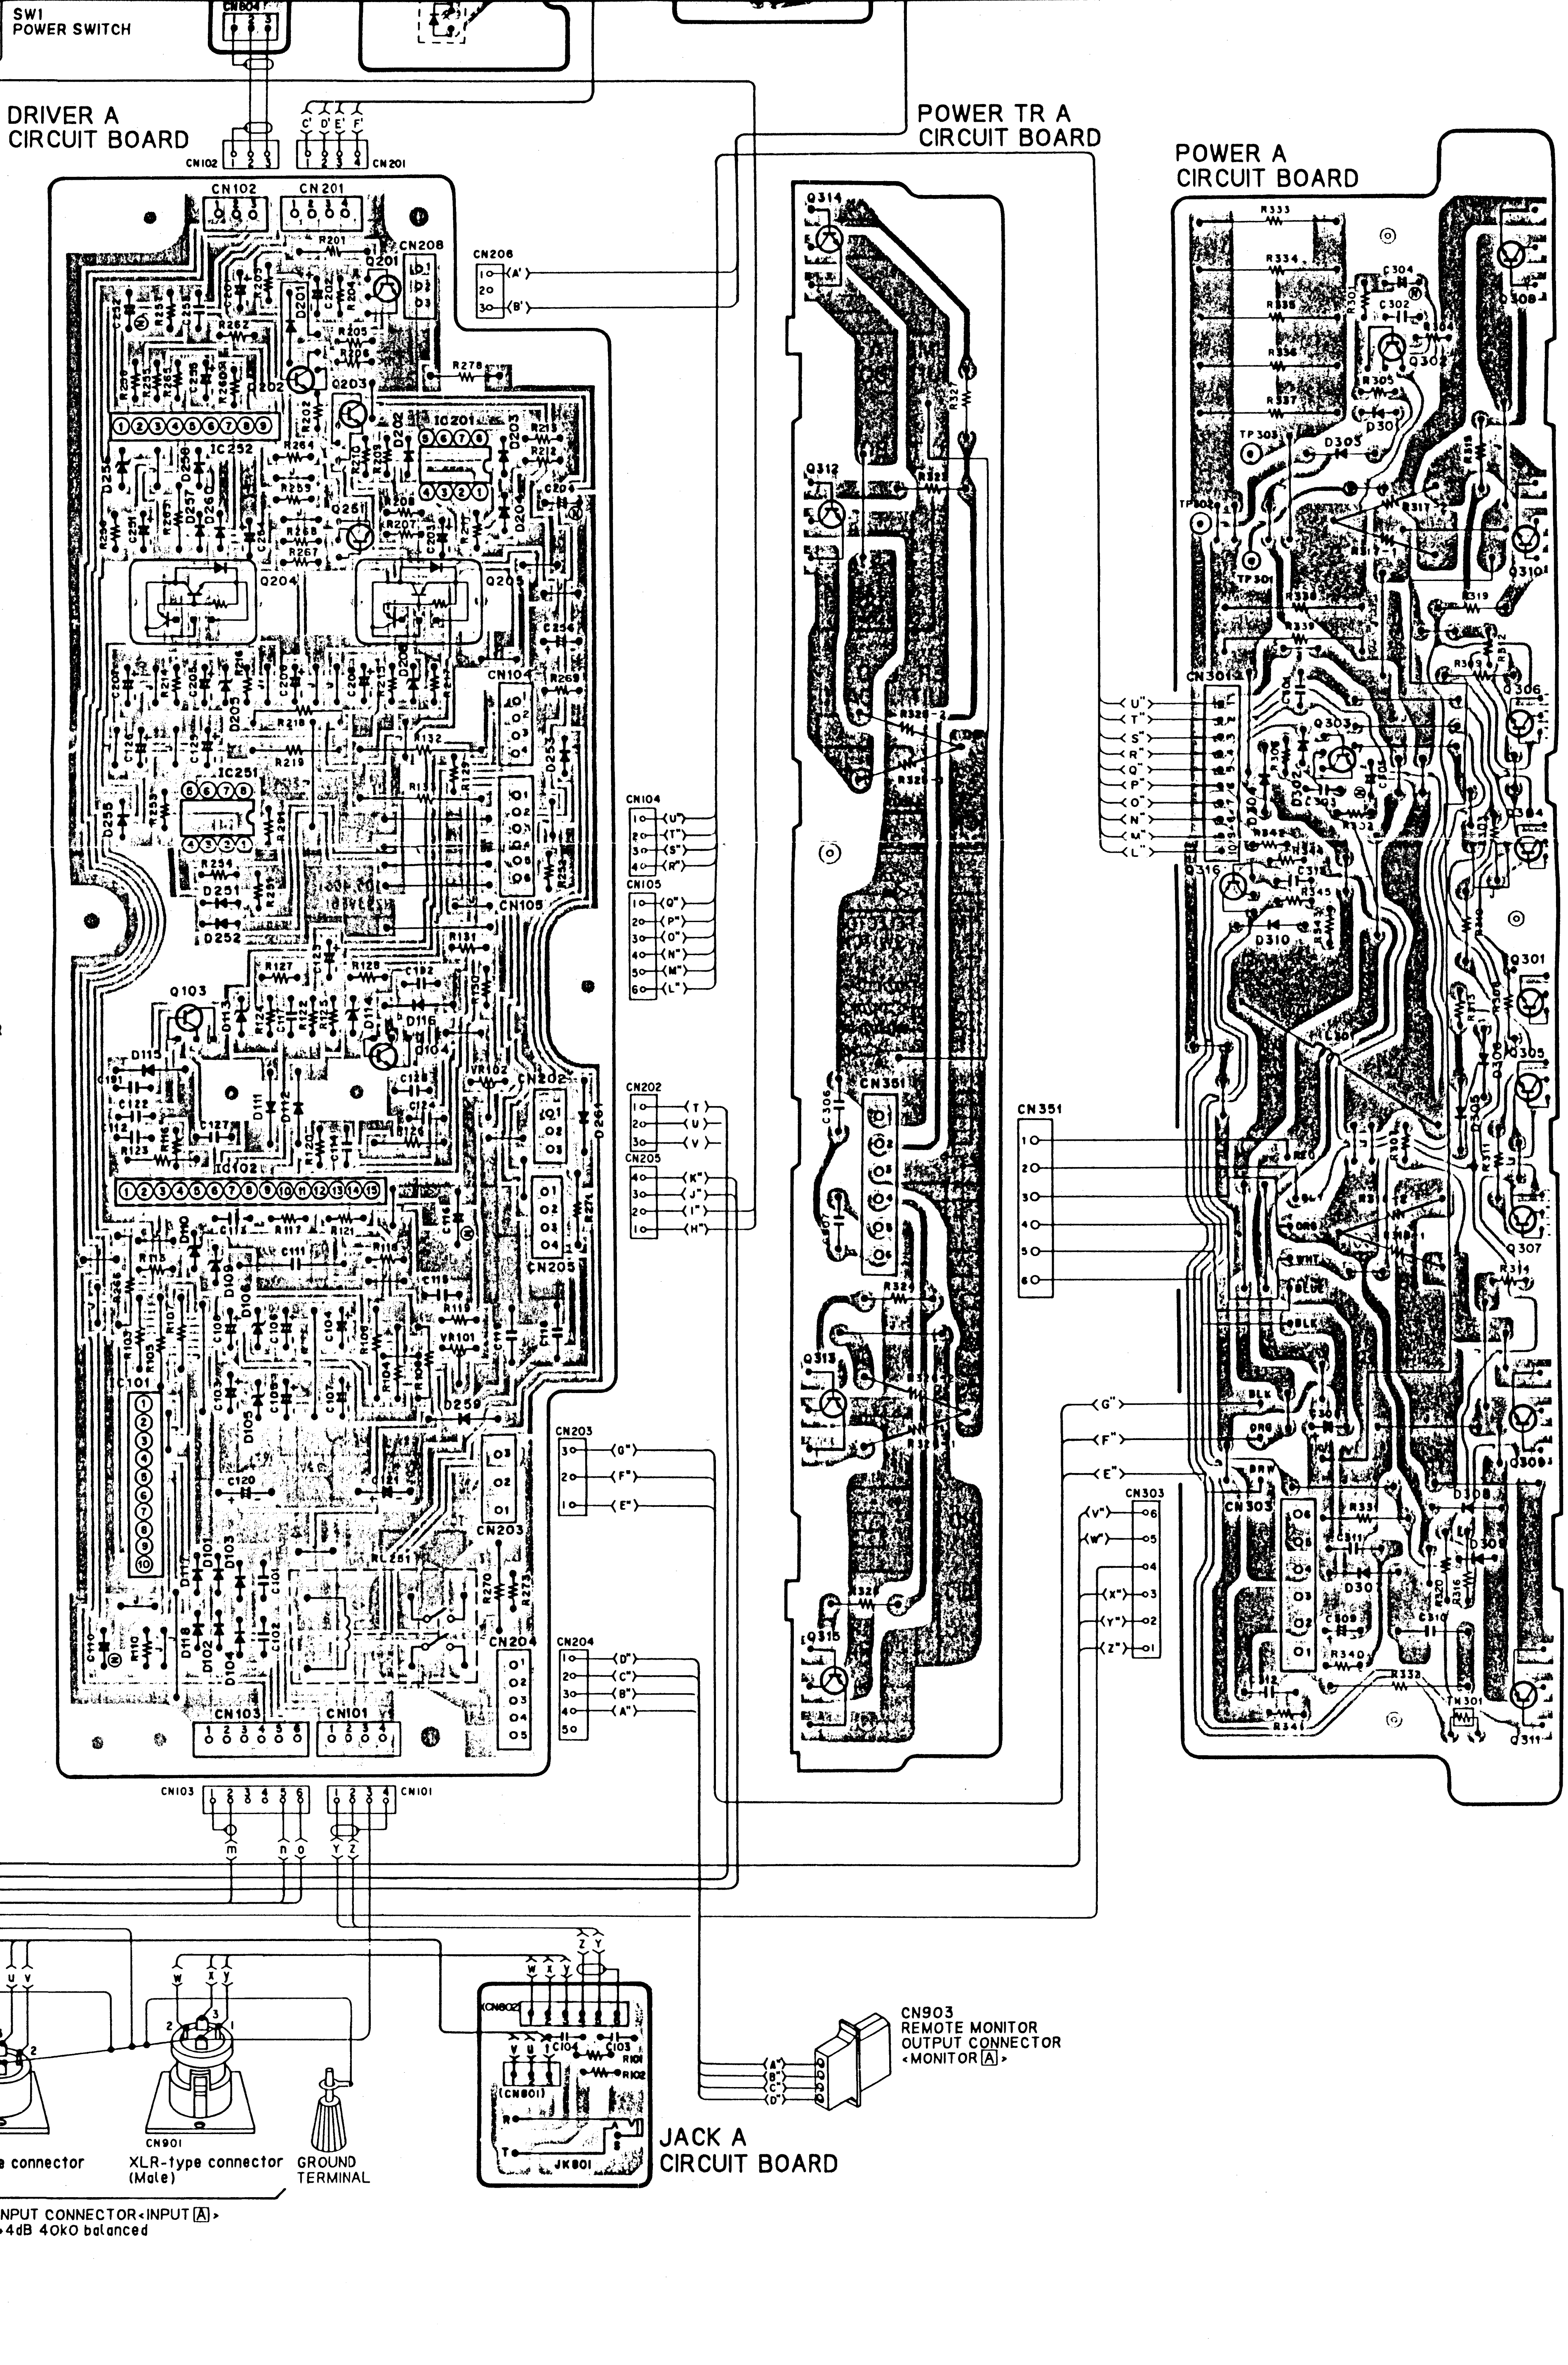
SW1
POWER SWITCH
CN904
DRIVER A
CIRCUIT BOARD
CN102
CN201
CN208
CN104
CN105
CN202
CN205
CN203
CN204
CN103
CN101
IC201
IC252
IC251
IC102
Q201
Q202
Q203
Q204
Q205
Q251
Q103
POWER TR A
CIRCUIT BOARD
Q314
Q312
Q313
Q315
CN351
POWER A
CIRCUIT BOARD
CN301
CN303
Q301
Q302
Q303
Q304
Q305
Q306
Q307
Q308
Q309
Q310
Q311
TP301
TP302
TP303
TH301
CN902
CN801
JK801
JACK A
CIRCUIT BOARD
CN903
REMOTE MONITOR
OUTPUT CONNECTOR
‹MONITOR A›
CN901
XLR-type connector
(Male)
GROUND
TERMINAL
e connector
NPUT CONNECTOR‹INPUT A›
-4dB 40kΩ balanced

2Q

SCHEMA

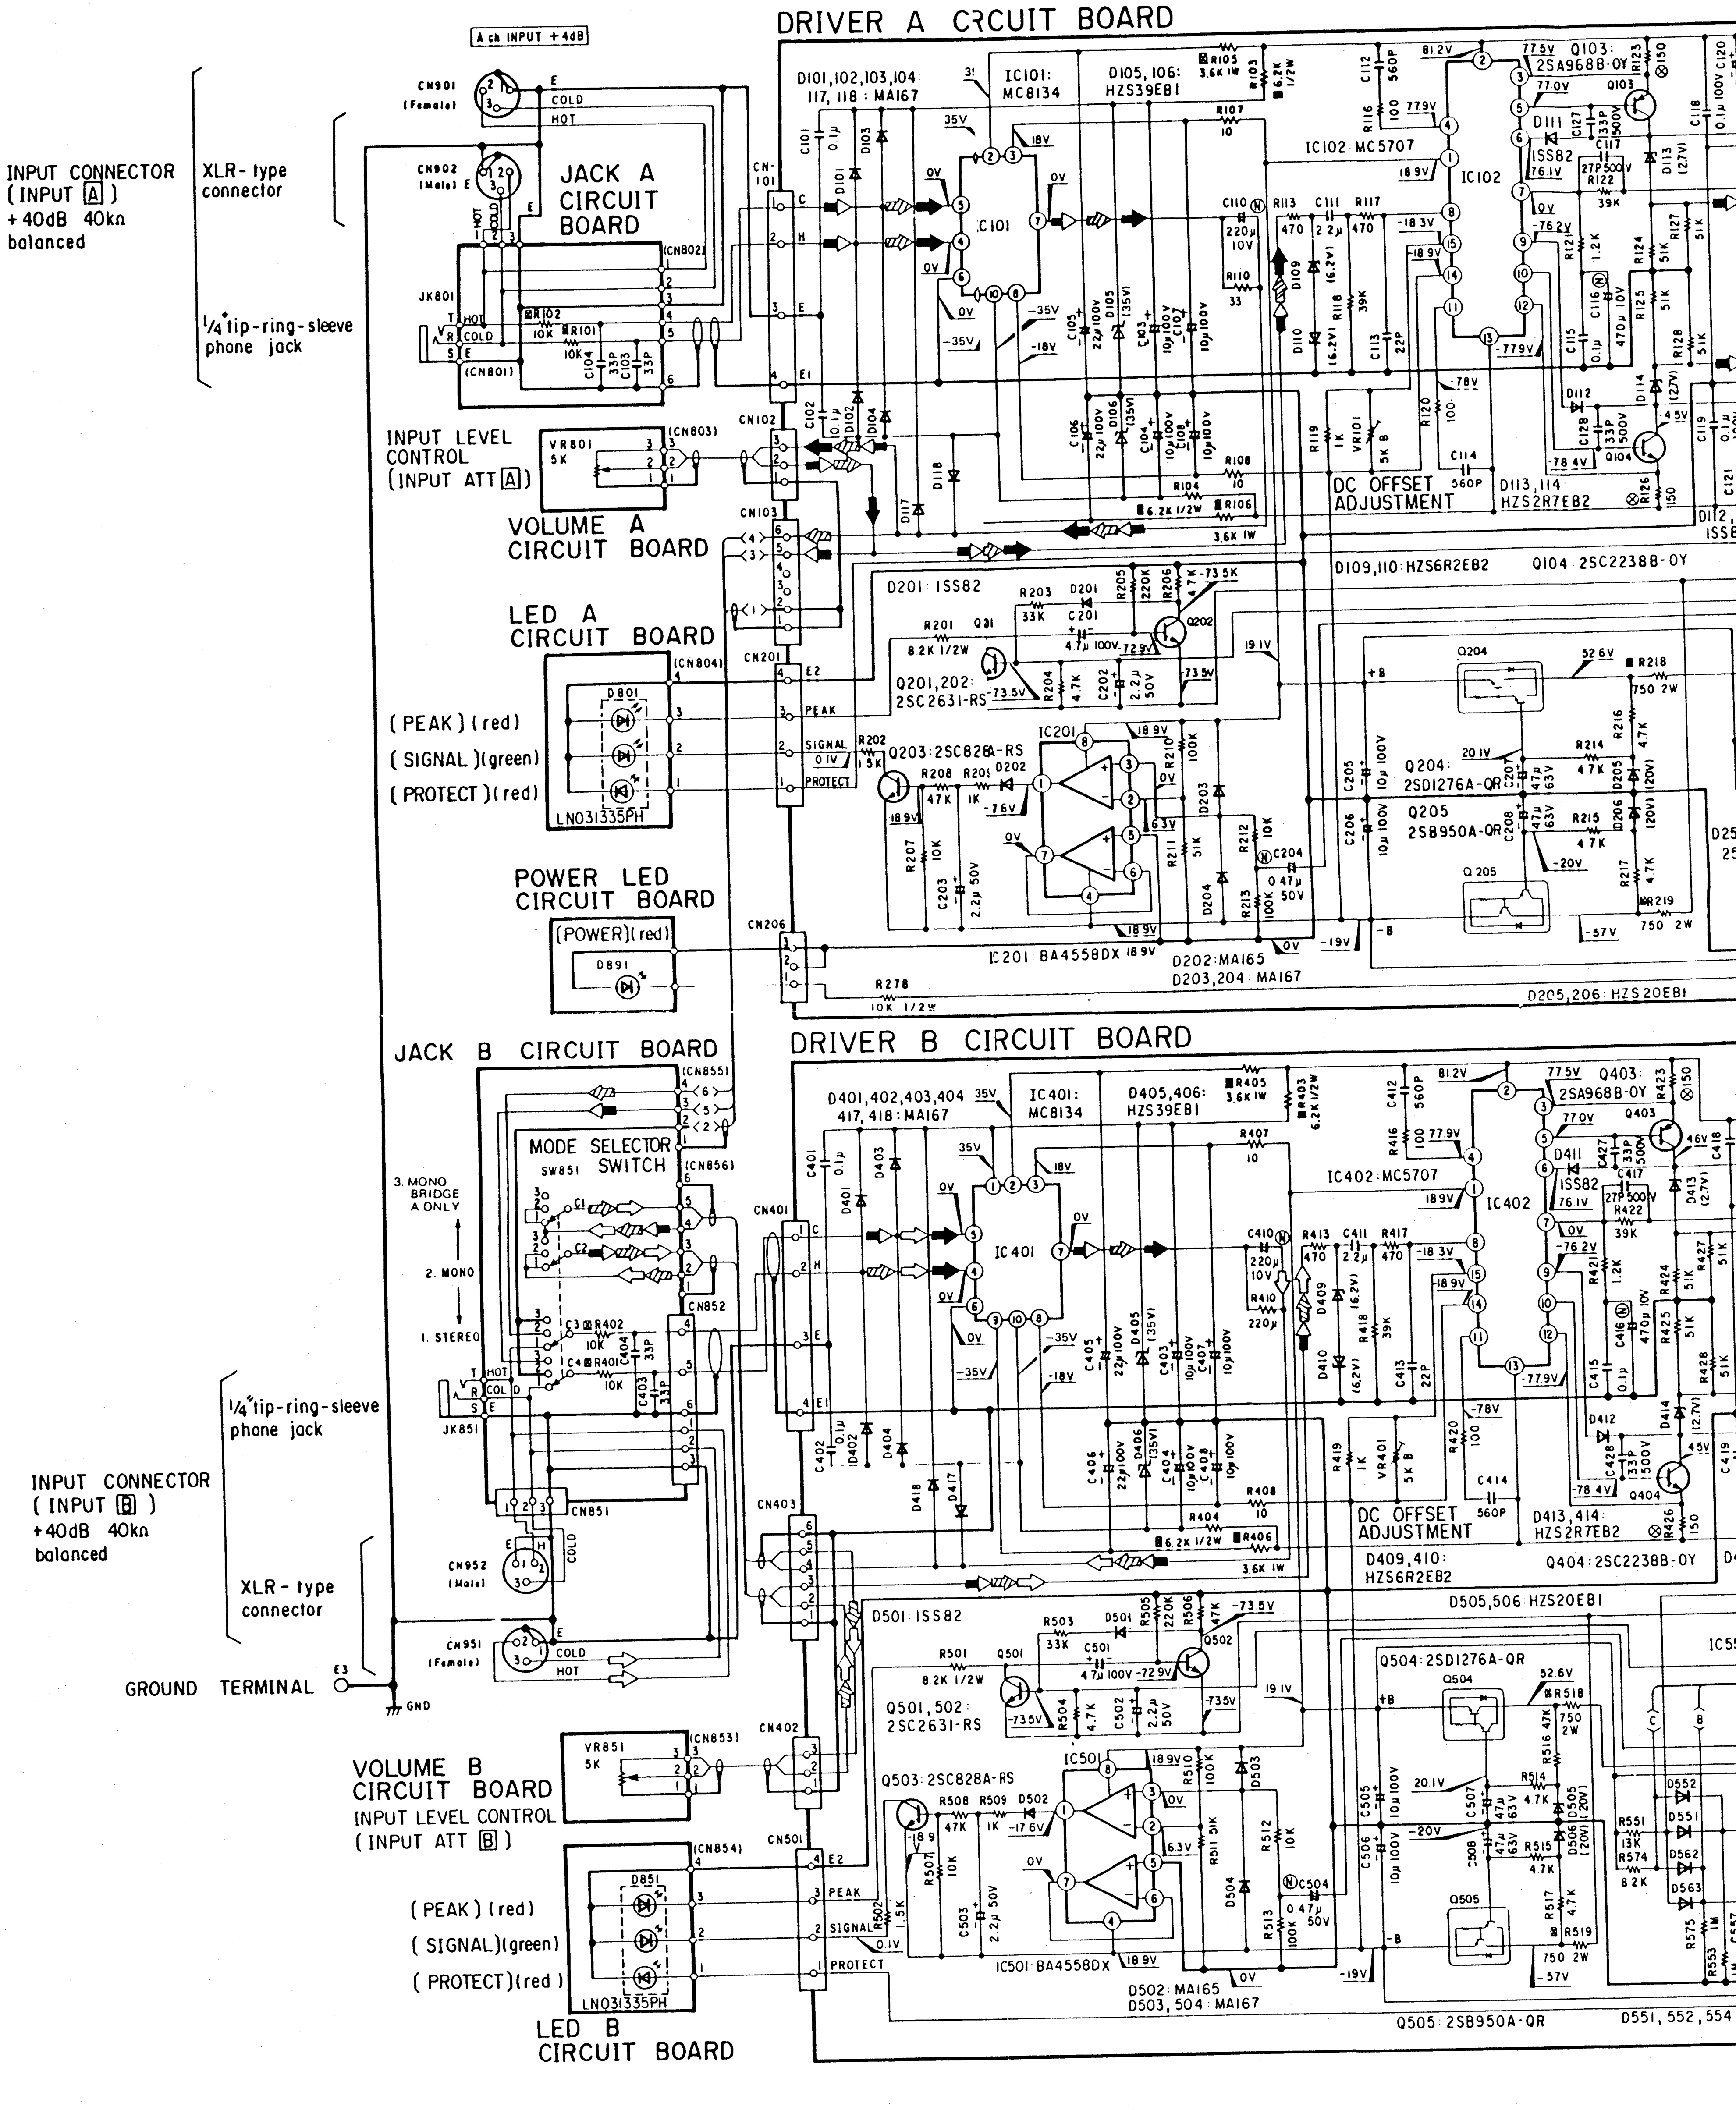
DRIVER A CIRCUIT BOARD
DRIVER B CIRCUIT BOARD
A ch INPUT +4dB
INPUT CONNECTOR
(INPUT A)
+40dB 40kΩ
balanced
XLR-type
connector
1/4" tip-ring-sleeve
phone jack
JACK A
CIRCUIT
BOARD
CN901
(Female)
CN902
(Male)
JK801
COLD
HOT
INPUT LEVEL
CONTROL
(INPUT ATT A)
VR801
5K
VOLUME A
CIRCUIT BOARD
LED A
CIRCUIT BOARD
(PEAK) (red)
(SIGNAL) (green)
(PROTECT) (red)
LN031335PH
POWER LED
CIRCUIT BOARD
(POWER) (red)
D891
JACK B CIRCUIT BOARD
MODE SELECTOR
SWITCH
SW851
3. MONO
BRIDGE
A ONLY
2. MONO
1. STEREO
JK851
INPUT CONNECTOR
(INPUT B)
+40dB 40kΩ
balanced
XLR-type
connector
CN952
(Male)
CN951
(Female)
GROUND TERMINAL
E3
GND
VOLUME B
CIRCUIT BOARD
INPUT LEVEL CONTROL
(INPUT ATT B)
VR851
5K
(PEAK) (red)
(SIGNAL) (green)
(PROTECT) (red)
LN031335PH
LED B
CIRCUIT BOARD
D101,102,103,104
117, 118 : MA167
IC101:
MC8134
D105, 106:
HZS39EB1
IC102 MC5707
Q103:
2SA968B-OY
DC OFFSET
ADJUSTMENT
VR101
5K B
D113,114
HZS2R7EB2
D109,110: HZS6R2EB2
Q104 2SC2238B-OY
D201 ISS82
Q201,202:
2SC2631-RS
Q203: 2SC828A-RS
IC201 BA4558DX
D202: MA165
D203,204: MA167
Q204:
2SD1276A-QR
Q205
2SB950A-QR
D205,206: HZS20EB1
R218
750 2W
R219
750 2W
D401,402,403,404
417, 418: MA167
IC401:
MC8134
D405,406:
HZS39EB1
IC402: MC5707
Q403:
2SA968B-OY
DC OFFSET
ADJUSTMENT
VR401
5K B
D413,414:
HZS2R7EB2
D409,410:
HZS6R2EB2
Q404: 2SC2238B-OY
D501 ISS82
Q501,502:
2SC2631-RS
Q503 2SC828A-RS
IC501 BA4558DX
D502: MA165
D503,504: MA167
D505,506 HZS20EB1
Q504: 2SD1276A-QR
Q505: 2SB950A-QR
D551, 552, 554
R518
750 2W
R519
750 2W

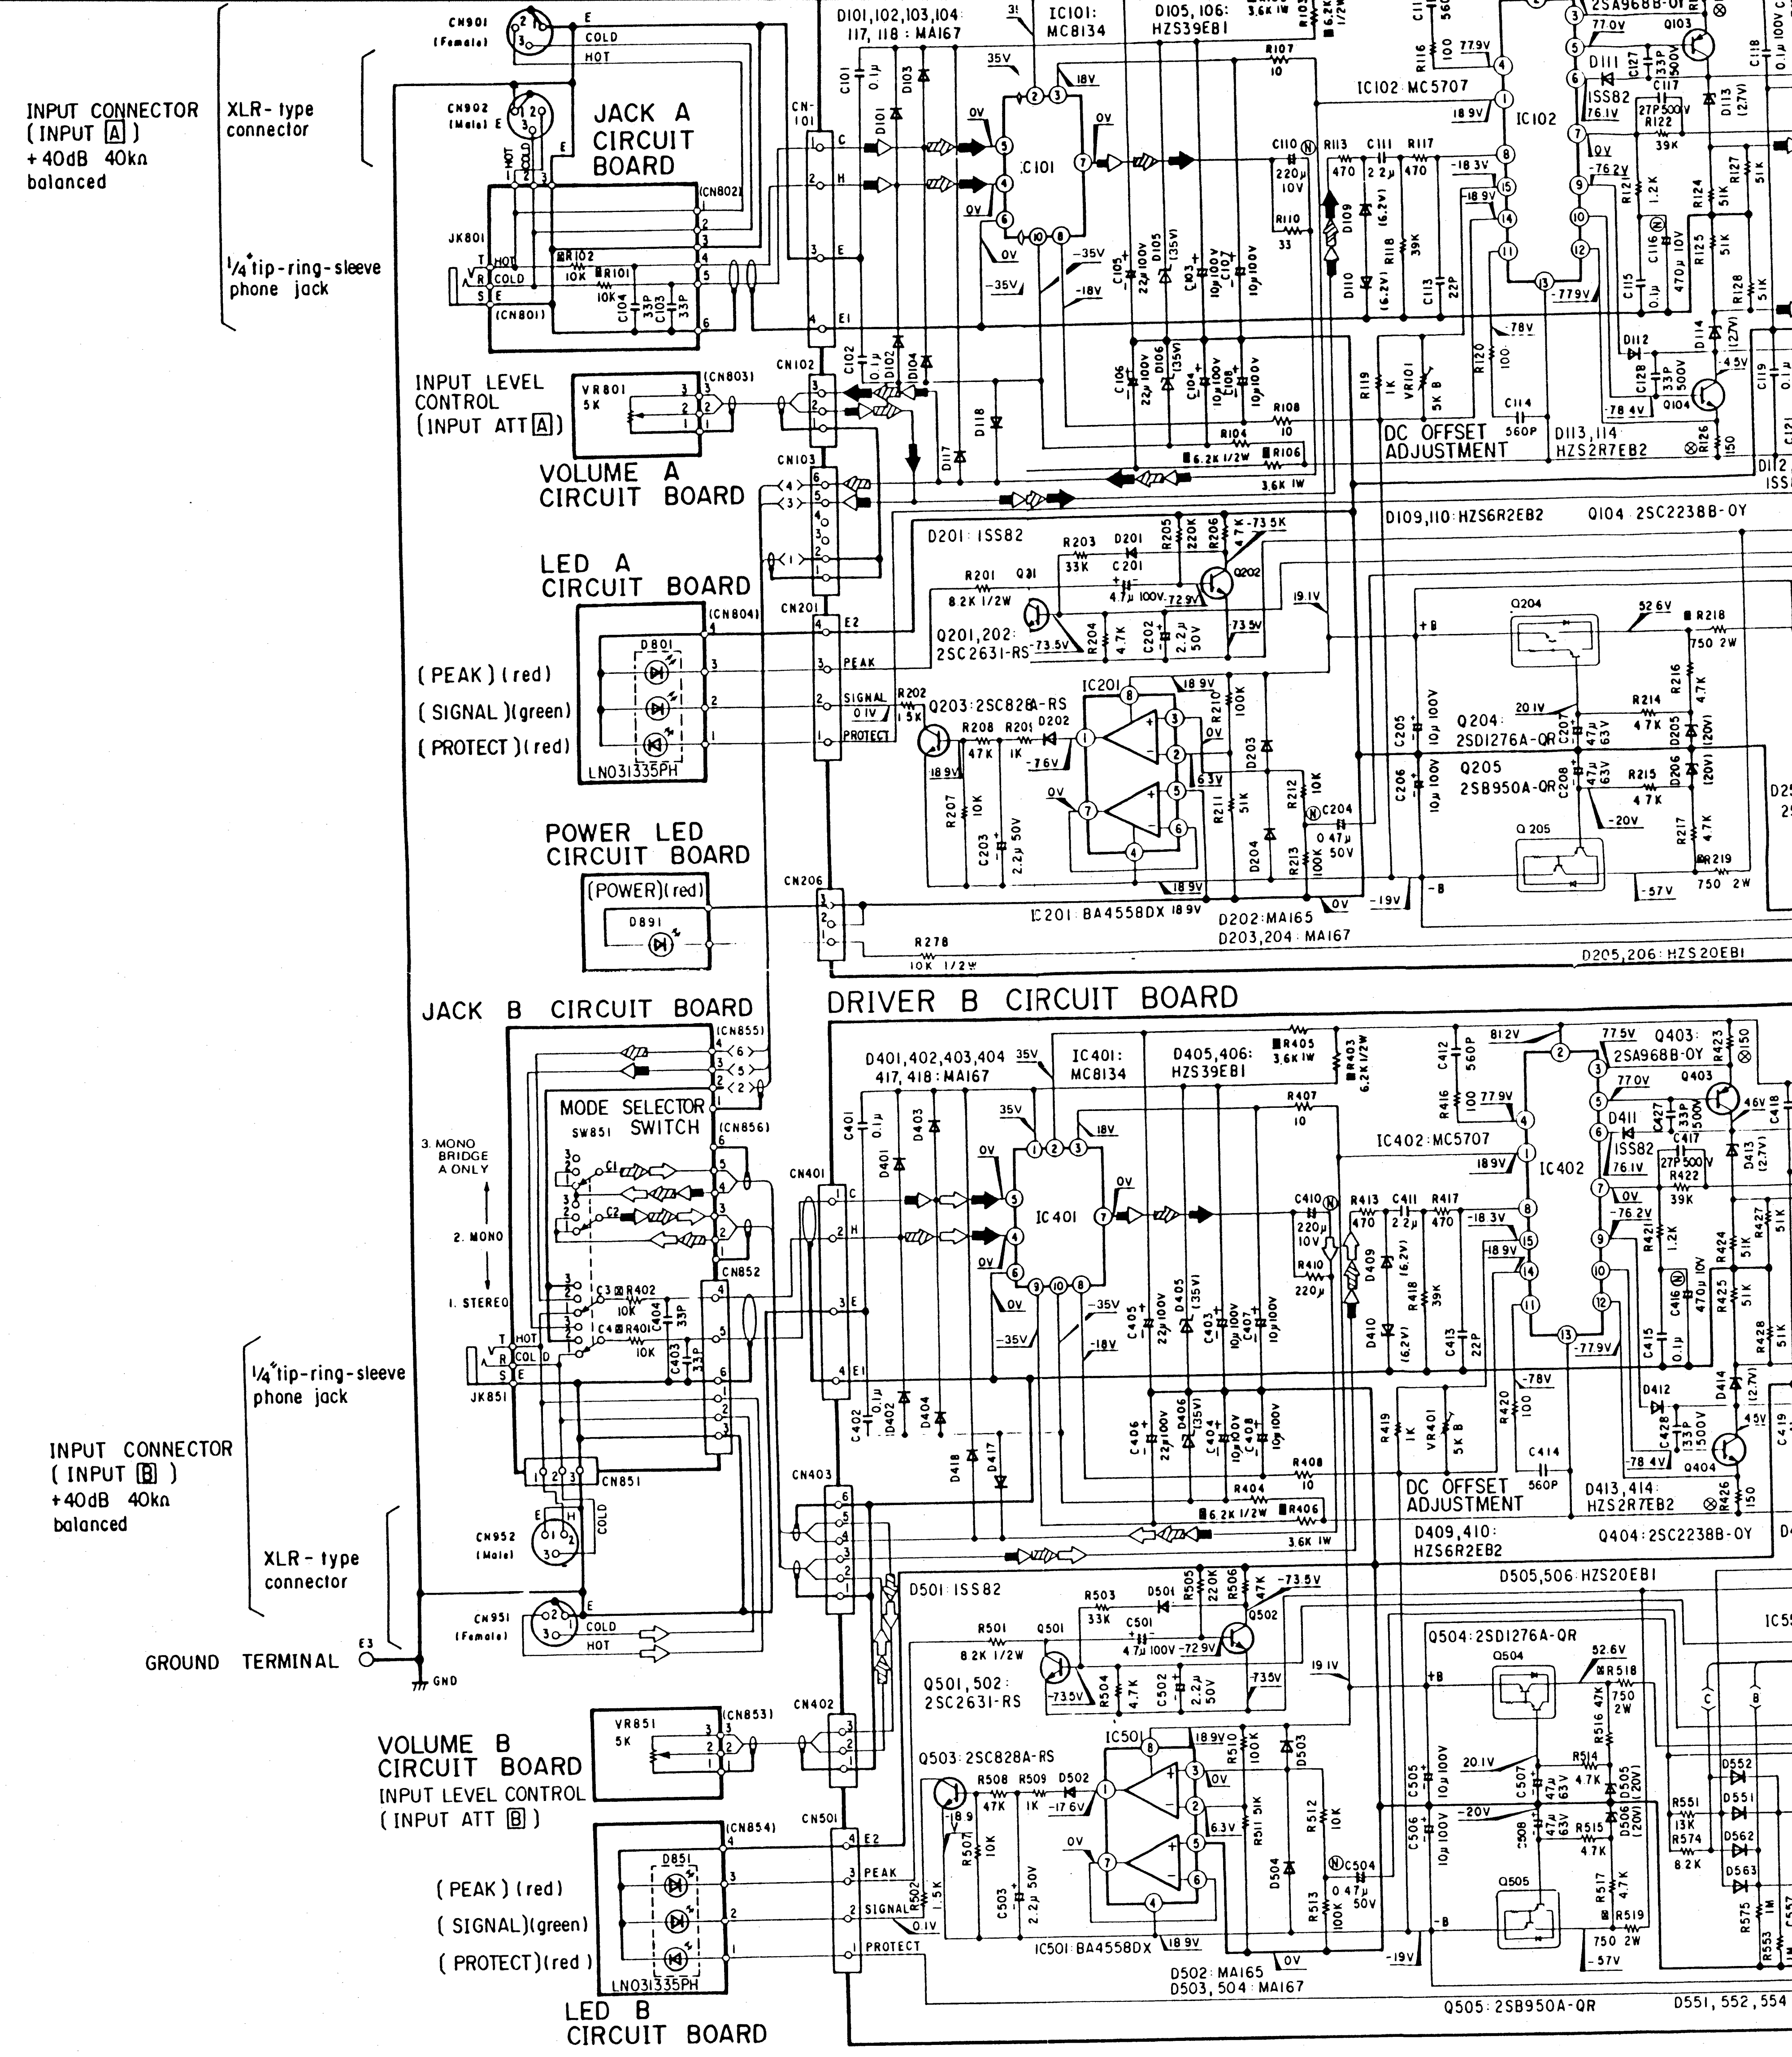

INPUT CONNECTOR
(INPUT A)
+40dB 40kΩ
balanced
XLR-type connector
1/4" tip-ring-sleeve phone jack
CN901 (Female)
CN902 (Male)
JK801
JACK A CIRCUIT BOARD
INPUT LEVEL CONTROL (INPUT ATT A)
VR801 5K
VOLUME A CIRCUIT BOARD
LED A CIRCUIT BOARD
(PEAK) (red)
(SIGNAL) (green)
(PROTECT) (red)
LN031335PH
POWER LED CIRCUIT BOARD
(POWER) (red)
D891
D101,102,103,104 117,118: MA167
IC101: MC8134
D105,106: HZS39EB1
IC102 MC5707
DC OFFSET ADJUSTMENT
D113,114 HZS2R7EB2
D109,110: HZS6R2EB2
Q104 2SC2238B-OY
D201 1SS82
Q201,202: 2SC2631-RS
Q203: 2SC828A-RS
IC201
Q204: 2SD1276A-QR
Q205 2SB950A-QR
IC201 BA4558DX
D202: MA165
D203,204: MA167
D205,206: HZS20EB1
JACK B CIRCUIT BOARD
MODE SELECTOR SWITCH
SW851
3. MONO BRIDGE A ONLY
2. MONO
1. STEREO
JK851
INPUT CONNECTOR
(INPUT B)
+40dB 40kΩ
balanced
XLR-type connector
CN952 (Male)
CN951 (Female)
GROUND TERMINAL
GND
VOLUME B CIRCUIT BOARD
INPUT LEVEL CONTROL
(INPUT ATT B)
VR851 5K
LED B CIRCUIT BOARD
(PEAK) (red)
(SIGNAL) (green)
(PROTECT) (red)
LN031335PH
DRIVER B CIRCUIT BOARD
D401,402,403,404 417,418: MA167
IC401: MC8134
D405,406: HZS39EB1
IC402: MC5707
Q403: 2SA968B-OY
DC OFFSET ADJUSTMENT
D409,410: HZS6R2EB2
D413,414: HZS2R7EB2
Q404: 2SC2238B-OY
D505,506 HZS20EB1
D501 1SS82
Q501,502: 2SC2631-RS
Q503: 2SC828A-RS
Q504: 2SD1276A-QR
IC501 BA4558DX
D502: MA165
D503,504: MA167
Q505: 2SB950A-QR
D551,552,554

< SIGNAL CHART >

- ➡ Ach Input Signal
- ▨ Monoral Input Signal
- ➡ Mono Bridge Input Signal
- ⇨ Bch Input Signal

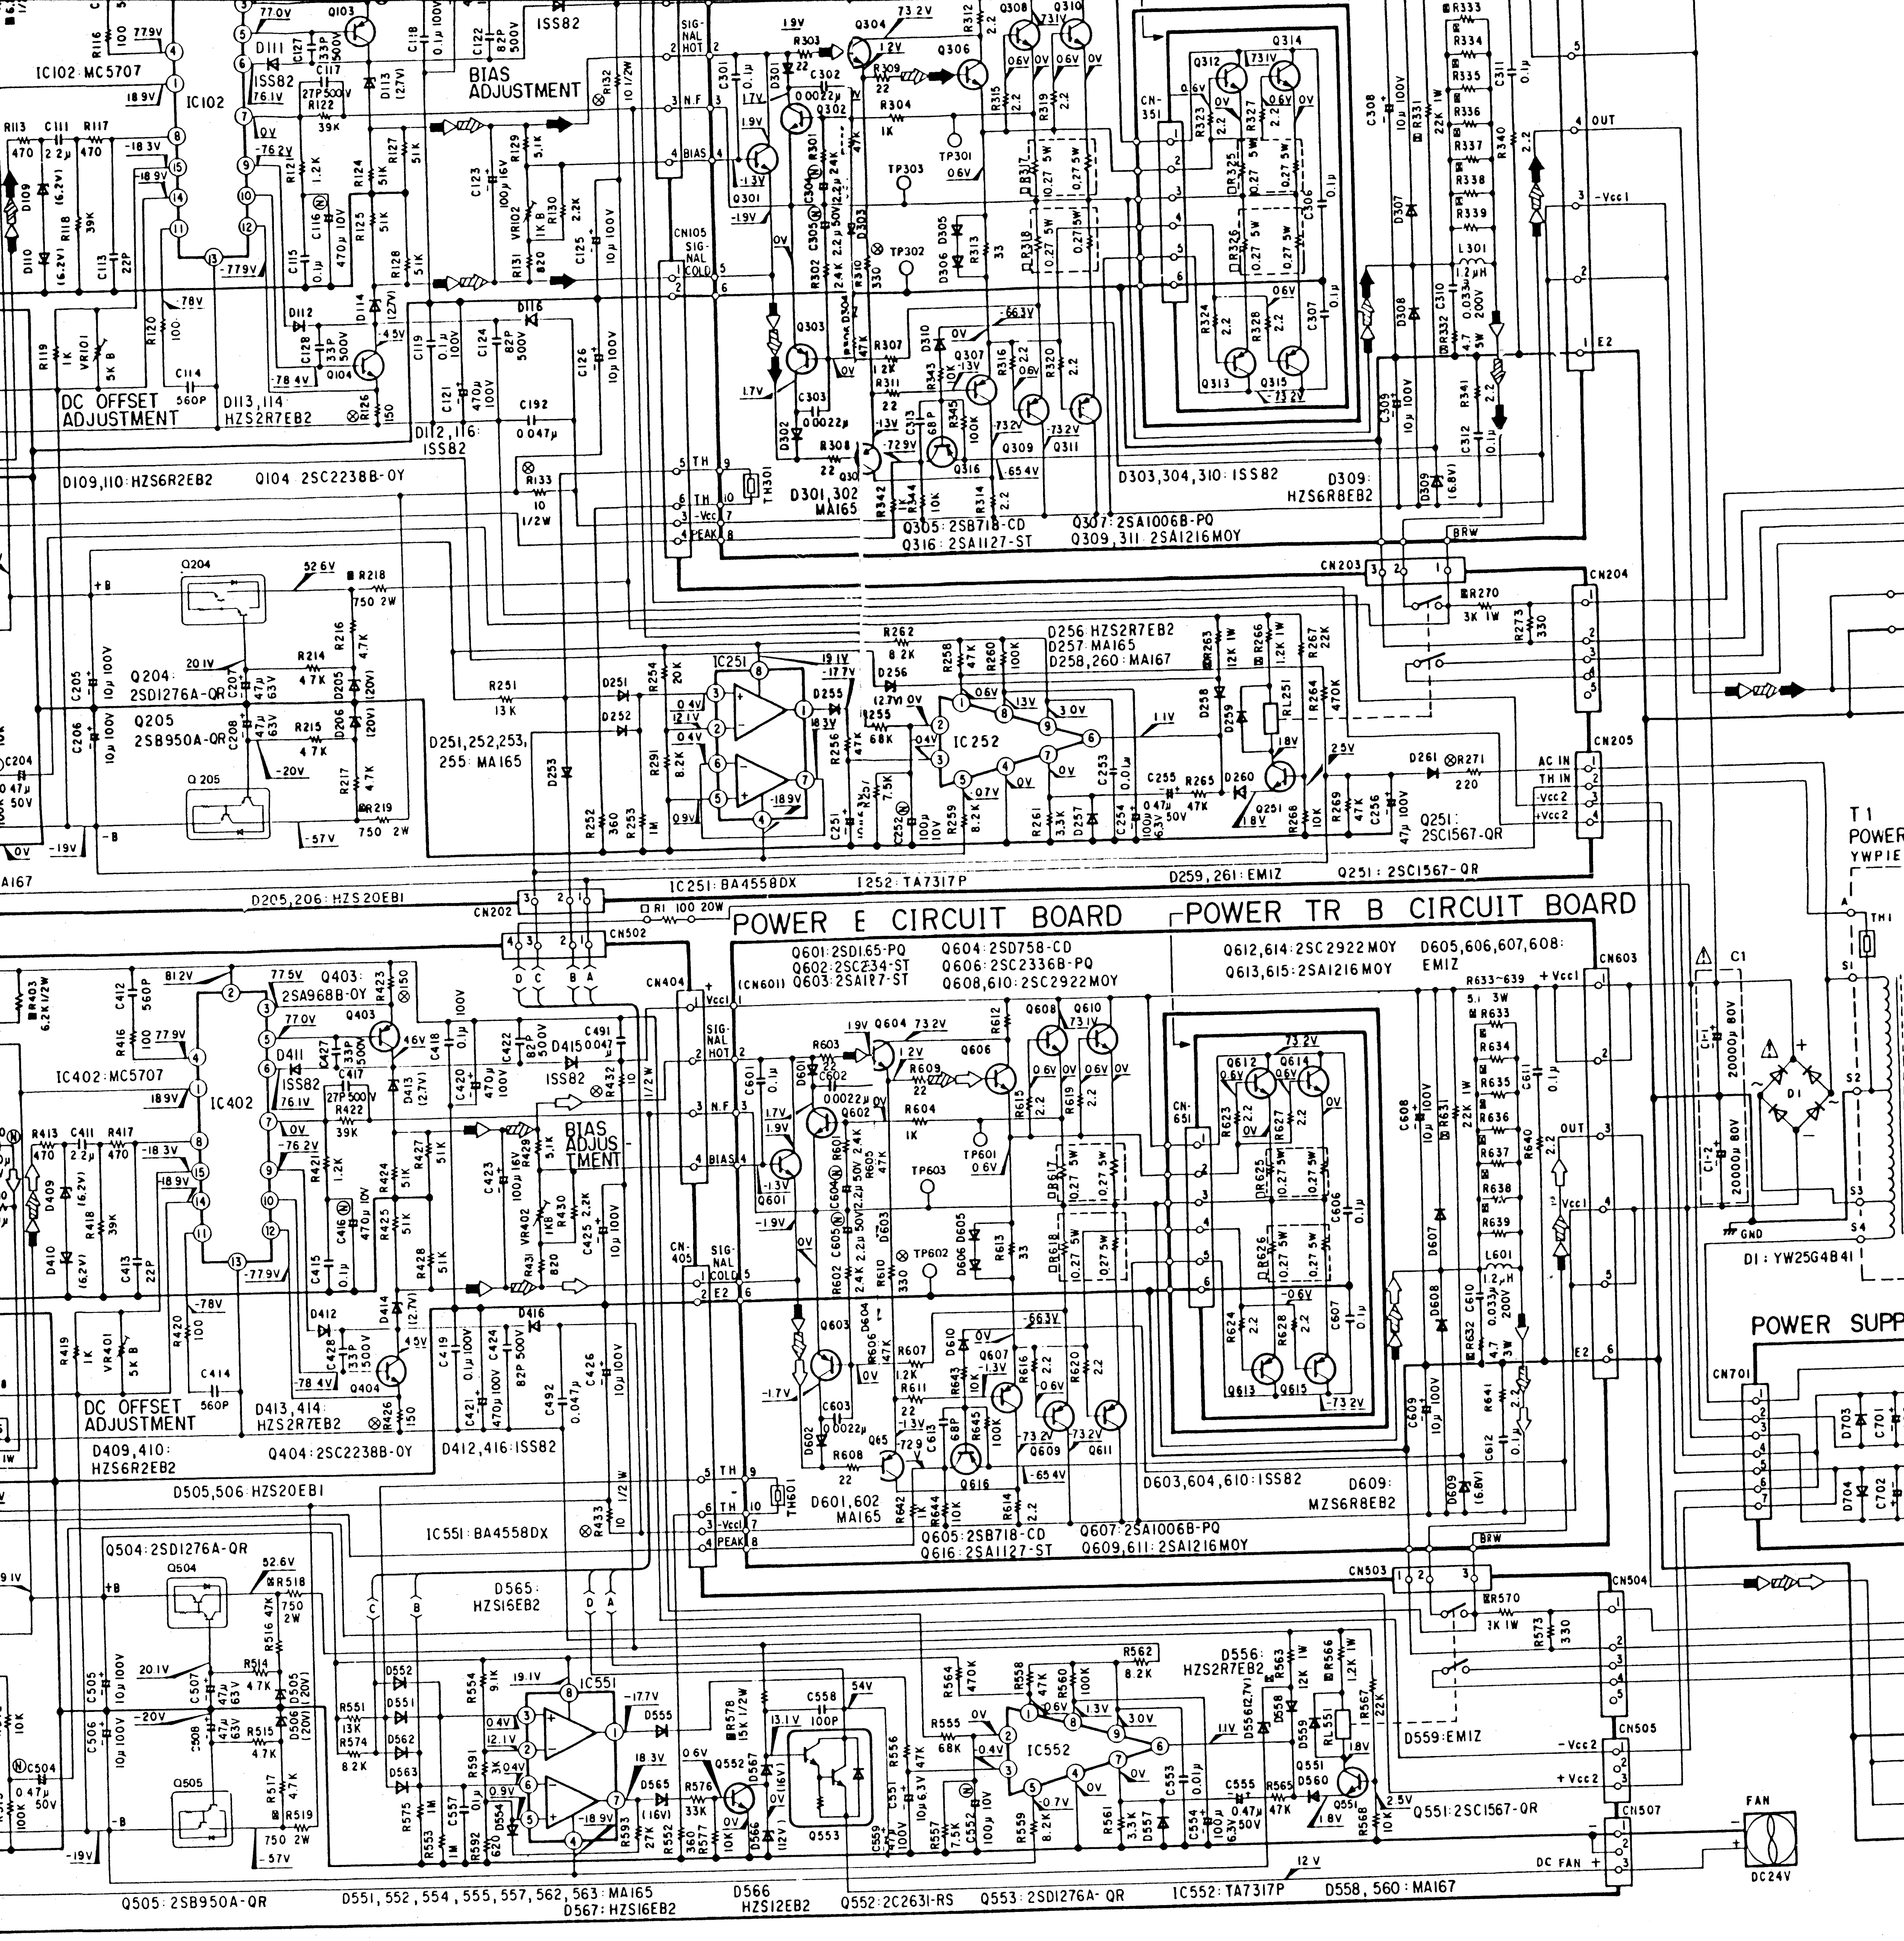
IC102: MC5707
BIAS ADJUSTMENT
DC OFFSET ADJUSTMENT
D113,114 HZS2R7EB2
D112,116: ISS82
D109,110: HZS6R2EB2
Q104 2SC2238B-OY
D301,302 MA165
Q305: 2SB718-CD
Q316: 2SA1127-ST
Q307: 2SA1006B-PQ
Q309,311 2SA1216MOY
D303,304,310: ISS82
D309: HZS6R8EB2
Q204: 2SD1276A-QR
Q205 2SB950A-QR
D251,252,253,255: MA165
D256 HZS2R7EB2
D257 MA165
D258,260: MA167
IC251: BA4558DX
IC252: TA7317P
D259,261: EM1Z
Q251: 2SC1567-QR
D205,206: HZS20EB1
POWER E CIRCUIT BOARD
POWER TR B CIRCUIT BOARD
Q601: 2SD1651-PQ
Q602: 2SC2234-ST
Q603: 2SA127-ST
Q604: 2SD758-CD
Q606: 2SC2336B-PQ
Q608,610: 2SC2922MOY
Q612,614: 2SC2922MOY
Q613,615: 2SA1216MOY
D605,606,607,608: EM1Z
IC402: MC5707
Q403: 2SA968B-OY
D413,414: HZS2R7EB2
D409,410: HZS6R2EB2
Q404: 2SC2238B-OY
D412,416: ISS82
D505,506 HZS20EB1
IC551: BA4558DX
D565 HZS16EB2
D601,602 MA165
Q605: 2SB718-CD
Q616: 2SA1127-ST
Q607: 2SA1006B-PQ
Q609,611: 2SA1216MOY
D603,604,610: ISS82
D609: MZS6R8EB2
Q504: 2SD1276A-QR
D556: HZS2R7EB2
D559: EM1Z
Q551: 2SC1567-QR
Q505: 2SB950A-QR
D551,552,554,555,557,562,563: MA165
D567: HZS16EB2
D566 HZS12EB2
Q552: 2C2631-RS
Q553: 2SD1276A-QR
IC552: TA7317P
D558,560: MA167
T1 POWER
D1: YW25G4B41
POWER SUPP
FAN
DC24V
DC FAN

MC8134

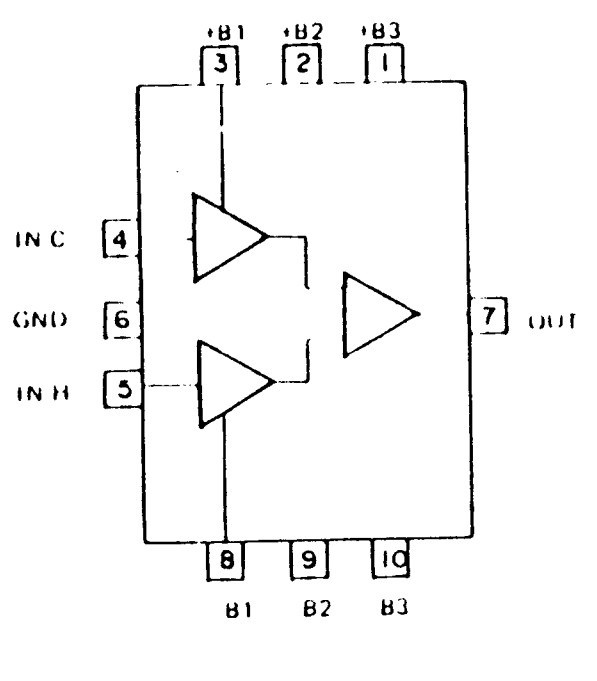
+B1
+B2
+B3
IN C
GND
IN H
OUT
B1
B2
B3

BA4558DX
NJM4560DX

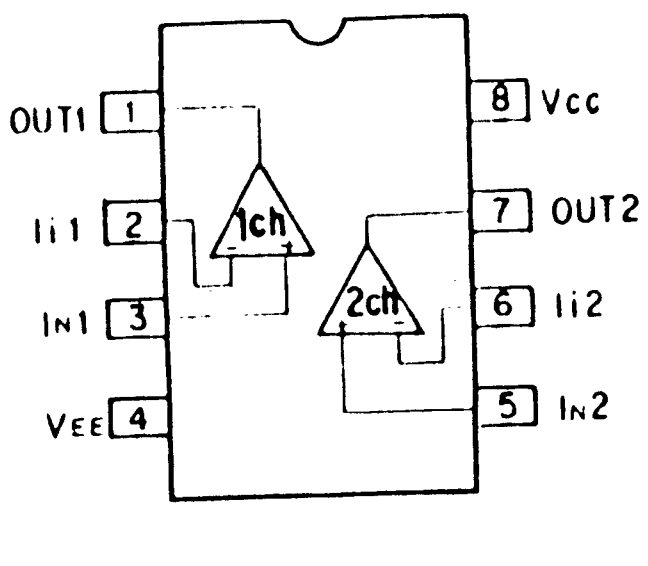
OUT1
Ii1
In1
VEE
Vcc
OUT2
Ii2
In2
1ch
2ch

MC5707

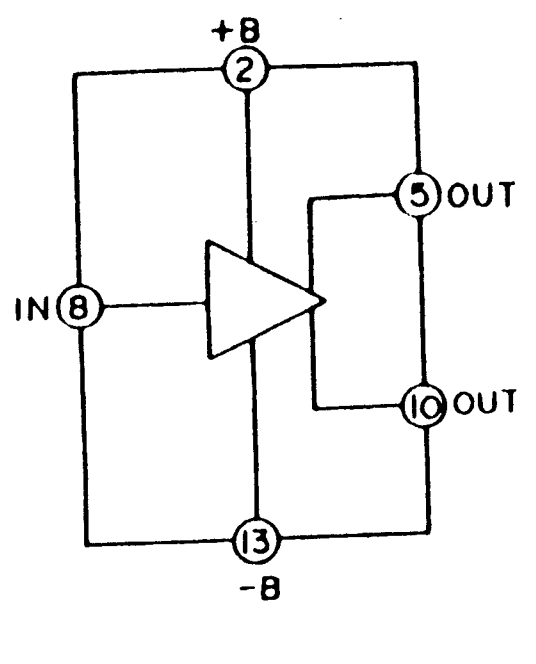
+B
IN
OUT
OUT
-B

TA7317P

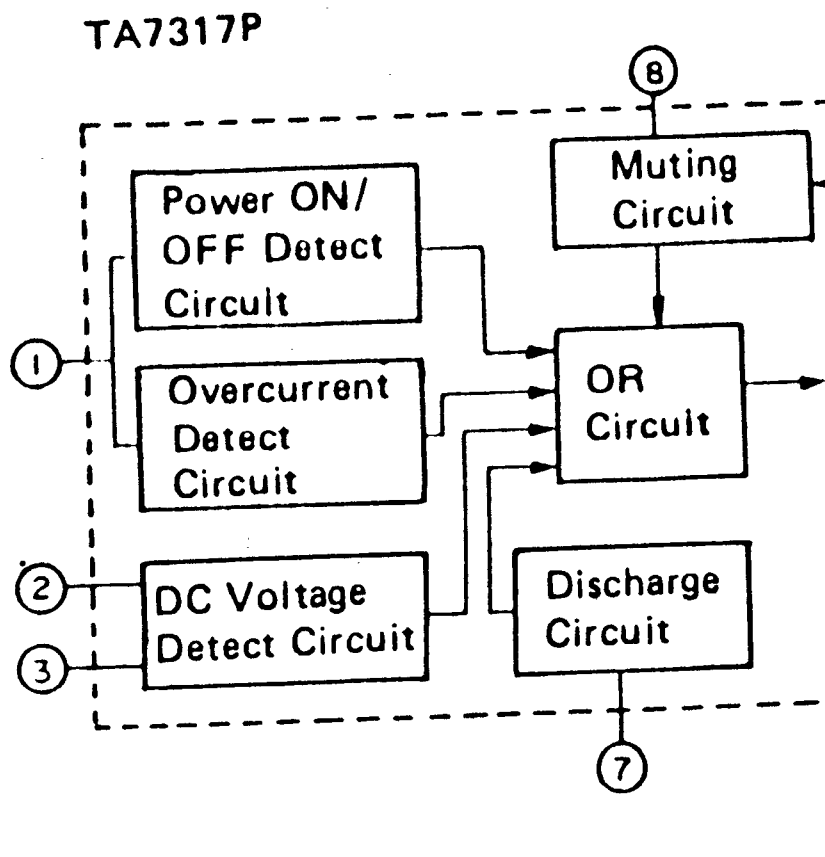
Power ON/OFF Detect Circuit
Muting Circuit
Overcurrent Detect Circuit
OR Circuit
DC Voltage Detect Circuit
Discharge Circuit

SCHEMATIC DIAGRAM OF WP-9220C

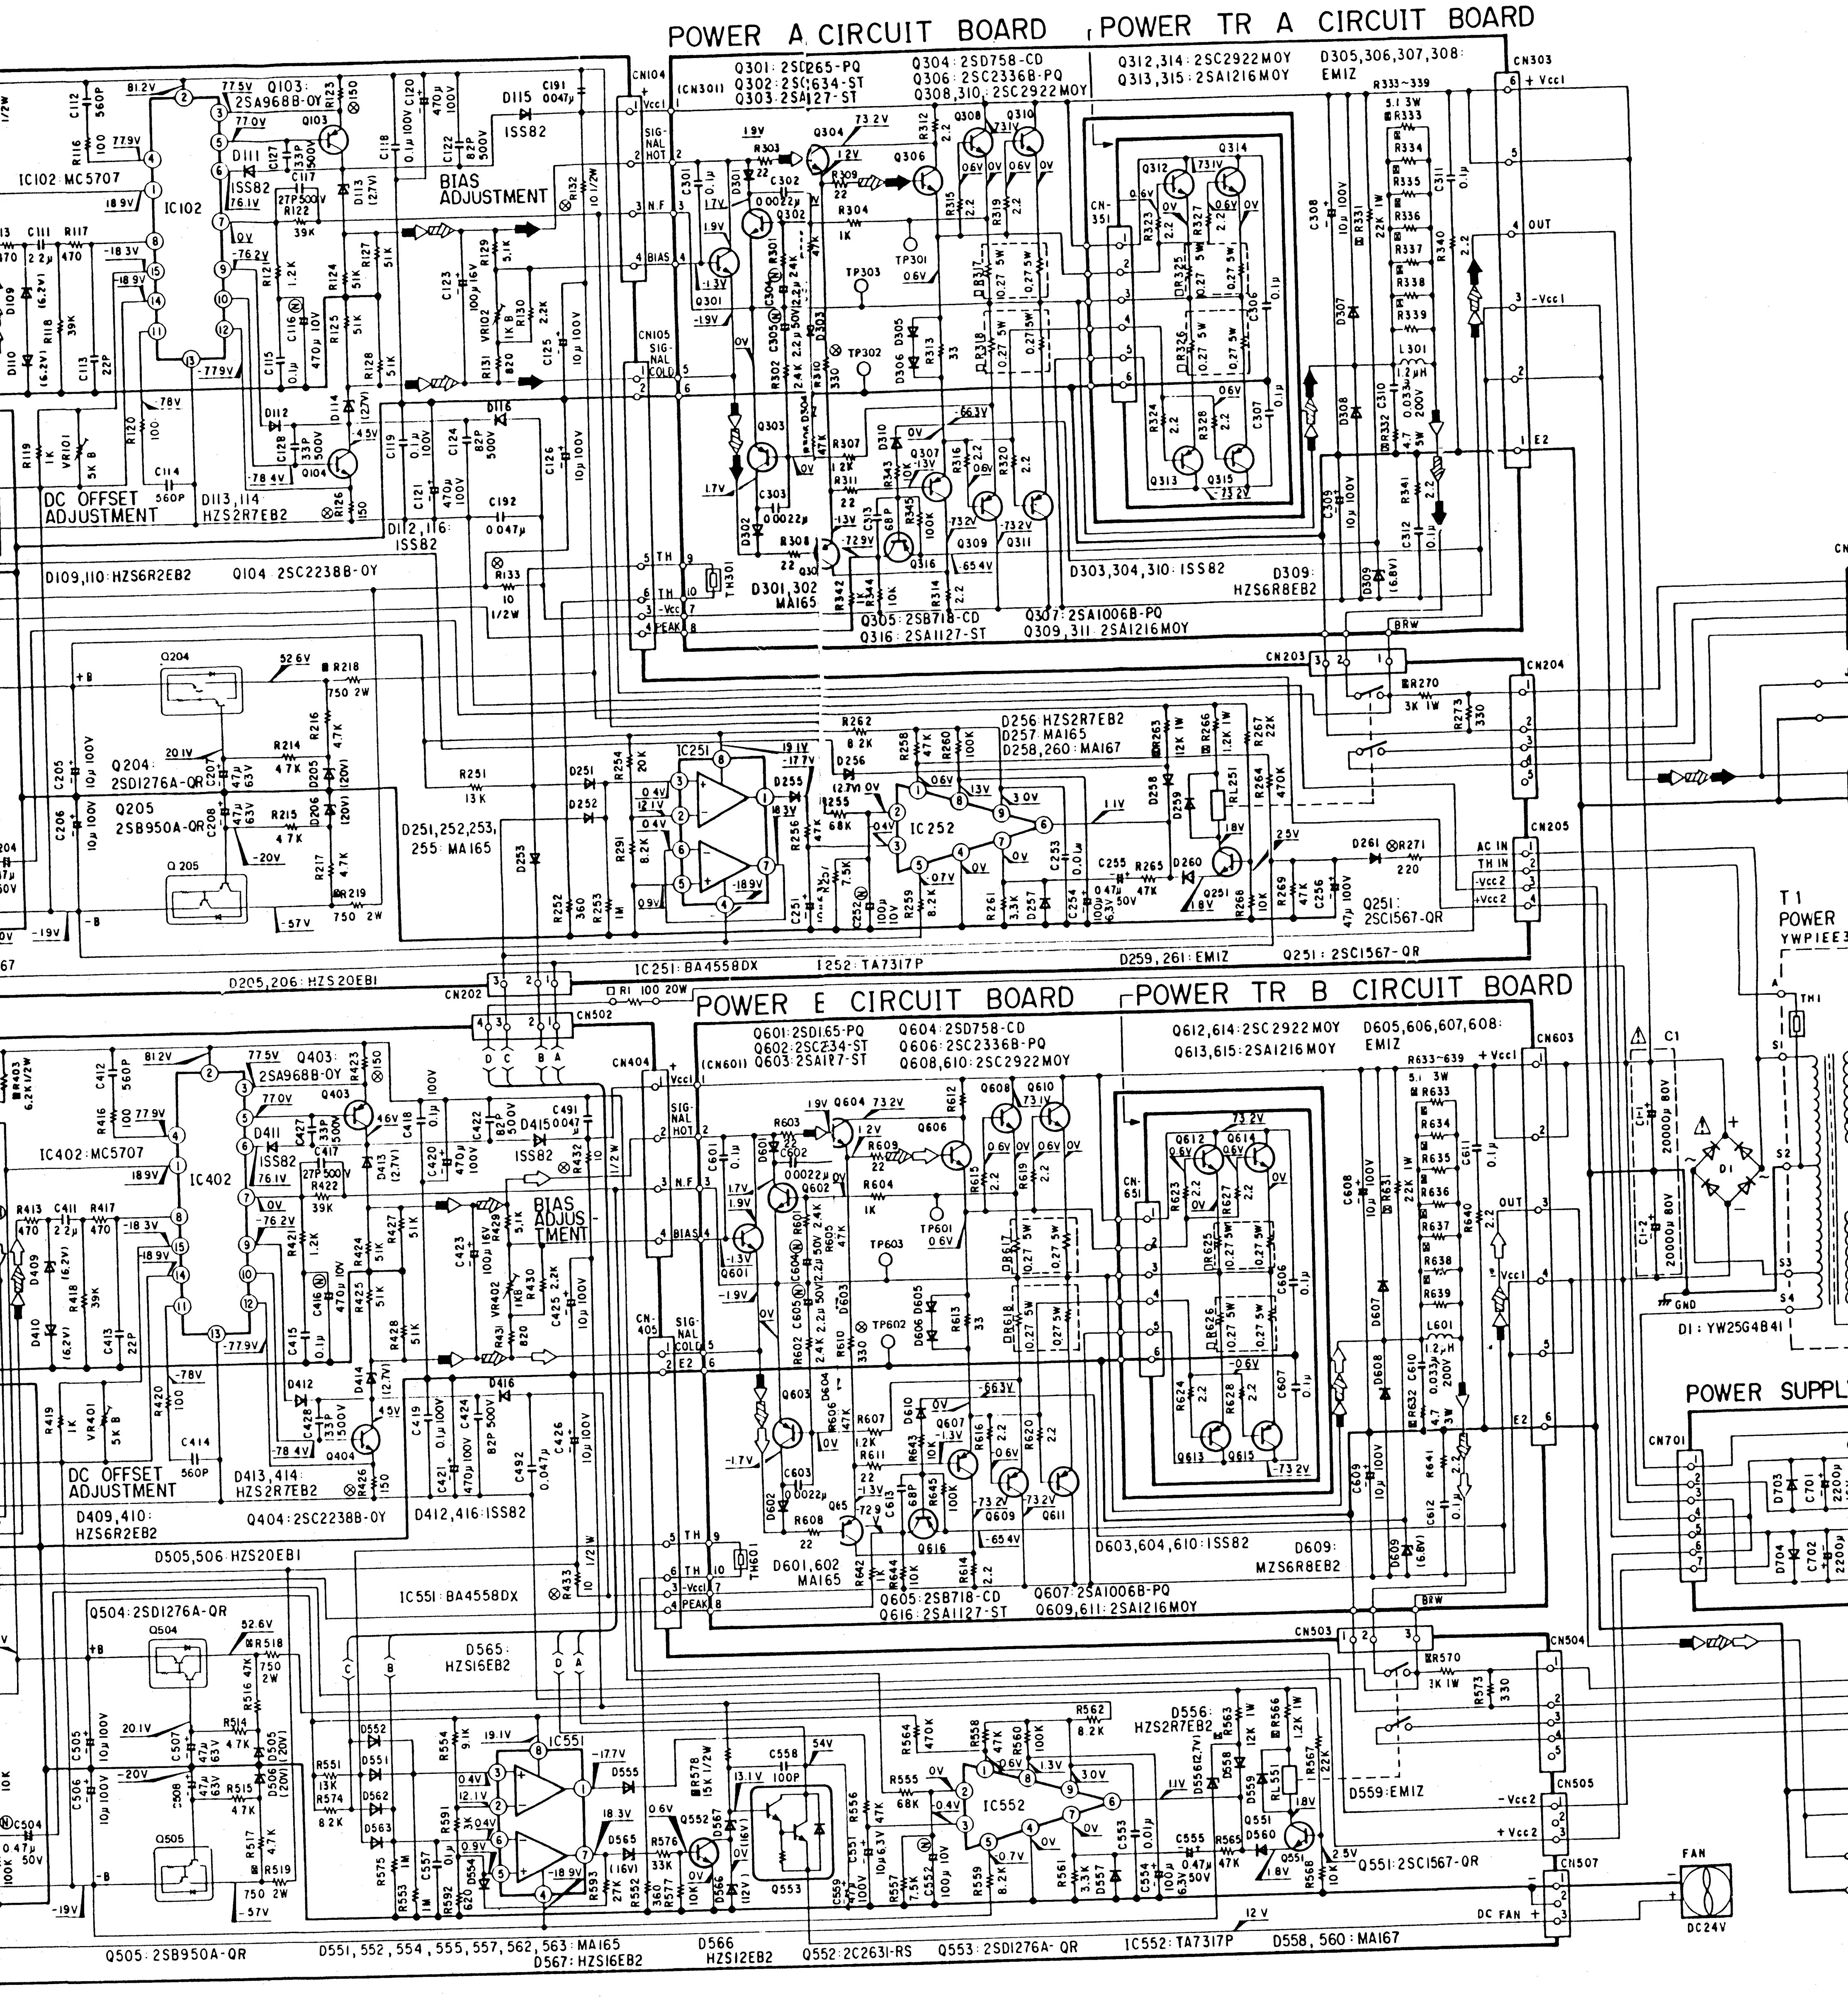
POWER A CIRCUIT BOARD
POWER TR A CIRCUIT BOARD
POWER E CIRCUIT BOARD
POWER TR B CIRCUIT BOARD
POWER SUPPLY
IC102: MC5707
IC402: MC5707
BIAS ADJUSTMENT
DC OFFSET ADJUSTMENT
Q103: 2SA968B-OY
Q403: 2SA968B-OY
Q104 2SC2238B-OY
Q404: 2SC2238B-OY
D113,114 HZS2R7EB2
D413,414: HZS2R7EB2
D109,110: HZS6R2EB2
D409,410: HZS6R2EB2
D112,116: ISS82
D412,416: ISS82
Q301: 2SD1265-PQ
Q302: 2SC1634-ST
Q303: 2SA1127-ST
Q304: 2SD758-CD
Q306: 2SC2336B-PQ
Q308,310: 2SC2922MOY
Q312,314: 2SC2922MOY
Q313,315: 2SA1216MOY
D305,306,307,308: EMIZ
R333~339
D301,302 MA165
D303,304,310: ISS82
D309: HZS6R8EB2
Q305: 2SB718-CD
Q316: 2SA1127-ST
Q307: 2SA1006B-PQ
Q309,311: 2SA1216MOY
Q601: 2SD1265-PQ
Q602: 2SC234-ST
Q603: 2SA127-ST
Q604: 2SD758-CD
Q606: 2SC2336B-PQ
Q608,610: 2SC2922MOY
Q612,614: 2SC2922MOY
Q613,615: 2SA1216MOY
D605,606,607,608: EMIZ
R633~639
D601,602 MA165
D603,604,610: ISS82
D609: MZS6R8EB2
Q605: 2SB718-CD
Q616: 2SA1127-ST
Q607: 2SA1006B-PQ
Q609,611: 2SA1216MOY
Q204: 2SD1276A-QR
Q205: 2SB950A-QR
D205,206: HZS20EB1
D251,252,253,255: MA165
D256 HZS2R7EB2
D257 MA165
D258,260: MA167
D259,261: EMIZ
IC251: BA4558DX
IC252: TA7317P
Q251: 2SC1567-QR
Q504: 2SD1276A-QR
Q505: 2SB950A-QR
D505,506 HZS20EB1
IC551: BA4558DX
IC552: TA7317P
D551,552,554,555,557,562,563: MA165
D565: HZS16EB2
D566 HZS12EB2
D567: HZS16EB2
D556: HZS2R7EB2
D558,560: MA167
D559: EMIZ
Q551: 2SC1567-QR
Q552: 2C2631-RS
Q553: 2SD1276A-QR
R1 100 20W
CN104
CN105
CN202
CN203
CN204
CN205
CN303
CN351
CN404
CN405
CN502
CN503
CN504
CN505
CN507
CN603
CN651
CN701
SIGNAL HOT
SIGNAL COLD
N.F
BIAS
TH
PEAK
+Vcc1
-Vcc1
OUT
E2
AC IN
TH IN
-Vcc2
+Vcc2
BRW
T1
POWER
YWPIEE3
C1-1 20000μ 80V
C1-2 20000μ 80V
D1: YW25G4B41
GND
FAN
DC 24V
DC FAN
12 V

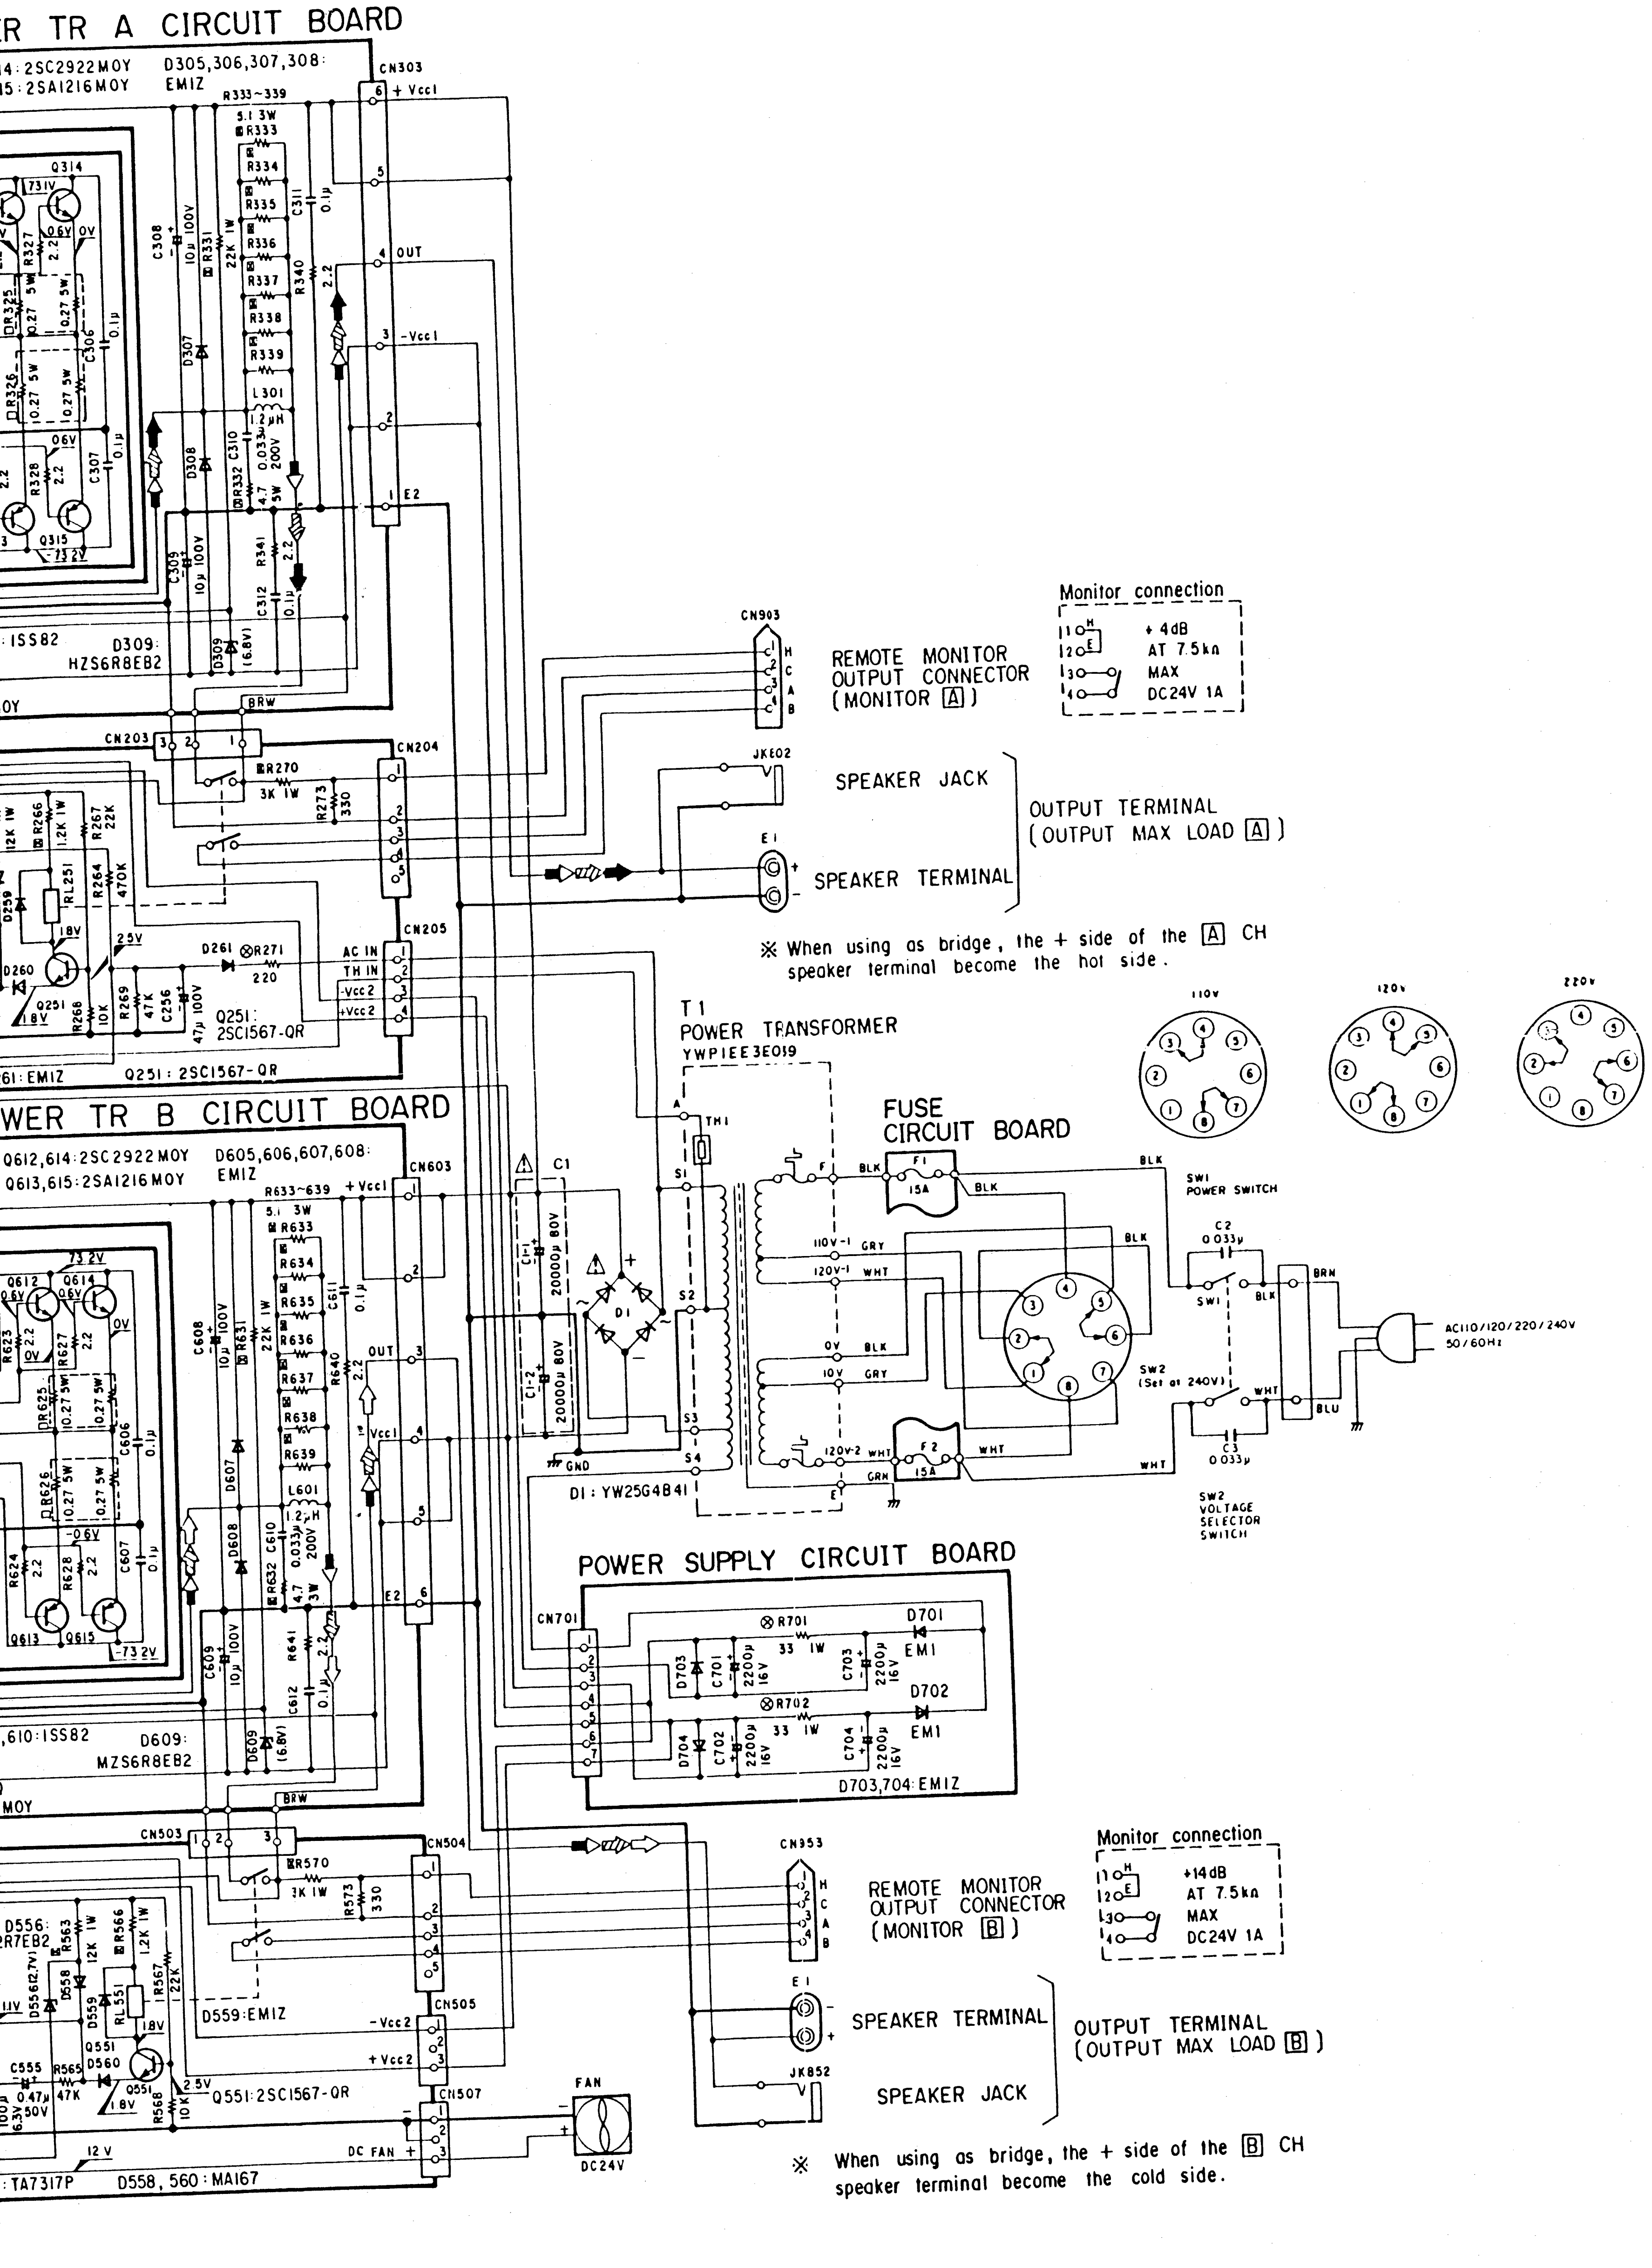
R TR A CIRCUIT BOARD
D305,306,307,308: EMIZ
CN303
+Vcc1
OUT
-Vcc1
E2
Q314
Q315
R333~339
5.1 3W
L301
1.2μH
D309: HZS6R8EB2
CN203
CN204
BRW
R270
3K 1W
R273
330
RL251
CN205
AC IN
TH IN
-Vcc2
+Vcc2
Q251: 2SC1567-QR
WER TR B CIRCUIT BOARD
Q612,614: 2SC2922MOY
Q613,615: 2SA1216MOY
D605,606,607,608: EMIZ
CN603
R633~639
L601
D609: MZS6R8EB2
CN503
CN504
R570
CN505
CN507
D559: EMIZ
Q551: 2SC1567-QR
D558, 560: MA167
12 V
DC FAN
FAN
DC24V
CN903
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR A)
Monitor connection
+4dB
AT 7.5kΩ
MAX
DC24V 1A
JK602
SPEAKER JACK
SPEAKER TERMINAL
OUTPUT TERMINAL (OUTPUT MAX LOAD A)
T1
POWER TRANSFORMER
YWP1EE3E019
TH1
C1
C1-1 20000μ 80V
C1-2 20000μ 80V
D1
D1: YW25G4B41
GND
FUSE CIRCUIT BOARD
F1 15A
F2 15A
BLK
GRY
WHT
GRN
110V-1
120V-1
0V
10V
120V-2
SW1 POWER SWITCH
C2 0.033μ
C3 0.033μ
SW2 (Set at 240V)
SW2 VOLTAGE SELECTOR SWITCH
BRN
BLU
AC110/120/220/240V 50/60Hz
110V
120V
220V
POWER SUPPLY CIRCUIT BOARD
CN701
R701
R702
D701 EM1
D702 EM1
D703,704: EMIZ
2200μ 16V
CN353
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR B)
+14dB
AT 7.5kΩ
MAX
DC24V 1A
JK852
SPEAKER TERMINAL
SPEAKER JACK
OUTPUT TERMINAL (OUTPUT MAX LOAD B)

※ When using as bridge, the + side of the A CH speaker terminal become the hot side.

※ When using as bridge, the + side of the B CH speaker terminal become the cold side.

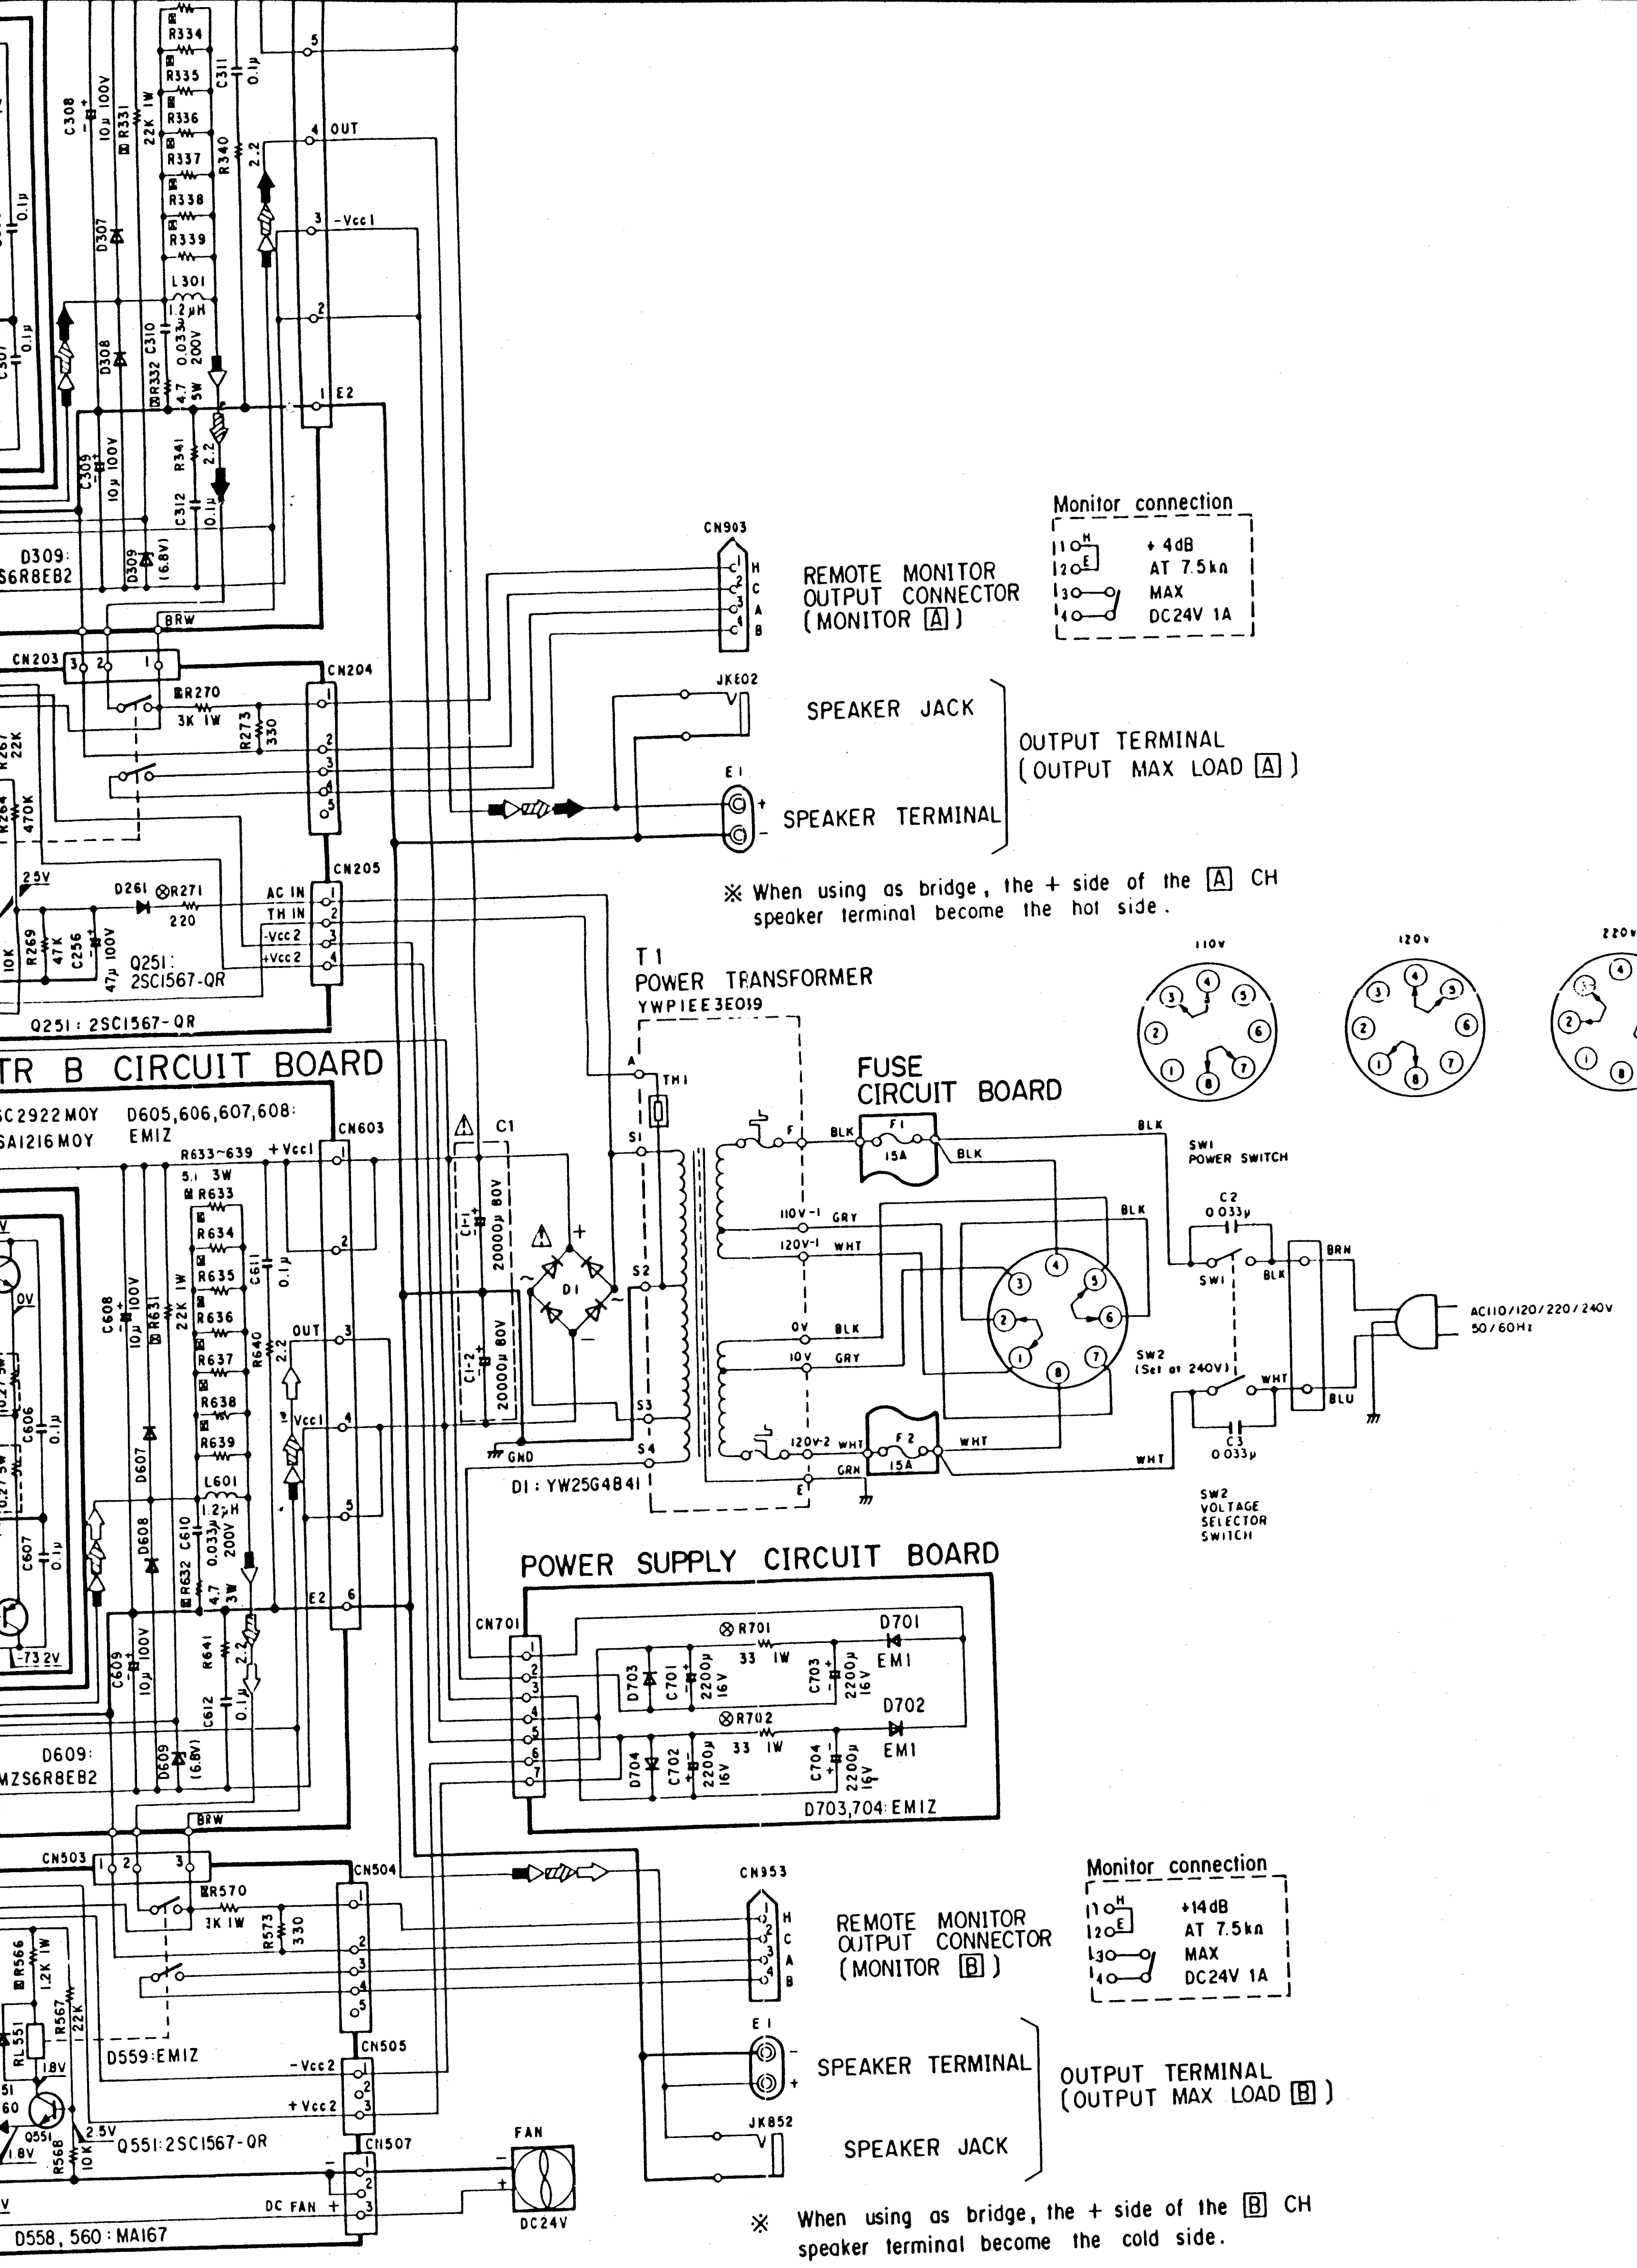
Monitor connection
+4dB
AT 7.5kΩ
MAX
DC24V 1A
CN903
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR [A])
SPEAKER JACK
JKE02
OUTPUT TERMINAL (OUTPUT MAX LOAD [A])
SPEAKER TERMINAL
※ When using as bridge, the + side of the [A] CH speaker terminal become the hot side.
T1
POWER TRANSFORMER
YWP1EE3E019
FUSE CIRCUIT BOARD
110V
120V
220V
SW1 POWER SWITCH
C2 0.033μ
C3 0.033μ
SW2 (Set at 240V)
SW2 VOLTAGE SELECTOR SWITCH
AC110/120/220/240V 50/60Hz
C1
20000μ 80V
D1 : YW25G4B41
TH1
F1 15A
F2 15A
POWER SUPPLY CIRCUIT BOARD
CN701
R701 33 1W
R702 33 1W
D701 EM1
D702 EM1
C701 2200μ 16V
C702 2200μ 16V
C703 2200μ 16V
C704 2200μ 16V
D703,704: EM1Z
TR B CIRCUIT BOARD
C2922MOY
A1216MOY
D605,606,607,608: EM1Z
R633~639 5.1 3W
CN603
CN203
CN204
CN205
R270 3K 1W
R273 330
D261
R271 220
Q251: 2SC1567-QR
D309: MZS6R8EB2
D609: MZS6R8EB2
CN503
CN504
CN505
CN507
R570 3K 1W
R573 330
D559: EM1Z
Q551: 2SC1567-QR
D558, 560: MA167
FAN
DC24V
DC FAN
Monitor connection
+14dB
AT 7.5kΩ
MAX
DC24V 1A
CN353
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR [B])
SPEAKER TERMINAL
OUTPUT TERMINAL (OUTPUT MAX LOAD [B])
SPEAKER JACK
JK852
※ When using as bridge, the + side of the [B] CH speaker terminal become the cold side.

MC5707

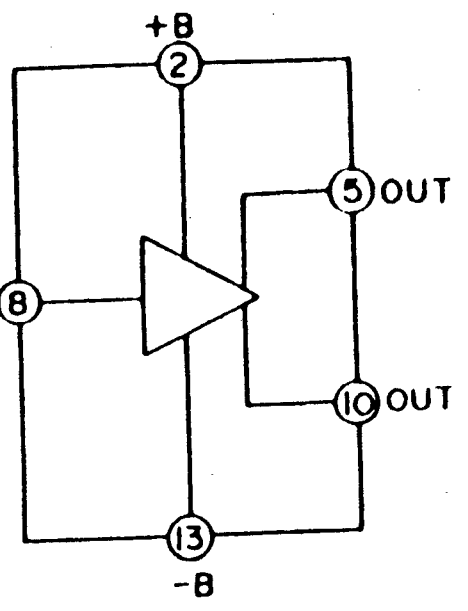
+B
②
⑤ OUT
⑧
⑩ OUT
⑬
-B

TA7317P

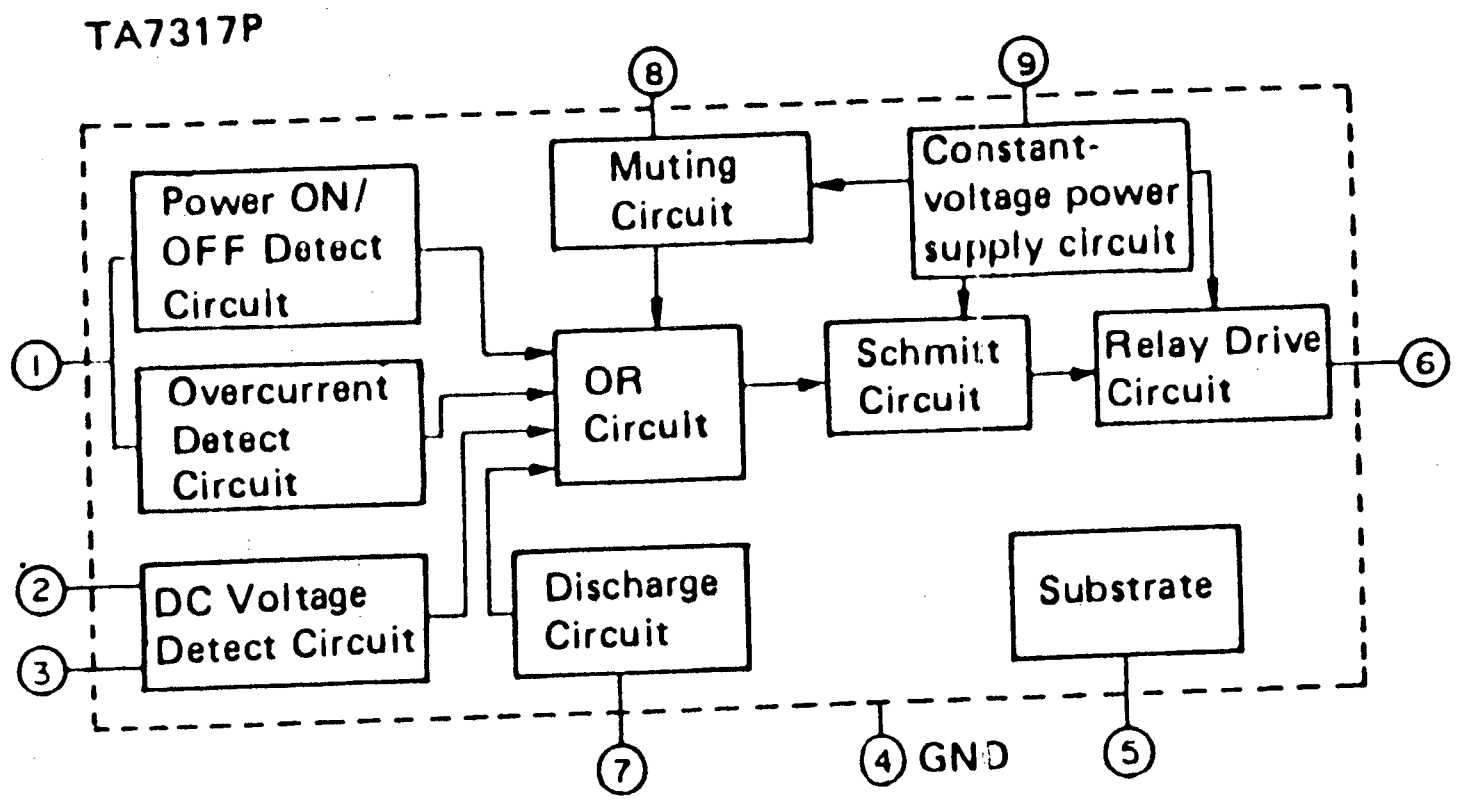
⑧
⑨
Power ON/OFF Detect Circuit
Muting Circuit
Constant-voltage power supply circuit
Overcurrent Detect Circuit
OR Circuit
Schmitt Circuit
Relay Drive Circuit
①
⑥
②
③
DC Voltage Detect Circuit
Discharge Circuit
Substrate
⑦
④ GND
⑤

Notes :

1. All resistor values are in ohms ¼W ± 5% unless otherwise specified. Ⓕ ......±1%
2. All capacitor values are in farads 50V unless otherwise specified.
3. The mark ⓧ
4. The mark ◎ shows metal film.
5. The mark ☐ shows wirewound.
6. The mark ⊠ shows incombustible metal film.

◯ **Numbers Show Screws, Bolts and Washers.**

No.	Screws	Discriptions
①	XSB2.6+4FX	Binding Head Machine Screws
②	XSB3+6FX	Binding Head Machine Screws
③	XSB3+6FFX	Binding Head Machine Screws
④	XSB3+6FZ	Binding Head Machine Screws
⑤	XTB3+6FFX	Binding Head Tapping Screws
⑥	XTC3+8FFN	Cross-recessed Oval Countersunk Head Tapping Screws
⑦	XTB3+8FFZ	Binding Head Tapping Screws
⑧	XTB3+20FFZ	Binding Head Tapping Screws
⑨	XSB4+6FN	Binding Head Machine Screws
⑩	XSB4+6FZ	Binding Head Machine Screws
⑪	XVE4B6FN	Hexagon Heads Bolts
⑫	XSB4+8FX	Binding Head Machine Screws
⑬	XSB4+8FZ	Binding Head Machine Screws
⑭	XYM4+E8FZ	Binding Head Machine Screws and Washer Assemblies
⑮	XSN4+12FX	Pan Head Machine Screws
⑯	XSB4+43FZ	Binding Head Machine Screws
⑰	XYN5+F10FX	Binding Head Machine Screws
⑱	XSB5+55FZ	Binding Head Machine Screws
⑲	XWA4AFZ	Spring Lock Washers
⑳	XWA5BFX	Spring Lock Washers
㉑	XWA5BFZ	Spring Lock Washers
㉒	XTB3+8JFX	Binding Head Tapping Screws
㉓	XYN3+12FX	Pan Head Machine Screws
㉔	XYN3+15FX	Pan Head Machine Screws
㉕	XYN3+C15FX	Pan Head Machine Screws
㉖	XYA3BFX	Binding Head Tapping Screws
㉗	XWC4AFX	Internal Toothed Lock Washers
㉘	XTB3+6FFZ	Binding Head Tapping Screws
㉙	XSB3+8FX	Binding Head Machine Screw
㉚	XTB3+4FFX	Binding Head Tapping Screws
㉛	XSB4+6FX	Binding Head Machine Screws

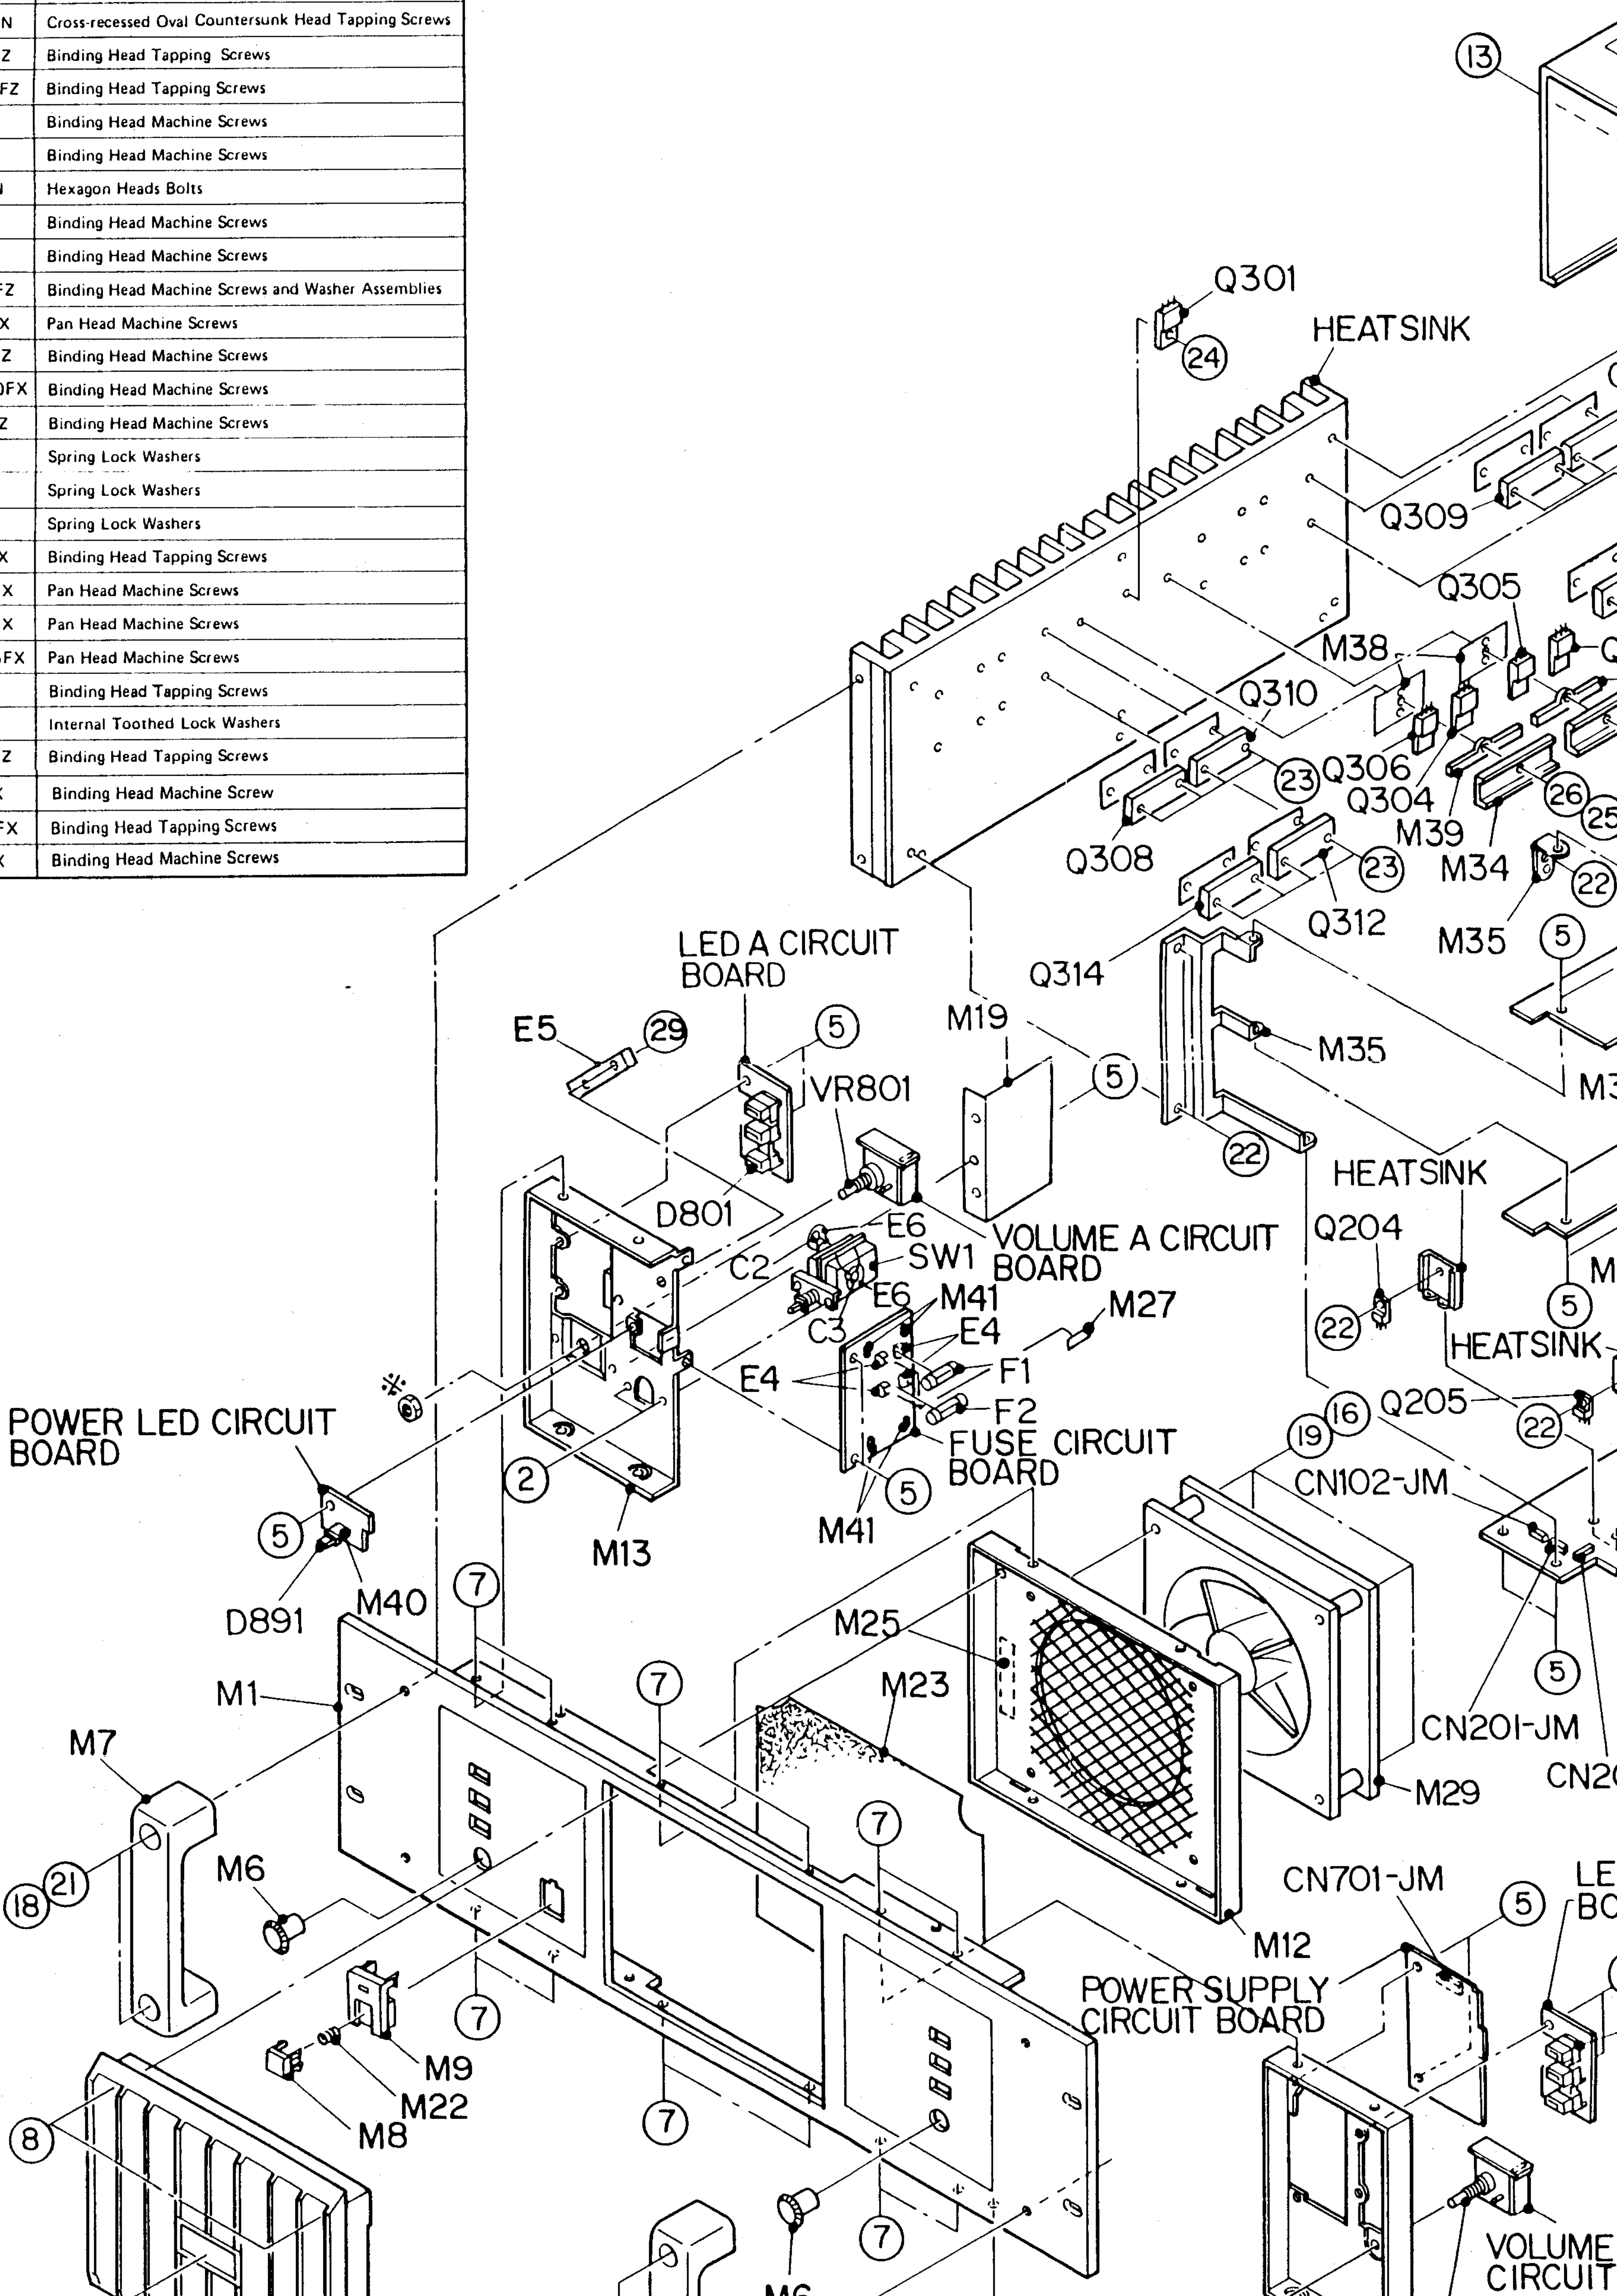
⑬
Q301
㉔
HEATSINK
Q309
Q305
M38
Q310
㉓
Q306
Q304
M39
㉖
M34
㉕
Q308
㉓
Q312
M35
㉒
Q314
⑤
LED A CIRCUIT BOARD
E5
㉙
⑤
M19
⑤
M35
VR801
㉒
D801
HEATSINK
Q204
VOLUME A CIRCUIT BOARD
E6
C2
SW1
C3
E6
M41
E4
M27
㉒
⑤
HEATSINK
F1
E4
F2
※
Q205
POWER LED CIRCUIT BOARD
FUSE CIRCUIT BOARD
㉒
②
⑤
⑲
⑯
CN102-JM
⑤
M41
M13
D891
M40
⑦
M25
M1
⑦
M23
⑤
CN201-JM
M7
M29
⑦
㉑
⑱
M6
CN701-JM
⑤
M12
POWER SUPPLY CIRCUIT BOARD
M9
⑦
⑧
M22
M8
⑦
⑦
VOLUME
CIRCUIT
M6

⑧	XTB3+20FFZ	Binding Head Tapping Screws
⑨	XSB4+6FN	Binding Head Machine Screws
⑩	XSB4+6FZ	Binding Head Machine Screws
⑪	XVE4B6FN	Hexagon Heads Bolts
⑫	XSB4+8FX	Binding Head Machine Screws
⑬	XSB4+8FZ	Binding Head Machine Screws
⑭	XYM4+E8FZ	Binding Head Machine Screws and Washer Assemblies
⑮	XSN4+12FX	Pan Head Machine Screws
⑯	XSB4+43FZ	Binding Head Machine Screws
⑰	XYN5+F10FX	Binding Head Machine Screws
⑱	XSB5+55FZ	Binding Head Machine Screws
⑲	XWA4AFZ	Spring Lock Washers
⑳	XWA5BFX	Spring Lock Washers
㉑	XWA5BFZ	Spring Lock Washers
㉒	XTB3+8JFX	Binding Head Tapping Screws
㉓	XYN3+12FX	Pan Head Machine Screws
㉔	XYN3+15FX	Pan Head Machine Screws
㉕	XYN3+C15FX	Pan Head Machine Screws
㉖	XYA3BFX	Binding Head Tapping Screws
㉗	XWC4AFX	Internal Toothed Lock Washers
㉘	XTB3+6FFZ	Binding Head Tapping Screws
㉙	XSB3+8FX	Binding Head Machine Screw
㉚	XTB3+4FFX	Binding Head Tapping Screws
㉛	XSB4+6FX	Binding Head Machine Screws

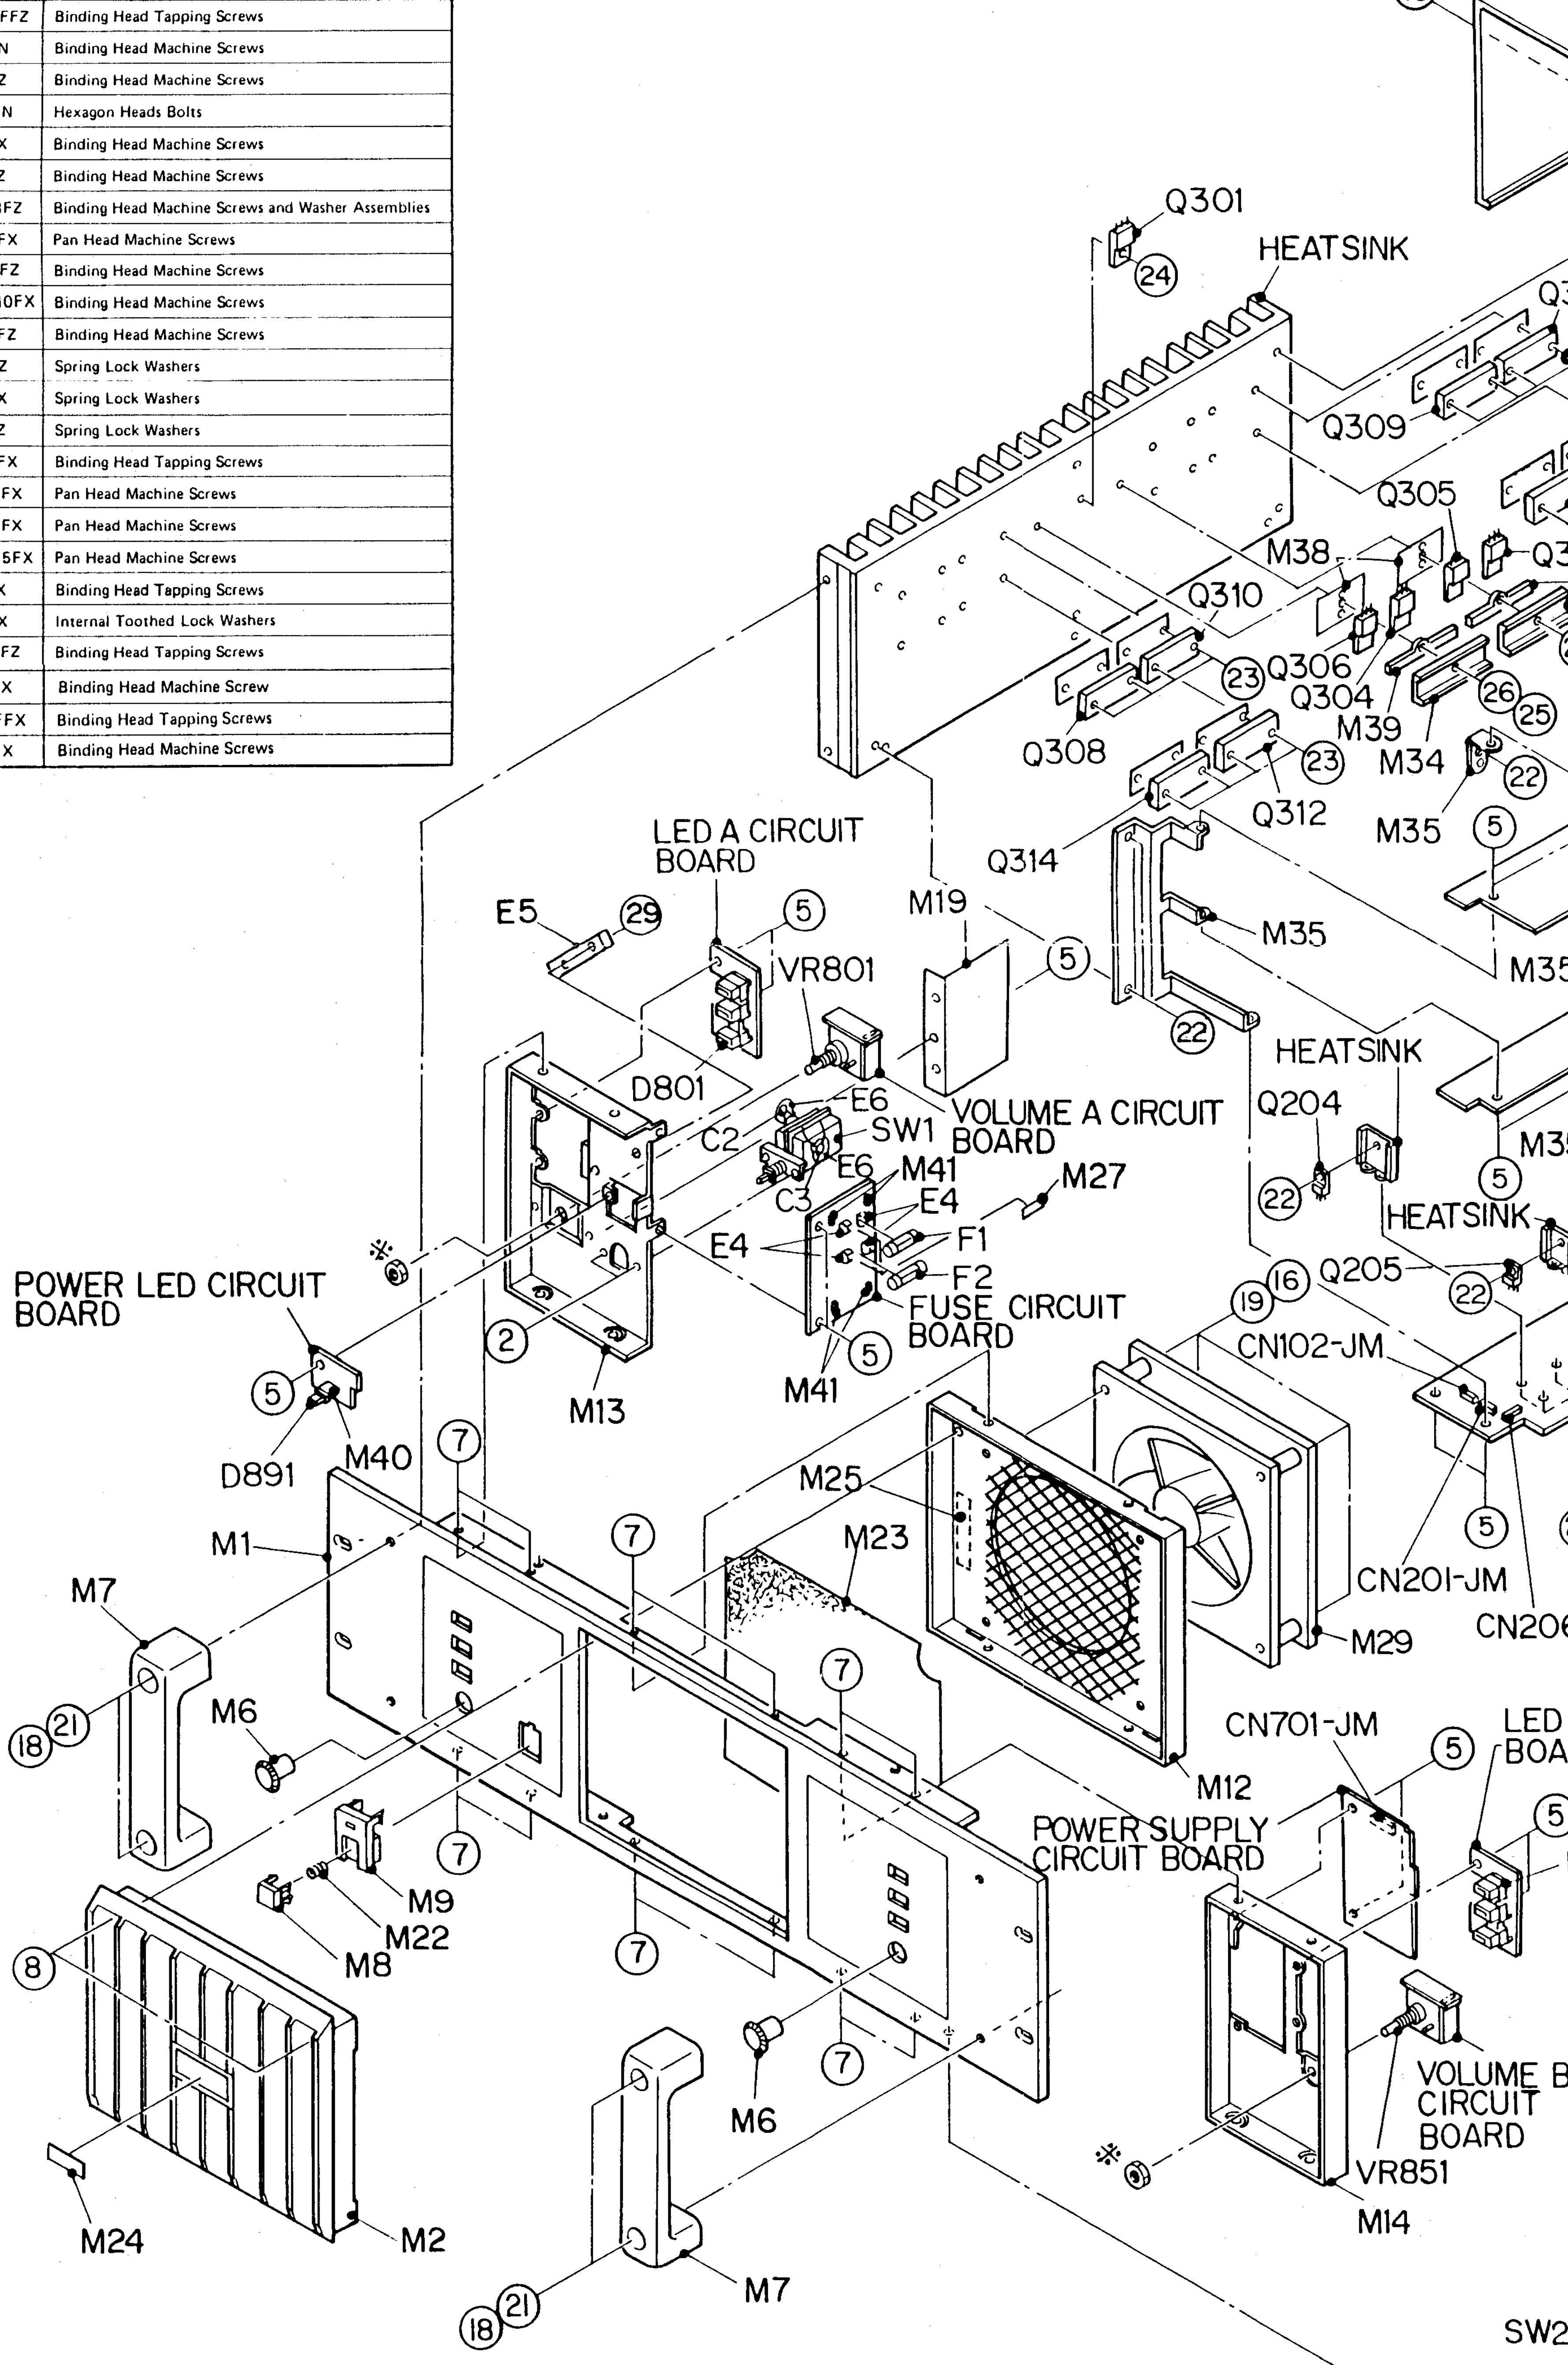
Q301
㉔
HEATSINK
Q309
Q305
M38
Q310
㉓
Q306
Q304
M39
㉖
㉕
M34
Q308
㉓
Q312
㉒
M35
⑤
Q314
LED A CIRCUIT BOARD
E5
㉙
⑤
VR801
M19
⑤
M35
M35
D801
㉒
HEATSINK
E6
C2
SW1
VOLUME A CIRCUIT BOARD
Q204
E6
M41
M27
C3
E4
M35
⑤
F1
㉒
HEATSINK
E4
F2
Q205
※
POWER LED CIRCUIT BOARD
FUSE CIRCUIT BOARD
⑲
⑯
㉒
②
⑤
CN102-JM
⑤
M13
M41
D891
M40
⑦
M25
⑤
M1
⑦
M23
CN201-JM
M7
CN206
M29
⑦
⑱
㉑
M6
CN701-JM
⑤
LED
BOA
M12
⑤
⑦
POWER SUPPLY CIRCUIT BOARD
M9
⑧
M22
M8
⑦
⑦
VOLUME B CIRCUIT BOARD
M6
※
VR851
M24
M2
M14
M7
⑱
㉑
SW2

Note :
These nuts and washers come with respective jack, terminal, variable resistor,etc.

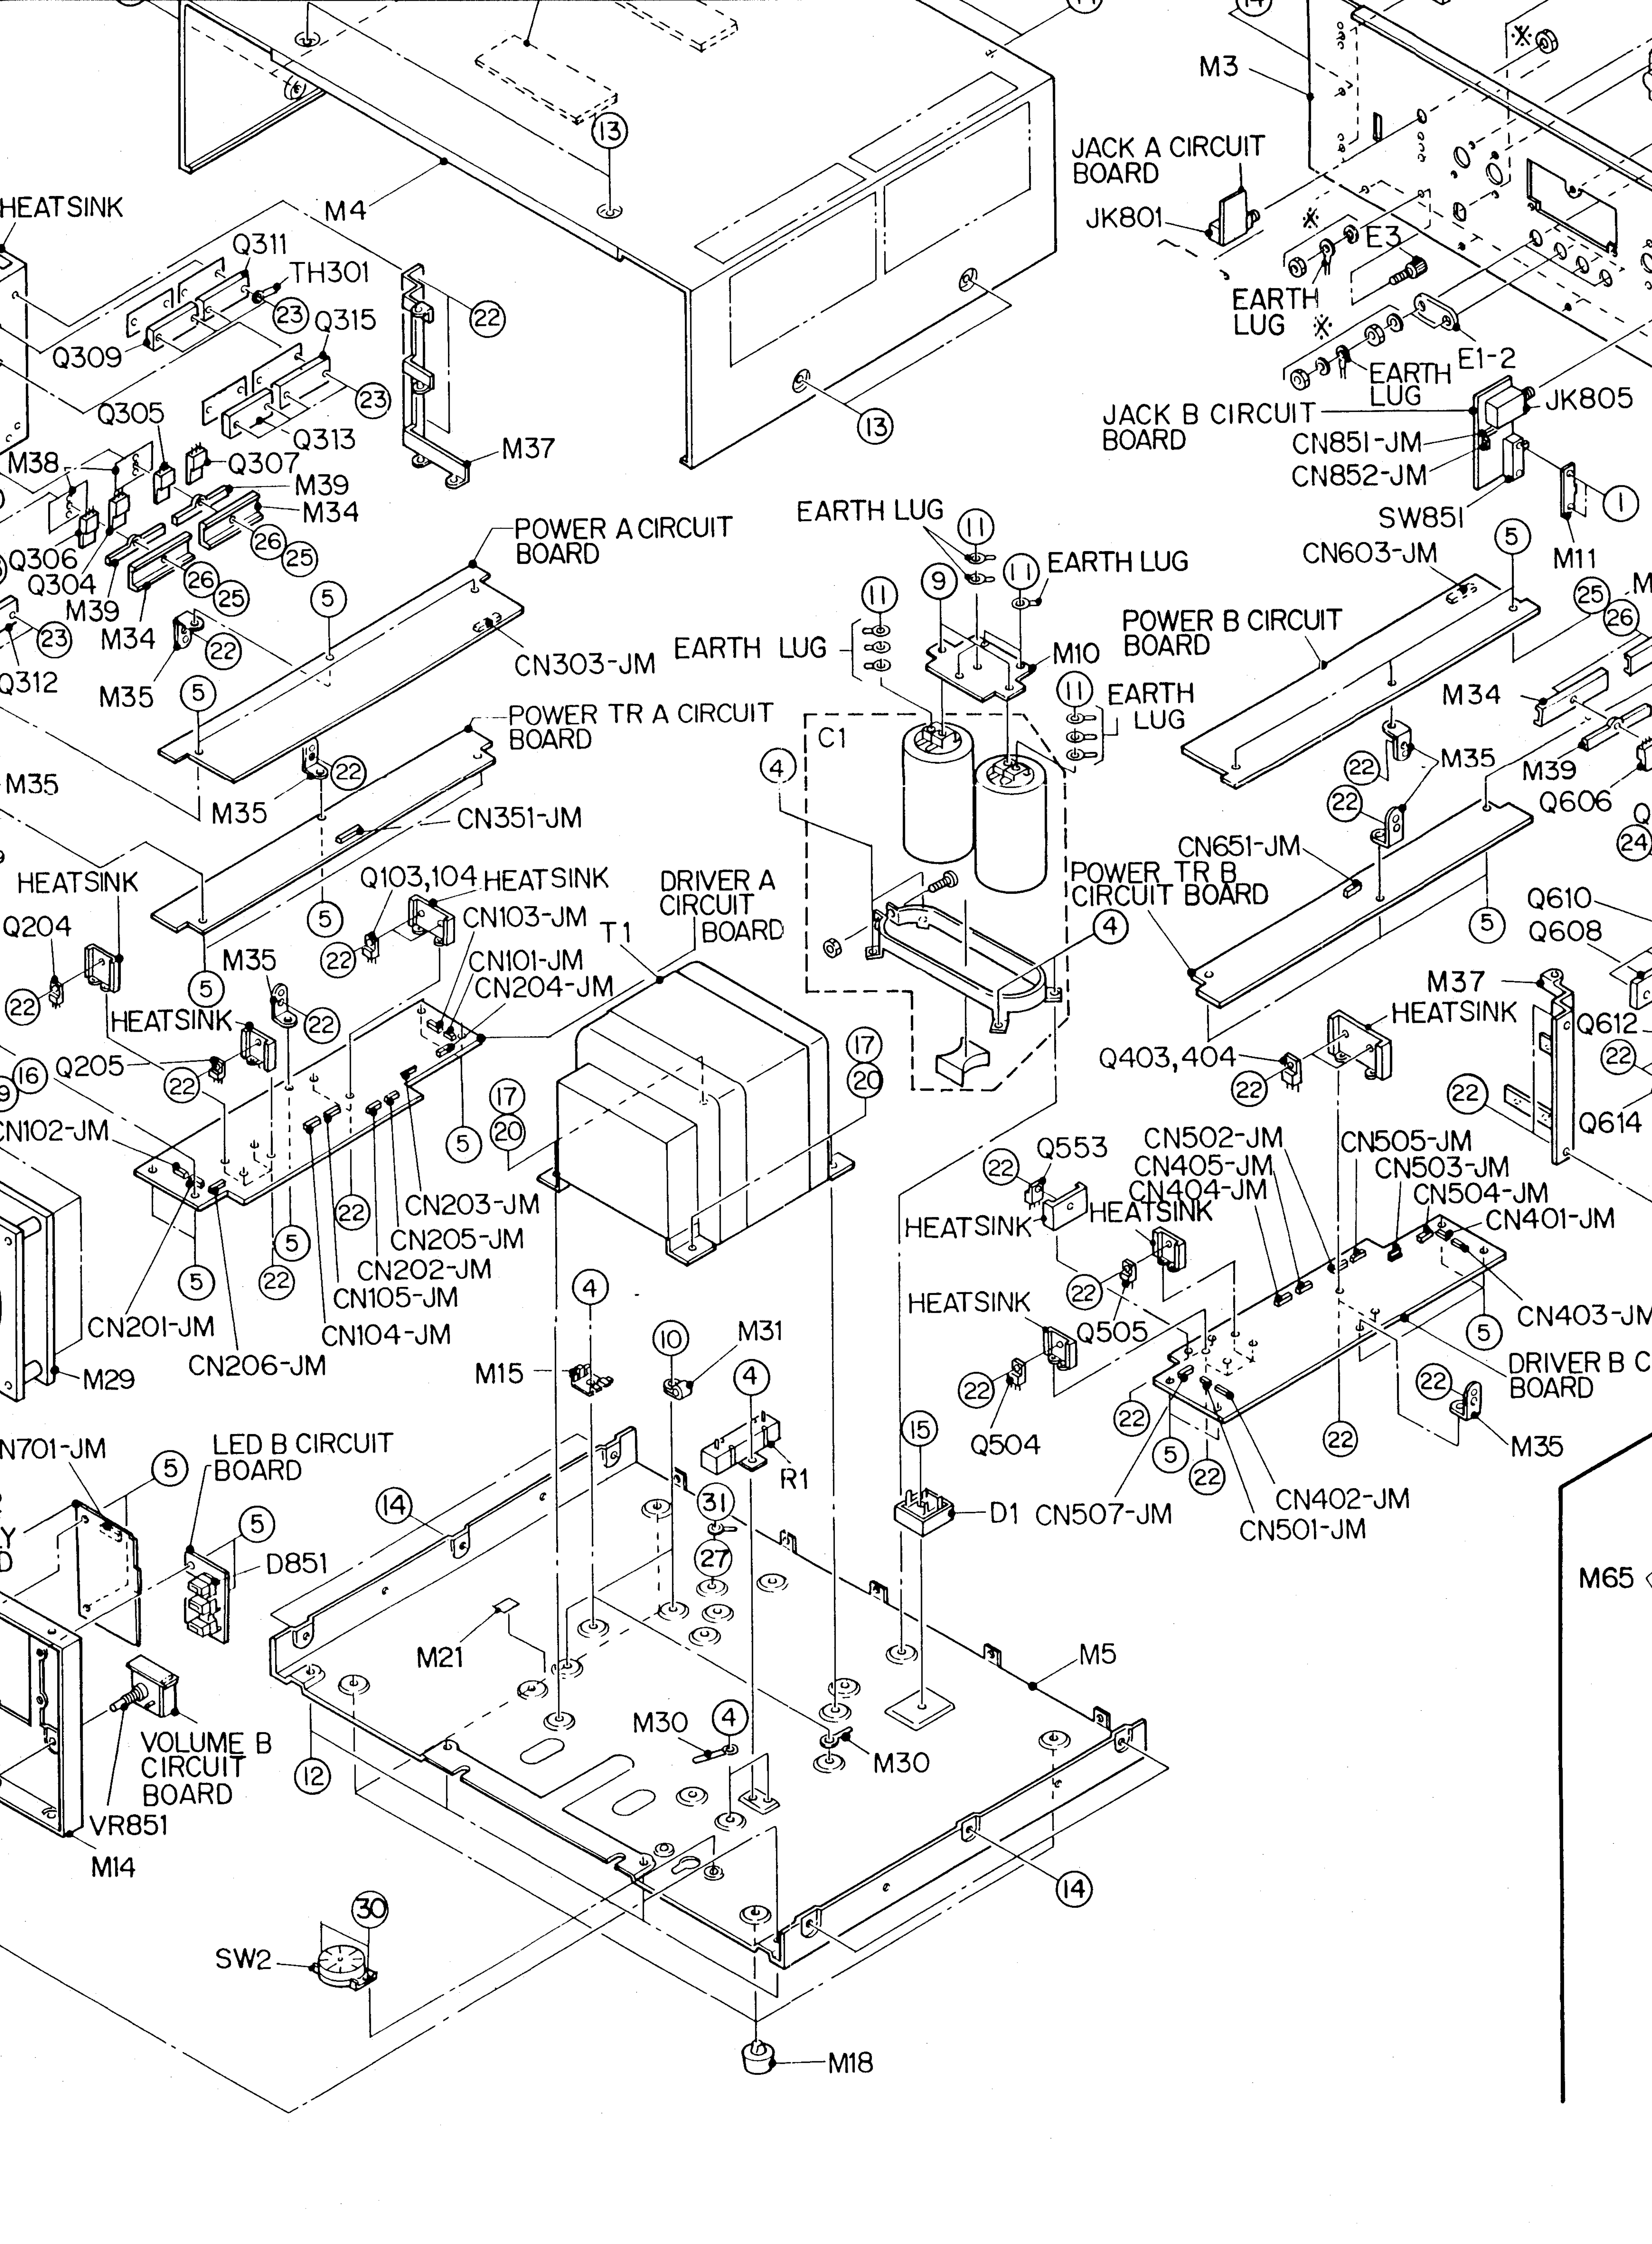

13
M4
HEATSINK
Q311
TH301
23
Q315
22
Q309
23
Q305
Q313
M37
M38
Q307
M39
M34
26
25
Q306
Q304
M39
26
25
M34
23
22
M35
Q312
M35
5
POWER A CIRCUIT BOARD
5
CN303-JM
POWER TR A CIRCUIT BOARD
M35
M35
22
CN351-JM
HEATSINK
Q103,104
HEATSINK
Q204
5
22
CN103-JM
M35
CN101-JM
CN204-JM
22
5
22
HEATSINK
22
Q205
16
22
CN102-JM
5
22
CN203-JM
CN205-JM
CN202-JM
CN105-JM
CN104-JM
5
CN201-JM
CN206-JM
M29
22
5
DRIVER A CIRCUIT BOARD
T1
17
20
17
20
M3
JACK A CIRCUIT BOARD
JK801
E3
EARTH LUG
EARTH LUG
E1-2
JACK B CIRCUIT BOARD
JK805
CN851-JM
CN852-JM
SW851
1
M11
EARTH LUG
11
9
11
EARTH LUG
11
EARTH LUG
M10
11
EARTH LUG
C1
4
4
5
CN603-JM
POWER B CIRCUIT BOARD
25
26
M34
M35
22
22
M39
Q606
24
CN651-JM
POWER TR B CIRCUIT BOARD
5
Q610
Q608
M37
HEATSINK
Q612
Q403,404
22
22
22
Q614
Q553
CN502-JM
CN405-JM
CN404-JM
CN505-JM
CN503-JM
CN504-JM
CN401-JM
HEATSINK
HEATSINK
22
Q505
CN403-JM
HEATSINK
5
22
DRIVER B CIRCUIT BOARD
22
Q504
22
5
22
22
M35
CN507-JM
CN402-JM
CN501-JM
4
M15
10
M31
4
R1
15
D1
31
27
N701-JM
5
LED B CIRCUIT BOARD
5
D851
14
M21
M5
M65
VOLUME B CIRCUIT BOARD
VR851
12
M30
4
M30
M14
14
30
SW2
M18

EXPLODED VIEW/PACKING OF WP-9220C

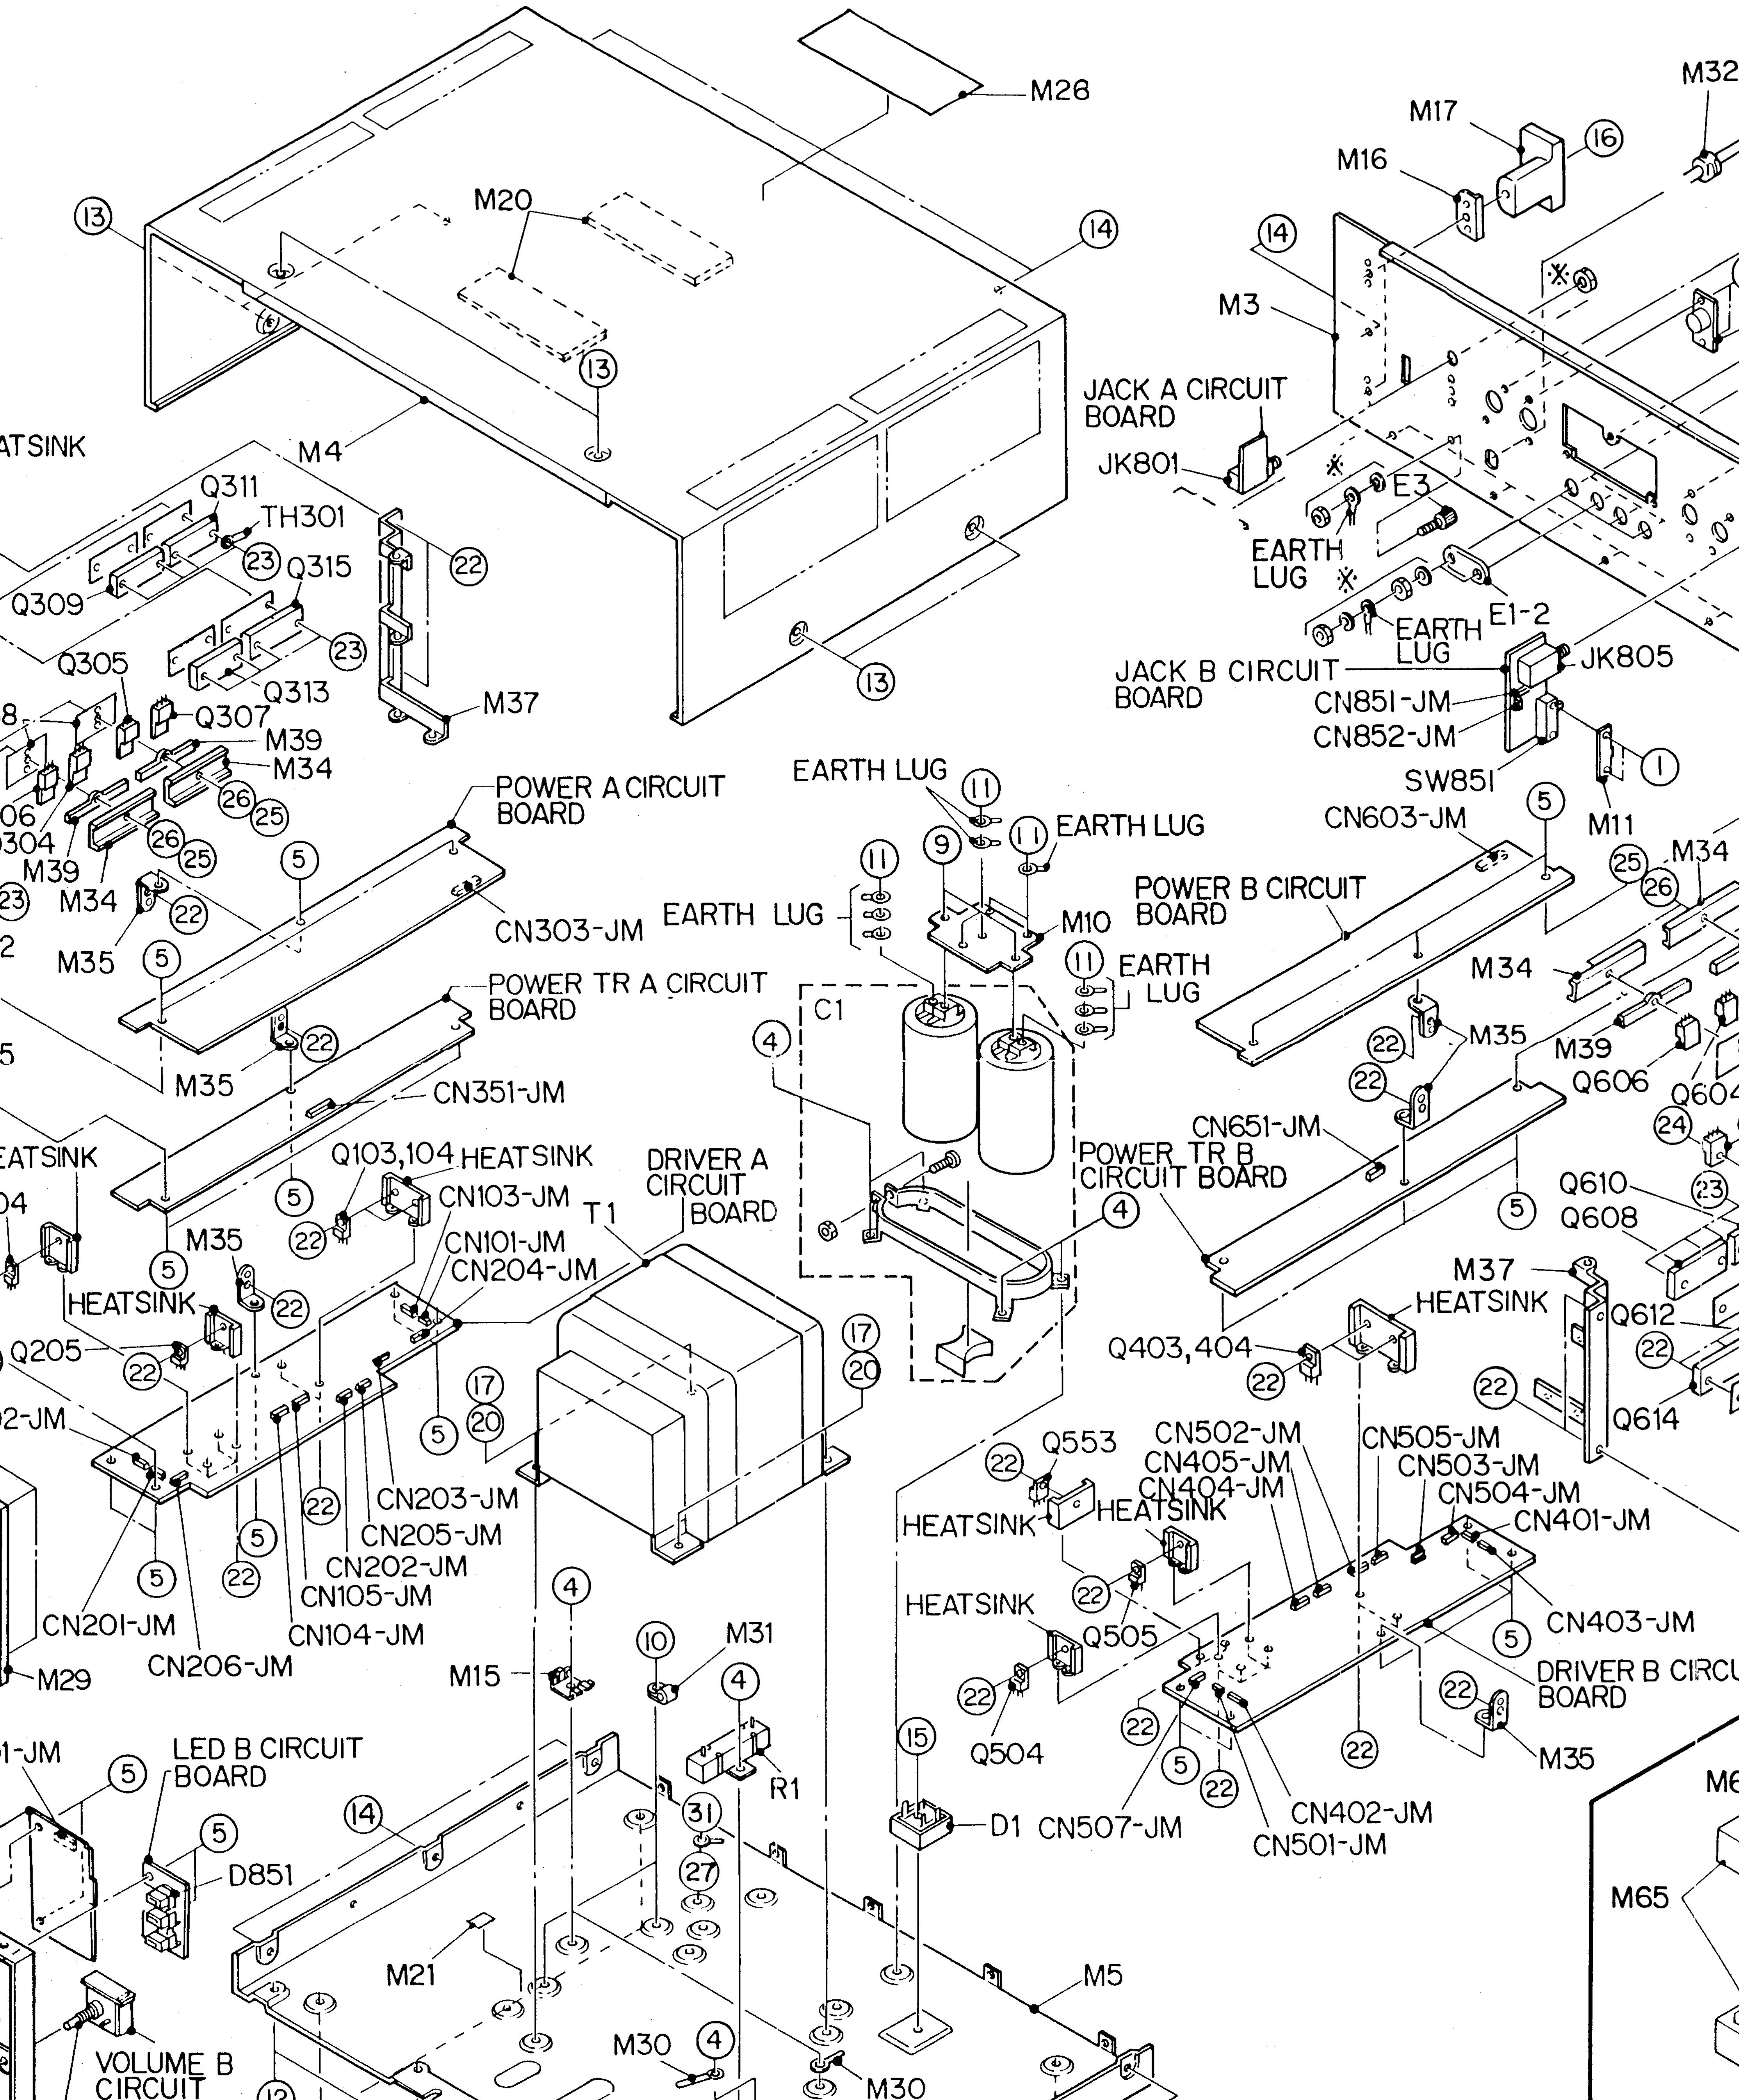
M26
M20
13
14
M4
M32
M17
16
M16
M3
JACK A CIRCUIT BOARD
JK801
※
E3
EARTH LUG
E1-2
JACK B CIRCUIT BOARD
JK805
CN851-JM
CN852-JM
SW851
1
M11
ATSINK
Q311
TH301
23
Q315
Q309
22
Q305
Q307
Q313
M37
M39
M34
26
25
06
304
M35
5
POWER A CIRCUIT BOARD
CN303-JM
EARTH LUG
11
9
M10
C1
4
POWER TR A CIRCUIT BOARD
CN351-JM
CN603-JM
POWER B CIRCUIT BOARD
Q606
Q604
24
CN651-JM
POWER TR B CIRCUIT BOARD
Q610
Q608
Q612
Q614
EATSINK
HEATSINK
Q103,104
CN103-JM
CN101-JM
CN204-JM
DRIVER A CIRCUIT BOARD
T1
17
20
Q205
2-JM
CN203-JM
CN205-JM
CN202-JM
CN105-JM
CN104-JM
CN201-JM
CN206-JM
M29
Q403,404
Q553
CN502-JM
CN405-JM
CN404-JM
CN505-JM
CN503-JM
CN504-JM
CN401-JM
CN403-JM
Q505
Q504
DRIVER B CIRCU BOARD
CN507-JM
CN402-JM
CN501-JM
M15
10
M31
R1
15
D1
1-JM
LED B CIRCUIT BOARD
D851
31
27
M21
M5
M30
12
VOLUME B CIRCUIT
M6
M65

G OF WP-9220C

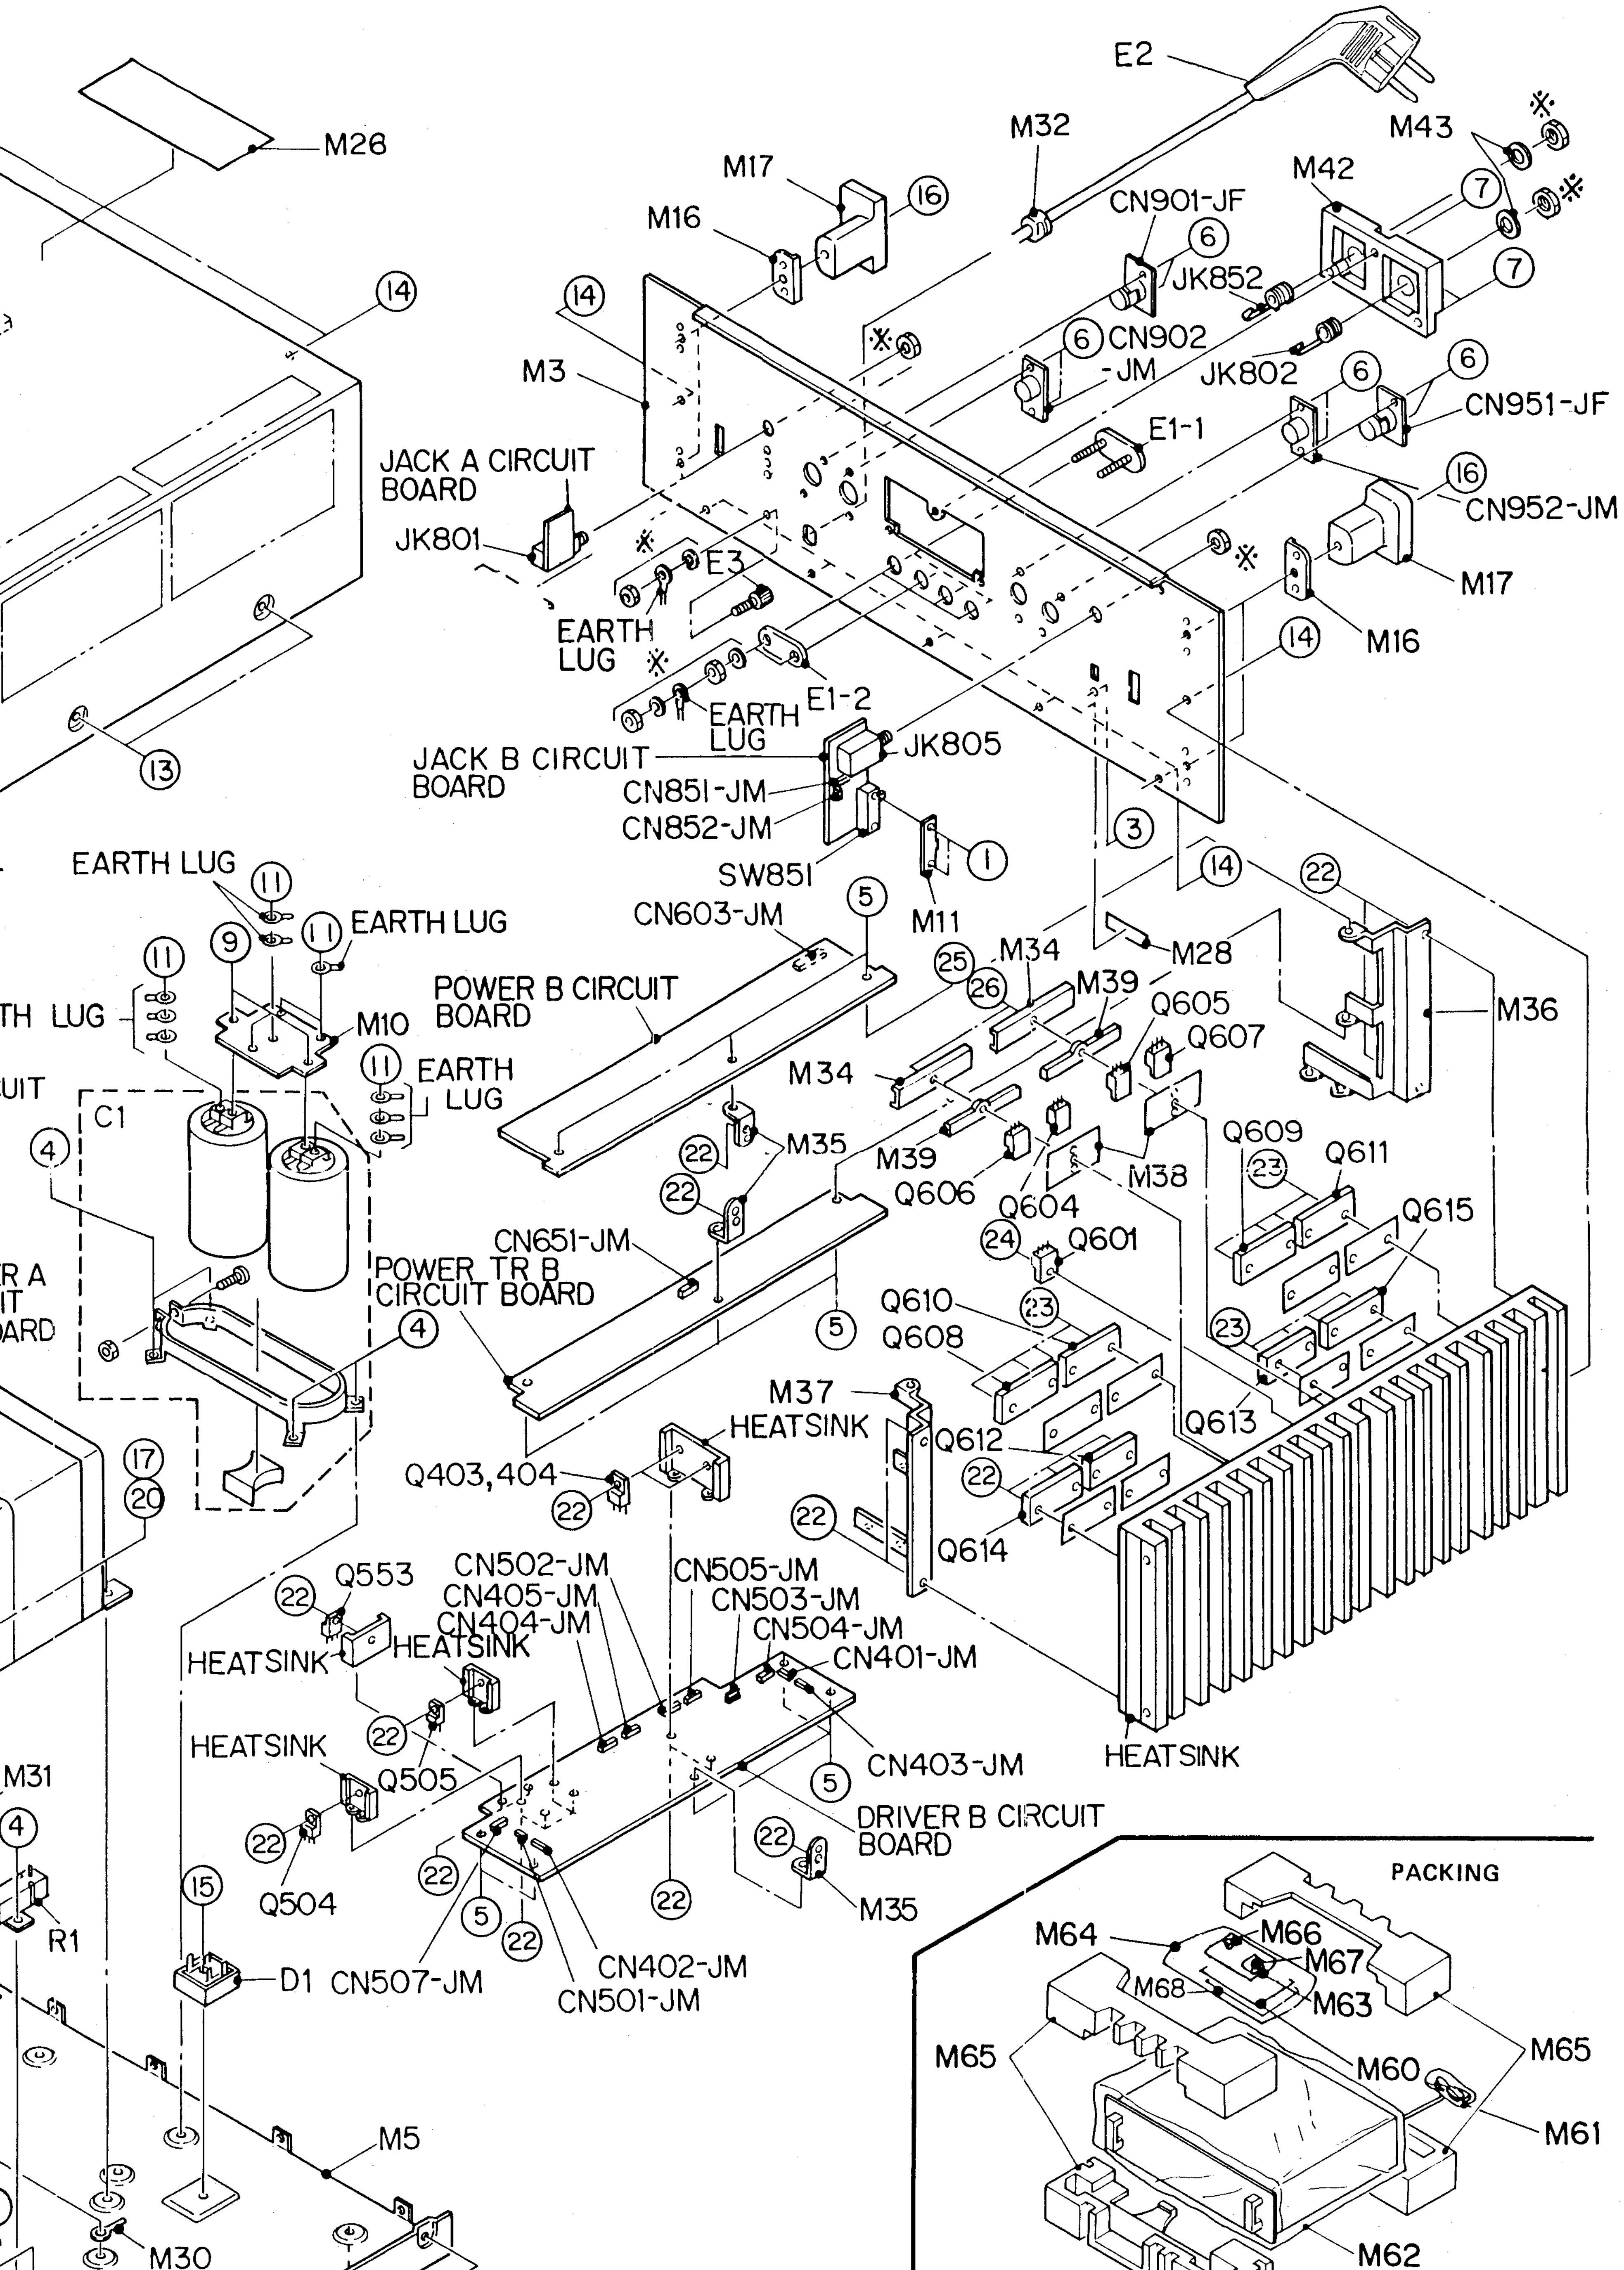
E2
M32
M43
※
※
M42
M26
M17
⑯
CN901-JF
⑦
M16
⑥
JK852
⑦
⑭
⑭
※
M3
⑥ CN902
-JM
JK802
⑥
⑥
CN951-JF
E1-1
JACK A CIRCUIT
BOARD
⑯
CN952-JM
JK801
※
E3
※
M17
M16
EARTH
LUG
※
E1-2
EARTH
LUG
⑭
⑬
JACK B CIRCUIT
BOARD
JK805
CN851-JM
CN852-JM
③
SW851
①
M11
EARTH LUG
⑪
⑪ EARTH LUG
CN603-JM
⑤
⑭
㉒
⑨
M28
⑪
TH LUG
M10
POWER B CIRCUIT
BOARD
㉕
M34
㉖
M39
Q605
M36
Q607
UIT
C1
⑪ EARTH
LUG
M34
④
M35
㉒
M39
Q606
M38
Q609
Q611
㉒
Q604
Q615
㉓
CN651-JM
㉔
Q601
R A
IT
ARD
POWER TR B
CIRCUIT BOARD
④
Q610
㉓
⑤
Q608
㉓
M37
HEATSINK
Q613
Q612
⑰
⑳
Q403,404
㉒
㉒
㉒
Q614
Q553
CN502-JM
CN405-JM
CN404-JM
CN505-JM
CN503-JM
CN504-JM
CN401-JM
㉒
HEATSINK
HEATSINK
㉒
Q505
HEATSINK
CN403-JM
HEATSINK
⑤
M31
④
㉒
Q504
㉒
㉒
DRIVER B CIRCUIT
BOARD
PACKING
R1
⑮
⑤
㉒
㉒
M35
M64
M66
M67
M68
M63
D1
CN507-JM
CN402-JM
CN501-JM
M65
M60
M65
M61
M5
M30
M62

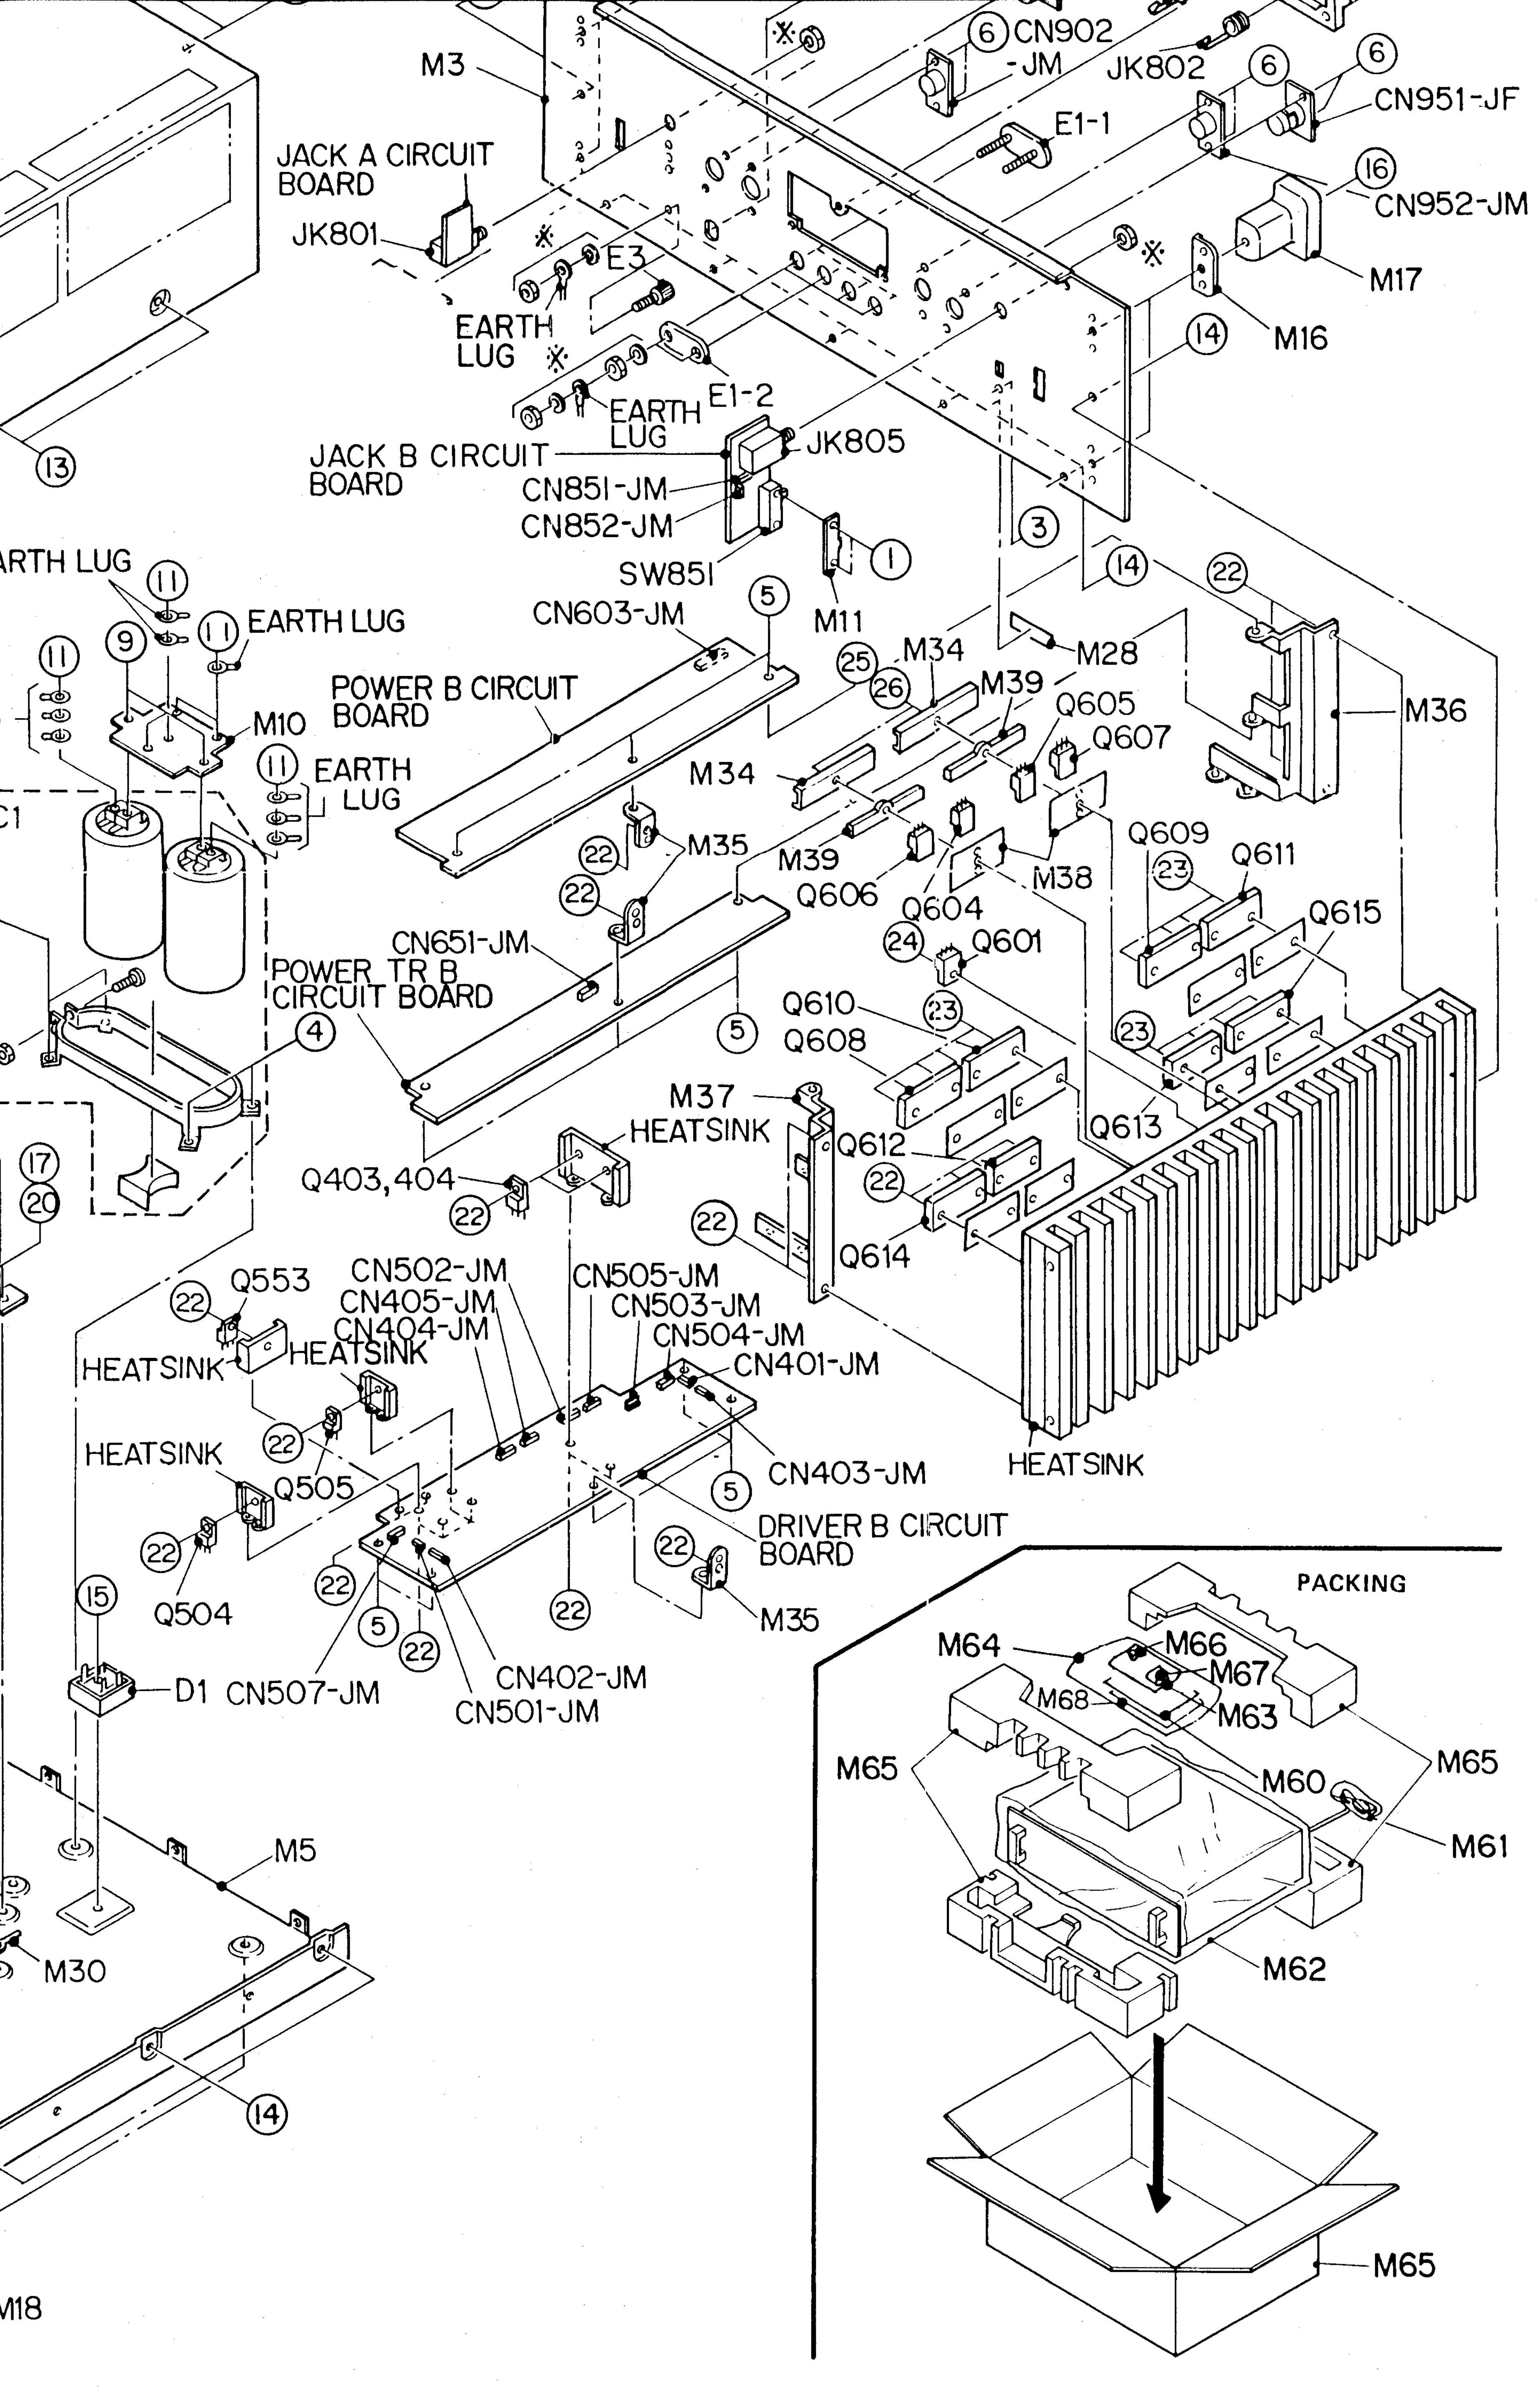
M3
⑥ CN902
-JM
JK802
⑥
⑥
CN951-JF
E1-1
JACK A CIRCUIT
BOARD
⑯
CN952-JM
JK801
E3
M17
EARTH
LUG
M16
⑭
⑬
EARTH
LUG
E1-2
JACK B CIRCUIT
BOARD
JK805
CN851-JM
CN852-JM
③
SW851
①
M11
ARTH LUG
⑪
⑪ EARTH LUG
⑭
㉒
⑨
⑤
CN603-JM
⑪
M10
POWER B CIRCUIT
BOARD
㉕
M34
㉖
M28
M39
Q605
Q607
M36
⑪ EARTH
LUG
M34
C1
㉒
M35
M39
Q606
Q604
M38
Q609
㉓
Q611
㉒
Q615
CN651-JM
POWER TR B
CIRCUIT BOARD
㉔ Q601
④
Q610
Q608
㉓
㉓
⑤
Q613
M37
HEATSINK
Q612
⑰
⑳
Q403,404
㉒
㉒
㉒
Q614
Q553
CN502-JM
CN405-JM
CN404-JM
CN505-JM
CN503-JM
CN504-JM
CN401-JM
HEATSINK
HEATSINK
㉒
Q505
CN403-JM
HEATSINK
HEATSINK
⑤
DRIVER B CIRCUIT
BOARD
㉒
Q504
㉒
㉒
M35
⑮
⑤
㉒
CN402-JM
D1
CN507-JM
CN501-JM
PACKING
M64
M66
M67
M68
M63
M65
M60
M65
M61
M5
M62
M30
⑭
M65
M18

REPLACEMENT PARTS LIST

Important Notice

- Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
- Components identified by * mark are new parts used from this model.

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
WP-9110C			
MISCELLANEOUS			
Q307,607	2SA1006B-PQ	001 030 0196 7	Transistor (x2)
Q309,311, 609,611	2SA1216M0Y	001 030 4856 8	Transistor (x4)
Q305,605	2SB718-CD	001 030 5873 3	Transistor (x2)
Q306,606	2SC2336B-PQ	001 030 1275 5	Transistor (x2)
Q308,310, 608,610	2SC2922M0Y	001 030 4857 7	Transistor (x4)
Q301,601	2SD1265-PQ	001 030 4860 2	Transistor (x2)
Q304,604	2SD758-CD	001 030 5874 2	Transistor (x2)
TH301,601 ⚠	YWTH487BF471	001 191 0642 8	Thermistor (x2)
TH1 ⚠	ERPF3B2M101A	001 241 0347 5	Thermistor
C1 ⚠	YWL0B80V133P	060 990 1444 1	Electrolytic
C2,3	ECQU2A333MN		Plastic 0.033uF 100V (x2)
T1 ⚠	YWPIEE3E038	001 202	Power transformer
SW1 ⚠	ESB99887V	003 435 5111 9	Push switch
SW2	ESE37202	003 439 0700 4	Switch, voltage select
F1,2 ⚠	XBA2E80NS1	002 380 1217 6	Current fuse 125V 8A (x2)
D1 ⚠	YW15D4B41	001 032 8470 6	Recetifier
R1 ⚠	ERF20HMJ101	001 150 0297 4	Wirewound 100Ω 2W
JK802,852	YW2506AJ3	003 400 4518 7	Jack (x2)
CN901,951-JF	YWWAKA331AL	003 403 3792 0	XLR type connecton (x2)
CN902,952-JM	YWWAKA3-32	003 403 1869 4	XLR type connector (x2)
E1 ⚠	YWAACA0003A4	003 490 5172 5	Power cord, AC
E2	YWTN040A	003 410 7677 5	Terminal (x2)
E3	YWUB0029	003 410 3351 0	Terminal, GND
E5	YWM20016P2U	003 410 4265 3	2 Pin terminal
E6	YW820731	060 600 1605 7	Capacitor cover (x2)
M1 *	YWA5WA0563B1	060 840 3199 4	Panel, front
M2 *	YWA5WC0565A2	060 840 3088 0	Panel, grille, ventilation opening
M3 *	YWA5WD0564A2	060 840 3390 7	Panel, rear
M4 *	YWA5EA0296B2	060 845 1018 7	Cover, upper
M5 *	YWA2KB0256B1		Chassis
M6	YWA5RA0127A3	060 700 0991 1	Knob, volume (x2)
M7 *	YWA6AA0011A3	060 705 0121 4	Handle (x2)
M8	YWA6JA0009A3	060 702 0089 2	Button, power switch
M9	YWA6JA0027B2	060 702 0209 2	Button, power switch guard
M10 *	YWA2QA0059C4	003 413 1511 5	Earth lug
M11	YWA2SA0672C4	060 632 4665 5	Mounting angle, slide switch
M12 *	YWA2SA0792C3	060 632 4858 8	Mounting angle, fan angle
M13 *	YWA2SA0793D3	060 632 4859 7	Mounting angle, power switch A
M14 *	YWA2SA0794C3	060 632 4860 4	Mounting angle
M15 *	YWA2SA0805B4	060 632 4642 2	Mounting angle, fixing PCB (x2)
M16 *	YWA3BA0043A4	060 632 4499 1	Reinforcement (x4)
M17 *	YWA5LB0027A4	060 828 0160 3	Rubber foot, rear (x4)
M18	YWFF001A	060 828 0188 1	Rubber foot (x4)
M19 *	YWA2HA0215A4	060 601 0453 4	Shield parts, power switch
M20	YWA2SA0936B4	060 632 4864 0	Mounting angle, fan
M21	YWA7SA0689A4	060 862 2167 4	Label, ground
M22 *	YWA2PA0156A4	060 600 1624 4	Insulator, transformer (x2)
M23	YWA4JA0115A4	060 726 0434 3	Spring, power switch
M24	YWA3AA0071B4	060 612 0384 9	Dust proof parts, fan filter
M25 *	YWA7QB0885A4	060 861 5765 1	Label, main
M26	YWA7SA0443A4	060 862 1814 0	Label, fuse caution
M27	YWA7SA0686A4	060 862 2167 4	Label, caution
M28	YWA7SA0679A4	060 862 2155 6	Label, fuse (x2)
M29	YWV240PUB01E	060 862 1186 5	Label, serial No.
M30	FBH08A24HZA	007 570 1736 0	Fan 24V DC 0.18A
M31	YWCS4	060 645 0205 4	Cord clamp (x5)
M32	YWNK5N	060 645 0195 9	Cord clamp (x2)
M33	YWSR6W1	060 645 0047 0	Cord clamp
M35	YWA2SA0673A4	060 632 4532 7	Mounting angle, fixing TR (x4)
M36 *	YWA2SA0795B4	060 632 4635 1	Mounting angle, A (x2)
M37 *	YWA2SA0796B4	060 632 4654 8	Mounting angle, C (x4)
M38 *	YWA2SA0804B4	060 632 4638 8	Mounting angle, B (x2)
M39	YWA2PA0102C4	060 600 1623 5	Insulator (x4)
M40 *	YWA2PA0138A4	060 600 1603 9	Insulator (x4)
M43	YWA6GA0072B3	060 630 1283 7	Plate, Jack
M44	YWA1KA0030A4	005 513	Washer, jack (x2)

VOLUME A CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
VR801	YWAVRA0060A4	001 174 7595 7	Variable resistor

VOLUME B CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
VR851	YWAVRA0060A4	001 174 4595 7	Variable resistor

LED A CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
D801	LN031335PH	001 032 8687 1	LED

LED B CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
D851	LN031335PH	001 032 8687 1	LED

JACK A CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
R101,102	ER025CKF1002	001 151 2497 5	Metal film (x2)
C103,104	YWUP05S330JN	001 103 5186 5	Ceramic (x2)
JK801	HLJ052101010	003 400 4361 0	Jack

JACK B CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
R401,402	ER025CKF1002	001 151 2497 5	Metal film (x2)
C403–404	YWUP05S330JN	001 103 5186 5	Ceramic
SW851	YWSSSB343NS	003 431 3518 8	Slide switch
JK851	HLJ052101010	003 400 4361 0	Jack
CN851-JM	YWB3BXHA	003 403 2836 9	Connector
CN852-JM	YWB6BXHA	003 403 4263 6	Connector

POWER LED CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
D891	LN217RP	001 032 0270 4	LED
M41	YWE8010FR02	060 643 0109 3	LED spacer

FUSE CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
E4	YWH00171	003 415 1633 6	Holder (x4)
M42	YWA2QA0054A4	003 413 1318 4	Earth lug (x4)

POWER SUPPLY CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
D701,702	YWEM1	001 032 4036 6	Diode (x2)
D703,704	EM1Z	001 032 3274 8	Diode (x2)
R701,702	ERQ1AJP330S	001 190 0652 1	Fuse resistor (x2)
C701–704	YWR0A16V222M	001 123 1098 8	Electrolytic (x4)
CN701-JM	YWB7BXHA	003 403 3431 2	Connector

DRIVER A CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
IC102	YWMC5707	001 061 1236 9	IC
IC201,251	YWBA4558DD	001 060 2195 2	IC (x2)
IC101	YWMC8134	001 061 3731 1	IC
IC252	YWTA7317P	001 060 6703 8	IC
Q103	2SA968B-0Y	001 030 5624 8	Transistor
Q205	2SB950A-QR	001 030 3098 6	Transistor
Q251	2SC1567-QR	001 030 1013 5	Transistor
Q104	YW2SC2238B0Y	001 030 5625 7	Transistor
Q201,202	2SC2631-RS	001 030 2257 3	Transistor
Q203	2SC828A-RS	001 030 1490 0	Transistor
Q204	2SD1276A-QR	001 030 2838 8	Transistor (x2)
D259,261	EM1Z	001 032 3274 8	Diode (x2)
D109,110	YWHZS6R2EB2	001 032 9539 8	Diode (x2)
D113,114,256	YWHZS2R7EB2	001 032 6027 9	Diode (x3)
D205,206	YWHZS20EB1	001 032 9363 4	Diode (x2)
D105,106	YWHZS39EB1	001 032 8518 7	Diode (x2)
D202,251,252, 253,255,257	MA165	001 032 0494 0	Diode (x6)
D101–104, 117,118,203, 204,258,260	MA167	001 032 4142 5	Diode (x10)
D111,112,115, 116,201	YW1SS82	001 032 4290 4	Diode (x5)
R123,126	ERD2FCG151	001 152 2728 4	Carbon 150Ω 2W (x2)
R271	ERD2FCG221	001 152 0192 2	Carbon 220Ω W
R218,219	ERG1SJ331	001 151 4153 8	Metal film 330Ω 1W (x2)
R266	ERG1SJ471	001 151 3795 4	Metal film 470Ω 1W
R263	ERG1SJ822	001 151 4760 1	Metal film 8.2KΩ 1W
R103,104	ERG12SJ432	001 151 6284 0	Metal film 4.3KΩ 1/2W (x2)
R105,106,270	ERG1SJ222	001 151 3592 3	Metal film 2.2KΩ 1W (x3)
R132,133	ERQ12HJ100	001 190 0036 9	Fuse resistor 10Ω 1/2W (x2)

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
VR102	EVND4AA00B13	001 180 2564 8	Semifixed resistor
VR101	EVND4AA00B53	001 180 2319 9	Semifixed resistor
C127,128	ECCF2H330K	001 103 0920 9	Ceramic (x2)
C117	ECCD2H390J	001 103 4084 4	Ceramic
C122,124	ECCD2H820J2	001 103 3232 4	Ceramic (x2)
C254	ECEA0JS101	001 120 0150 0	Electrolytic
C252	ECEA1AN101S	001 120 2335 5	Electrolytic
C251	ECEA1CU100	001 120 2905 3	Electrolytic
C123	ECEA1CU101	001 120 2926 8	Electrolytic
C204	ECEA1HUR47S	001 120 0351 3	Electrolytic
C255	ECEA1HUR47	001 120 3249 8	Electrolytic
C202,203	ECEA1HU2R2	001 120 3253 2	Electrolytic
C207,208	ECEA1JU470	001 120 3613 8	Electrolytic 47 μF 63V (x2)
C103,104,107, 108,125,126, 205,206	ECEA2AU100	001 120 4922 4	Electrolytic 10 μF 100V (x8)
C201	ECEA2AU4R7	001 120 3132 0	Electrolytic
C256	ECEA2AU470	001 120 3301 1	Electrolytic
C253	ECQB1H103Jz	001 106 3225 8	Plastic 0.01 μF (x2)
C111	ECQE1225KN	001 106 2328 6	Plastic
C118,119	WCQM1104KZ	001 106 0862 7	Plastic 0.1 μF (x2)
C101,102,115	ECQV1H104JZ	001 106 2671 7	Plastic 0.1 μF (x3)
C191,192	ECQV1H473JZ	001 106 2576 2	Plastic 0.047 μF 50V (x2)
C110	YWRBA10V221M	001 120 5400 1	Electrolytic 220 μF 10V
C116	YWRBA10V471M	001 120 5401 0	Electrolytic 470 μF 10V
C120,121	YWREC100V471	001 123 0097 9	Electrolytic 470 μF 100V (x2)
C112,114	YWUP05B561KN	001 103 8742 7	Ceramic (x2)
C113	YWUP05S220JN	001 103 5082 2	Ceramic
C105,106	ECEA2AU220E	001 120 5727 1	Electrolytic 22 μF 100V (x2)
RL251	AR39202	003 450 2628 0	Relay
CN102,202, 206-JM	YWB3BXHA	003 403 2836 9	Connector (x3)
CN203-JM	YWB3PVH	003 403 2871 6	Connector
CN101,104,201, 205-JM	YWB4BXHA	003 403 2872 5	Connector (x4)
CN204-JM	YWB5B-XHA	003 403 1876 5	Connector
CN103,105-JM	YWB6BXHA	003 403 4263 6	Connector (x2)
E	NO.18D	060 600 1611 9	Insulator (x2)
E	NO.24	060 600 1612 8	Insulator (x2)
E	YWS7	060 600 1444 6	Insulator (x2)

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
DRIVER B CIRCUIT BOARD			
IC402	YWMC5707	001 061 1236 9	IC
IC501,551	YWBA4558DX	001 060 2195 2	IC (x2)
IC401	YWMC8134	001 061 3731 1	IC
IC552	YWTA7317P	001 060 6703 8	IC
Q403	2SA968B-0Y	001 030 5624 8	Transistor
Q505	2SB950A-QR	001 030 3098 6	Transistor
Q551	2SC1567-QR	001 030 1013 5	Transistor
Q404	YW2SC2238B0Y	001 030 5625 7	Transistor
Q501,502,552	2SC2631-RS	001 030 2257 3	Transistor (x3)
Q503	2SC828A-RS	001 030 1490 0	Transistor
Q504,553	2SD1276A-QR	001 030 2838 8	Transistor (x2)
D559	EM1Z	001 032 3274 8	Diode
D566	YWHZS13EB2	001 032 5767 4	Diode
D409,410	YWHZS6R2EB2	001 032 9539 8	Diode (x2)
D565	HZS16EB2TD	001 032 4653 7	Diode
D413,414,556	YWHZS2R7EB2	001 032 6027 9	Diode (x3)
D505,506	YWHZS20EB1	001 032 9363 4	Diode (x2)
D405,406	YWHZS39EB1	001 032 8518 7	Diode (x2)
D554,502,551 552,555,557, 562,563	MA165	001 032 0494 0	Diode (x8)
D401–404, 417,418,503, 504,558,560	MA167	001 032 4142 5	Diode (x10)
D411,412,415, 416,501	YW1SS82	001 032 4290 4	Diode (x5)
R423,426	ERD2FCG151	001 152 2728 4	Carbon (x2)
R570,405,406	ERG1SJ222	001 151 3592 3	Metal film (x3)
R518,519	ERG1SJ331	001 151 4153 8	Metal film (x2)
R566	ERG1SJ471	001 151 3795 4	Metal film
R563	ERG1SJ822	001 151 4760 1	Metal film 8.2KΩ 1W
R578	ERG12SJ622	001 151 6285 9	Metal film 6.2KΩ 1/2W
R403,404	ERG12SJ432	001 151 6284 0	Metal film 4.3KΩ 1/2W (x2)
R432,433	ERQ12HJ100	001 190 0036 9	Fuse resistor 10Ω 1/2W (x2)
VR402	EVND4AA00B13	001 180 2564 8	Semifixed resistor
VR401	EVND4AA00B53	001 180 2319 9	Semifixed resistor
C558	ECCD2H101J2	001 103 0733 0	Ceramic
C427,428	ECCF2H330K	001 103 0920 9	Ceramic (x2)
C417	ECCD2H820J2	001 103 4084 4	Ceramic

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
C422,424	ECCD2H820J2	001 103 3232 4	Ceramic
C554	ECEA0JS101	001 120 0150 0	Electrolytic
C552	ECEA1AN101S	001 120 2335 5	Electrolytic
C551	ECEA1CU100	001 120 2905 3	Electrolytic
C423	ECEA1CU101	001 120 2926 8	Electrolytic
C504	ECEA1HNR47S	001 120 0351 3	Electrolytic
C555	ECEA1HUR47	001 120 3249 8	Electrolytic
C502,503	ECEA1HU2R2	001 120 3253 2	Electrolytic 2.2 μF 50V (x2)
C507,508	ECEA1JU470	001 120 3613 8	Electrolytic (x2)
C403,404,407, 408,425,426, 505,506	ECEA2AU100	001 120 4922 4	Electrolytic 10 μF 100V (x8)
C501	ECEA2AU4R7	001 120 3132 0	Electrolytic
C559	ECEA2AU470	001 120 3301 1	Electrolytic
C553	ECQB1H103JZ	001 106 3225 8	Plastic 0.01 μF
C411	ECQE1225KN	001 106 2328 6	Plastic
C418,419	ECQM1104KZ	001 106 0862 7	Plastic 0.1 μF (x2)
C401,402,415, 557	ECQV1H104JZ	001 106 2571 7	Plastic (x4)
C491,492	ECQV1H473JZ	001 106 2576 2	Plastic 0.047 μF 50V (x2)
C410	YWRBA10V221M	001 120 5400 1	Electrolytic 220 μF 10V
C416	YWRBA10V471M	001 120 5401 0	Electrolytic 470 μF 10V
C420,421	YWREC100V471	001 123 1097 9	Electrolytic 470 μF 100V (x2)
C412,414	YWUP05B561KN	001 103 8742 7	Ceramic (x2)
C413	YWUP05S220JN	001 103 5082 2	Ceramic
C405,406	ECEA2AU220E	001 120 5727 1	Electrolytic 22 μF 100V (x2)
RL551	AR39202	003 450 2628 0	Relay
CN402,505, 507-JM	YWB3BXHA	003 403 2836 9	Connector (x3)
CN503-JM	YWB3PVH	003 403 2871 6	Connector
CN401,404,501, 502-JM	YWB4BXHA	003 403 2872 5	Connector (x4)
CN504-JM	YWB5B-XHA	003 403 1876 5	Connector
CN403,405-JM	YWB6BXHA	003 403 4263 6	Connector (x2)
E	NO.18D	060 600 1611 9	Insulator (x2)
E	No.24	060 600 1612 8	Insulator (x2)
E	YWS7	060 600 1444 6	Insulator (x2)

POWER A CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
Q303,316	2SA1127-ST	001 030 2341 8	Transistor (x2)
Q302	2SC2634-ST	001 030 2326 7	Transistor
D305-308	EM1Z	001 032 3274 8	Diode (x4)
D309	YWHZS6R8EB2	001 032 4362 5	Diode
D301,302	MA165	001 032 0494 0	Diode (x2)
D303,304,310	YW1SS82	001 032 4290 4	Diode (x3)
R310	ERD2FCG331	001 152 0194 0	Fuse resistor
R331	ERG1SJ223	001 151 4756 7	Metal film
R332	ERX3SJ4R7	001 151 4471 7	Metal film
R333–336	ERX3SJ2R7	001 151 5115 0	Metal film (x7)
R317,318	ERF5GEKR27N		Wirewound 0.27Ω 5W (x2)
C313	ECCD2H680J2	001 103 0771 4	Ceramic
C304,305	ECEA1HN2R2S	001 120 0356 8	Electrolytic 2.2 μF 50V (x2)
C308,309	ECEA2AU100	001 120 4922 4	Electrolytic 10 μF 100V (x2)
C302,303	ECQB1H222JZ	001 106 3400 1	Plastic (x2)
C310	ECQF2333KZ	001 106 2908 2	Plastic
C311,312	ECQM1H104KZ	001 106 0862 7	Plastic 0.1 μF (x2)
C301	ECQV1H104JZ	001 106 2571 7	Plastic 0.1 μF
L301 *	YWALCA0022A4	001 211 2849 8	Coil
CN303-JM	YWB6PSVH	003 403 2704 0	Connector
E	YVL437TM027	003 410 3376 1	Terminal (x3)

POWER B CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
Q603,616	2SA1127-ST	001 030 2341 8	Transistor (x2)
Q602	2SC2634-ST	001 030 2326 7	Transistor
D605–608	EM1Z	001 032 3274 8	Diode (x4)
D609	YWHZS6R8EB2	001 032 4362 5	Diode
D601,602	MA165	001 032 0494 0	Diode (x2)
D603,604,610	YW1SS82	001 032 4290 4	Diode (x3)
R610	ERD2FCG331	001 152 0194 0	Fuse resistor
R617,618	ERF5GEKR27N	001 150 2764 0	Wirewound (x2)
R631	ERG1SJ223	001 151 4756 7	Metal film
R632	ERX3SJ4R7	001 151 4471 7	Metal film
R633–636	ERX3SJ2R7	001 151 5115 0	Metal film (x4)
C613	ECCD2H680J2	001 103 0771 4	Ceramic
C604,605	ECEA1HN2R2S	001 120 0356 8	Electrolytic (x2)
C608,609	ECEA2AU100	001 120 4922 4	Electrolytic 10 μ 100V (x2)
C602,603	ECQB1H222JZ	001 106 3400 1	Plastic (x2)
C610	ECQF2333KZ	001 106 2908 2	Plastic
C611,612	ECQM1104KZ	001 106 0862 7	Plastic 0.1 μF (x2)
C601	ECQV1H104JZ	001 106 2571 7	Plastic 0.1 μF
L601 *	YWALCA0022A4	001 211 2849 8	Coil
CN603	YWB6PSVH	003 403 2704 0	Connector
E	YVL437TM027	003 410 3376 1	Terminal (x3)

ACCESSORIES/PACKING

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
M60	YWA8QA0857AN	060 983 2878 6	Operating instructions
M61	YWT20X35C03	060 978 0259 6	Polyethylene bag (x2)
M62	YWA8EA0085A4	060 978 0419 8	Polyethylene bag
M63	YWT10X16C03	060 978 0054 7	Polyethylene bag
M64	XZB26X40C05	060 978 0045 8	Polyethylene bag
M65	YWP9100CHA1	060 971 2363 4	Packing ass'y
M66	YW5H1V42	060 650 0552 7	Clip canoe
M67	YWA3AA0071B4	060 612 0384 9	Dust proof parts, fan filter

WP-9220C

MISCELLANEOUS

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
Q307,607	2SA1006B-PQ	001 030 0196 7	Transistor (x2)
Q309,311,313 315,609,611, 613,615	2SA1216M0Y	001 030 4856 8	Transistor (x8)
Q305,605	2SB718-CD	001 030 5873 3	Transistor (x2)
Q306,606	2SC2336B-PQ	001 030 1275 5	Transistor (x2)
Q308,310,312, 314,608,610, 612,614	2SC2922M0Y	001 030 4857 7	Transistor (x8)
Q301,601	2SD1265-PQ	001 030 4860 2	Transistor (x2)
Q304,604	2SD758-CD	001 030 5874 2	Transistor (x2)
TH301,601	YWTH487BF471	001 191 0642 8	Thermistor (x2)
TH1 ⚠	ERPF3B2M101A	001 241 0347 5	Thermistor
C1 ⚠	YWL0B80V203P	001 123 1096 0	Electrolytic
C2,3	ECQU2A333MN		Plastic 0.033 µF 100V (x2)
T1 ⚠	YWPIEE3E039	001 202 8104 9	Power transformer
SW1 ⚠	ESB99887V	003 435 5111 9	Push switch
SW2	ESE37202	003 439 0700 4	Switch, voltage select
F1,2 ⚠	XBA2E150NS1	002 380 1293 4	Current fuse, 125V 15A (x2)
D1 ⚠	YW25G4B41	001 032 8471 5	Rectifier
R1 ⚠	ERF20HMJ101	001 150 0297 4	Wirewound 100Ω 2W
JK802,852	YW2506AJ3	003 400 4518 7	Jack (x2)
CN901,951-JF	YWWAKA331AL	003 403 3792 0	XLR type connector (x2)
CN902,952-JM	YWWAKA3-32	003 403 1869 4	XLR type connector (x2)
E1 ⚠	YWTN040A	003 410 7677 5	Terminal (x2)
E2 ⚠	YWAACA0003A4	003 490	AC power cord
E3	YWUB0029	003 410 3351 0	Terminal for GND
E5	YWM20016P2UL	003 410 4265 3	2 pin terminal
E6	YW820731	060 600 1605 7	Capacitor cover (x2)
M1 *	YWA5WA0566E1	060 840 3374 7	Panel, front
M2 *	YWA5WC0568A2	060 840 3272 2	Panel, grille, ventilation opening
M3 *	YWA5WD0567A2	060 840 3391 6	Panel, rear
M4 *	YWA5EA0297B2	060 845 1019 6	Panel, upper
M5 *	YWA2KB0257B1		Chassis
M6 *	YWA5RA0127A3	060 700 0991 1	Knob, volume (x2)
M7 *	YWA6AA0012A3	060 705 0122 3	Handle (x2)
M8 *	YWA6JA0009A3	060 702 0089 2	Button, power switch
M9	YWA6JA0027B2	060 702 0209 2	Button, power switch guard

SYMBOL NO.		PART NO.	PART CODE	DESCRIPTION	
M10	*	YWA2QA0059C4	003 413 1511 5	Earth lug	
M11		YWA2SA0672C4	060 632 4665 5	Mounting angle, slide switch	
M12	*	YWA2SA0797C3		Mounting angle, fan	
M13	*	YWA2SB0798B3		Mounting angle, power switch Ach	
M14	*	YWA2SA0799D3		Mounting angle, volume Bch	
M15	*	YWA2SA0805B4	060 632 4642 2	Mounting angle, fixing PCB angle (x2)	
M16	*	YWA3BA0043A4	060 632 4499 1	Reinforcement angle	(x4)
M17	*	YWA5LA0027C4	060 828 0160 3	Rubber foot, rear	(x4)
M18	*	YWFF001A		Rubber foot	(x4)
M19	*	YWA2HA0215A4	060 601 0453 4	Shield parts, power switch	
M20		YWA2PA0156A4	060 600 1624 4	Insulator, transformer (x2)	
M21		YWA7SA0689A4	060 862 2167 4	Label, ground	
M22		YWA4JA0115A4	060 726 0434 3	Spring, power switch	
M23	*	YWA3AA0072C4		Dust proof parts, fan filter	
M24	*	YWA7QB0885A4	060 861 5765 1	Main label	
M25		YWA7SA0443A4	060 862 1814 0	Label, fuse caution	
M26	*	YWA7SA0686A4	060 862 2166 5	Label, caution	
M27	*	YWA7SA0678A4	060 862 2168 3	Label, fuse	(x2)
M28		YWV240PUB01E	060 862 1186 5	Label, serial No.	
M29		FBH12G24LB	002 311 4999 2	Fan 24V DC 0.3A	
M30		YWCS4	060 645 0205 4	Cord clamp	(x5)
M31		YWNK5N	060 645 0195 9	Cord clamp	(x2)
M32		YWSR6W1	060 645 0047 0	Cord clamp	
M34		YWA2SA0673A4	060 632 4532 7	Mounting angle, fixing TR (x4)	
M35	*	YWA2SA0796B4	060 632 4654 8	Mounting angle, C	(x6)
M36	*	YWA2SA0800B4	060 632 4636 0	Mounting angle, A	(x2)
M37	*	YWA2SA0801B4	060 632 4637 9	Mounting angle	(x2)
M38		YWA2PA0102C4	060 600 1623 5	Insulator	(x4)
M39	*	YWA2PA0102C4	060 600 1603 9	Insulator	(x4)
M42		YWA6GA0072B3	060 630 1283 7	Plate, jack	
M43		YWA1KA0030A4	005 513 4235 1	Washer, jack	(x2)

VOLUME A CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
VR801	YWARA0060A4	001 174 7595 7	Variable resistor

VOLUME B CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
VR851	YWAVRA0060A4	001 174 7595 7	Variable resistor

LED A CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
D801	LN31335PH	001 032 8687 1	LED

LED B CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION	
D851	LN031335PH	001 032 8687 1	LED	

JACK A CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION	
R101,102	ER025CKF1002	001 151 0586 3	Metal film	(x2)
C103,104	YWUP05S330JN	001 103 5186 5	Ceramic	(x2)
JK801	HLJ052101010	003 400 4361 0	Jack	

JACK B CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION	
R401,402	ER025CKF1002	001 151 2497 5	Metal film	(x2)
C403–404	YWUP05S330JN	001 103 5186 5	Ceramic	(x2)
SW851	YWSSSB343NS	003 431 3518 8	Slide switch	
JK851	HLJ052101010	003 400 4361 0	Jack	
CN851-JM	YWB3BXHA	003 403 2836 9	Connector	
CN852-JM	YWB6BXHA	003 403 4263 6	Connector	

POWER LED CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION	
D891	LN217RP	001 032 0270 4	LED	
M40	YWE8010FR02	060 643 0109 3	LED spacer	

FUSE CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION	
E4	YWH00171	003 415 1633 6	Holder	(x4)
M41	YWA2QA0054A4	003 413 1318 4	Earth lug	(x4)

POWER SUPPLY CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION	
D701,702	YWEM1	001 032 4036 6	Diode	(x2)
D703,704	EM1Z	001 032 3274 8	Diode	(x2)
R701,702	ERQ1AJP330S	001 190 0652 1	Fuse resistor	(x2)
C701–704	YWR0A16V222M	001 123 1098 8	Electrolytic	(x4)
CN701-JM	YWB7BXHA	003 403 3431 2	Connector	

DRIVER A CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION	
IC102	YWMC5707	001 061 1236 9	IC	
IV201,251	YWBA4558DX	001 060 2195 2	IC	(x2)
IC101	YWMC8134	001 061 3731 1	IC	
IC252	YWTA7317P	001 060 6703 8	IC	
Q102	2SA794-QR	001 030 2698 2	Transistor	

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
Q103	2SA968B-0Y	001 030 5624 8	Transistor
Q205	2SB950A-QR	001 030 3098 6	Transistor
Q251	2SC1567-QR	001 030 1013 5	Transistor
Q104	YW2SC2238B0Y	001 030 5625 7	Transistor
Q201,202	2SC2631-RS	001 030 2257 3	Transistor (x2)
Q203	2SC828A-RS	001 030 1490 0	Transistor
Q204	2SD1276A-QR	001 030 2838 8	Transistor
D259,261	EM1Z	001 032 3274 8	Diode (x2)
D109,110	YWHZS6R2EB2	001 032 9539 8	Diode (x2)
D113,114 256	YWHZS2R7EB2	001 032 6027 9	Diode (x3)
D205,206	YWHZS20EB1	001 032 9363 4	Diode (x2)
D105,106	YWHZS39EB1	001 032 8518 7	Diode (x2)
D202,251,252, 253,255,257	MA165	001 032 0494 0	Diode (x6)
D101-104,117, 118,203,204, 258,260	MA167	001 032 4142 5	Diode (x10)
D111,112,115 116,201	YW1SS82	001 032 4290 4	Diode (x5)
R123,126	ERD2FCG151	001 152 2728 4	Fuse resistor 150Ω (x2)
R271	ERD2FCG221	001 152 0192 2	Fuse resistor 220Ω
R266	ERG1SJ122P	001 151 3076 8	Metal film
R263	ERG1SJ123P	001 151 3077 7	Metal film
R270	ERG1SJ302P	001 151 6001 5	Metal film
R218,219	ERG2SJ751P	001 151 6002 4	Metal film (x2)
R103,104	ERG12SJ622	001 151 6285 9	Metal film 6.2KΩ 1/2W (x2)
R105,106	ERG1SJ362	001 151 6280 4	Metal film 3.6KΩ 1W (x2)
R132,133	ERQ12HJ100	001 190 0036 9	Fuse resistor (x2)
VR102	EVND4AA00B13	001 180 2564 8	Semifixed resistor
VR101	EVND4AA00B53	001 180 2319 9	Semifixed resistor
C117	ECCD2H270J	001 103 0750 9	Ceramic
C127,128	ECCF2H330K	001 103 0920 9	Ceramic (x2)
C122,124	ECCD2H820J2	001 103 3232 4	Ceramic (x2)
C254	ECEA0JS101	001 120 0150 0	Electrolytic
C252	ECEA1AN101S	001 120 2335 5	Electrolytic
C251	ECEA1CU100	001 120 2905 3	Electrolytic
C123	ECEA1CU101	001 120 2926 8	Electrolytic
C204	ECEA1HNR47S	001 120 0351 3	Electrolytic
C255	ECEA1HUR47	001 120 3249 8	Electrolytic
C203,202	ECEA1HU2R2	001 120 3253 2	Electrolytic 2.2 μF 50V (x2)
C207,208	ECEA1JU470	001 120 3613 8	Electrolytic 47 μF 63V (x2)
C103,104,107, 108,125,126, 205,206	ECEA2AU100	001 120 4922 4	Electrolytic 10 μF 100V (x8)
C201	ECEA2AU4R7	001 120 3132 0	Electrolytic
C256	ECEA2AU470	001 120 3301 1	Electrolytic
C253	ECQB1H103JZ	001 106 3225 8	Plastic 0.01 μF
C111	ECQE1225KN	001 106 2328 6	Plastic
C118,119	ECQM1104KZ	001 106 0862 7	Plastic 0.1 μF (x2)
C101,102,115	ECQV1H104JZ	001 106 2571 7	Plastic (x3)
C191,192	ECQV1H473JZ	001 106 2576 2	Plastic 0.047 μF 50V (x2)
C110	YWRBA10V221M	001 120 5400 1	Electrolytic 220 μF 10V
C116	YWRBA10V471M	001 120 5401 0	Electrolytic 470 μF 10V
C120,121	YWREC100V471	001 123 1097 9	Electrolytic 470 μF 100V (x2)
C112,114	YWUP05B561KN	001 103 8742 7	Ceramic (x2)
C113	YWUP05S220JN	001 103 5082 2	Ceramic
C105,106	ECEA2AU220E	001 120 5727 1	Ceramic 22 μF 100V (x2)
RL251	AR39202	003 450 2628 0	Relay
CN102,202, 206-JM	YWB3BXHA	003 403 2836 9	Connector (x3)
CN203-JM	YWB3PVH	003 403 2871 6	Connector
CN101,104,201, 205-JM	YWB4BXHA	003 403 2872 5	Connector (x4)
CN204-JM	YWB5B-XHA	003 403 1876 5	Connector
CN103,105-JM	YWB6BXHA	003 403 4263 6	Connector (x2)
E	NO.18D	060 600 1611 9	Insulator (x2)
E	NO.24	060 600 1612 8	Insulator (x2)
E	YWS7	060 600 1444 6	Insurator (x2)

DRIVER B CIRCUIT BOARD

IC402	YWMC5707	001 061 1236 9	IC
IC501,551	YWBA4558DD	001 060 2195 2	IC (x2)
IC401	YWMC8134	001 061 3731 1	IC
IC552	YWTA7317P	001 060 6703 8	IC
Q402	2SA794-QR	001 030 2698 2	Transistor
Q403	2SA968B-0Y	001 030 5624 8	Transistor
Q505	2SB950A-QR	001 030 3098 6	Transistor
Q551	2SC1567-QR	001 030 1013 5	Transistor
Q404	YW2SC2238B0Y	001 030 5625 7	Transistor
Q501,502,552	2SC2631-RS	001 030 2257 3	Transistor (x3)
Q503	2SC828A-RS	001 030 1490 0	Transistor
Q504,553	2SD1276A-QR	001 032 2838 8	Transistor

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
D566	YWHZS12EB2	001 032 5570 5	Diode
D409,410	YWHZS6R2EB2	001 032 9539 8	Diode (x2)
D565,567	YWHZS16EB2	001 032 4653 7	Diode (x2)
D413,414,556	YWHZS2R7EB2	001 032 6027 9	Diode (x3)
D505,506	YWHZS20EB1	001 032 9363 4	Diode (x2)
D405,406	YWHZS39EB1	001 032 8518 7	Diode (x2)
D554,502,551, 552,555,557, 562,563	MA165	001 032 0494 0	Diode (x8)
D401–404, 417,418,503, 504,558,560	MA167	001 032 4142 5	Diode (x10)
D411,412,415, 416,501	YW1SS82	001 032 4290 4	Diode (x5)
R423,426	ERD2FCG151	001 152 2728 4	Fuse resistor 150Ω (x2)
R566	ERG1SJ122P	001 151 3076 8	Metal film
R563	ERG1SJ123P	001 151 3077 7	Metal film
R570	ERG1SJ302P	001 151 6001 5	Metal film
R518,519	ERG2SJ751P	001 151 6002 4	Metal film (x2)
R578	ERG12SJ153		Metal film 15KΩ 1/2W
R403,404	ERG12SJ622	001 151 6285 9	Metal film 6.2KΩ 1/2W (x2)
R405,406	ERG1SJ362	001 151 6280 4	Metal film 3.6KΩ 1W (x2)
R432,433	ERQ12HJ100	001 190 0036 9	Fuse resistor (x2)
VR402	EVND4AA00B13	001 180 2564 8	Semifixed resistor
VR401	EVND4AA00B53	001 180 2319 9	Semifixed resistor
C558	ECCD2H101J2	001 103 0733 0	Ceramic
C417	ECCD2H270J	001 103 0750 9	Ceramic
C427,428	ECCF2H330K	001 103 0920 9	Ceramic (x2)
C422,424	ECCD2H820J2	001 103 3232 4	Ceramic (x2)
C554	ECEA0JS101	001 120 0150 0	Electrolytic
C552	ECEA1AN101S	001 120 2335 5	Electrolytic
C551	ECEA1CU100	001 120 2905 3	Electrolytic
C423	ECEA1CU101	001 120 2926 8	Electrolytic
C504	ECEA1HNR47S	001 120 0351 3	Electrolytic
C555	ECEA1HUR47	001 120 3249 8	Electrolytic
C503,550	ECEA1HU2R2	001 120 3253 2	Electrolytic 2.2 μF 50V (x2)
C507,508	ECEA1JU470	001 120 3613 8	Electrolytic 47 μF 63V (x2)
C403,404,407 408,425,426, 505,506	ECEA2AU100	001 120 4922 4	Electrolytic 10 μF 100V (x8)
C501	ECEA2AU4R7	001 120 3132 0	Electrolytic
C559	ECEA2AU470	001 120 3301 1	Electrolytic
C553	ECQB1H103JZ	001 106 3225 8	Plastic 0.01 μF
C411	ECQE1225KN	001 106 2328 6	Plastic
C418,419	ECQM1104KZ	001 106 0862 7	Plastic 0.1 μF (x2)
C401,402,415, 557	ECQV1H104JZ	001 106 2571 7	Plastic (x4)
C491,492	ECQV1H473JZ	001 106 2576 2	Plastic 0.047 μF 50V (x2)
C410	YWRBA10V221M	001 120 5400 1	Electrolytic 220 μF 10V
C416	YWRBA10V471M	001 120 5401 0	Electrolytic 470 μF 10V
C420,421	YWREC100V471	001 123 1097 9	Electrolytic 470 μF 10V
C412,414	YWUP05B561KN	001 103 8742 7	Ceramic (x2)
C413	YWUP05S220JN	001 103 5082 2	Ceramic
C405,406	ECEA2AU220E	001 120 5727 1	Electrolytic 22 μF 100V (x2)
RL551	AR39202	003 450 2628 0	Relay
CN402,505, 507-JM	YWB3BXHA	003 403 2836 9	Connector (x3)
CN503-JM	YWB3PVH	003 403 2871 6	Connector
CN401,404, 501,502-JM	YWB4BXHA	003 403 2872 5	Connector (x4)
CN504-JM	YWB5B-XHA	003 403 1876 5	Connector
CN403,405-JM	YWB6BXHA	003 403 4263 6	Connector (x2)
E	NO.18D	060 600 1611 9	Insulator (x2)
E	NO.24	060 600 1612 8	Insulator (x2)
E	YWS7	060 600 1444 6	Insulator (x2)

POWER A CIRCUIT BOARD

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
Q303,316	2SA1127-ST	001 030 2341 8	Transistor (x2)
Q302	2SC2634-ST	001 030 2326 7	Transistor
D305–308	EM1Z	001 030 3274 8	Diode (x4)
D309	YWHZS6R8EB2	001 032 4362 5	Diode
D301,302	MA165	001 032 0494 0	Diode (x2)
D303,304,310	YW1SS82	001 032 4290 4	Diode (x3)
R310	ERD2FCG331	001 152 6194 0	Fuse resistor
R317,318	ERF5GEKR27N	001 150 2703 3	Wirewound (x2)
R331	ERG1SJ223	001 151 4756 7	Metal film
R332	ERX3SJ4R7	001 151 4471 7	Metal film
R333–339	ERX3SJ5R1P	001 151 6004 2	Metal film (x7)
C313	ECCD2H680J2	001 103 0771 4	Ceramic
C304,305	ECEA1HN2R2S	001 120 0356 8	Electrolytic (x2)
C308,309	ECEA2AU100	001 120 4922 4	Electrolytic 10 μF 100V (x2)
C302,303	ECQB1H222JZ	001 106 3400 1	Plastic (x2)
C310	ECQF2333KZ	001 106 2908 2	Plastic 0.1 μF (x2)
C311,312	ECQM1104KZ	001 106 0862 7	Plastic 0.1 μF (x2)

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
C301	ECQV1H104JZ	001 106 2571 7	Plastic 0.1 µF (x2)
L301	YWALCA0022A4	001 211 2849 8	Coil
CN303	YWB6PSVH	003 403 2704 0	Connector
E	YVL437TM027	003 410 3376 1	Terminal (x3)
POWER B CIRCUIT BOARD			
Q603,616	2SA1127-ST	001 030 2341 8	Transistor (x2)
Q602	2SC2634-ST	001 030 2326 7	Transistor
D605–608	EM1Z	001 032 3274 8	Diode (x4)
D609	YWHZS6R8EB2	001 032 4362 5	Diode
D601,602	MA165	001 032 0494 0	Diode (x2)
D603,604,610	YW1SS82	001 032 4290 4	Diode (x3)
R610	ERD2FCG331	001 152 0194 0	Fuse resistor
R617,618	ERF5GEKR27N	001 150 2703 3	Wirewound (x2)
R631	ERG1SJ223	001 151 4756 7	Metal film
R632	ERX3SJ4R7	001 151 4471 7	Metal film
R633–639	ERX3SJ5R1P	001 151 6004 2	Metal film (x7)
C613	ECCD2H680J2	001 103 0771 4	Ceramic
C604,605	ECEA1HN2R2S	001 120 0356 8	Electrolytic (x2)
C608,609	ECEA2AU100	001 120 4922 4	Electrolytic 10 µF 100V (x2)
C602,603	ECQB1H222JZ	001 106 3400 1	Plastic (x2)
C610	ECQF2333KZ	001 106 2908 2	Plastic
C611,612	ECQM1104KZ	001 106 0862 7	Plastic 0.1 µF (x2)
C601	ECQV1H104JZ	001 106 2571 7	Plastic 0.1 µF
L601	YWALCA0022A4	001 211 2849 8	Coil
CN603-JM	YWB6PSVH	003 403 2704 0	Connector
E	YVL437TM027	003 410 3376 1	Terminal (x3)
POWER TRANSISTOR A CIRCUIT BOARD			
R325,326	ERF5GEKR27N	001 150 2703 3	Wirewound (x2)
C306,307	ECQM1104KZ	001 106 0862 7	Plastic 0.1 µF (x2)
CN351-JM	YWB6PSVH	003 403 2704 0	Connector
POWER TRANSISTOR B CIRCUIT BOARD			
R625,626	ERF5GEKR27N	001 150 2703 3	Wirewound (x2)
C606,607	ECQM1104KZ	001 106 0862 7	Plastic 0.1 µF (x2)
CN651-JM	YWB6PSVH	003 403 2704 0	Connector

SYMBOL NO.	PART NO.	PART CODE	DESCRIPTION
ACCESSORIES/PACKING			
M60	YWA8QA0857AN	060 983 2878 6	Operating instructions
M61	YWT20X35C03	060 978 0259 6	Polyethylene bag (x2)
M62	YWA8EA0085A4	060 978 0419 8	Polyethylene bag
M63	YWT10X16C03	060 978 0054 7	Polyethylene bag
M64	XZB26X40C05	060 978 0045 8	Polyethylene bag
M65	YWP9220CHA1	060 971 2364 3	Packing ass'y
M66	YW5H1V42	060 650 0552 7	Clip, canoe (x4)
M67	YWA3AA0072B4	060 612 0382 1	Dust proof parts, fan filter

Note: When ordering carbon film resistors check the resistance value on the schematic diagram and refer to the part number below.

Explanation of Part Number

1	2	3		4	5	6	7	8	9	10	11
E	R	D	–	2	5	T	J	1	0	3	☐

Common Code
Fixed Carbon Film Resistors

Rate Power at 70°C. amb.	
Code	R.Power
10	0.125(1/8W)
16	0.166(1/6W)
25	0.25 (1/4W)
50	0.50 (1/2W)

Special Feature and/or Cut & Formed style(Type)	
Code	Feature
T	Standard(Straight Leads)
F	Flame Retardant(Straight Leads)
V	Radial Taped

Resistance Tolerance	
Code	Tol.
J	±5%

Nominal Resistance Value
The first two digits are significant figures of resistance and the third one denotes number of zeros following. As to ±2% tol., the first 3 digits are significant figures of resistance and the 4 th one denotes number of zeros following. Decimal point is expressed by R as 4.7Ω = 4R7.

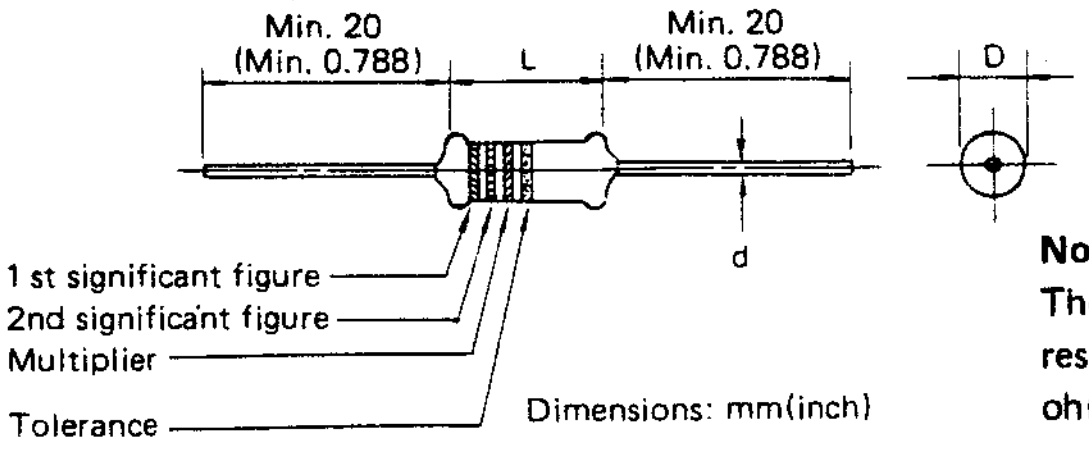

Dimensions: mm(inch)

Note:
The above example shows a standard fixed carbon film resistor, 0.25(1/4)W power rating, resistance value of 10K ohms, tolerance of 5%.

ORDER NO.AVS9302654S8

Service Manual

2-channel Power Amplifier

WP-9110C / 9220C

Supplement-1

Please use this supplement-1 service manual together with original service manual for Model No.WP-9110/9220, Order No. AVS87062037C8.

LIST OF MODIFICATION

■ DRIVE CIRCUIT BOARD

- R107, R108, R113, R117, R121, R118, R122, R123, R126, R214, R215, R216, R217, C105, C106, C110, C207 (R407, R408, R413, R417, R422, R421, R418, R423, R426, R514, R515, R516, R517, C405, C406, C410, C507) and C208 (C508) have been changed to improve the sound quality from serial NO.9050000 and higher. (WP-9220 only)
- R105, R106, D105, D106, D205, D206 (R405, R406, D405, D406, D505, D506) and IC101 (IC401) have been changed to improve the sound quality from serial NO.8960000 and higher. (WP-9110/9220)
- R252, R552 and R593 have been changed to improve the sound quality from serial NO.9040000 and higher. (WP-9110 only)
- R130, R430 have been removed and VR102, VR402 have been changed to expand the variable range of BIAS adjustment from serial NO.9060000 and higher. (WP-9110/9220)
- R119 and R419 have been changed to expand the variable range of DC offset adjustment from serial NO.9070000 and higher. (WP-9110/9220)
- C116 and C416 have been changed to improve the sound quality from serial NO.9050000 and higher. (WP-9220 only)
- R129 and R429 have been changed to improve reliability from serial NO.86X0000 and higher. (WP-9220 only)

■ POWER TR A/B CIRCUIT BOARD

- R361, R362, R363, R364, R365, R366, D361, D362, Q361 (R661, R662, R663, R664, R665, R666, D661, D662, Q661) and Q362 (Q662) have been added to improve the reliability from serial NO.9050000 and higher. (WP-9220 only)

■ POWER SUPPLY CIRCUIT BOARD

- C701, C702, C703 and C704 have been changed to improve. Sound quality from serial NO.9050000 and higher. (WP-9110/9220)

■ POWER A/B CIRCUIT BOARD

- R300, R309, R310, R311 (R600, R609, R610, R611) and R313 (R613) have been changed to improve the sound quality from serial NO.9050000 and higher. (WP-9220 only)
- R300 and R600 have been changed to improve the sound quality from serial NO.9050000 and higher. (WP-9110/9220)

■ EXPLODED VIEW

- CN903 and CN953 have been added. (WP-9110/9220)

Panasonic

REPLACEMENT PARTS LIST MODIFICATION

REFERENCE NO.	ORIGINAL PART NO.	NEW PART NO.	DESCRIPTION	
MISCELLANEOUS (WP-9110)				
CN903,CN953	--------------------	YW1625-4P	4-pin Connector	
DRIVE A CIRCUIT BOARD (WP-9110)				
IC101	YWMC8134	YWMC8400	IC	
VR102	EVND4AA00B13	EVND4AA00B32	Variable resistor	300 ohms
R105,R106	ERG1SJ222	ERG1SJ472	Metal	4.7K ohms 1W
R119	ERDS2TJ102	ERDS2TJ152	Carbon	1.5K ohms 1/4W
R130	ERDS2TJ222	--------------------		
R252	ERDS2TJ361	ERDS2TJ621	Carbon	620 ohms 1/4W
DRIVE B CIRCUIT BOARD (WP-9110)				
IC401	YWMC8134	YWMC8400	IC	
VR402	EVND4AA00B13	EVND4AA00B32	Variable resistor	300 ohms
R405,R406	ERG1SJ222	ERG1SJ472	Metal	4.7K ohms 1W
R419	ERDS2TJ102	ERDS2TJ152	Carbon	1.5K ohms 1/4W
R430	ERDS2TJ222	--------------------		
R552	ERDS2TJ361	ERDS2TJ621	Carbon	620 ohms 1/4W
R593	ERDS2TJ273	ERDS2TJ683	Carbon	68K ohms 1/4W
POWER A CIRCUIT BOARD (WP-9110)				
R300	--------------------	ERDS2TJ103	Carbon	10K ohms 1/4W
POWER B CIRCUIT BOARD (WP-9110)				
R600	--------------------	ERDS2TJ103	Carbon	10K ohms 1/4W
POWER SUPPLY CIRCUIT BOARD (WP-9110)				
C701,C702 C703,C704	YWR0A16V222M	YWR2025V222	Electrolytic	2200 µF 25V

REFERENCE NO.	ORIGINAL PART NO.	NEW PART NO.	DESCRIPTION
MISCELLANEOUS (WP-9220)			
CN903,CN953	-------------------	YW1625-4P	4-pin Connector
DRIVE A CIRCUIT BOARD (WP-9220)			
IC101	YWMC8134	YWMC8400	IC
VR102	EVND4AA00B13	EVND4AA00B32	Variable resistor 300 ohms
R105,R106	ERG1SJ362	ERG1SJ472	Carbon 4.7K ohms 1W
R107,R108	ERD25FJ100	ERG12SJ100	Metal 10 ohms 1/2W
R113,R117	ERDS2TJ471	ER0S2CKF4700	Metal 470 ohms 1/8W
R119	ERDS2TJ102	ERDS2TJ152	Carbon 1.5K ohms 1/4W
R121	ERDS2TJ122	ER0S2CKF1201	Metal 1.2K ohms 1/8W
R118,R122	ERDS2TJ393	ER0S2CKF3902	Metal 39K ohms 1/8W
R129	EDRS2TJ512	ERDS2TJ103	Carbon 10K ohms 1/4W
R123,R126	ERD2FCG151	ERG12SJ151	Metal 150 ohms 1/2W
R130	ERDS2TJ222	-------------------	
R214,R215	ERDS2TJ472	ER0S2CKF4701	Metal 4.7K ohms 1/8W
R216,R217	ERDS2TJ472	ER0S2CKF4701	Metal 4.7K ohms 1/8W
C105,C106	ECEA2AU220E	ECEA1JU470	Electrolytic 47 µF 63V
C110	RBA10V221M	YWRBA10V470M	Electrolytic 47 µF 10V
C116	RBA10V471M	YWRBA25V221M	Electrolytic 220 µF 25V
C207,C208	ECEA1JU470	YWRA263S470	Electrolytic 47 µF 63V
D105, D106	YWHZS39EB1	YWMTZ33B	Diode
D205, D206	YWHZS20EB1	YWHZS18EB2	Diode
DRIVE A CIRCUIT BOARD (WP-9220)			
IC401	YWMC8134	YWMC8400	IC
VR402	EVND4AA00B13	EVND4AA00B32	Variable resistor 300 ohms
R405,R406	ERG1SJ362	ERG1SJ472	Carbon 4.7K ohms 1W
R407,R408	ERD25FJ100	ERG12SJ100	Metal 10 ohms 1/2W
R413,R417	ERDS2TJ471	ER0S2CKF4700	Metal 470 ohms 1/8W
R419	ERDS2TJ102	ER0S2TJ152	Carbon 1.5K ohms 1/4W
R421	ERDS2TJ122	ER0SCKF1201	Metal 1.2K ohms 1/8W
R418,R422	ERDS2TJ393	ER0S2CKF3902	Metal 39K ohms 1/8W
R423,R426	ERD2FCG151	ERG12SJ151	Metal 10K ohms 1/4W
R429	EDRS2TJ512	ERDS2TJ103	Carbon 150 ohms 1/2W
R430	ERDS2TJ222	-------------------	
R514,R515	ERDS2TJ472T	ER0S2CKF4701	Metal 4.7K ohms 1/8W
R516,R517	ERDS2TJ472T	ER0S2CKF4701	Metal 4.7K ohms 1/8W
C405,C406	ECEA2AU220E	ECEA1JU470	Electrolytic 47 µF 63V
C410	RBA10V221M	YWRBA10V470M	Electrolytic 47 µF 10V
C416	RBA10V471M	YWRBA25V221M	Electrolytic 220 µF 25V
C407,C408	ECEA1JU470	YWRA263S470	Electrolytic 47 µF 63V
D405,D406	YWHZS39EB1	YWMTZ33B	Diode
D505,D506	YWHZS20EB1	YWHZS18EB2	Diode

REFERENCE NO.	ORIGINAL PART NO.	NEW PART NO.	DESCRIPTION
POWER TR A CIRCUIT BOARD (WP-9220)			
Q361	--------------	2SC2336B-PQ	Transistor
Q362	--------------	2SA1006B-PQ	Transistor
D361,D362	--------------	EM1Z	Diode
R361,R362	--------------	ERG12SJ470	Metal 47 ohms
R363,R364	--------------	ER0S2CKF2R20	Metal 2.2K ohms
R365	--------------	ERG12SJ681	Metal 680 ohms
R366	--------------	ER0S2CKF68R0	Metal 68 ohms
POWER TR B CIRCUIT BOARD (WP-9220)			
Q661	--------------	2SC2336B-PQ	Transistor
Q662	--------------	2SA1006B-PQ	Transistor
D661,D662	--------------	EM1Z	Diode
R661,R662	--------------	ERG12SJ470	Metal 47 ohms
R663,R664	--------------	ER0S2CKF2R20	Metal 2.2K ohms
R665	--------------	ERG12SJ681	Metal 680 ohms
R666	--------------	ER0S2CKF68R0	Metal 68 ohms
POWER A CIRCUIT BOARD (WP-9220)			
R300	--------------	ERDS2TJ103	Carbon 10 Kohms
R309,R311	ERD25FJ220	ERG12SJ470	Metal 47 ohms
R310	ERDS2FJ331	ERG12SJ681	Metal 680 ohms
R313	ERDS2FJ330	ER0S2CKF68R0	Metal 680 ohms
POWER B CIRCUIT BOARD (WP-9220)			
R600	--------------	ERDS2TJ103	Carbon 10 Kohms
R609,R611	ERD25FJ220	ERG12SJ470	Metal 47 ohms
R610	ERDS2FJ331	ERG12SJ681	Metal 680 ohms
R613	ERDS2FJ330	ER0S2CKF68R0	Metal 680 ohms
POWER SUPPLY CIRCUIT BOARD (WP-9220)			
C701,C702 C703,C704	R0A16V222M	YWR2025V222	Electrolytic 2200 µF

CONDUCTOR

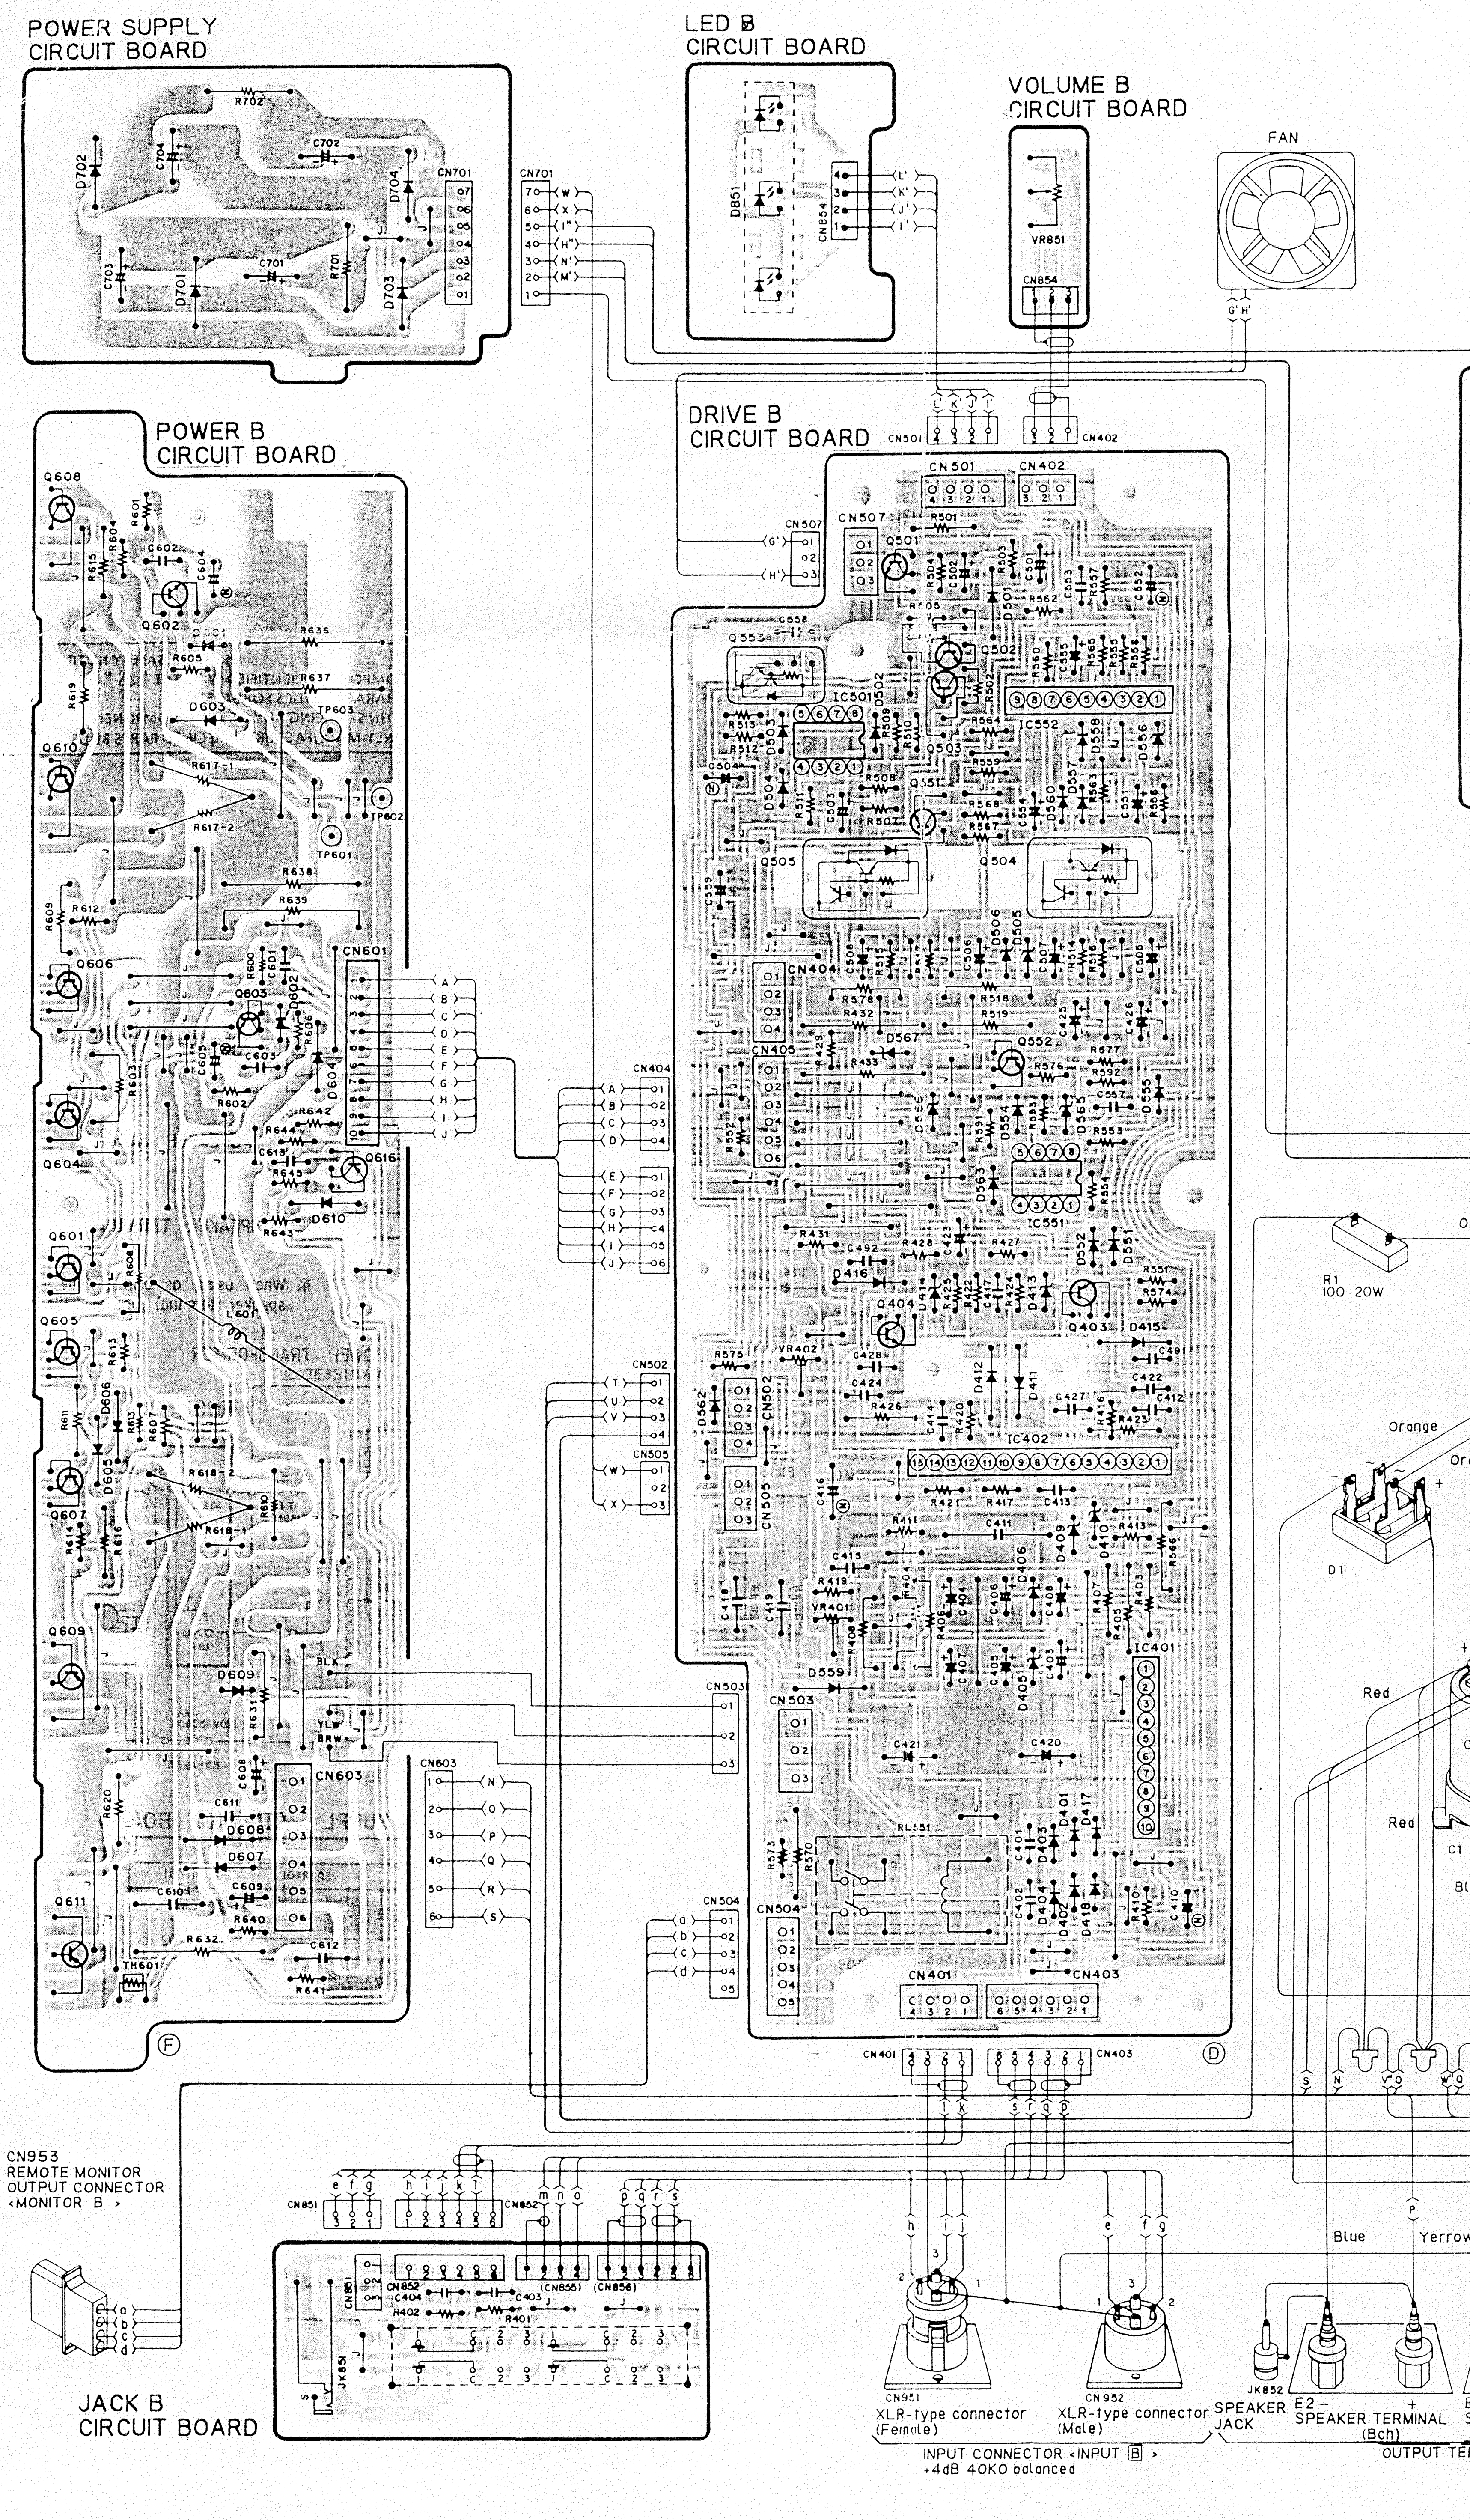

POWER SUPPLY CIRCUIT BOARD
LED B CIRCUIT BOARD
VOLUME B CIRCUIT BOARD
FAN
CN701
DB51
CN854
VR851
POWER B CIRCUIT BOARD
DRIVE B CIRCUIT BOARD
CN501
CN402
CN507
CN601
CN404
CN405
CN502
CN505
CN503
CN603
CN504
CN401
CN403
IC501
IC552
IC551
IC402
IC401
RL551
R1 100 20W
D1
Orange
Red
Blue
Yerrow
CN953 REMOTE MONITOR OUTPUT CONNECTOR <MONITOR B >
CN851
CN852
CN855
CN856
JK851
JACK B CIRCUIT BOARD
CN951 XLR-type connector (Female)
CN952 XLR-type connector (Male)
INPUT CONNECTOR <INPUT B > +4dB 40KO balanced
JK852 SPEAKER JACK
E2 – + SPEAKER TERMINAL (Bch)
OUTPUT TE

CONDUCTOR VIEW OF WP-9110

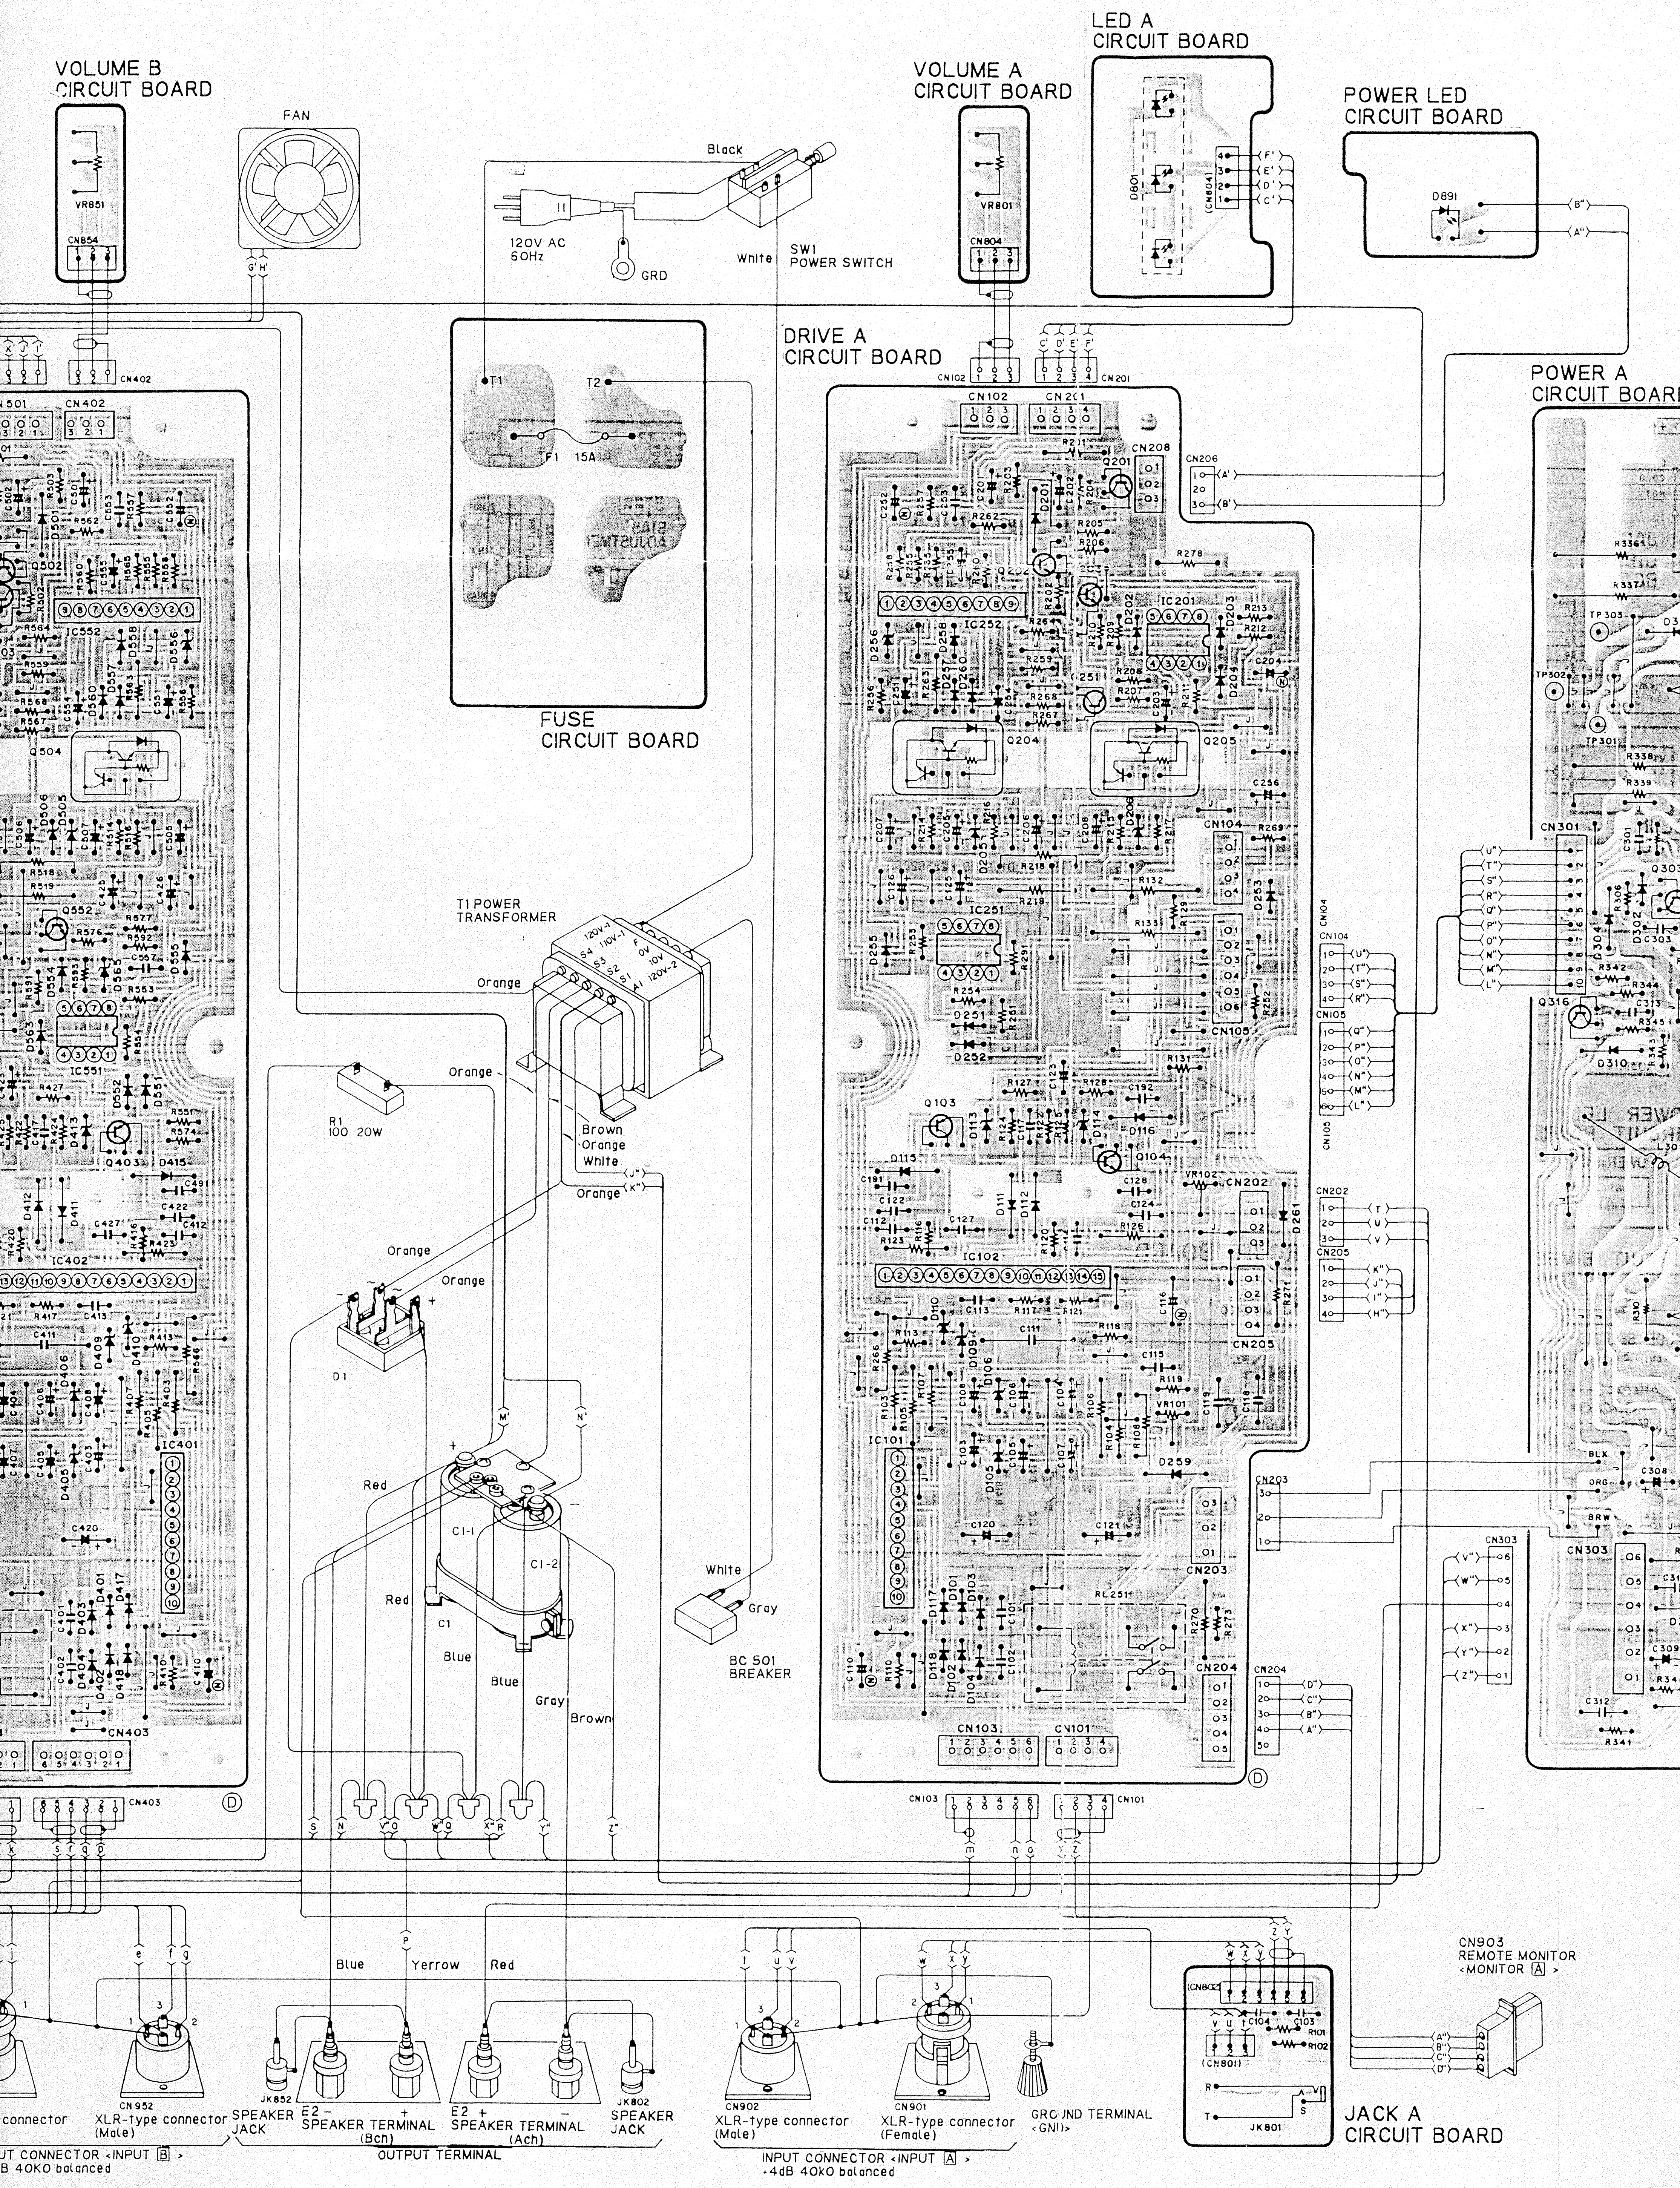
VOLUME B
CIRCUIT BOARD
VR851
CN854
FAN
Black
120V AC
60Hz
GRD
White
SW1
POWER SWITCH
VOLUME A
CIRCUIT BOARD
VR801
CN804
LED A
CIRCUIT BOARD
D801
POWER LED
CIRCUIT BOARD
D891
CN402
FUSE
CIRCUIT BOARD
T1
T2
F1 15A
DRIVE A
CIRCUIT BOARD
CN102
CN201
CN208
CN206
POWER A
CIRCUIT BOARD
Q504
Q552
IC551
IC402
IC401
CN403
T1 POWER
TRANSFORMER
Orange
Brown
White
R1
100 20W
D1
Red
C1-1
C1-2
C1
Blue
Gray
White
BC 501
BREAKER
IC252
IC201
Q204
Q205
IC251
CN104
CN105
Q103
Q104
IC102
CN202
CN205
IC101
CN203
RL251
CN204
CN103
CN101
CN301
Q316
CN303
Blue
Yerrow
Red
CN952
XLR-type connector
(Male)
JK852
SPEAKER
JACK
E2 –
SPEAKER TERMINAL
(Bch)
E2 +
SPEAKER TERMINAL
(Ach)
JK802
SPEAKER
JACK
OUTPUT TERMINAL
CN902
XLR-type connector
(Male)
CN901
XLR-type connector
(Female)
GROUND TERMINAL
‹GND›
INPUT CONNECTOR ‹INPUT A›
+4dB 40kΩ balanced
UT CONNECTOR ‹INPUT B›
B 40KΩ balanced
CN802
CN801
JK801
JACK A
CIRCUIT BOARD
CN903
REMOTE MONITOR
‹MONITOR A›

EW OF WP-9110

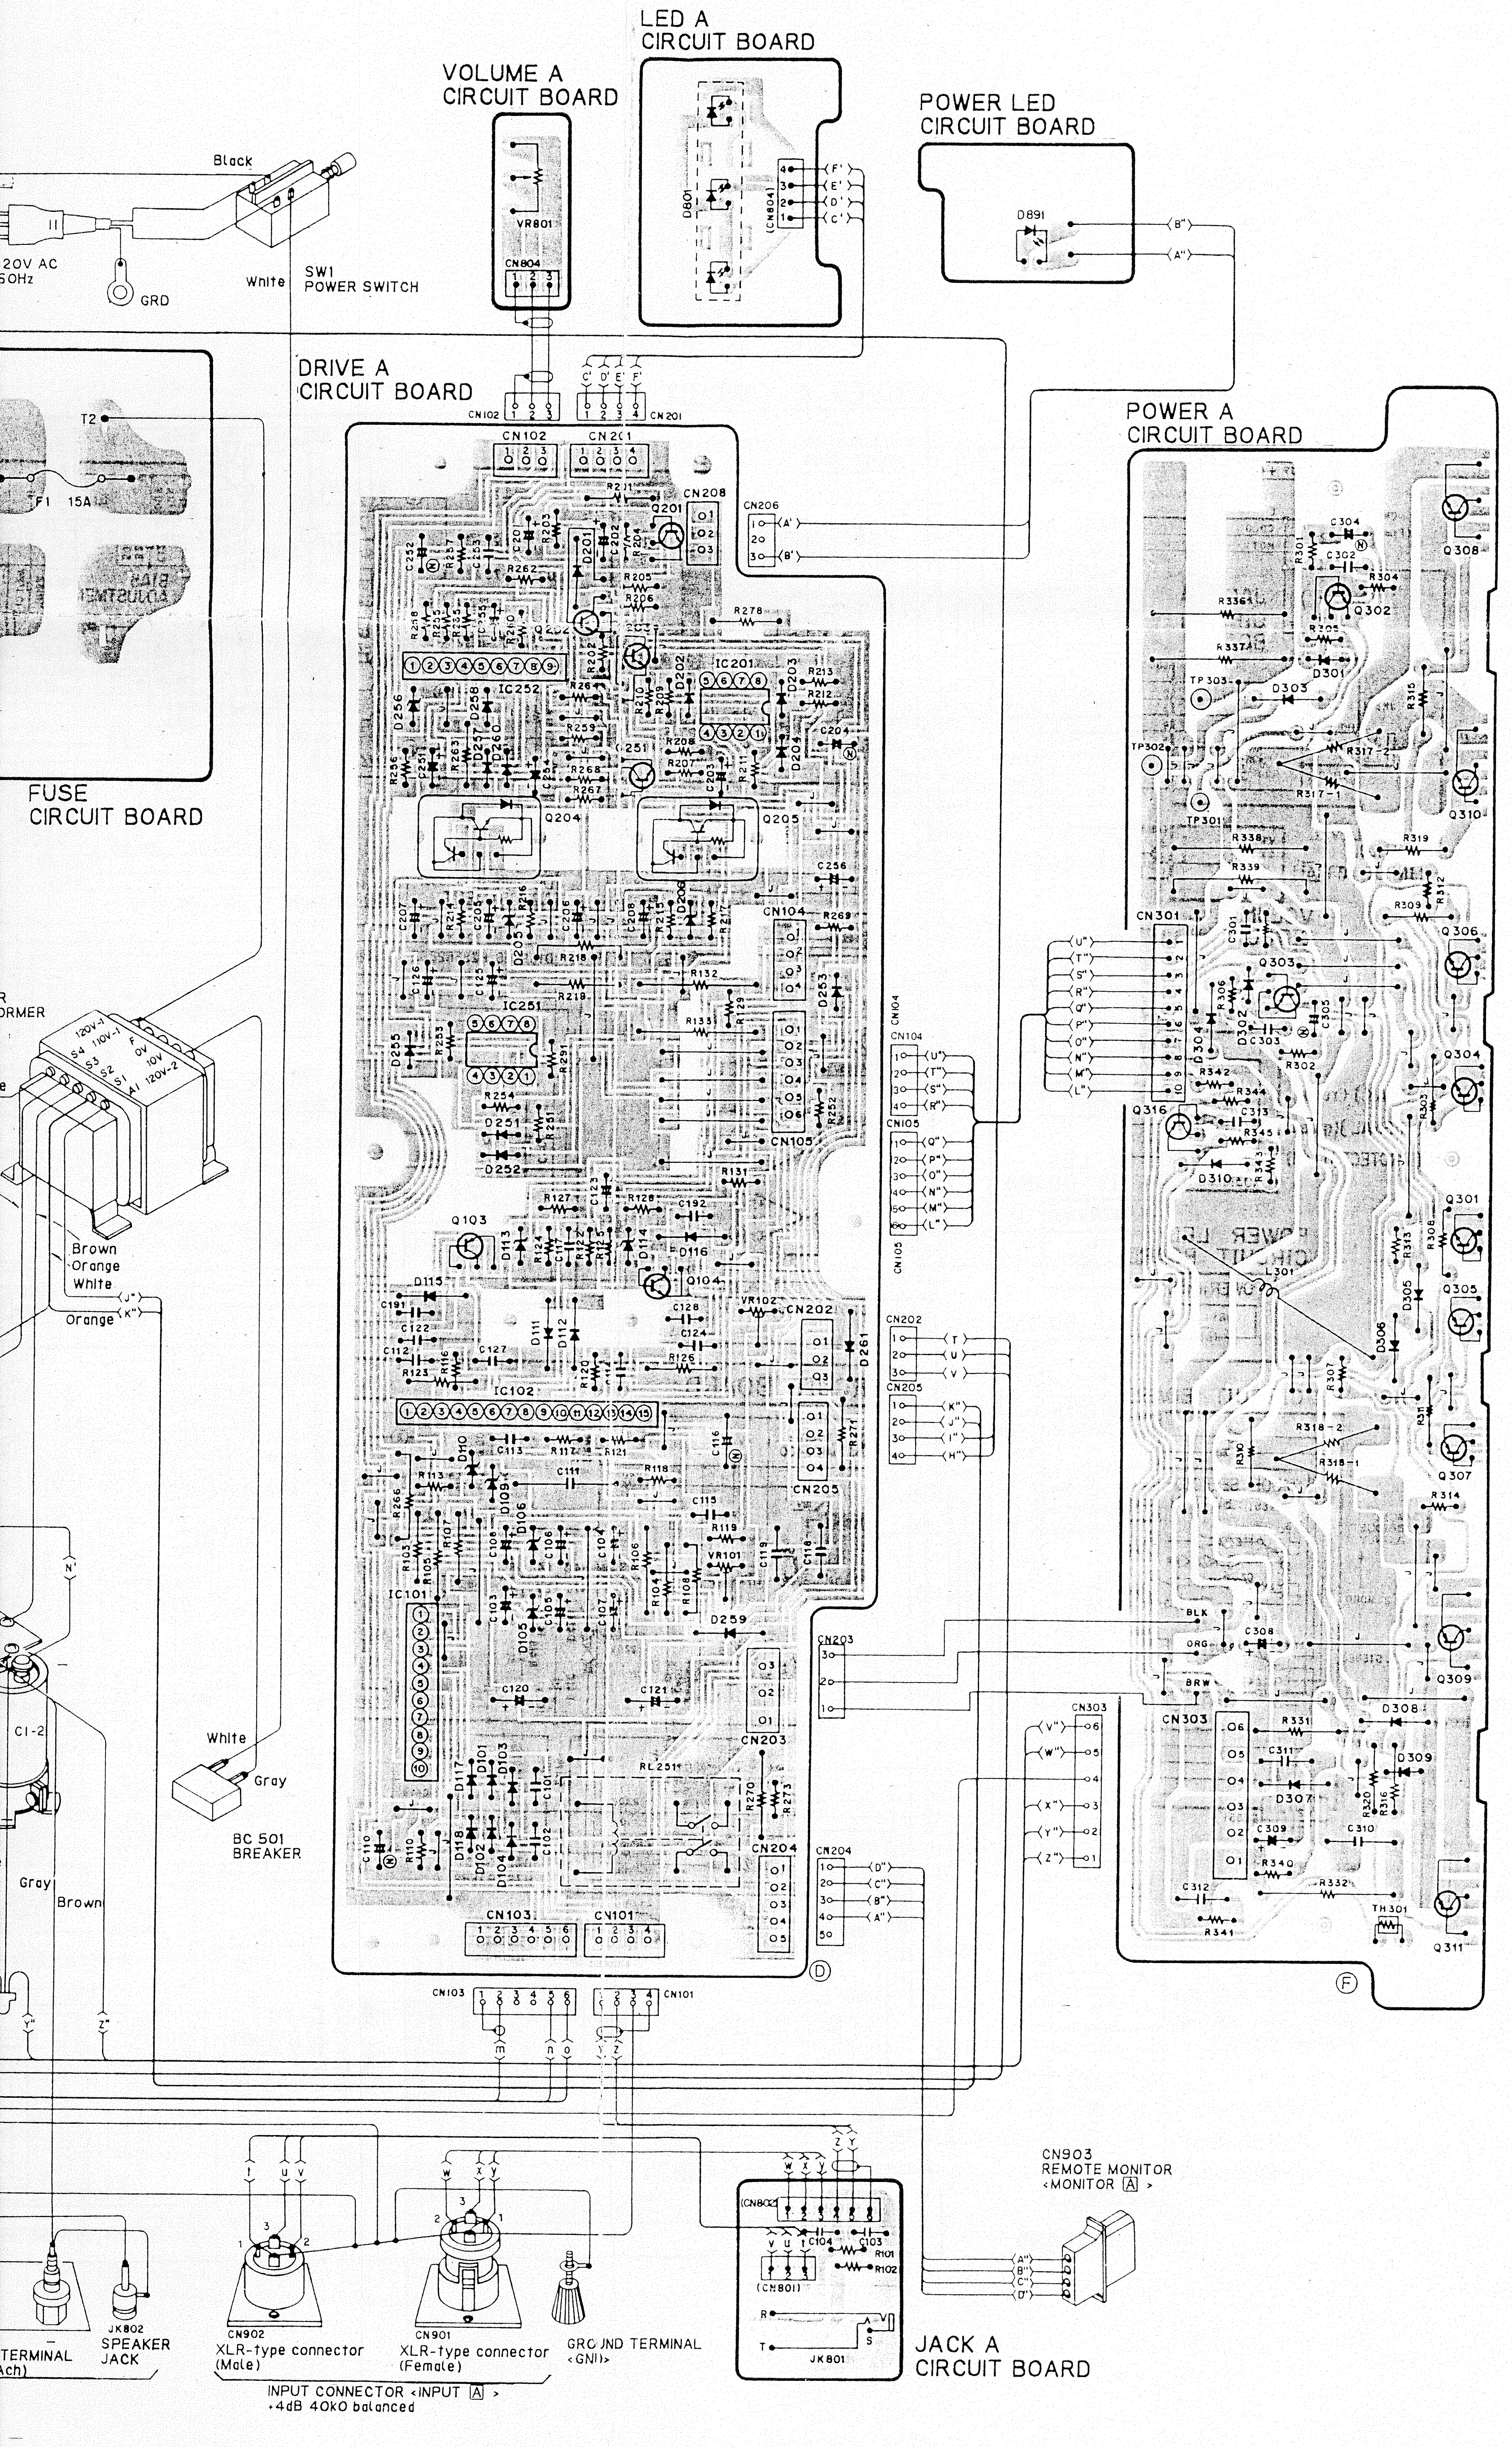
LED A
CIRCUIT BOARD
VOLUME A
CIRCUIT BOARD
POWER LED
CIRCUIT BOARD
Black
20V AC
60Hz
GRD
White
SW1
POWER SWITCH
VR801
CN804
D801
(CN804)
D891
DRIVE A
CIRCUIT BOARD
CN102
CN201
T2
F1
15A
FUSE
CIRCUIT BOARD
POWER A
CIRCUIT BOARD
CN206
CN208
IC201
IC252
IC251
Q204
Q205
CN104
CN105
CN202
CN205
IC102
IC101
VR101
VR102
CN203
CN204
CN103
CN101
RL251
Q103
Q104
Q201
CN301
CN303
Q301
Q302
Q303
Q304
Q305
Q306
Q307
Q308
Q309
Q310
Q311
Q316
TP301
TP302
TP303
L301
TH301
BLK
ORG
BRW
Brown
Orange
White
Orange
White
Gray
BC 501
BREAKER
C1-2
Gray
Brown
ORMER
S4
S3
S2
S1
120V-1
110V-1
0V
10V
120V-2
Ⓓ
Ⓕ
CN903
REMOTE MONITOR
<MONITOR Ⓐ>
(CN802)
(CN801)
R101
R102
C103
C104
JK801
JACK A
CIRCUIT BOARD
JK802
SPEAKER
JACK
TERMINAL
ch)
CN902
XLR-type connector
(Male)
CN901
XLR-type connector
(Female)
GROUND TERMINAL
<GND>
INPUT CONNECTOR <INPUT Ⓐ>
+4dB 40kΩ balanced

SCHEMATIC D

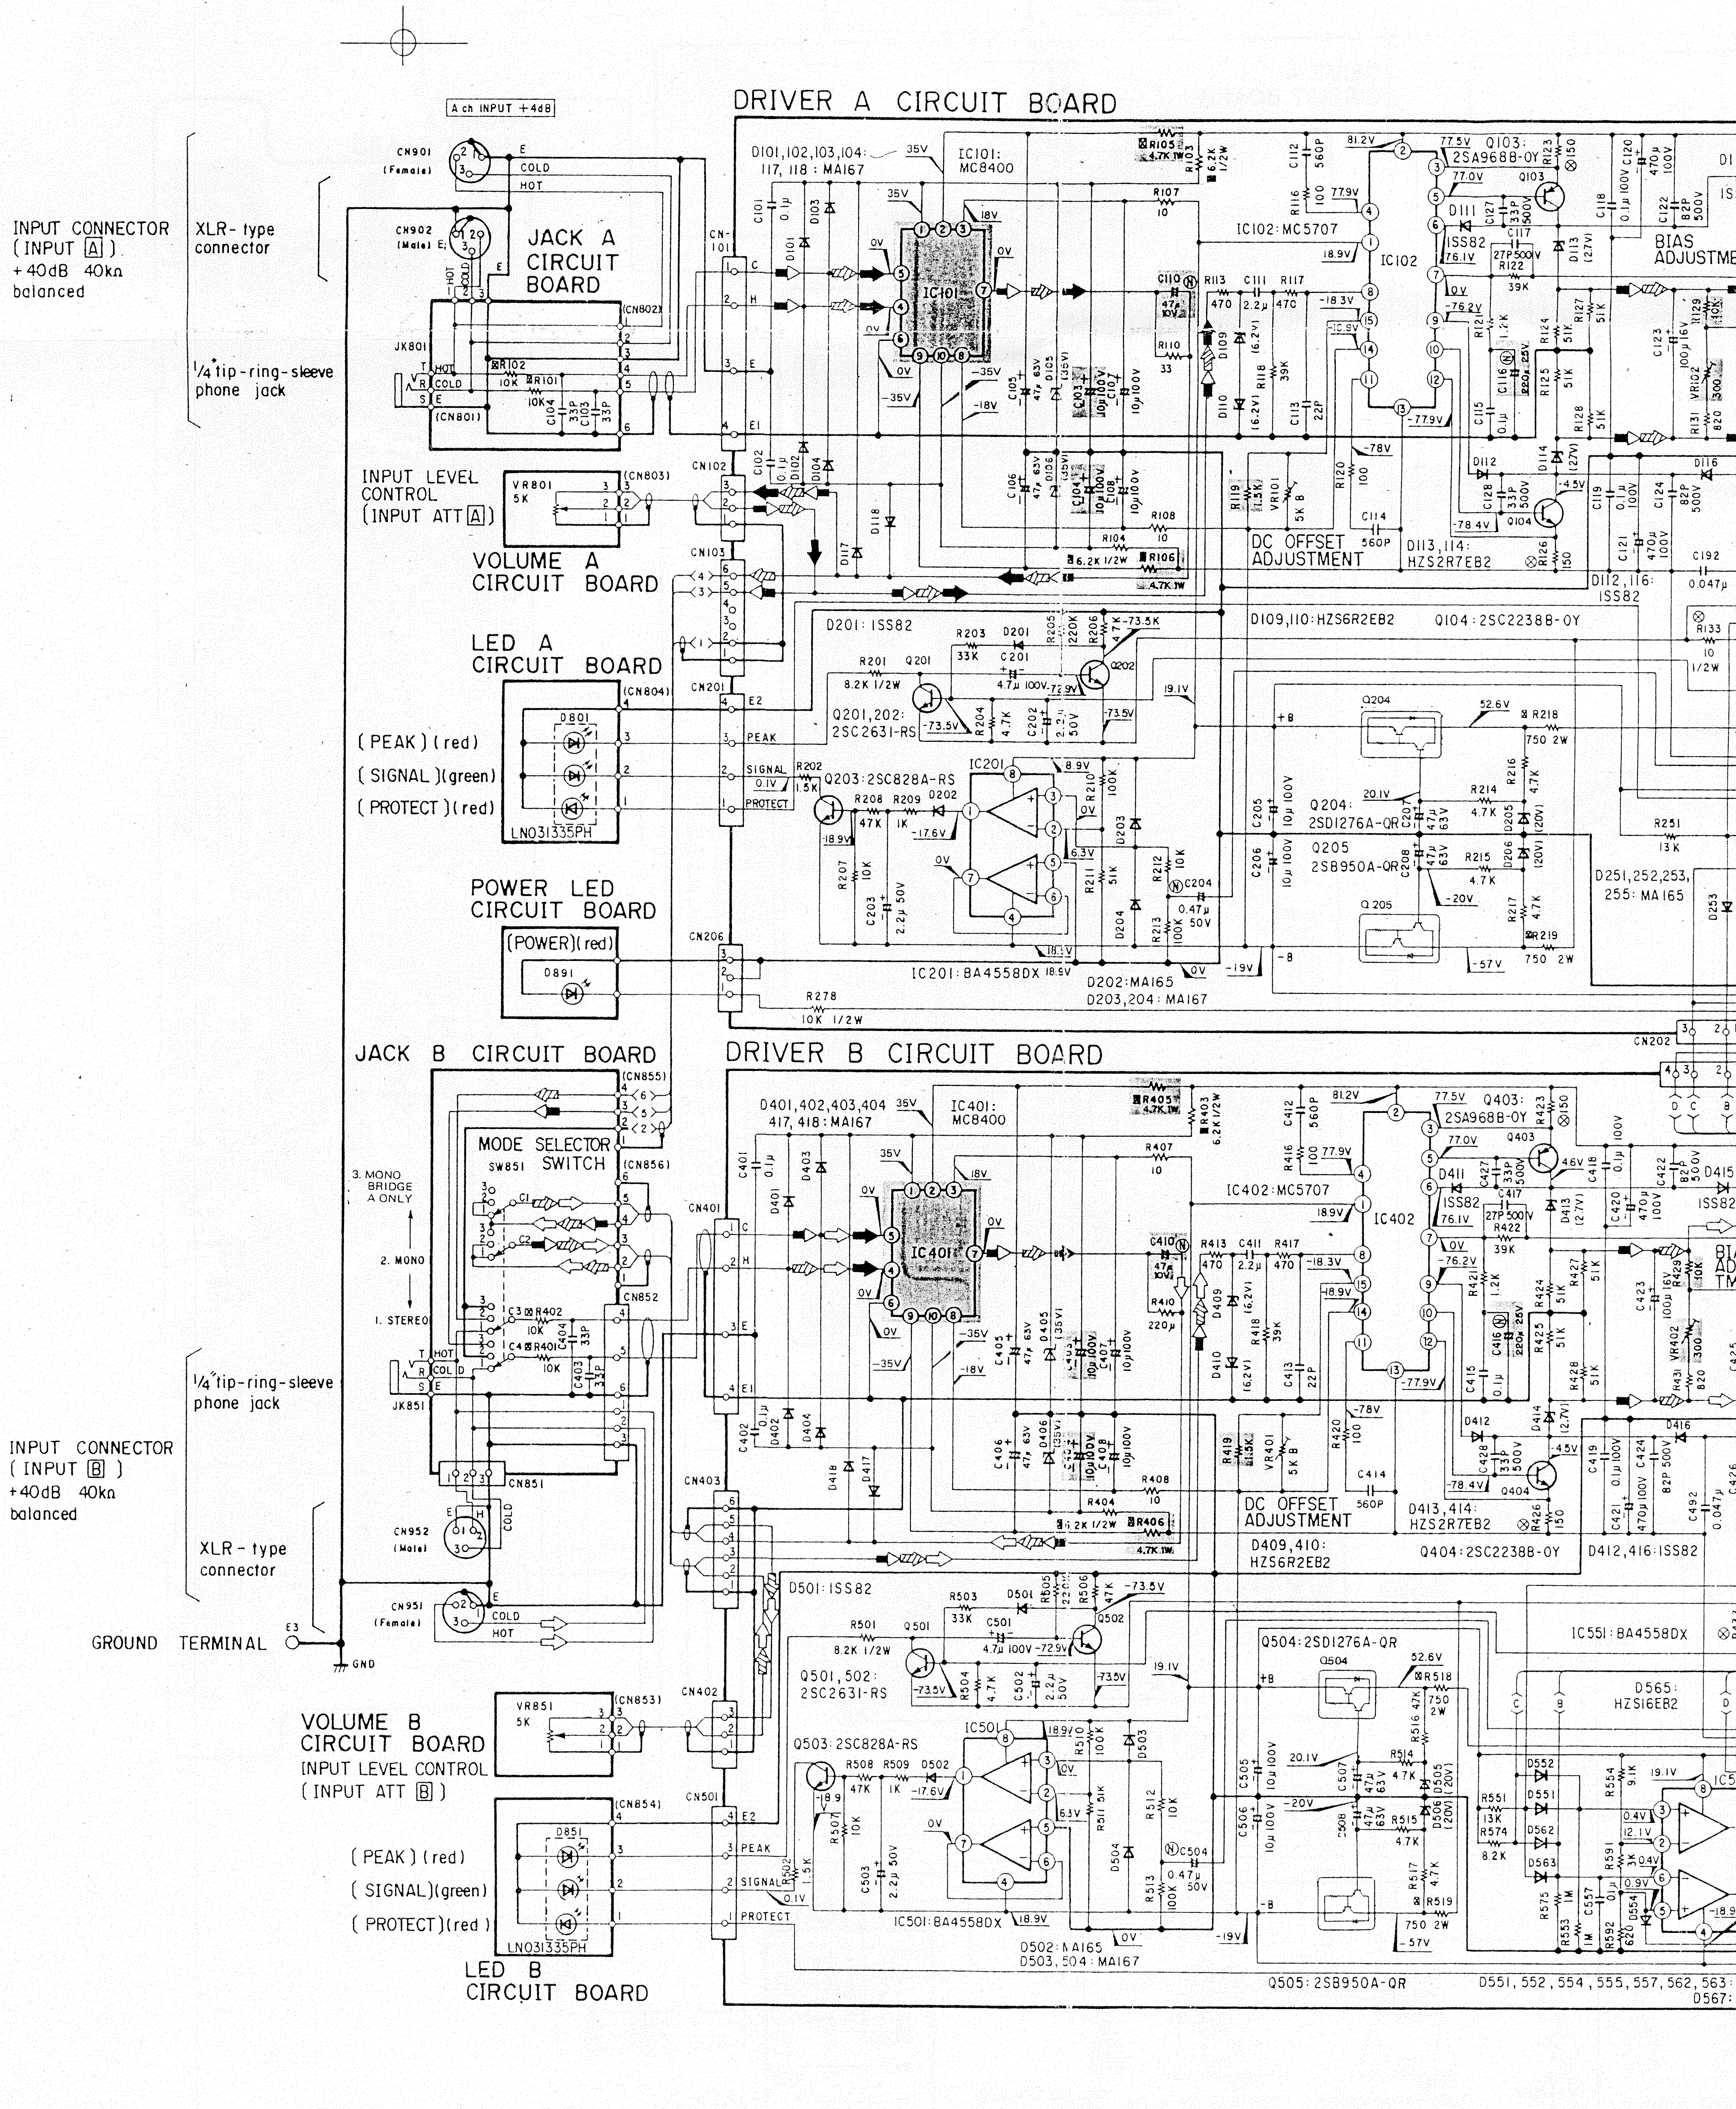
A ch INPUT +4dB
DRIVER A CIRCUIT BOARD
INPUT CONNECTOR (INPUT A) +40dB 40kΩ balanced
XLR-type connector
1/4" tip-ring-sleeve phone jack
CN901 (Female)
CN902 (Male)
JACK A CIRCUIT BOARD
JK801
INPUT LEVEL CONTROL (INPUT ATT A)
VR801 5K
VOLUME A CIRCUIT BOARD
LED A CIRCUIT BOARD
(PEAK) (red)
(SIGNAL) (green)
(PROTECT) (red)
LN031335PH
POWER LED CIRCUIT BOARD
(POWER) (red)
D891
IC101: MC8400
IC102: MC5707
D101,102,103,104, 117,118: MA167
Q103: 2SA968B-OY
Q104: 2SC2238B-OY
D109,110: HZS6R2EB2
D113,114: HZS2R7EB2
D112,116: ISS82
DC OFFSET ADJUSTMENT
BIAS ADJUSTME
D201: ISS82
Q201,202: 2SC2631-RS
Q203: 2SC828A-RS
Q204: 2SD1276A-QR
Q205: 2SB950A-QR
IC201: BA4558DX
D202: MA165
D203,204: MA167
D251,252,253, 255: MA165
JACK B CIRCUIT BOARD
DRIVER B CIRCUIT BOARD
MODE SELECTOR SWITCH
SW851
3. MONO BRIDGE A ONLY
2. MONO
1. STEREO
JK851
INPUT CONNECTOR (INPUT B) +40dB 40kΩ balanced
XLR-type connector
CN952 (Male)
CN951 (Female)
GROUND TERMINAL
GND
IC401: MC8400
IC402: MC5707
D401,402,403,404 417,418: MA167
Q403: 2SA968B-OY
Q404: 2SC2238B-OY
D409,410: HZS6R2EB2
D413,414: HZS2R7EB2
D412,416: ISS82
D501: ISS82
Q501,502: 2SC2631-RS
Q503: 2SC828A-RS
Q504: 2SD1276A-QR
Q505: 2SB950A-QR
IC501: BA4558DX
D502: MA165
D503,504: MA167
IC551: BA4558DX
D565: HZS16EB2
VOLUME B CIRCUIT BOARD
INPUT LEVEL CONTROL (INPUT ATT B)
VR851 5K
LED B CIRCUIT BOARD
LN031335PH
D551,552,554,555,557,562,563
D567

SCHEMATIC DIAGRAM OF WP-9220

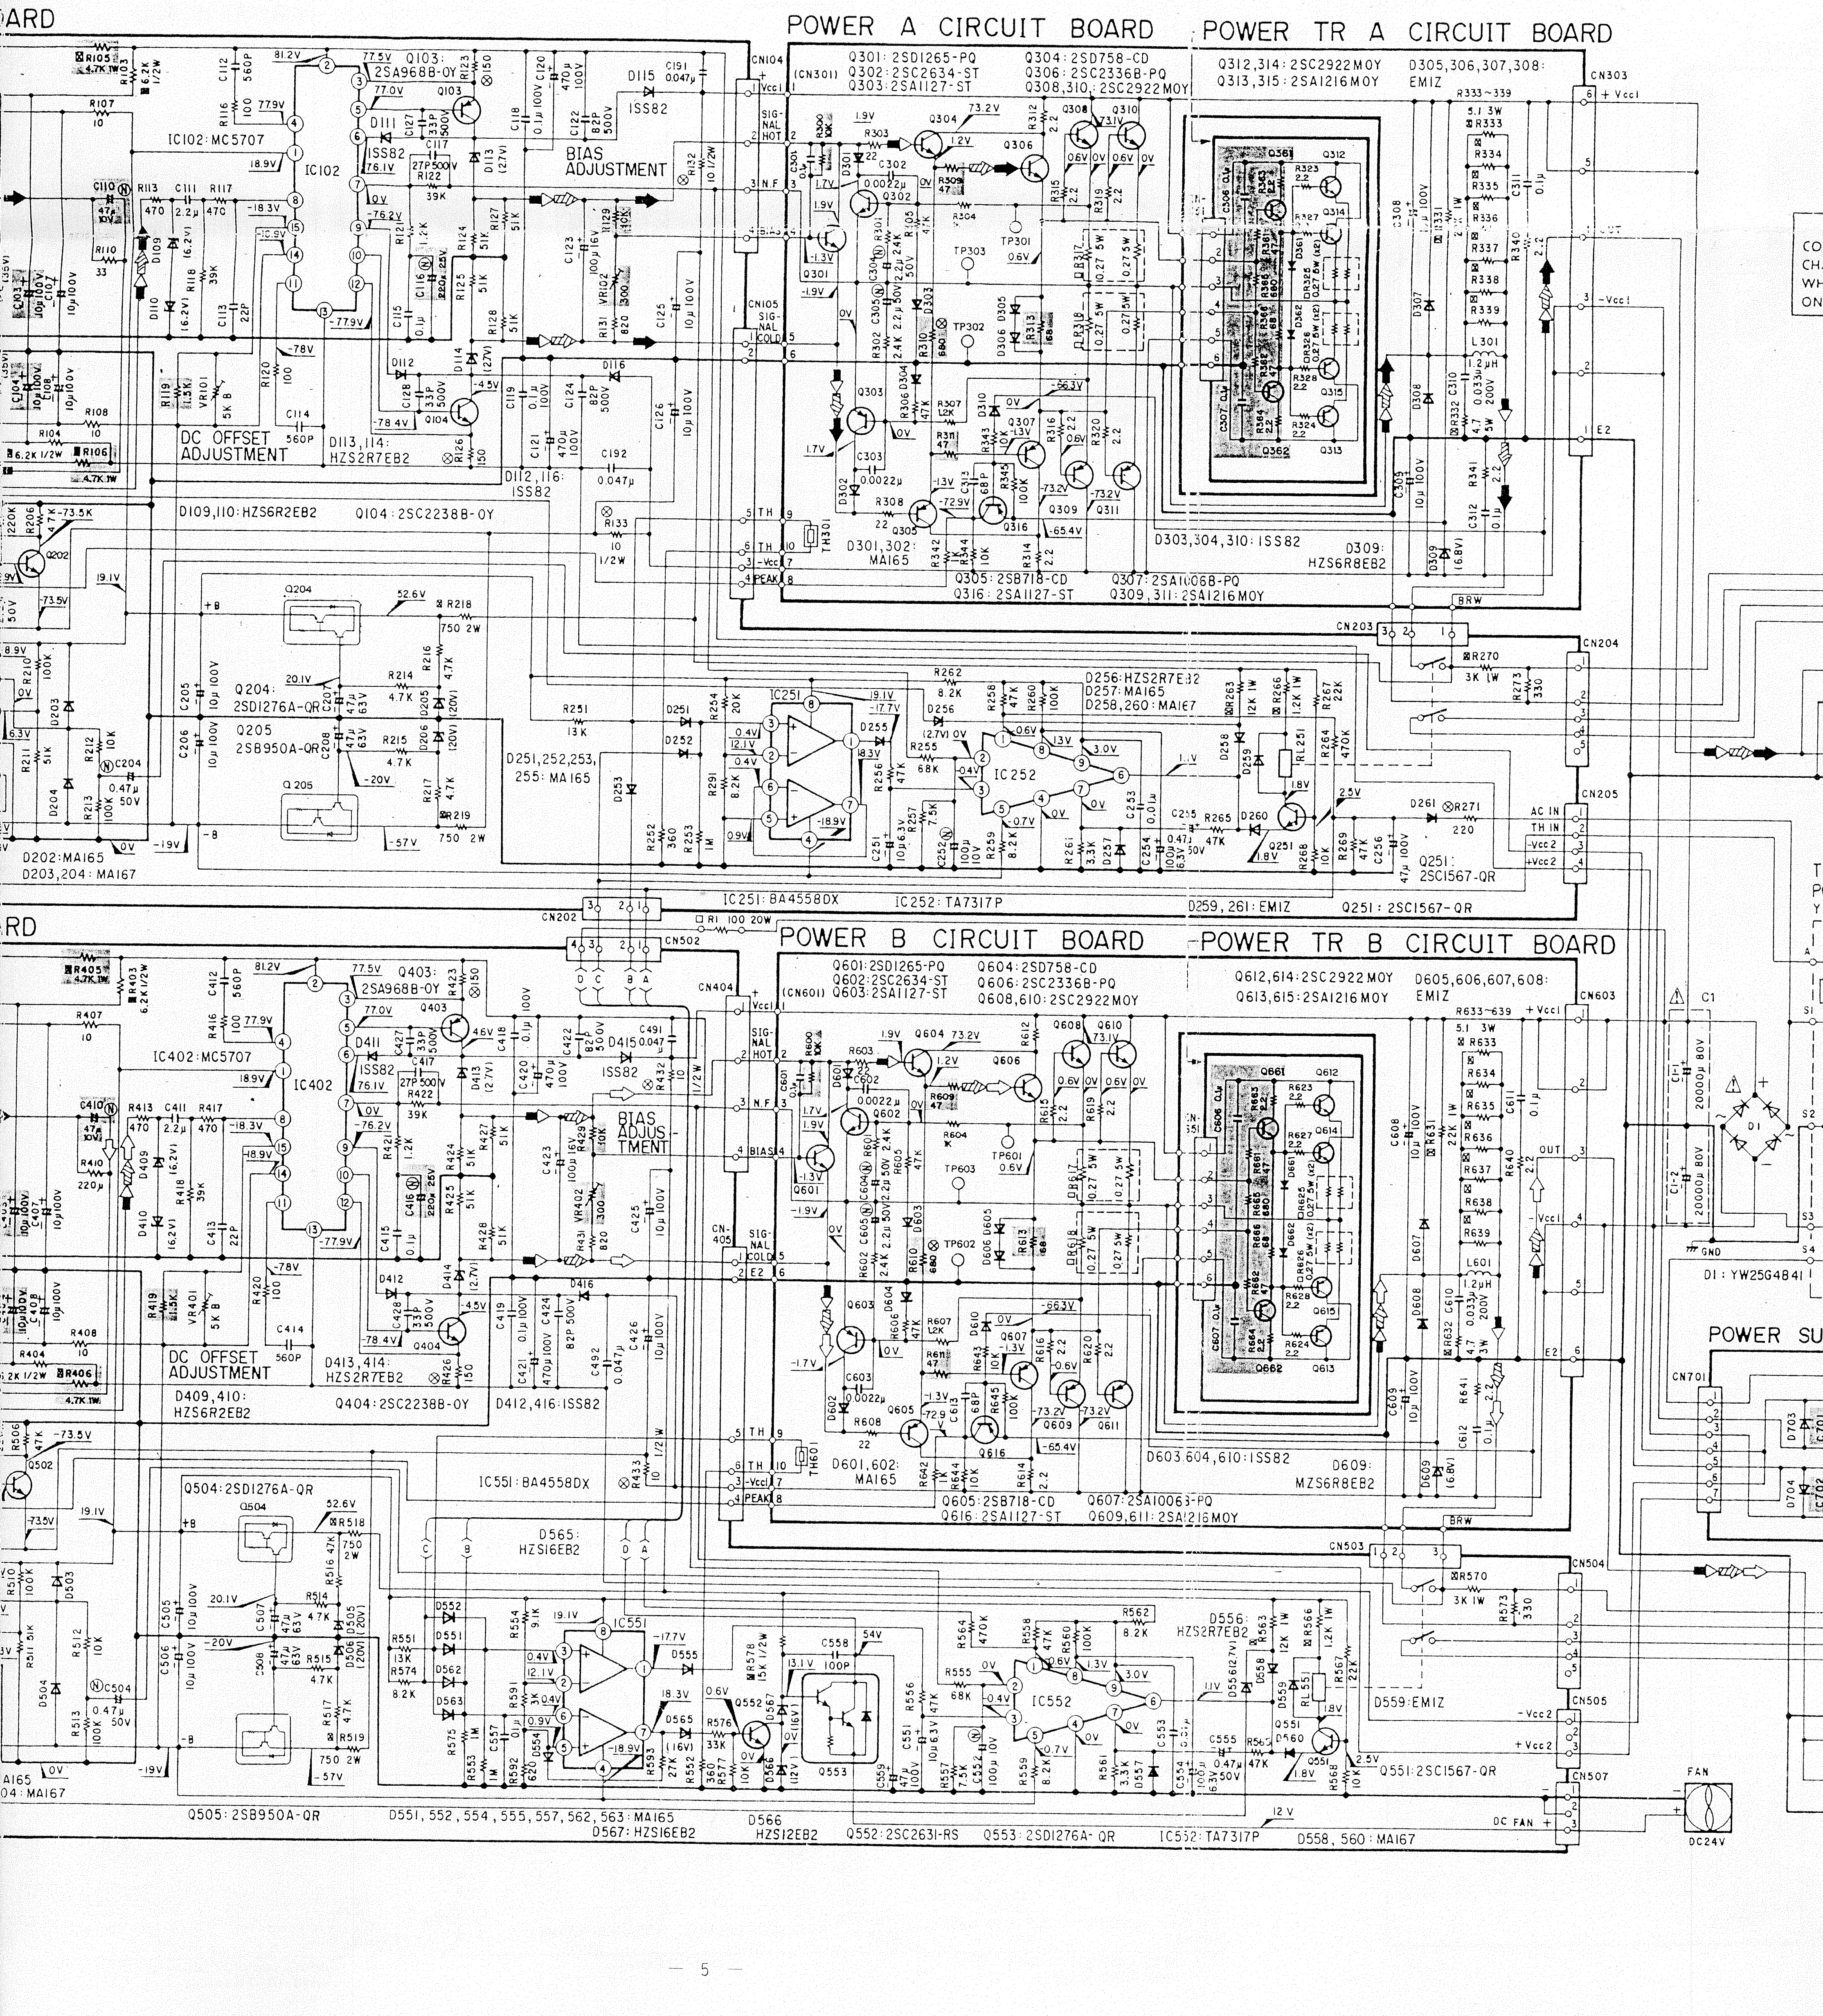
POWER A CIRCUIT BOARD
POWER TR A CIRCUIT BOARD
Q301: 2SD1265-PQ
Q302: 2SC2634-ST
Q303: 2SA1127-ST
Q304: 2SD758-CD
Q306: 2SC2336B-PQ
Q308,310: 2SC2922MOY
Q312,314: 2SC2922MOY
Q313,315: 2SA1216MOY
Q305,306,307,308: EMIZ
IC102: MC5707
Q103: 2SA968B-OY
Q104: 2SC2238B-OY
BIAS ADJUSTMENT
DC OFFSET ADJUSTMENT
D113,114: HZS2R7EB2
D112,116: ISS82
D109,110: HZS6R2EB2
D301,302: MA165
D303,304,310: ISS82
D309: HZS6R8EB2
Q305: 2SB718-CD
Q316: 2SA1127-ST
Q307: 2SA1006B-PQ
Q309,311: 2SA1216MOY
Q204: 2SD1276A-QR
Q205: 2SB950A-QR
D202: MA165
D203,204: MA167
D251,252,253,255: MA165
D256: HZS2R7EB2
D257: MA165
D258,260: MA167
IC251: BA4558DX
IC252: TA7317P
D259,261: EMIZ
Q251: 2SC1567-QR
POWER B CIRCUIT BOARD
POWER TR B CIRCUIT BOARD
Q601: 2SD1265-PQ
Q602: 2SC2634-ST
Q603: 2SA1127-ST
Q604: 2SD758-CD
Q606: 2SC2336B-PQ
Q608,610: 2SC2922MOY
Q612,614: 2SC2922MOY
Q613,615: 2SA1216MOY
Q605,606,607,608: EMIZ
IC402: MC5707
Q403: 2SA968B-OY
Q404: 2SC2238B-OY
BIAS ADJUSTMENT
DC OFFSET ADJUSTMENT
D413,414: HZS2R7EB2
D409,410: HZS6R2EB2
D412,416: ISS82
D601,602: MA165
D603,604,610: ISS82
D609: MZS6R8EB2
Q605: 2SB718-CD
Q616: 2SA1127-ST
Q607: 2SA10063-PQ
Q609,611: 2SA1216MOY
IC551: BA4558DX
Q504: 2SD1276A-QR
Q505: 2SB950A-QR
D565: HZS16EB2
D551,552,554,555,557,562,563: MA165
D567: HZS16EB2
D566: HZS12EB2
Q552: 2SC2631-RS
Q553: 2SD1276A-QR
IC552: TA7317P
D556: HZS2R7EB2
D558,560: MA167
D559: EMIZ
Q551: 2SC1567-QR
D1: YW25G4B41
POWER SU
FAN
DC24V
DC FAN
CN104
CN105
CN303
CN202
CN203
CN204
CN205
CN404
CN405
CN502
CN503
CN504
CN505
CN507
CN603
CN701
R1 100 20W
C1
GND
+Vcc1
-Vcc1
+Vcc2
-Vcc2
SIG-NAL HOT
SIG-NAL COLD
N.F
BIAS
TH
PEAK
BRW
AC IN
TH IN
OUT
E2
TP301
TP302
TP303
TP601
TP602
TP603
TH301
TH601

RAM OF WP-9220

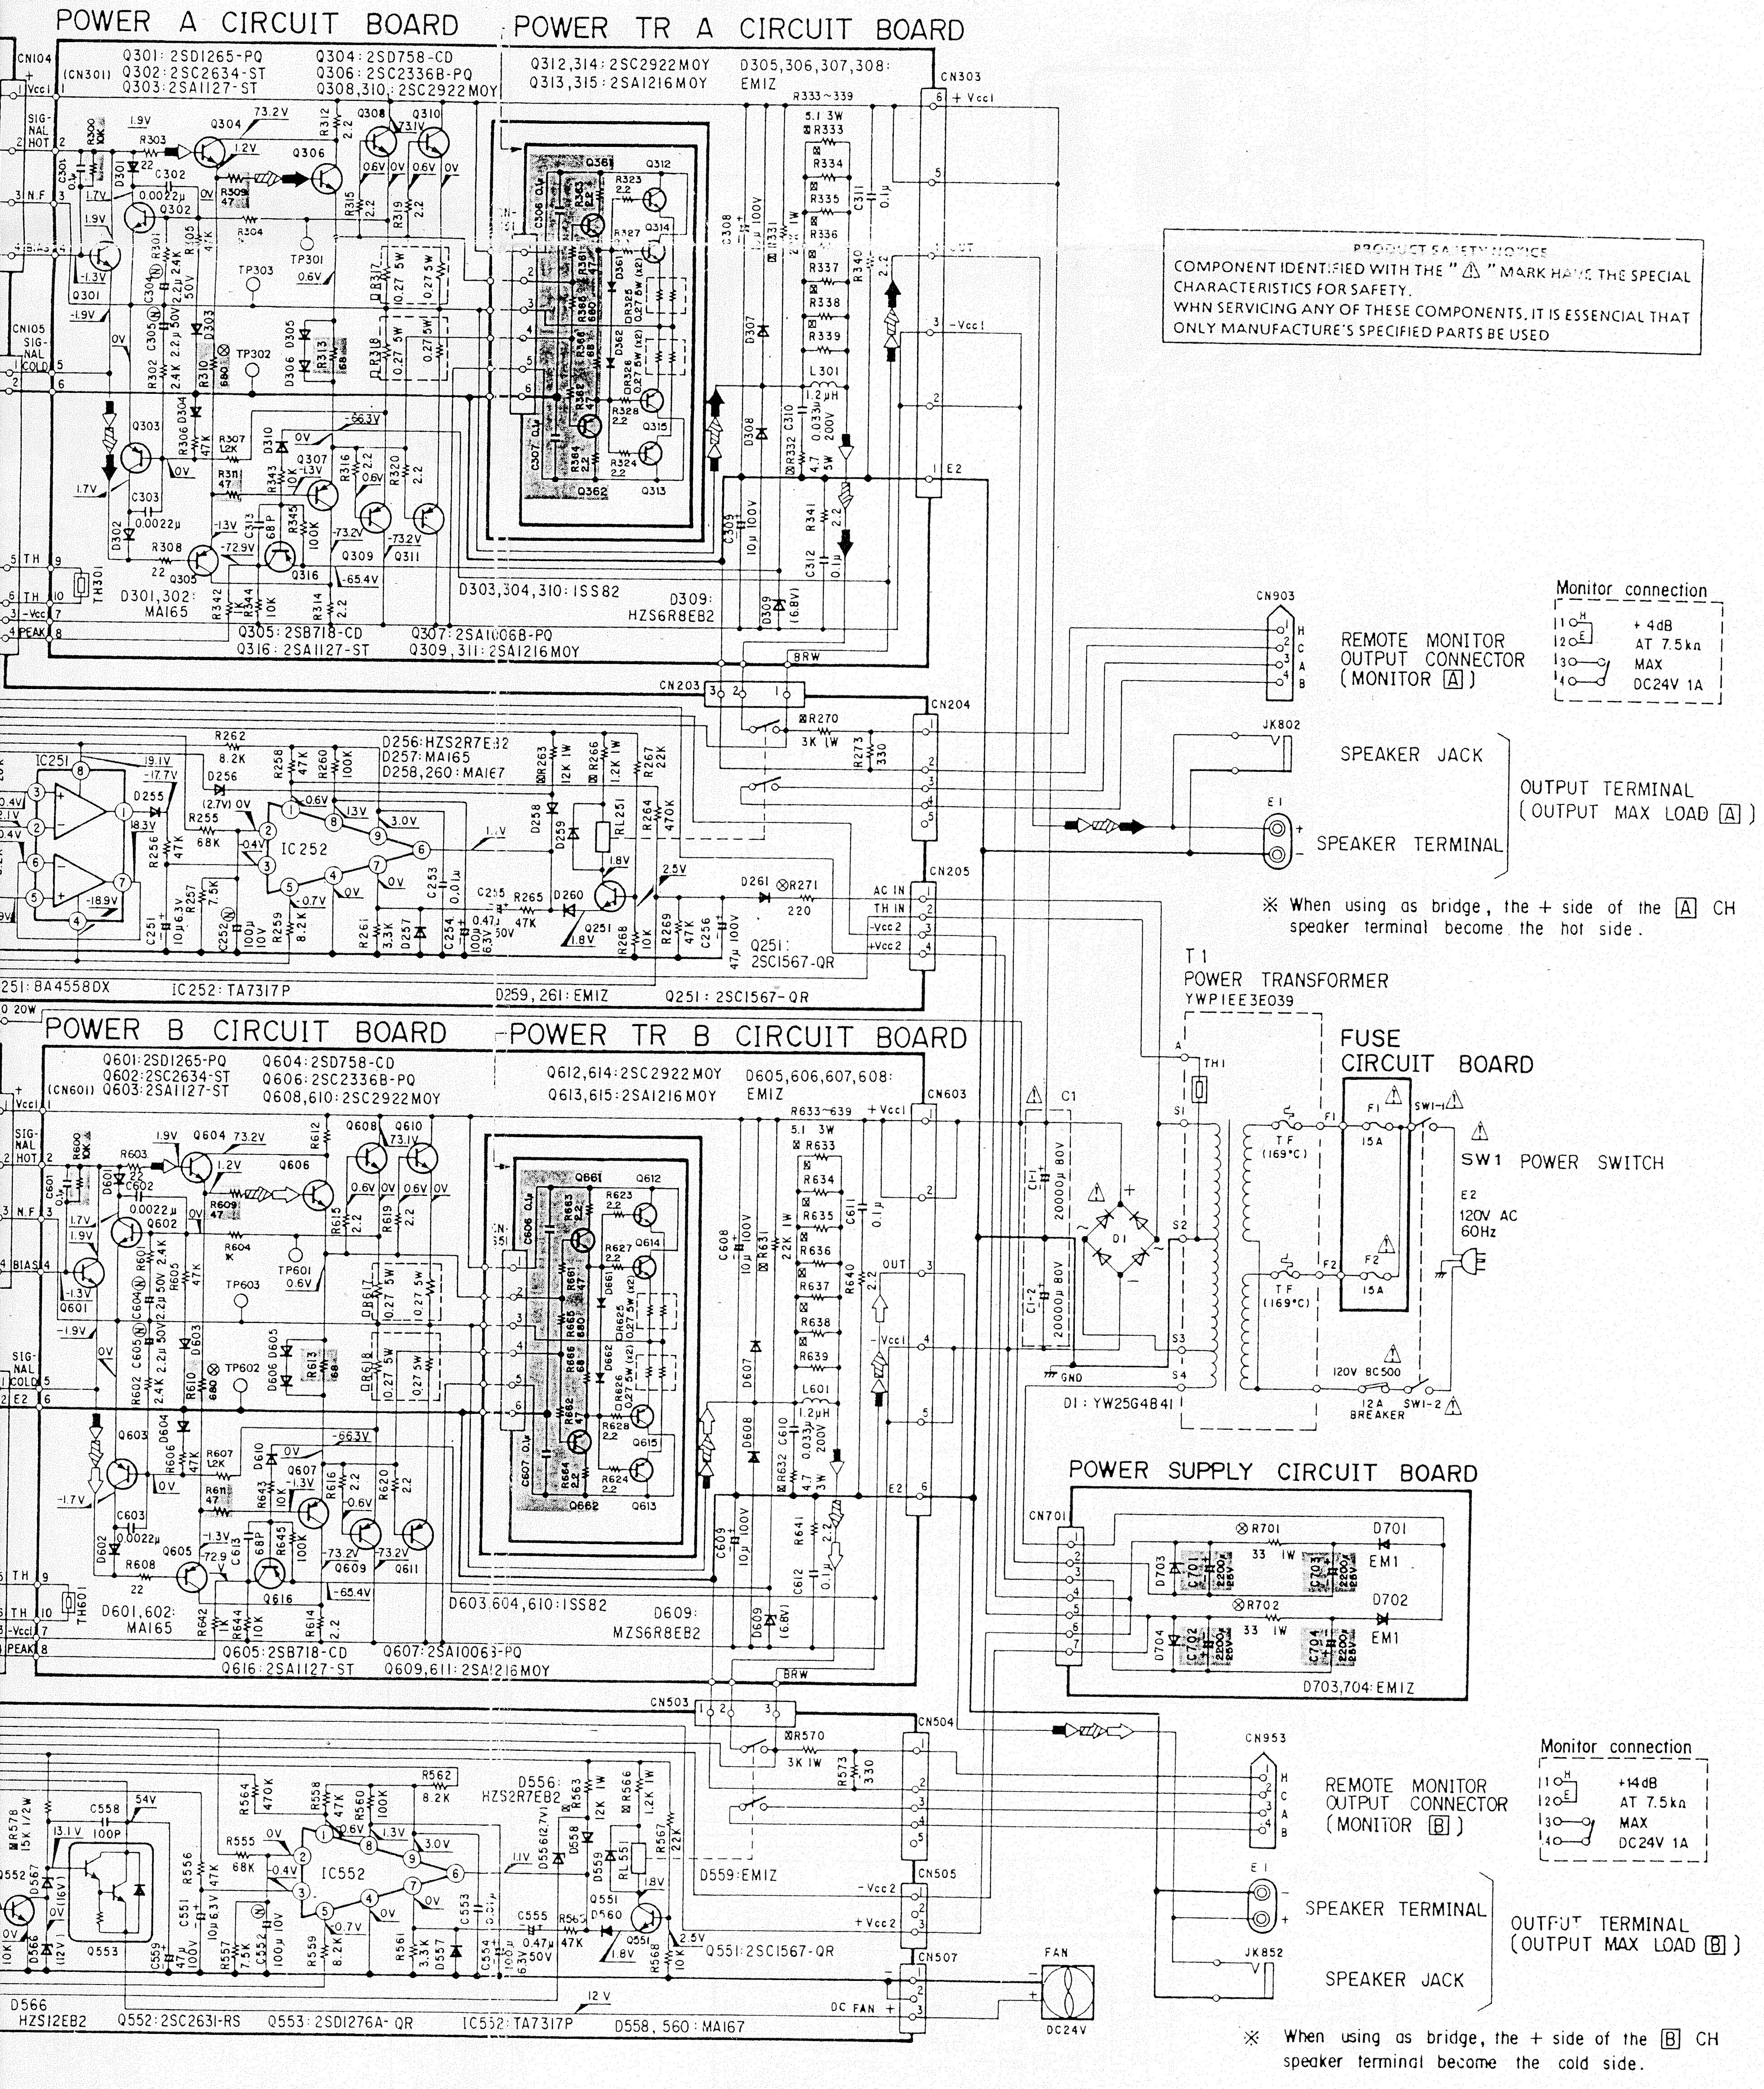
POWER A CIRCUIT BOARD
POWER TR A CIRCUIT BOARD
Q301: 2SD1265-PQ
Q302: 2SC2634-ST
Q303: 2SA1127-ST
Q304: 2SD758-CD
Q306: 2SC2336B-PQ
Q308,310: 2SC2922MOY
Q312,314: 2SC2922MOY
Q313,315: 2SA1216MOY
D305,306,307,308: EM1Z
R333~339
CN104
CN301
CN303
+Vcc1
-Vcc1
E2
TP301
TP302
TP303
TH301
D303,304,310: ISS82
D309: HZS6R8EB2
D301,302: MA165
Q305: 2SB718-CD
Q316: 2SA1127-ST
Q307: 2SA1006B-PQ
Q309,311: 2SA1216MOY
BRW
CN203
CN204
CN205
R270
IC251
IC252
D256: HZS2R7EB2
D257: MA165
D258,260: MA167
RL251
Q251: 2SC1567-QR
251: BA4558DX
IC252: TA7317P
D259,261: EM1Z
Q251: 2SC1567-QR
AC IN
TH IN
-Vcc2
+Vcc2
POWER B CIRCUIT BOARD
POWER TR B CIRCUIT BOARD
Q601: 2SD1265-PQ
Q602: 2SC2634-ST
Q603: 2SA1127-ST
Q604: 2SD758-CD
Q606: 2SC2336B-PQ
Q608,610: 2SC2922MOY
Q612,614: 2SC2922MOY
Q613,615: 2SA1216MOY
D605,606,607,608: EM1Z
R633~639
CN601
CN603
TP601
TP602
TP603
TH601
D603,604,610: ISS82
D609: MZS6R8EB2
D601,602: MA165
Q605: 2SB718-CD
Q616: 2SA1127-ST
Q607: 2SA1006B-PQ
Q609,611: 2SA1216MOY
CN503
CN504
CN505
CN507
R570
IC552
D556: HZS2R7EB2
D559: EM1Z
Q551: 2SC1567-QR
D566
HZS12EB2
Q552: 2SC2631-RS
Q553: 2SD1276A-QR
IC552: TA7317P
D558,560: MA167
DC FAN
FAN
DC24V
CN903
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR A)
Monitor connection
+4dB AT 7.5kΩ MAX DC24V 1A
JK802
SPEAKER JACK
E1
SPEAKER TERMINAL
OUTPUT TERMINAL (OUTPUT MAX LOAD A)
T1
POWER TRANSFORMER
YWP1EE3E039
TH1
C1
D1
D1: YW25G4B41
GND
FUSE CIRCUIT BOARD
F1
F2
15A
TF (169°C)
SW1 POWER SWITCH
120V AC 60Hz
120V 8C500
12A BREAKER
SW1-1
SW1-2
POWER SUPPLY CIRCUIT BOARD
CN701
R701
R702
D701
D702
D703
D704
EM1
D703,704: EM1Z
CN953
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR B)
Monitor connection
+14dB AT 7.5kΩ MAX DC24V 1A
SPEAKER TERMINAL
SPEAKER JACK
JK852
OUTPUT TERMINAL (OUTPUT MAX LOAD B)

PRODUCT SAFETY NOTICE

COMPONENT IDENTIFIED WITH THE " ⚠ " MARK HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY.

WHN SERVICING ANY OF THESE COMPONENTS, IT IS ESSENCIAL THAT ONLY MANUFACTURE'S SPECIFIED PARTS BE USED

※ When using as bridge, the + side of the A CH speaker terminal become the hot side.

※ When using as bridge, the + side of the B CH speaker terminal become the cold side.

SCHEMATIC D

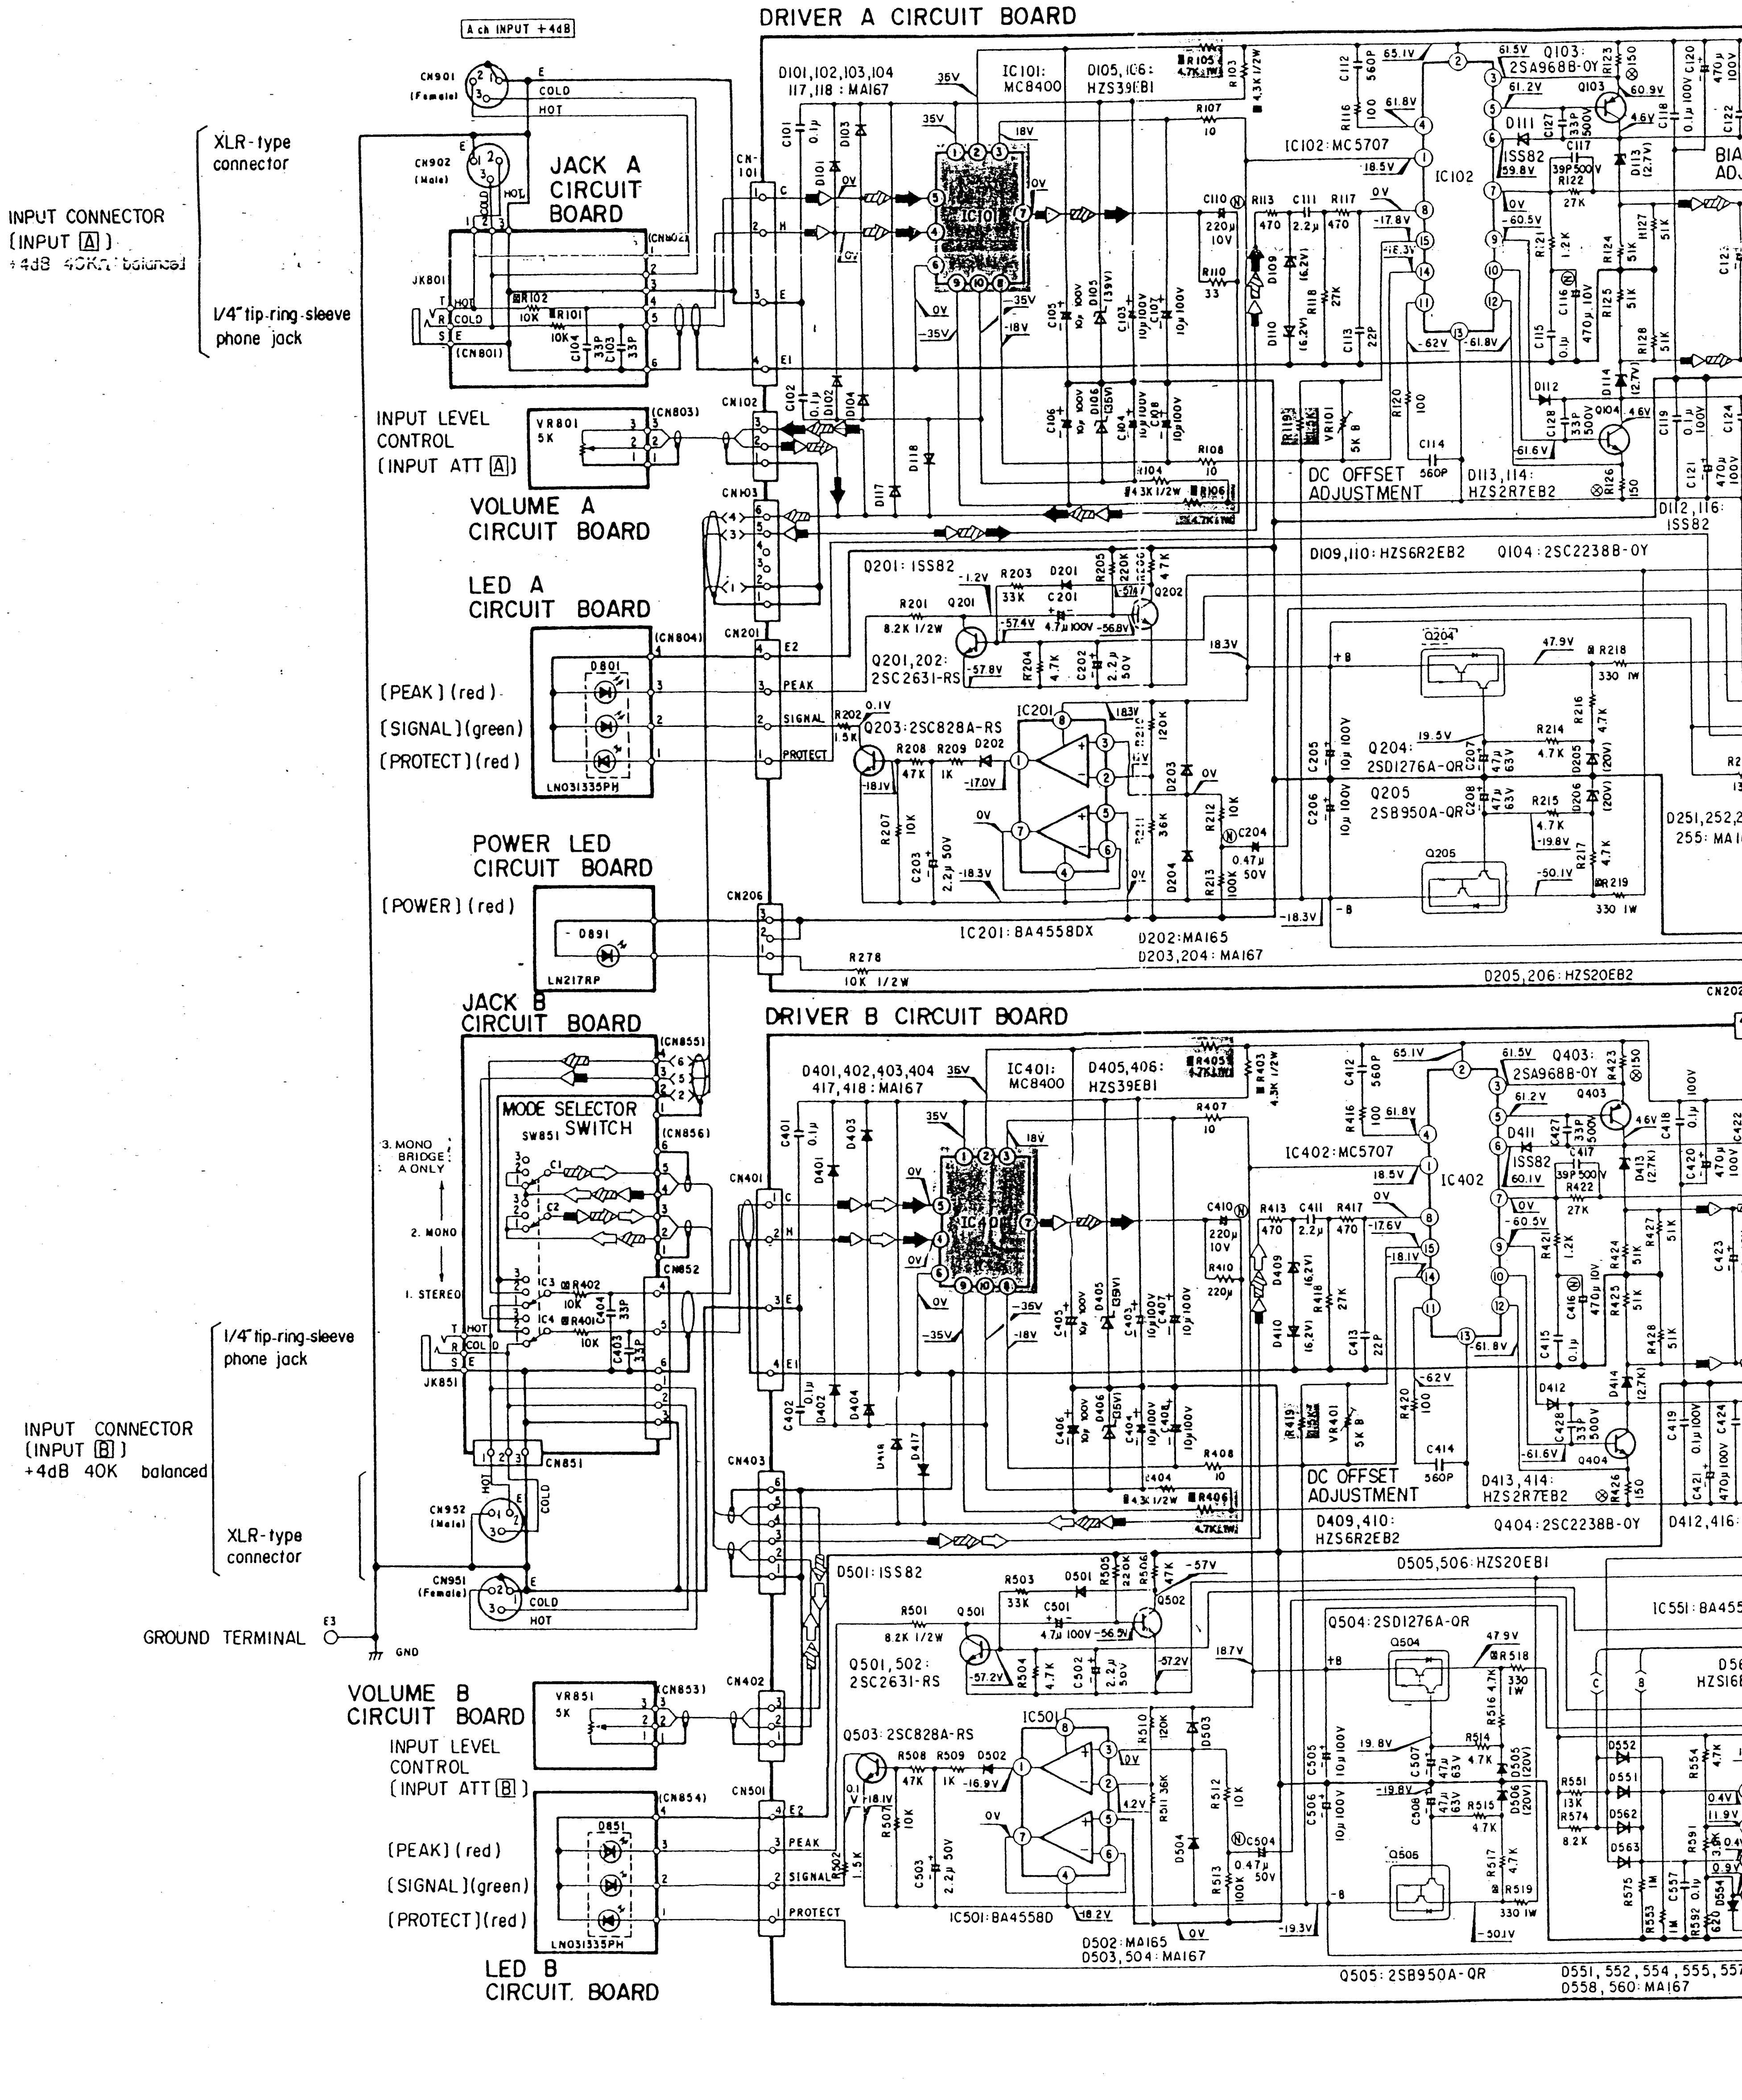
A ch INPUT +4dB
DRIVER A CIRCUIT BOARD
INPUT CONNECTOR
(INPUT [A])
+4dB 40KΩ balanced
XLR-type connector
1/4" tip-ring-sleeve phone jack
CN901 (Female)
CN902 (Male)
COLD
HOT
JACK A CIRCUIT BOARD
JK801
R102 10K
R101 10K
C104 33P
C103 33P
(CN801)
(CN802)
CN-101
INPUT LEVEL CONTROL
(INPUT ATT [A])
VR801 5K
(CN803)
CN102
VOLUME A CIRCUIT BOARD
CN103
LED A CIRCUIT BOARD
(CN804)
CN201
D801
[PEAK] (red)
[SIGNAL] (green)
[PROTECT] (red)
LN031335PH
POWER LED CIRCUIT BOARD
[POWER] (red)
D891
LN217RP
CN206
R278 10K 1/2W
D101,102,103,104 117,118 : MA167
IC101: MC8400
D105,106: HZS39EB1
IC102: MC5707
Q103: 2SA968B-OY
D111 ISS82
D113 (2.7V)
BIAS ADJ
DC OFFSET ADJUSTMENT
VR101
D113,114: HZS2R7EB2
D112,116: ISS82
D109,110: HZS6R2EB2
Q104: 2SC2238B-OY
Q201: ISS82
Q201,202: 2SC2631-RS
Q203: 2SC828A-RS
IC201
IC201: BA4558DX
D202: MA165
D203,204: MA167
Q204: 2SD1276A-QR
Q205 2SB950A-QR
D205,206: HZS20EB2
D251,252,2 255: MA1
JACK B CIRCUIT BOARD
DRIVER B CIRCUIT BOARD
(CN855)
MODE SELECTOR SWITCH
SW851
(CN856)
3. MONO BRIDGE A ONLY
2. MONO
1. STEREO
CN852
CN851
JK851
INPUT CONNECTOR
(INPUT [B])
+4dB 40K balanced
CN952 (Male)
CN951 (Female)
GROUND TERMINAL
E3
GND
VOLUME B CIRCUIT BOARD
VR851 5K
(CN853)
INPUT LEVEL CONTROL
(INPUT ATT [B])
(CN854)
D851
[PEAK] (red)
[SIGNAL] (green)
[PROTECT] (red)
LN031335PH
LED B CIRCUIT BOARD
CN401
CN402
CN403
CN501
D401,402,403,404 417,418 : MA167
IC401: MC8400
D405,406: HZS39E81
IC402: MC5707
Q403: 2SA968B-OY
D411 ISS82
DC OFFSET ADJUSTMENT
VR401
D413,414: HZS2R7EB2
Q404: 2SC2238B-OY
D409,410: HZS6R2EB2
D412,416
D501: ISS82
D505,506: HZS20EB1
Q501,502: 2SC2631-RS
Q503: 2SC828A-RS
IC501
IC501: BA4558D
Q504: 2SD1276A-QR
D502: MA165
D503,504: MA167
Q505: 2SB950A-QR
IC551: BA455
D551,552,554,555,557 D558,560: MA167

SCHEMATIC DIAGRAM OF WP-9110

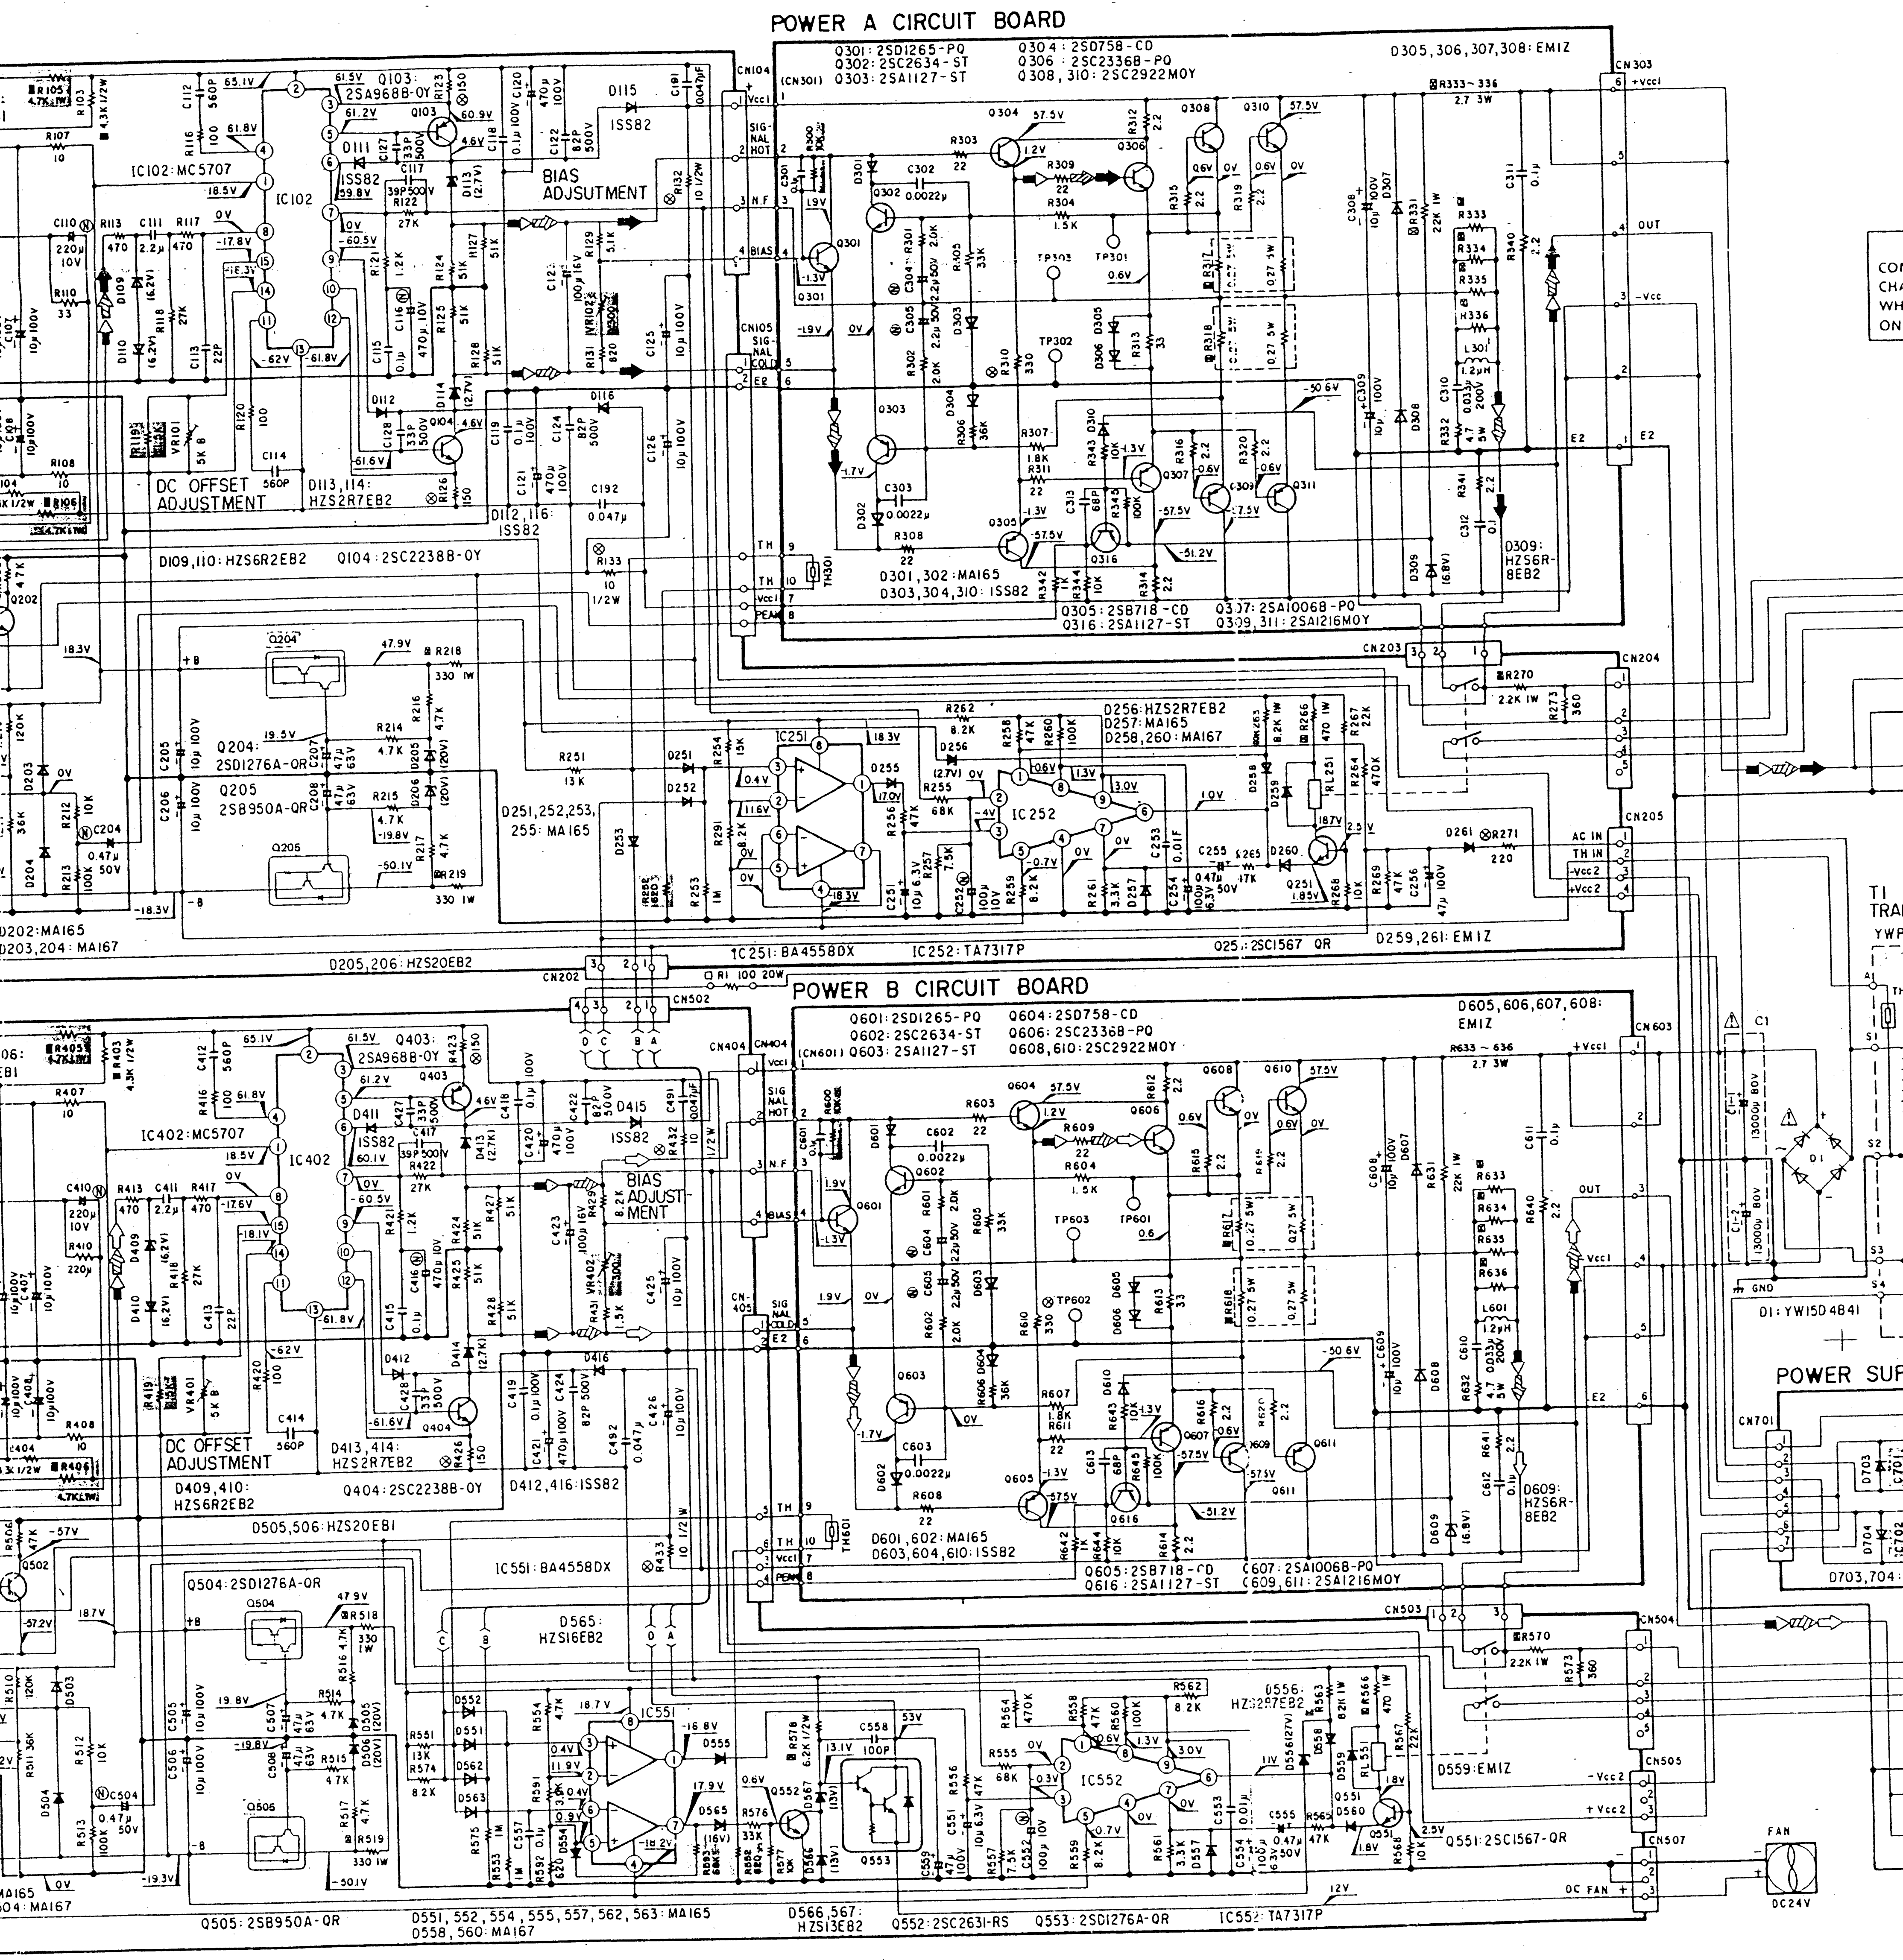
POWER A CIRCUIT BOARD
Q301: 2SD1265-PQ
Q302: 2SC2634-ST
Q303: 2SA1127-ST
Q304: 2SD758-CD
Q306: 2SC2336B-PQ
Q308, 310: 2SC2922MOY
D305, 306, 307, 308: EM1Z
IC102: MC5707
BIAS ADJSUTMENT
DC OFFSET ADJUSTMENT
D113, 114: HZS2R7EB2
D112, 116: ISS82
D109, 110: HZS6R2EB2
Q104: 2SC2238B-OY
D301, 302: MA165
D303, 304, 310: ISS82
Q305: 2SB718-CD
Q316: 2SA1127-ST
Q307: 2SA1006B-PQ
Q309, 311: 2SA1216MOY
D309: HZS6R-8EB2
Q204: 2SD1276A-QR
Q205: 2SB950A-QR
D251, 252, 253, 255: MA165
D256: HZS2R7EB2
D257: MA165
D258, 260: MA167
D202: MA165
D203, 204: MA167
D205, 206: HZS20EB2
IC251: BA4558OX
IC252: TA7317P
Q251: 2SC1567 QR
D259, 261: EM1Z
POWER B CIRCUIT BOARD
Q601: 2SD1265-PQ
Q602: 2SC2634-ST
Q603: 2SA1127-ST
Q604: 2SD758-CD
Q606: 2SC2336B-PQ
Q608, 610: 2SC2922MOY
D605, 606, 607, 608: EM1Z
IC402: MC5707
BIAS ADJUSTMENT
DC OFFSET ADJUSTMENT
D413, 414: HZS2R7EB2
D409, 410: HZS6R2EB2
Q404: 2SC2238B-OY
D412, 416: ISS82
D505, 506: HZS20EB1
D601, 602: MA165
D603, 604, 610: ISS82
Q605: 2SB718-CD
Q616: 2SA1127-ST
Q607: 2SA1006B-PQ
Q609, 611: 2SA1216MOY
D609: HZS6R-8EB2
Q504: 2SD1276A-QR
Q505: 2SB950A-QR
IC551: BA4558DX
D565: HZS16EB2
D551, 552, 554, 555, 557, 562, 563: MA165
D558, 560: MA167
D566, 567: HZS13EB2
Q552: 2SC2631-RS
Q553: 2SD1276A-QR
IC552: TA7317P
D556: HZS2R7EB2
D559: EM1Z
Q551: 2SC1567-QR
DC FAN
FAN
DC24V
D1: YW15D4841
POWER SU
CN303
CN104
CN105
CN203
CN204
CN205
CN202
CN502
CN404
CN405
CN603
CN503
CN504
CN505
CN507
CN701
+Vcc1
-Vcc
OUT
E2
AC IN
TH IN
-Vcc2
+Vcc2
SIGNAL HOT
SIGNAL COLD
N.F
BIAS
TH
PEAK
R1 100 20W
R333~336 2.7 3W
R633~636 2.7 3W
C1
C1-1 13000μ 80V
C1-2 13000μ 80V
T1
D703, 704

RAM OF WP-9110

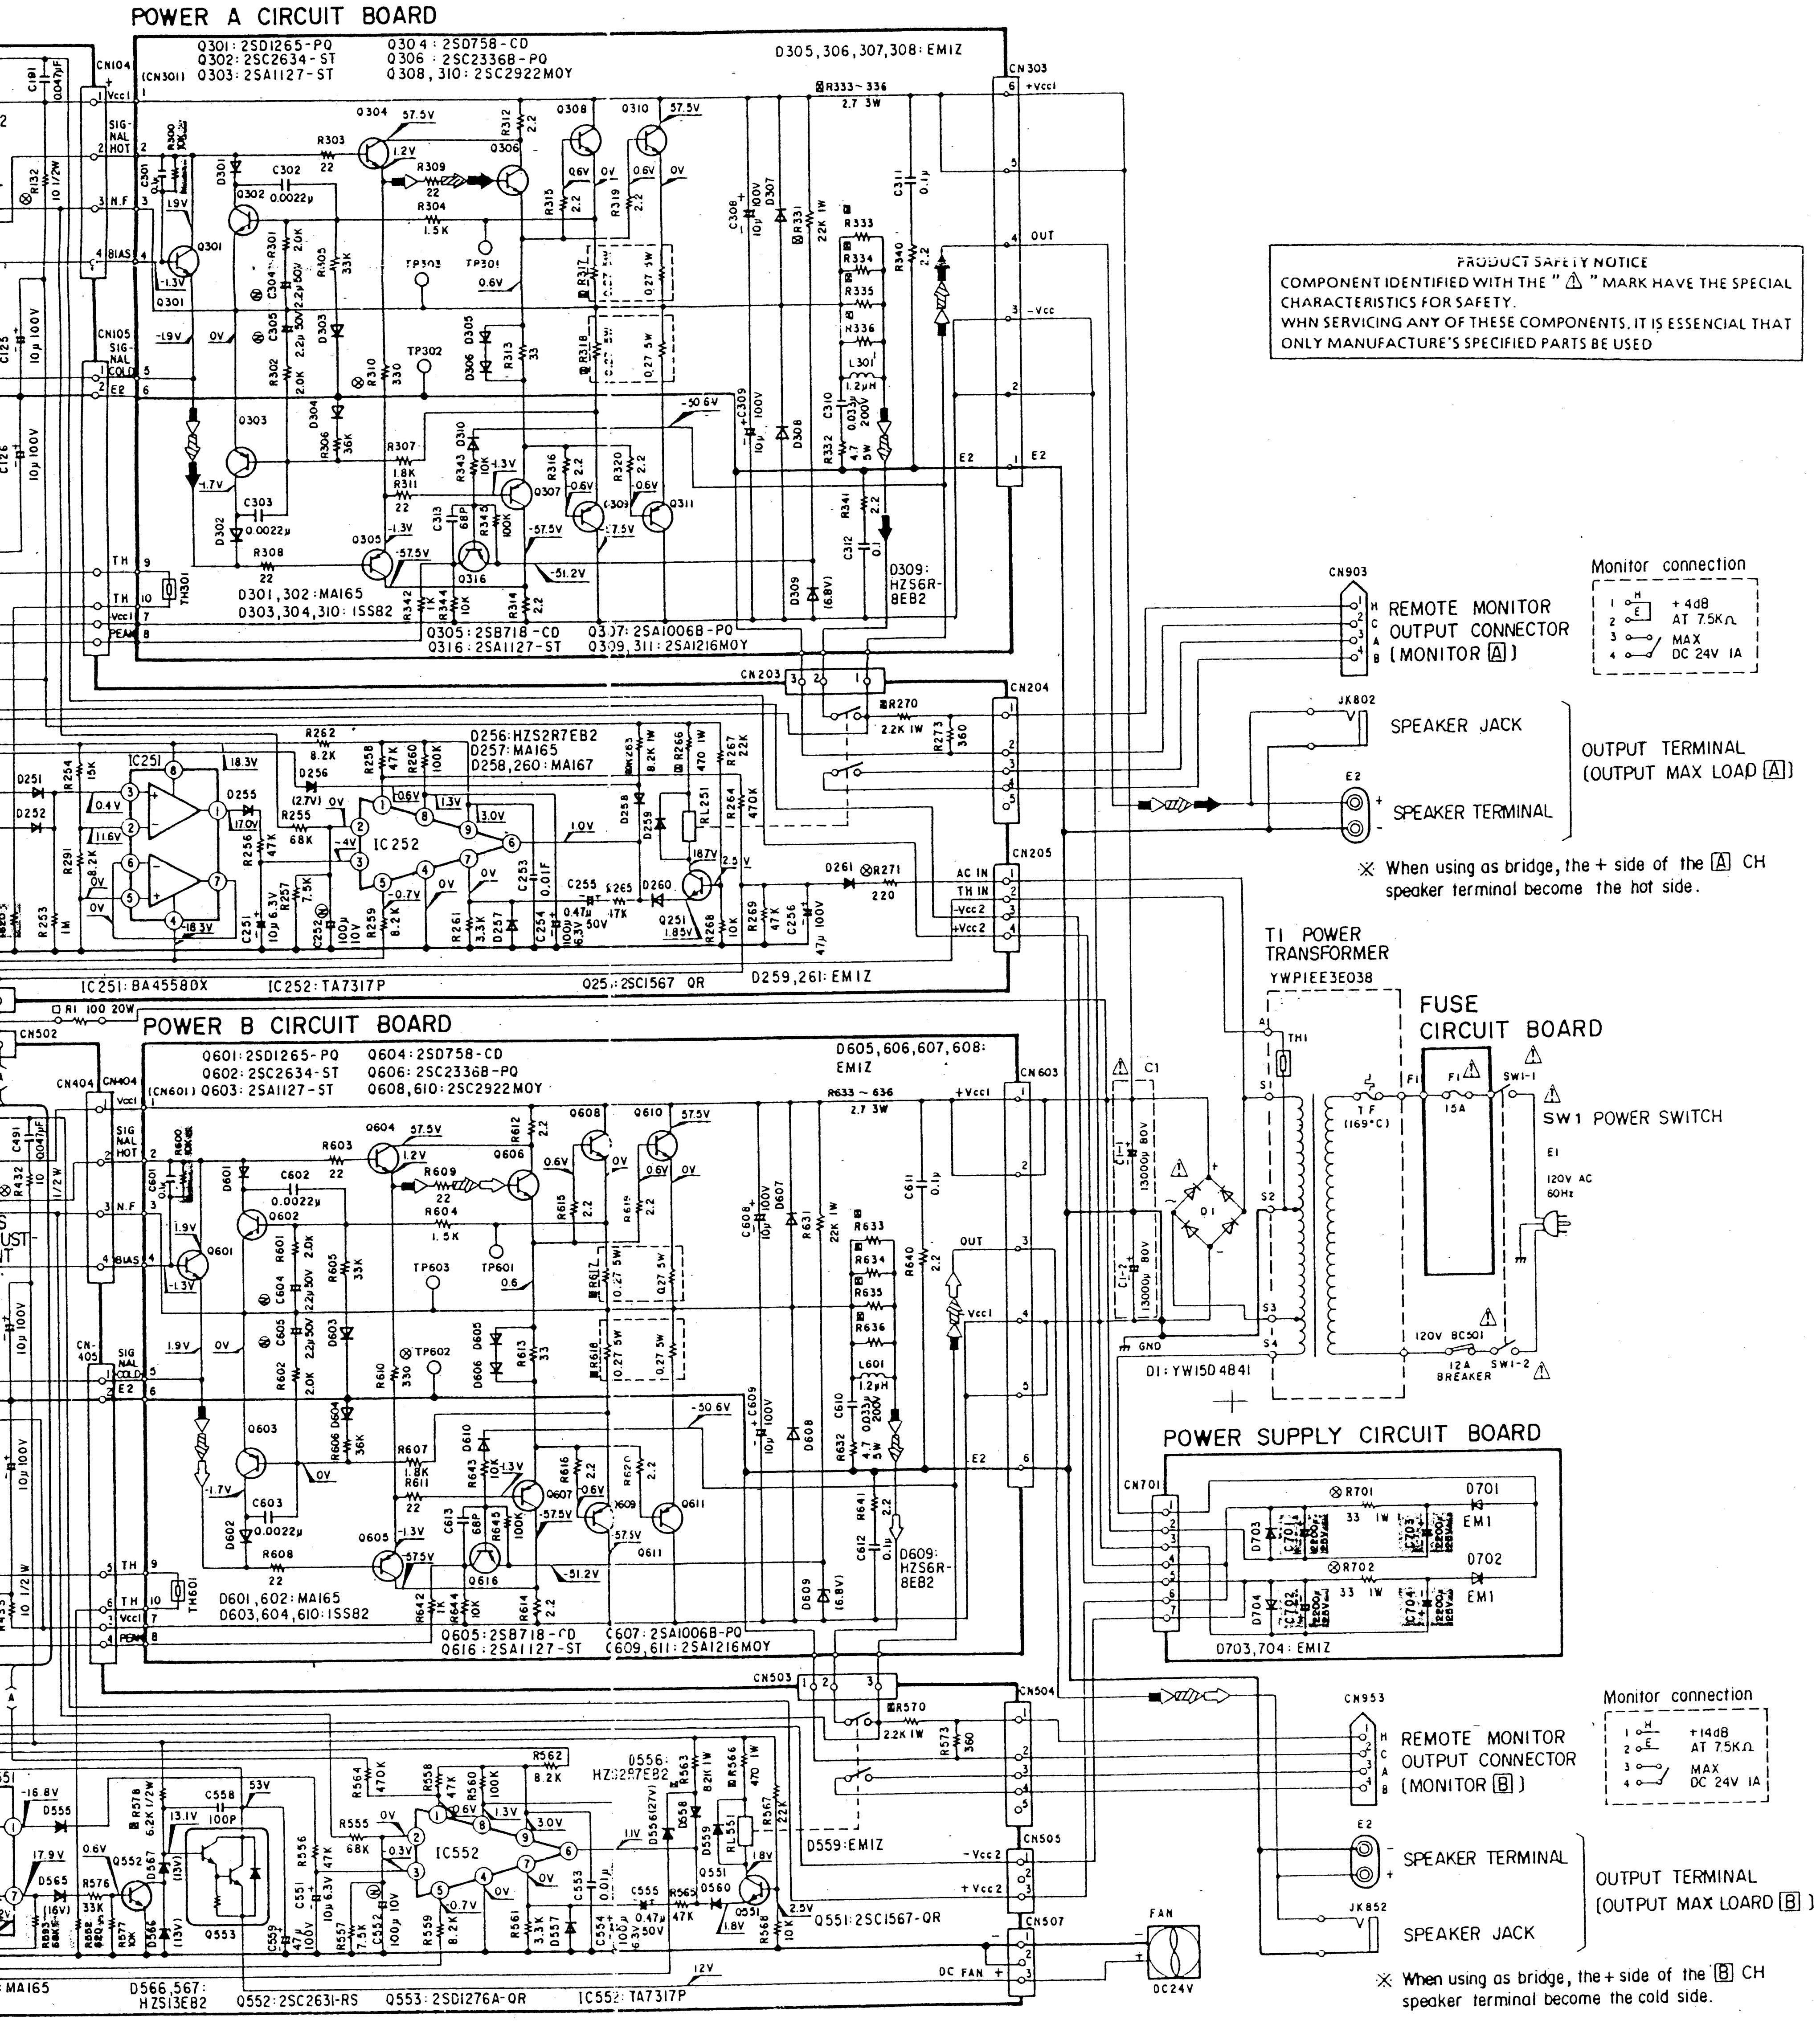
POWER A CIRCUIT BOARD
Q301: 2SD1265-PQ
Q302: 2SC2634-ST
Q303: 2SA1127-ST
Q304: 2SD758-CD
Q306: 2SC2336B-PQ
Q308, 310: 2SC2922MOY
D305, 306, 307, 308: EMIZ
D301, 302: MA165
D303, 304, 310: 1SS82
Q305: 2SB718-CD
Q316: 2SA1127-ST
Q307: 2SA1006B-PQ
Q309, 311: 2SA1216MOY
D309: HZS6R-8EB2
R333~336 2.7 3W
CN104
CN105
CN303
CN203
CN204
CN205
+Vcc1
OUT
-Vcc
E2
TH
PEAK
SIGNAL HOT
N.F
BIAS
SIGNAL COLD
D256: HZS2R7EB2
D257: MA165
D258, 260: MA167
IC251
IC252
IC251: BA4558DX
IC252: TA7317P
Q251: 2SC1567 QR
D259, 261: EMIZ
AC IN
TH IN
-Vcc2
+Vcc2
POWER B CIRCUIT BOARD
Q601: 2SD1265-PQ
Q602: 2SC2634-ST
Q603: 2SA1127-ST
Q604: 2SD758-CD
Q606: 2SC2336B-PQ
Q608, 610: 2SC2922MOY
D605, 606, 607, 608: EMIZ
R633~636 2.7 3W
D601, 602: MA165
D603, 604, 610: 1SS82
Q605: 2SB718-CD
Q616: 2SA1127-ST
Q607: 2SA1006B-PQ
Q609, 611: 2SA1216MOY
D609: HZS6R-8EB2
CN404
CN405
CN502
CN503
CN504
CN505
CN507
CN603
IC552
D556: HZS2R7EB2
D559: EMIZ
Q551: 2SC1567-QR
D566, 567: HZS13EB2
Q552: 2SC2631-RS
Q553: 2SD1276A-QR
IC552: TA7317P
DC FAN
FAN
DC24V
12V
CN903
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR [A])
Monitor connection
+4dB AT 7.5KΩ
MAX DC 24V 1A
JK802
SPEAKER JACK
SPEAKER TERMINAL
OUTPUT TERMINAL (OUTPUT MAX LOAD [A])
T1 POWER TRANSFORMER
YWP1EE3E038
FUSE CIRCUIT BOARD
F1 15A
SW1-1
SW1 POWER SWITCH
120V AC 60Hz
TH1
TF (169°C)
120V BC501
12A BREAKER
SW1-2
C1-1 13000μ 80V
C1-2 13000μ 80V
D1
D1: YW15D4B41
GND
POWER SUPPLY CIRCUIT BOARD
CN701
R701 33 1W
R702 33 1W
D701
D702
EM1
D703, 704: EMIZ
CN953
REMOTE MONITOR OUTPUT CONNECTOR (MONITOR [B])
+14dB AT 7.5KΩ
MAX DC 24V 1A
JK852
SPEAKER TERMINAL
SPEAKER JACK
OUTPUT TERMINAL (OUTPUT MAX LOARD [B])

PRODUCT SAFETY NOTICE
COMPONENT IDENTIFIED WITH THE " ⚠ " MARK HAVE THE SPECIAL CHARACTERISTICS FOR SAFETY.
WHN SERVICING ANY OF THESE COMPONENTS, IT IS ESSENCIAL THAT ONLY MANUFACTURE'S SPECIFIED PARTS BE USED

※ When using as bridge, the + side of the [A] CH speaker terminal become the hot side.

※ When using as bridge, the + side of the [B] CH speaker terminal become the cold side.

CONDUCTOR V

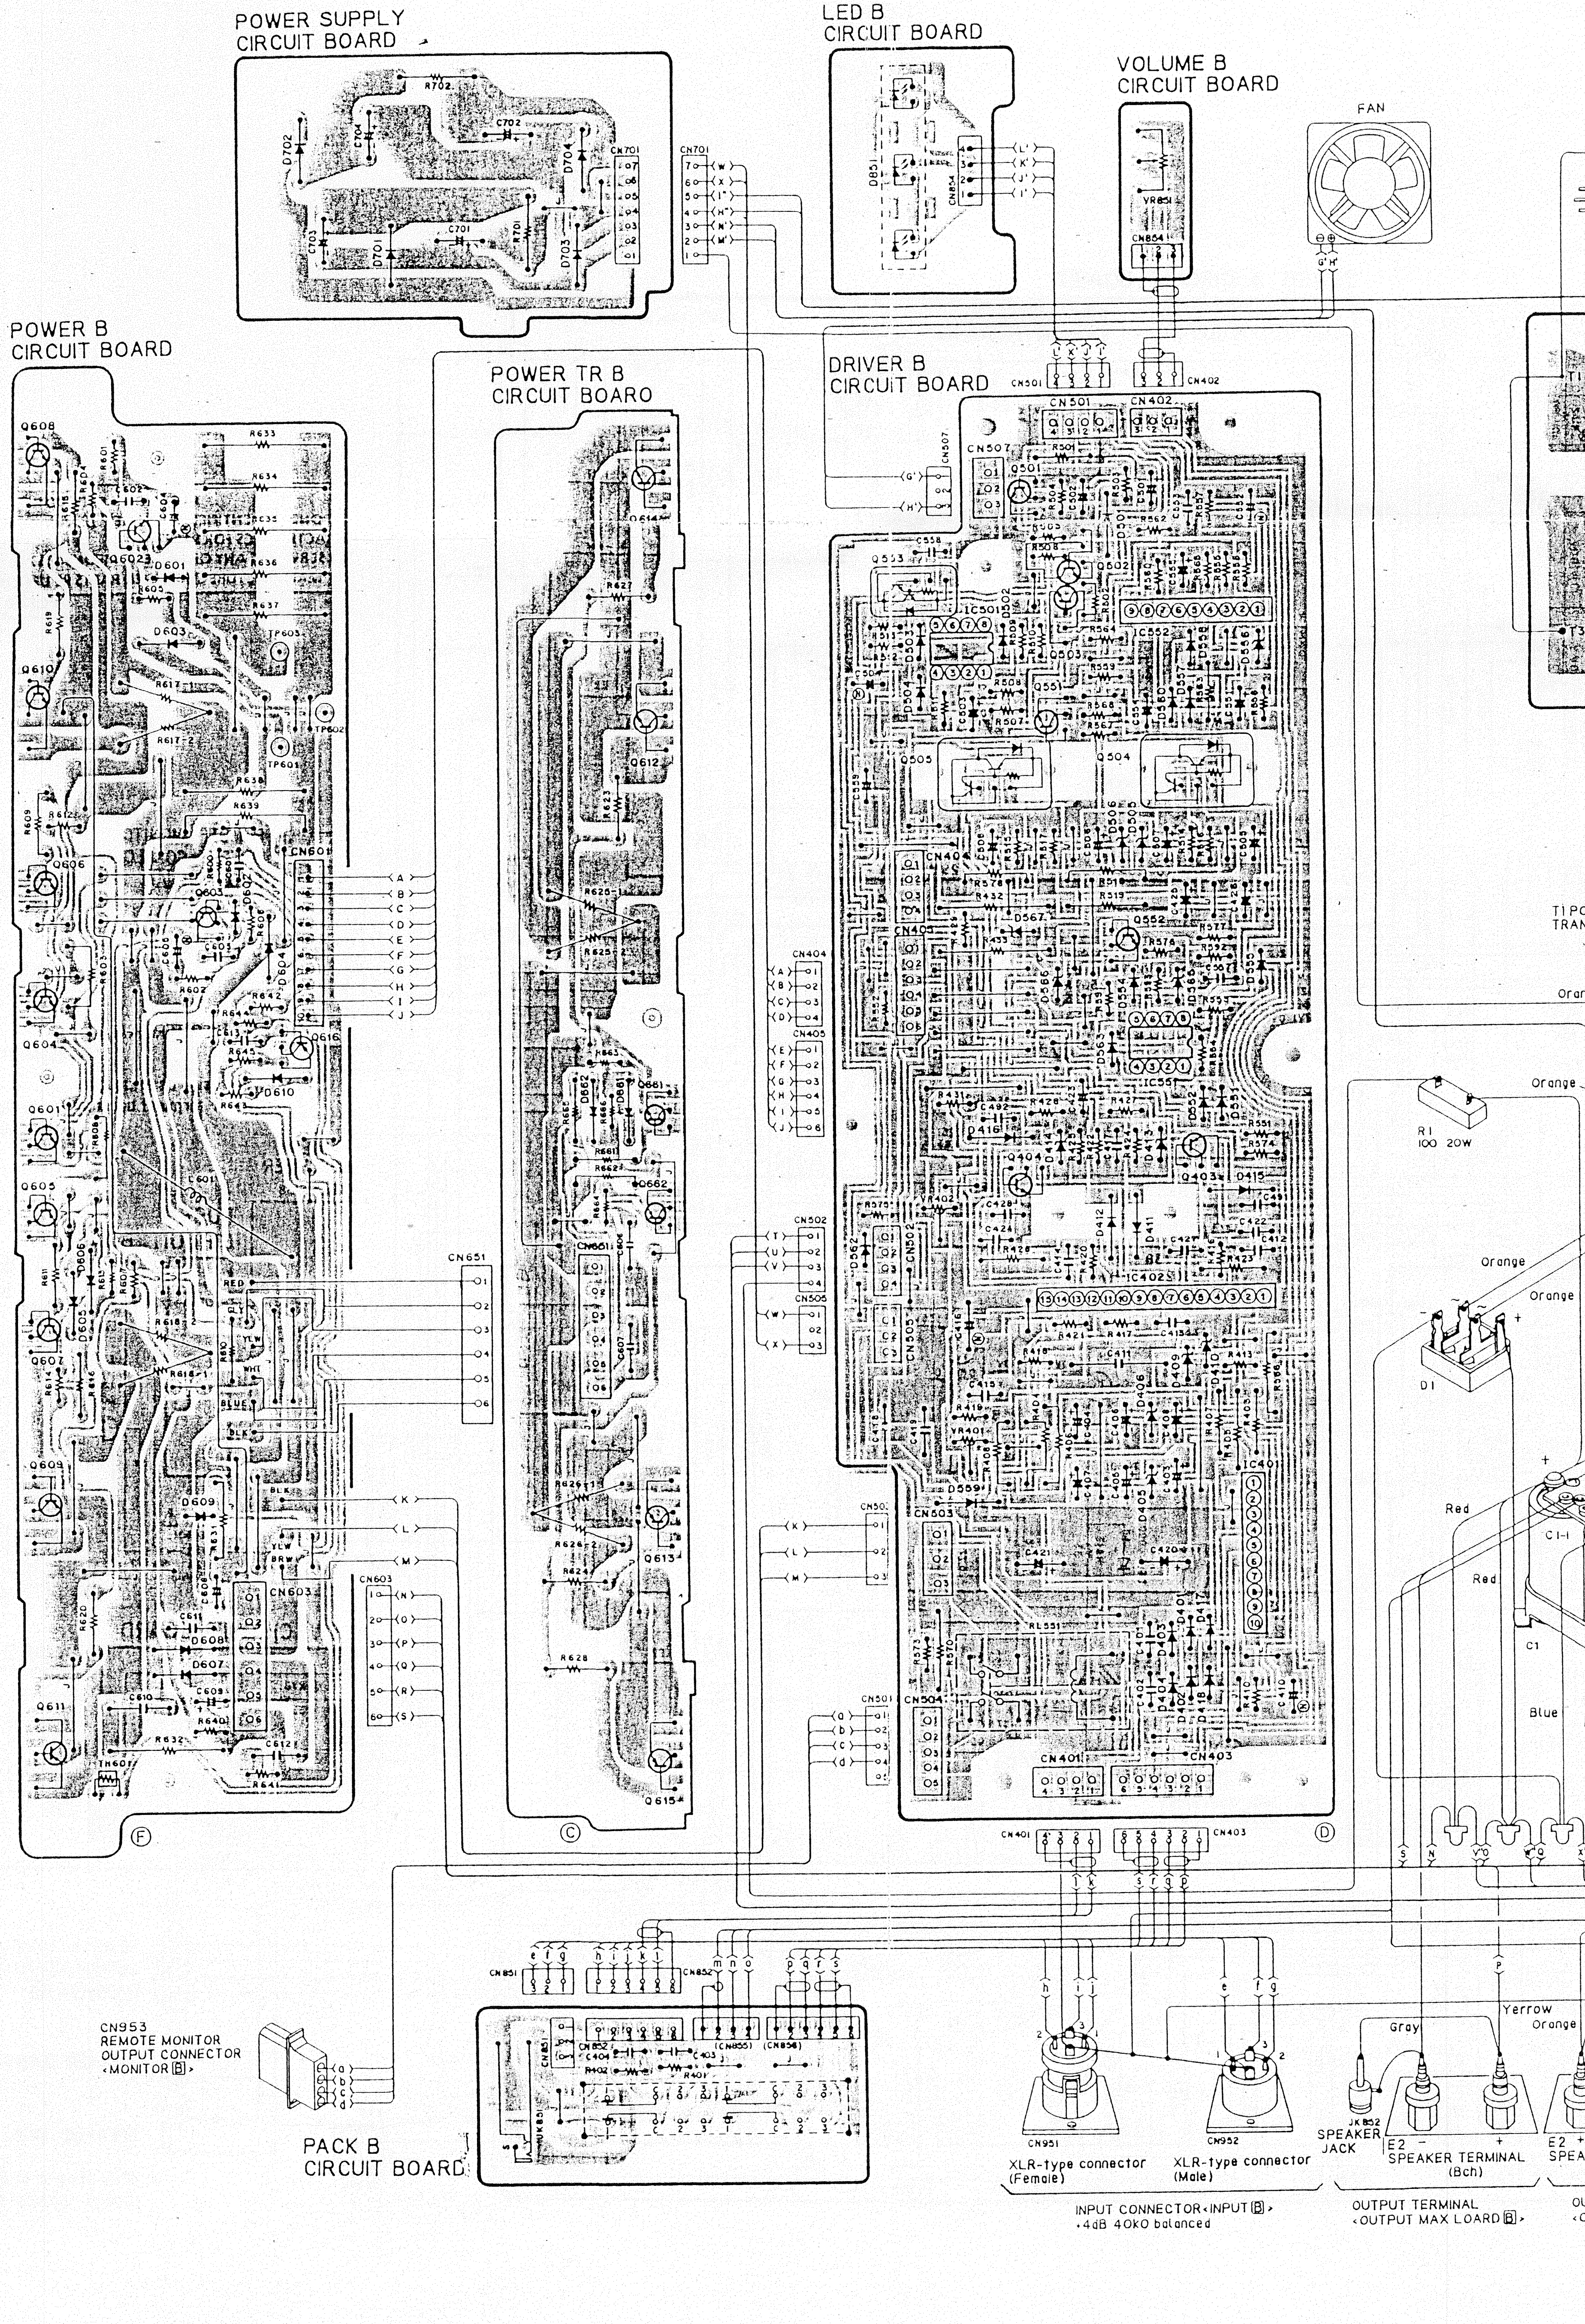
POWER SUPPLY CIRCUIT BOARD
LED B CIRCUIT BOARD
VOLUME B CIRCUIT BOARD
FAN
POWER B CIRCUIT BOARD
POWER TR B CIRCUIT BOARO
DRIVER B CIRCUIT BOARD
CN701
CN501
CN402
CN507
CN404
CN405
CN502
CN505
CN503
CN504
CN401
CN403
CN601
CN651
CN603
CN851
CN852
CN854
VR851
D851
R1 100 20W
D1
C1-1
C1
Orange
Red
Blue
Gray
Yerrow
F
C
D
CN953 REMOTE MONITOR OUTPUT CONNECTOR ‹MONITOR B›
PACK B CIRCUIT BOARD
CN951
CN952
XLR-type connector (Female)
XLR-type connector (Male)
JK852 SPEAKER JACK
E2 SPEAKER TERMINAL (Bch)
INPUT CONNECTOR ‹INPUT B› +4dB 40kΩ balanced
OUTPUT TERMINAL ‹OUTPUT MAX LOARD B›

CONDUCTOR VIEW OF WP-9220

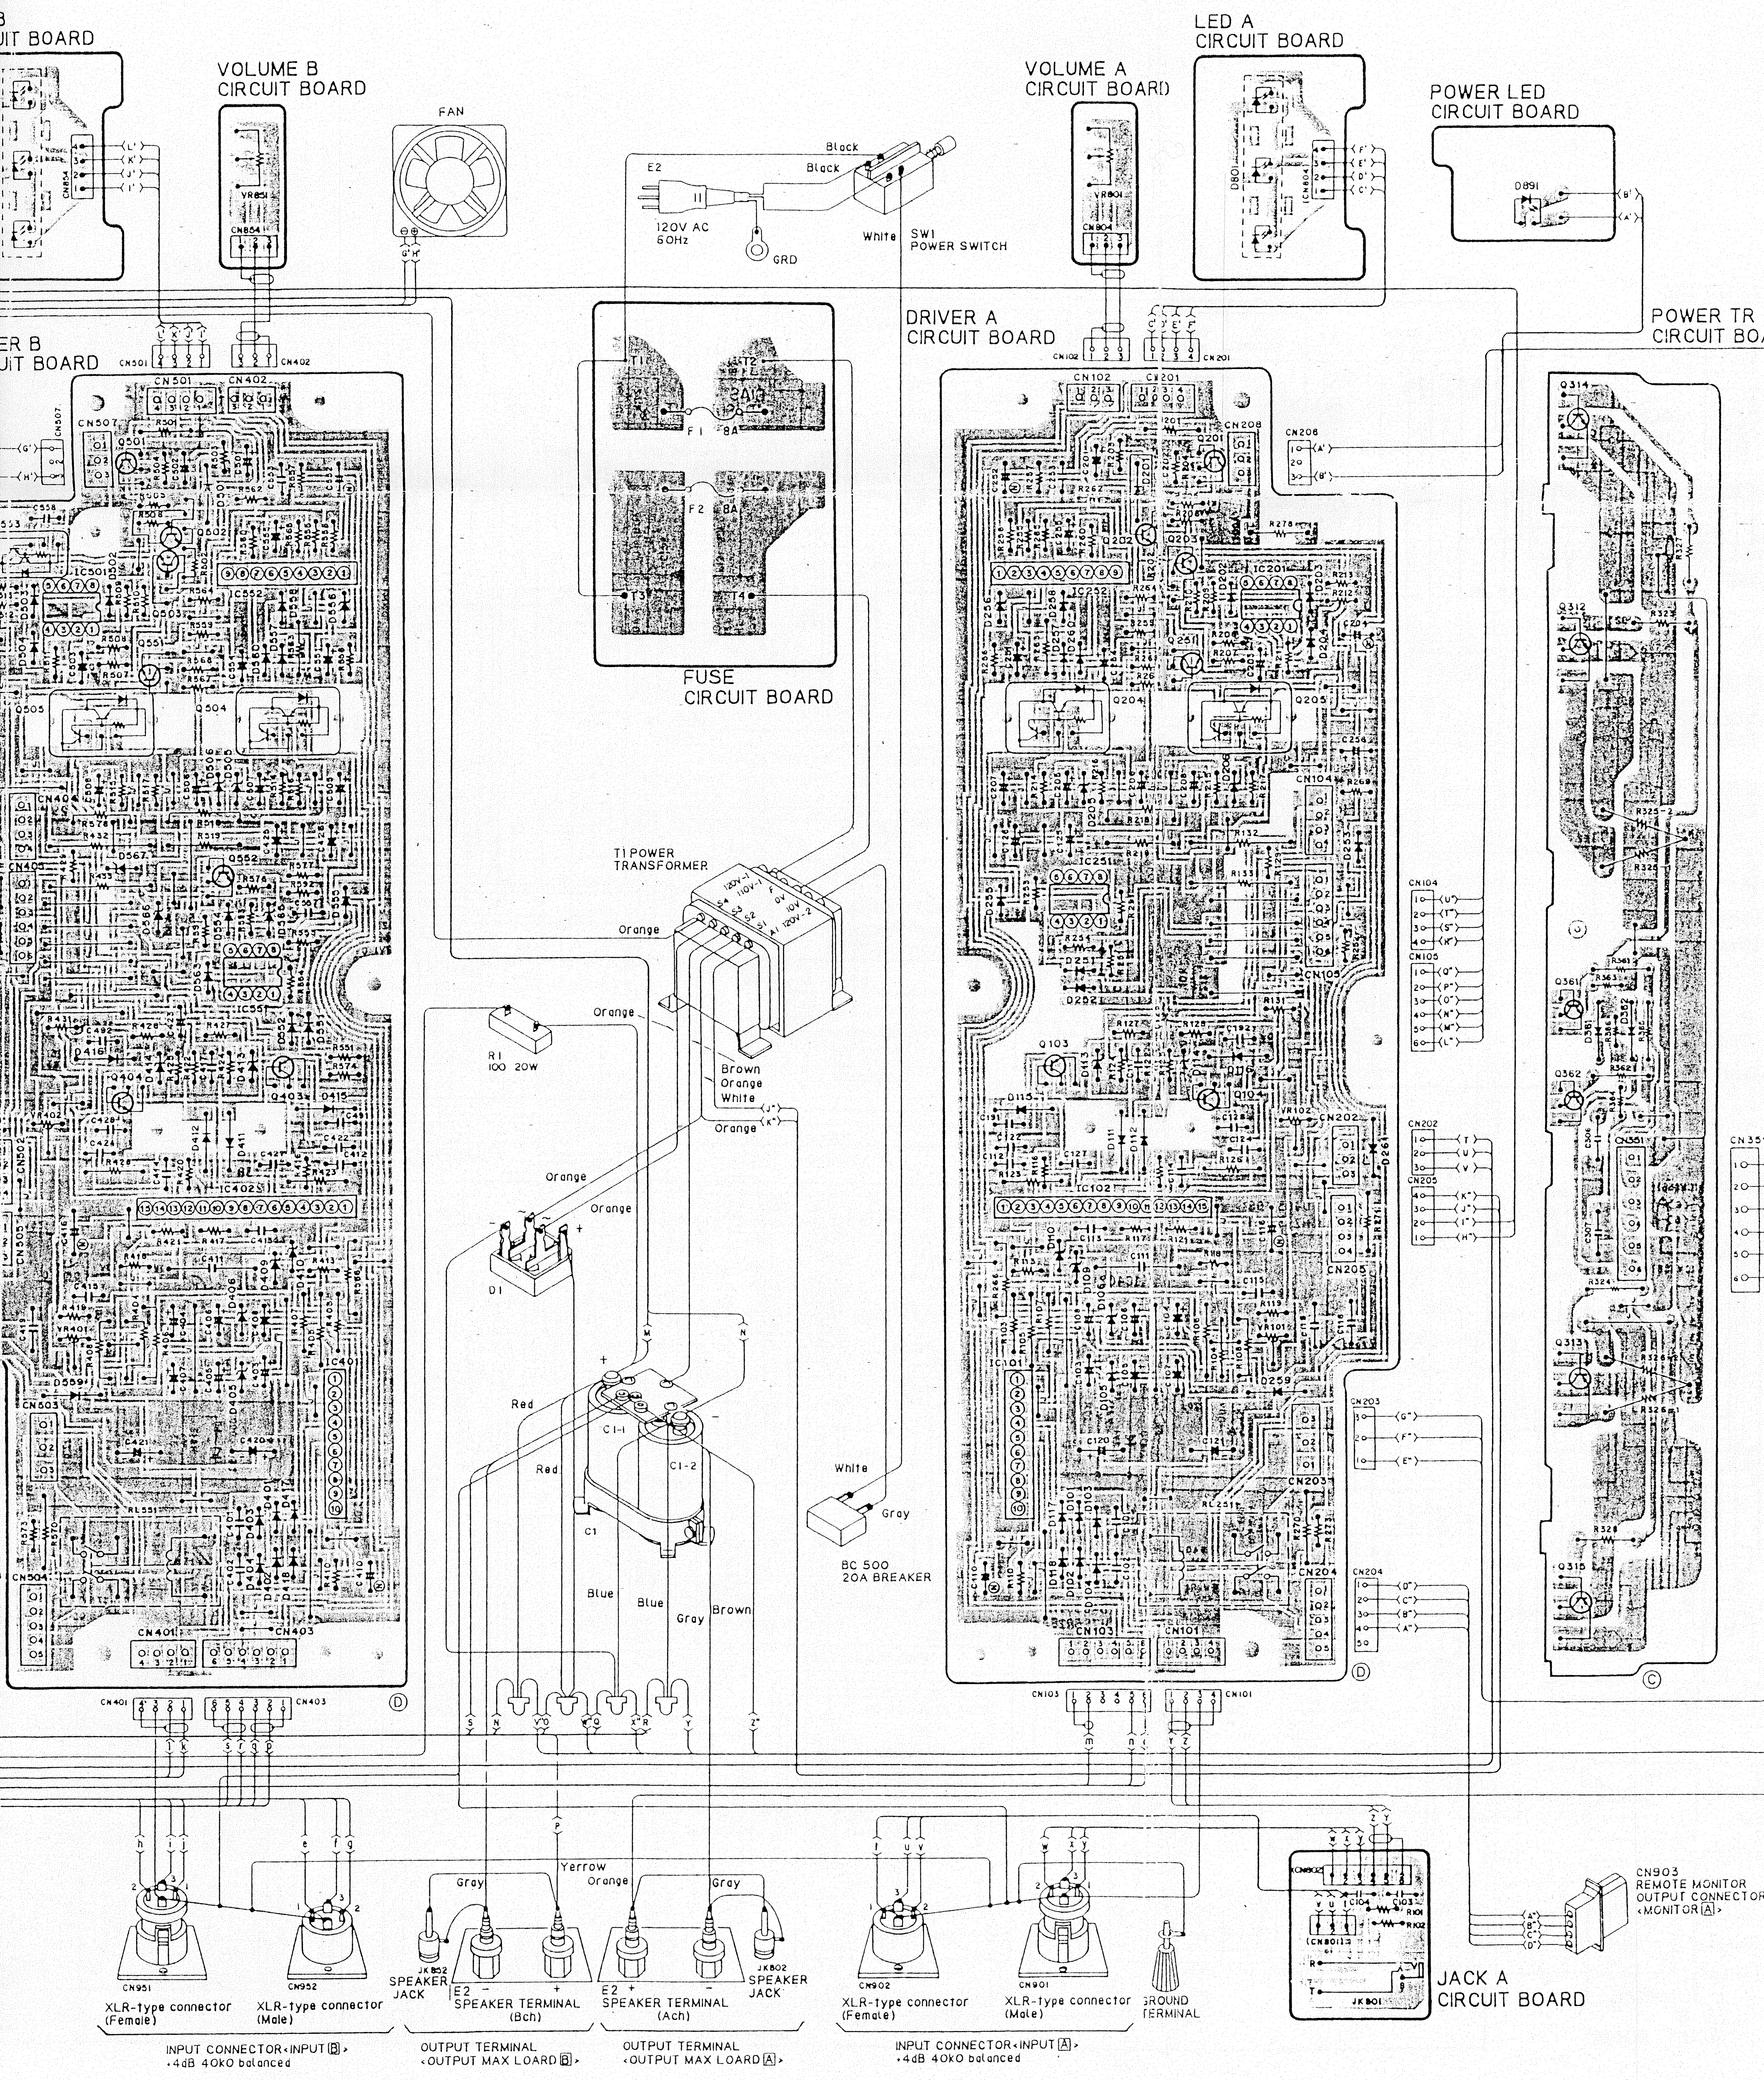

VOLUME B
CIRCUIT BOARD
FAN
Black
Black
E2
120V AC
60Hz
GRD
White
SW1
POWER SWITCH
VOLUME A
CIRCUIT BOARD
LED A
CIRCUIT BOARD
POWER LED
CIRCUIT BOARD
D891
VR851
CN854
VR801
CN804
CN804
D801
ER B
UIT BOARD
CN501
CN402
CN507
Q501
Q502
Q503
Q504
Q505
IC501
FUSE
CIRCUIT BOARD
F1
8A
F2
8A
T1
T2
T3
T4
DRIVER A
CIRCUIT BOARD
CN102
CN201
CN206
CN208
Q201
Q202
Q203
Q204
Q205
IC201
IC251
IC252
POWER TR
CIRCUIT BO
Q314
Q312
Q361
Q362
Q313
Q315
CN351
T1 POWER
TRANSFORMER
120V-1
110V-1
0V
10V
120V-2
Orange
Orange
R1
100 20W
Brown
Orange
White
Orange
Orange
Orange
D1
Red
Red
C1-1
C1-2
C1
Blue
Blue
Gray
Brown
White
Gray
BC 500
20A BREAKER
CN104
CN105
CN202
CN205
CN203
CN204
Q103
Q104
IC101
IC102
CN103
CN101
CN401
CN403
CN401
CN403
CN504
CN503
CN502
CN505
CN404
CN405
Q403
Q404
IC401
IC402
IC403
Yerrow
Orange
Gray
Gray
CN951
CN952
XLR-type connector
(Female)
XLR-type connector
(Male)
INPUT CONNECTOR ‹INPUT B›
+4dB 40kΩ balanced
JK852
SPEAKER
JACK
E2 − +
SPEAKER TERMINAL
(Bch)
OUTPUT TERMINAL
‹OUTPUT MAX LOARD B›
E2 + −
SPEAKER TERMINAL
(Ach)
JK802
SPEAKER
JACK
OUTPUT TERMINAL
‹OUTPUT MAX LOARD A›
CN902
XLR-type connector
(Female)
CN901
XLR-type connector
(Male)
INPUT CONNECTOR ‹INPUT A›
+4dB 40kΩ balanced
GROUND
TERMINAL
CN902
CN801
JK801
R101
R102
C103
C104
JACK A
CIRCUIT BOARD
CN903
REMOTE MONITOR
OUTPUT CONNECTOR
‹MONITOR A›

EW OF WP-9220

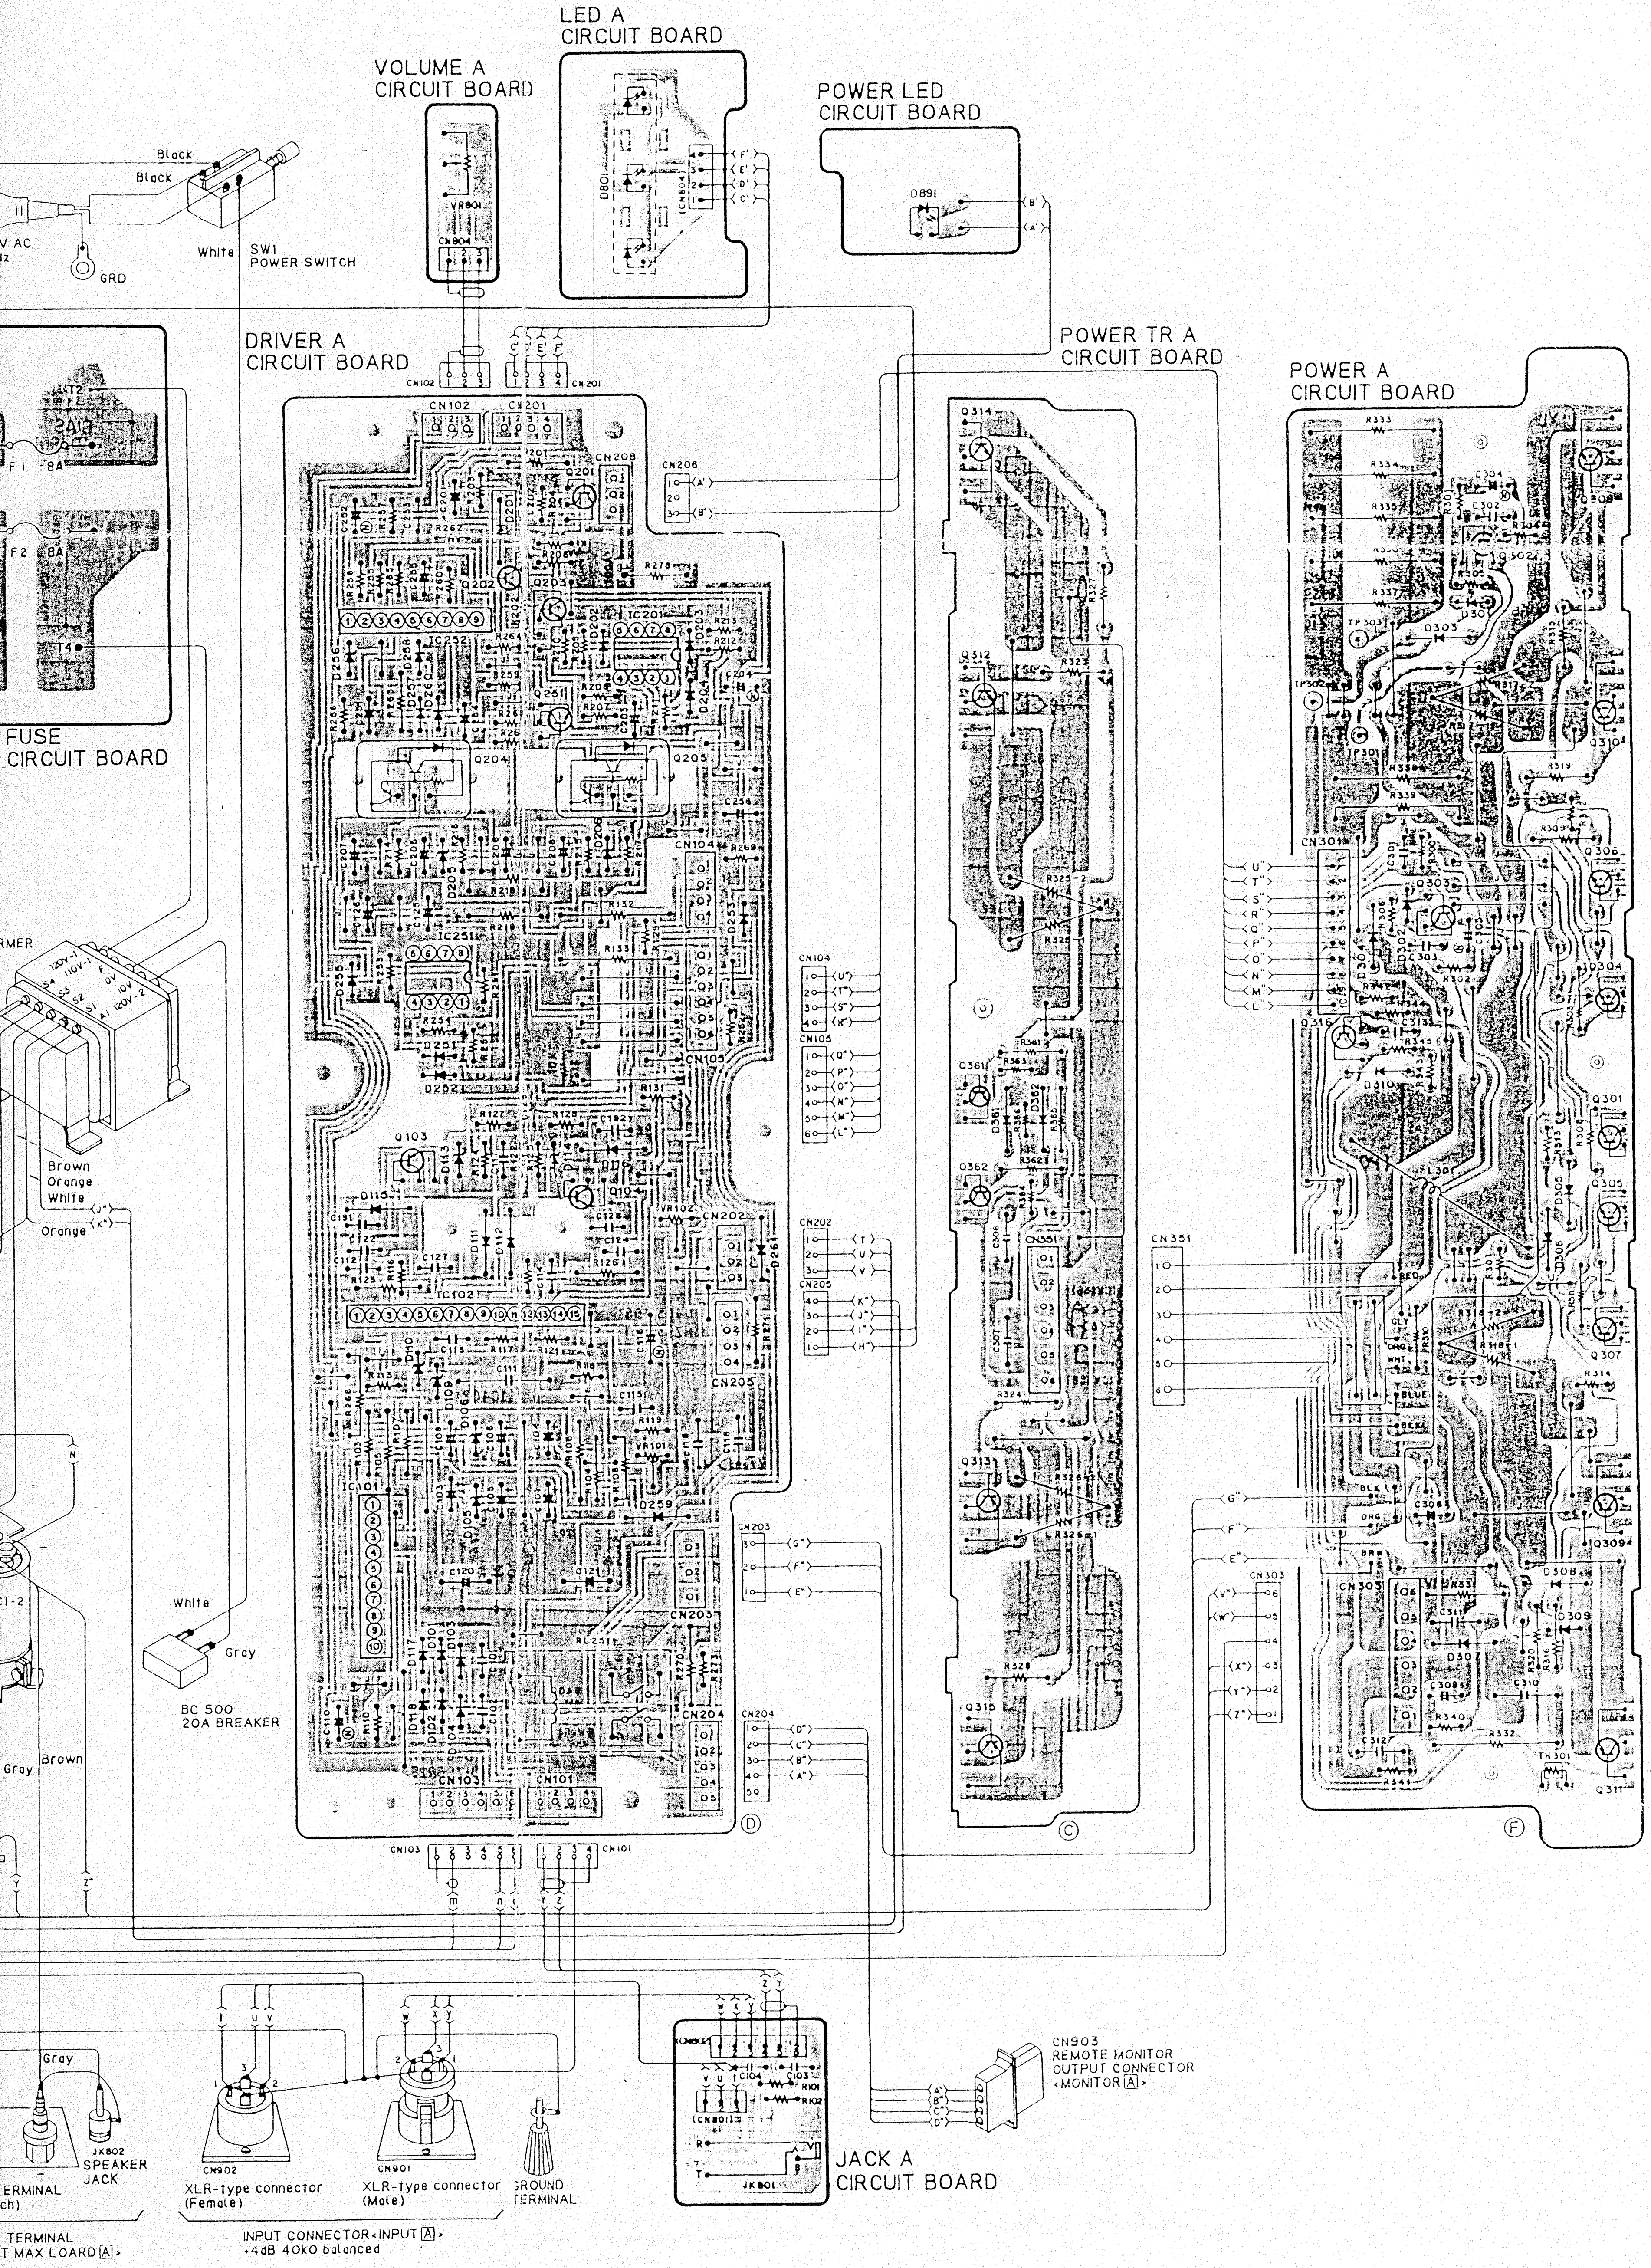
LED A
CIRCUIT BOARD
VOLUME A
CIRCUIT BOARD
POWER LED
CIRCUIT BOARD
D891
Black
Black
V AC
lz
GRD
White
SW1
POWER SWITCH
VR801
CN804
DB01
DRIVER A
CIRCUIT BOARD
CN102
CN201
CN206
CN208
POWER TR A
CIRCUIT BOARD
POWER A
CIRCUIT BOARD
FUSE
CIRCUIT BOARD
F1
8A
F2
8A
RMER
Brown
Orange
White
Orange
CN104
CN105
CN202
CN205
CN203
CN204
CN351
CN303
CN103
CN101
White
Gray
BC 500
20A BREAKER
Gray
Brown
Gray
JK802
SPEAKER
JACK
ERMINAL
ch)
CN902
XLR-type connector
(Female)
CN901
XLR-type connector
(Male)
GROUND
TERMINAL
JACK A
CIRCUIT BOARD
CN903
REMOTE MONITOR
OUTPUT CONNECTOR
‹MONITOR A›
TERMINAL
T MAX LOARD A›
INPUT CONNECTOR‹INPUT A›
+4dB 40kΩ balanced
Ⓓ
Ⓒ
Ⓕ

EXPLODED VIEW OF WP-9110

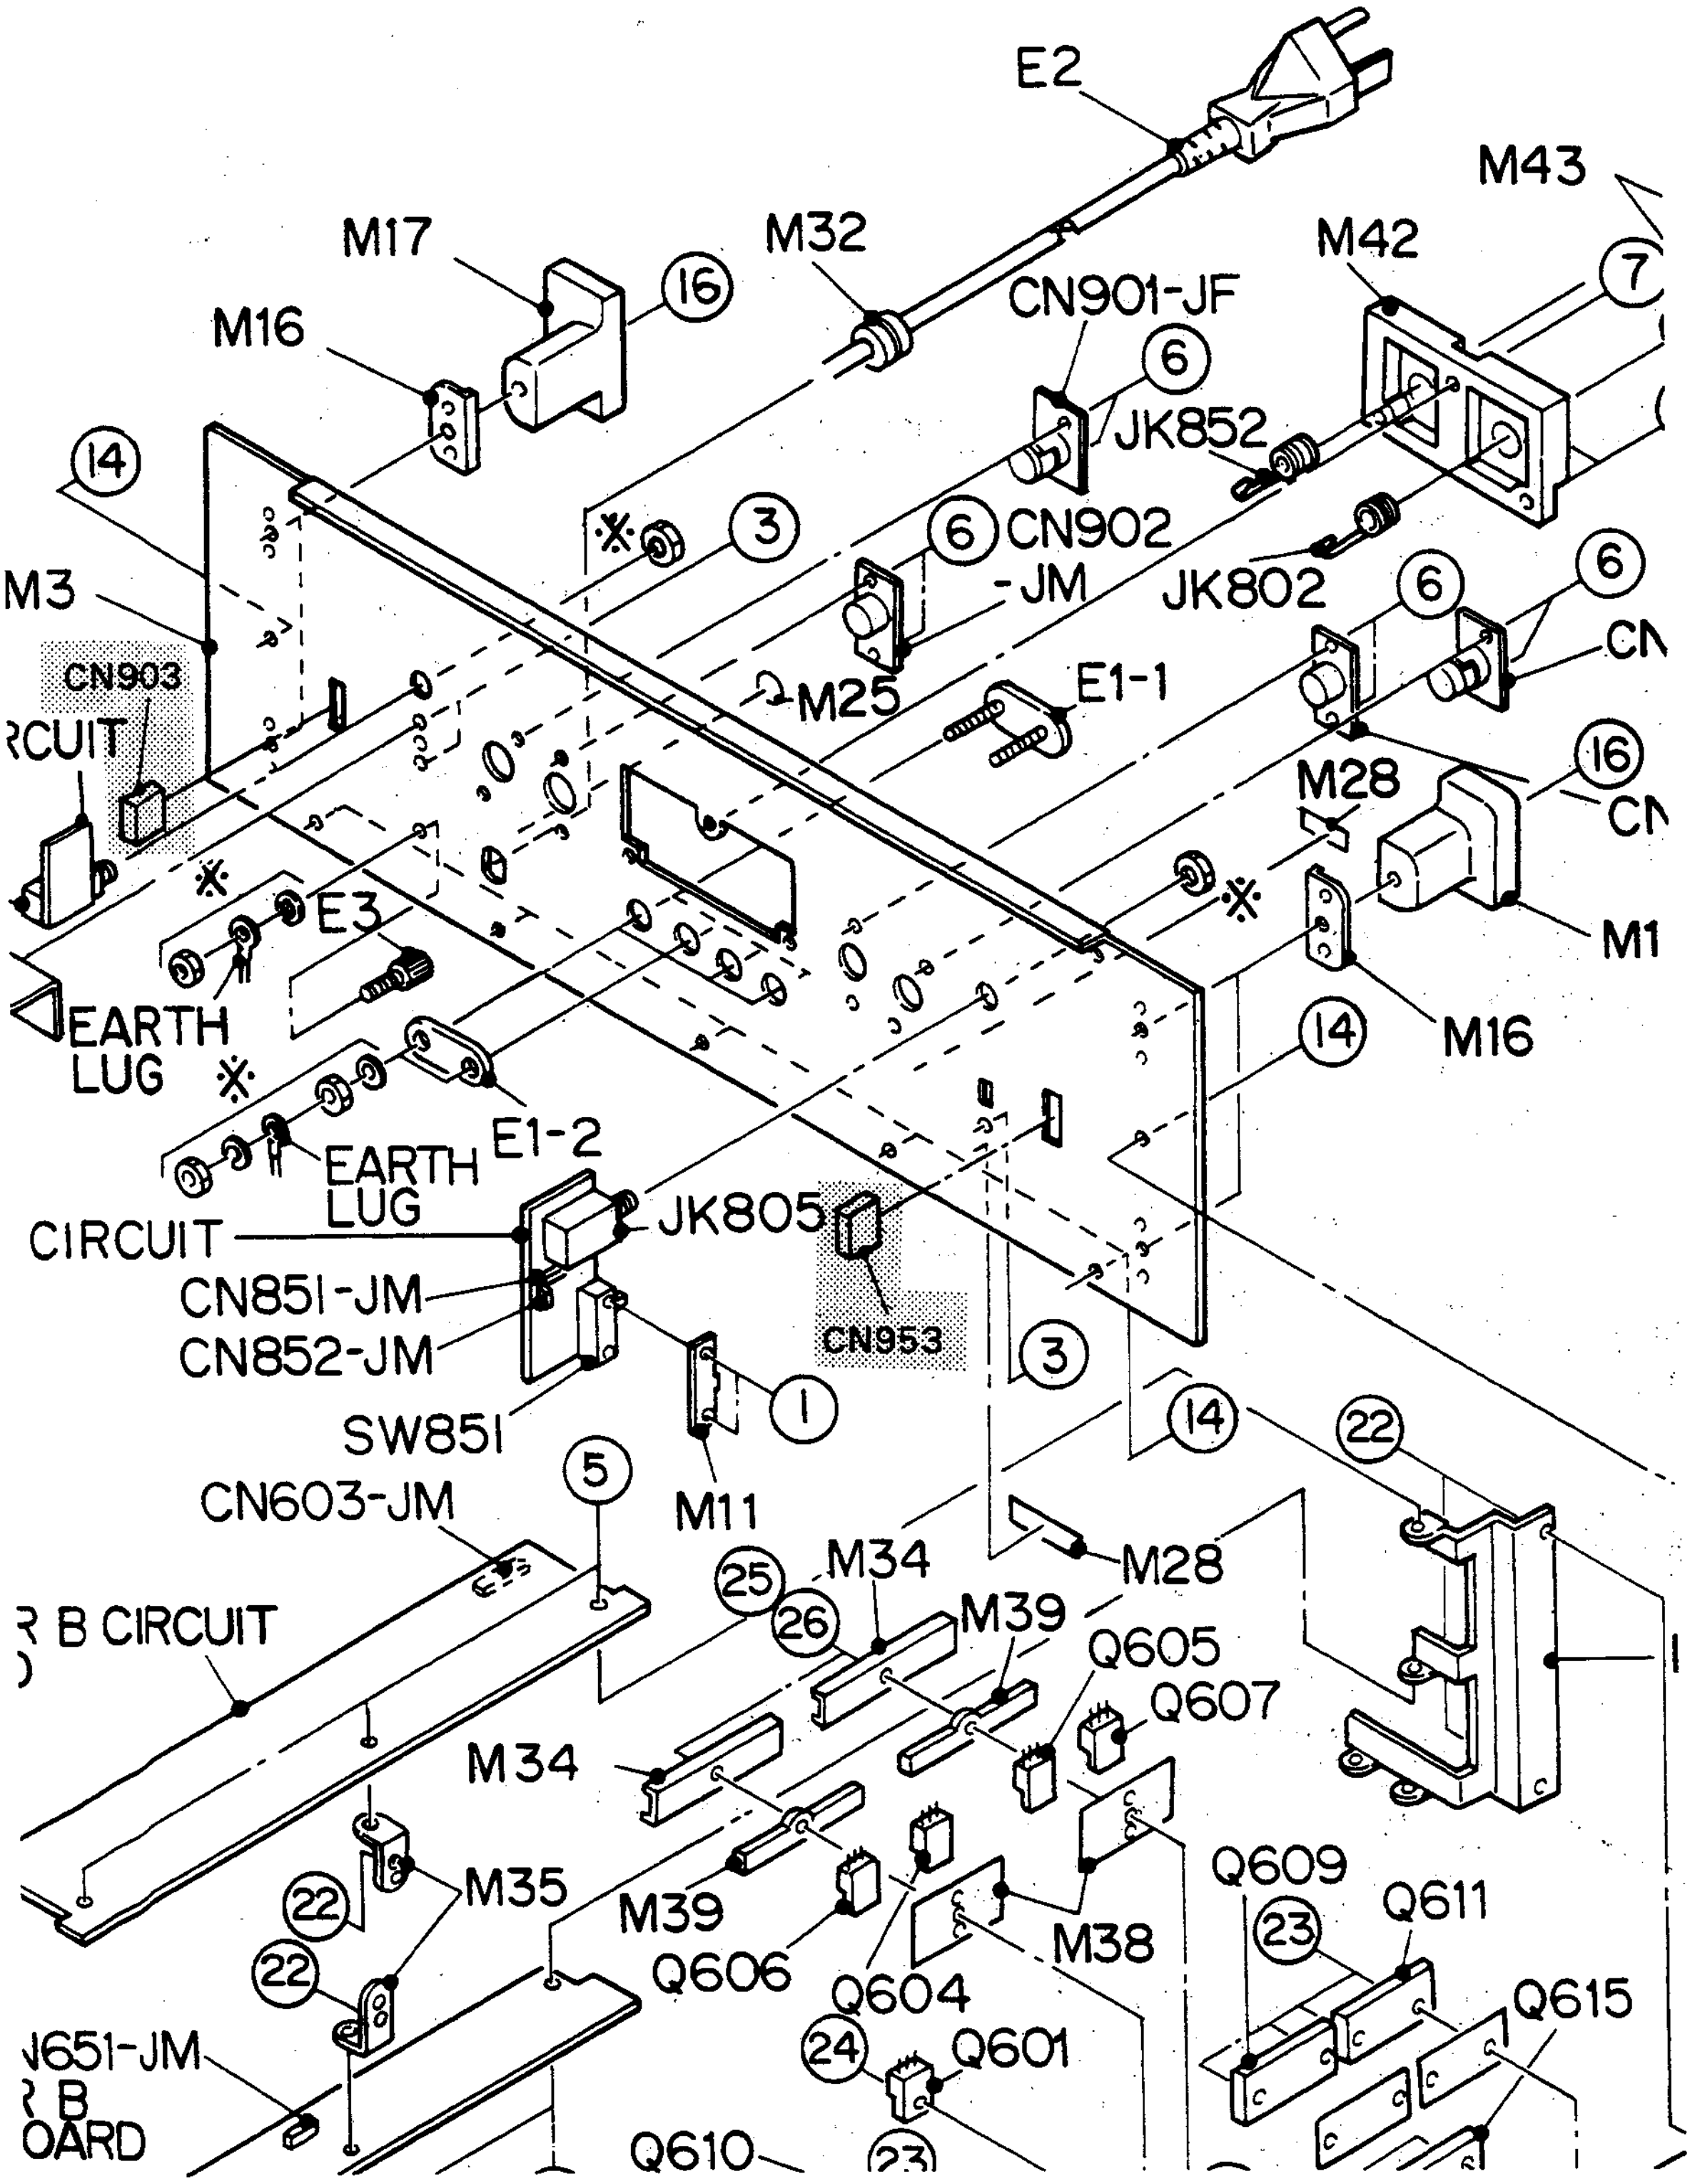
E2
M43
M17
M32
M42
⑯
CN901-JF
⑦
M16
⑥
JK852
⑭
※
③
⑥
CN902
-JM
M3
JK802
⑥
⑥
CN903
CN
CUIT
M25
E1-1
M28
⑯
CN
※
E3
※
M1
EARTH
LUG
※
M16
⑭
E1-2
EARTH
LUG
CIRCUIT
JK805
CN851-JM
CN852-JM
CN953
③
SW851
①
⑭
㉒
⑤
CN603-JM
M11
㉕
M34
M28
B CIRCUIT
㉖
M39
Q605
Q607
M34
M35
㉒
M39
Q609
㉓
Q611
㉒
M38
Q606
Q604
Q615
N651-JM
B
OARD
㉔
Q601
Q610
㉓

EXPLODED VIEW OF WP-9220

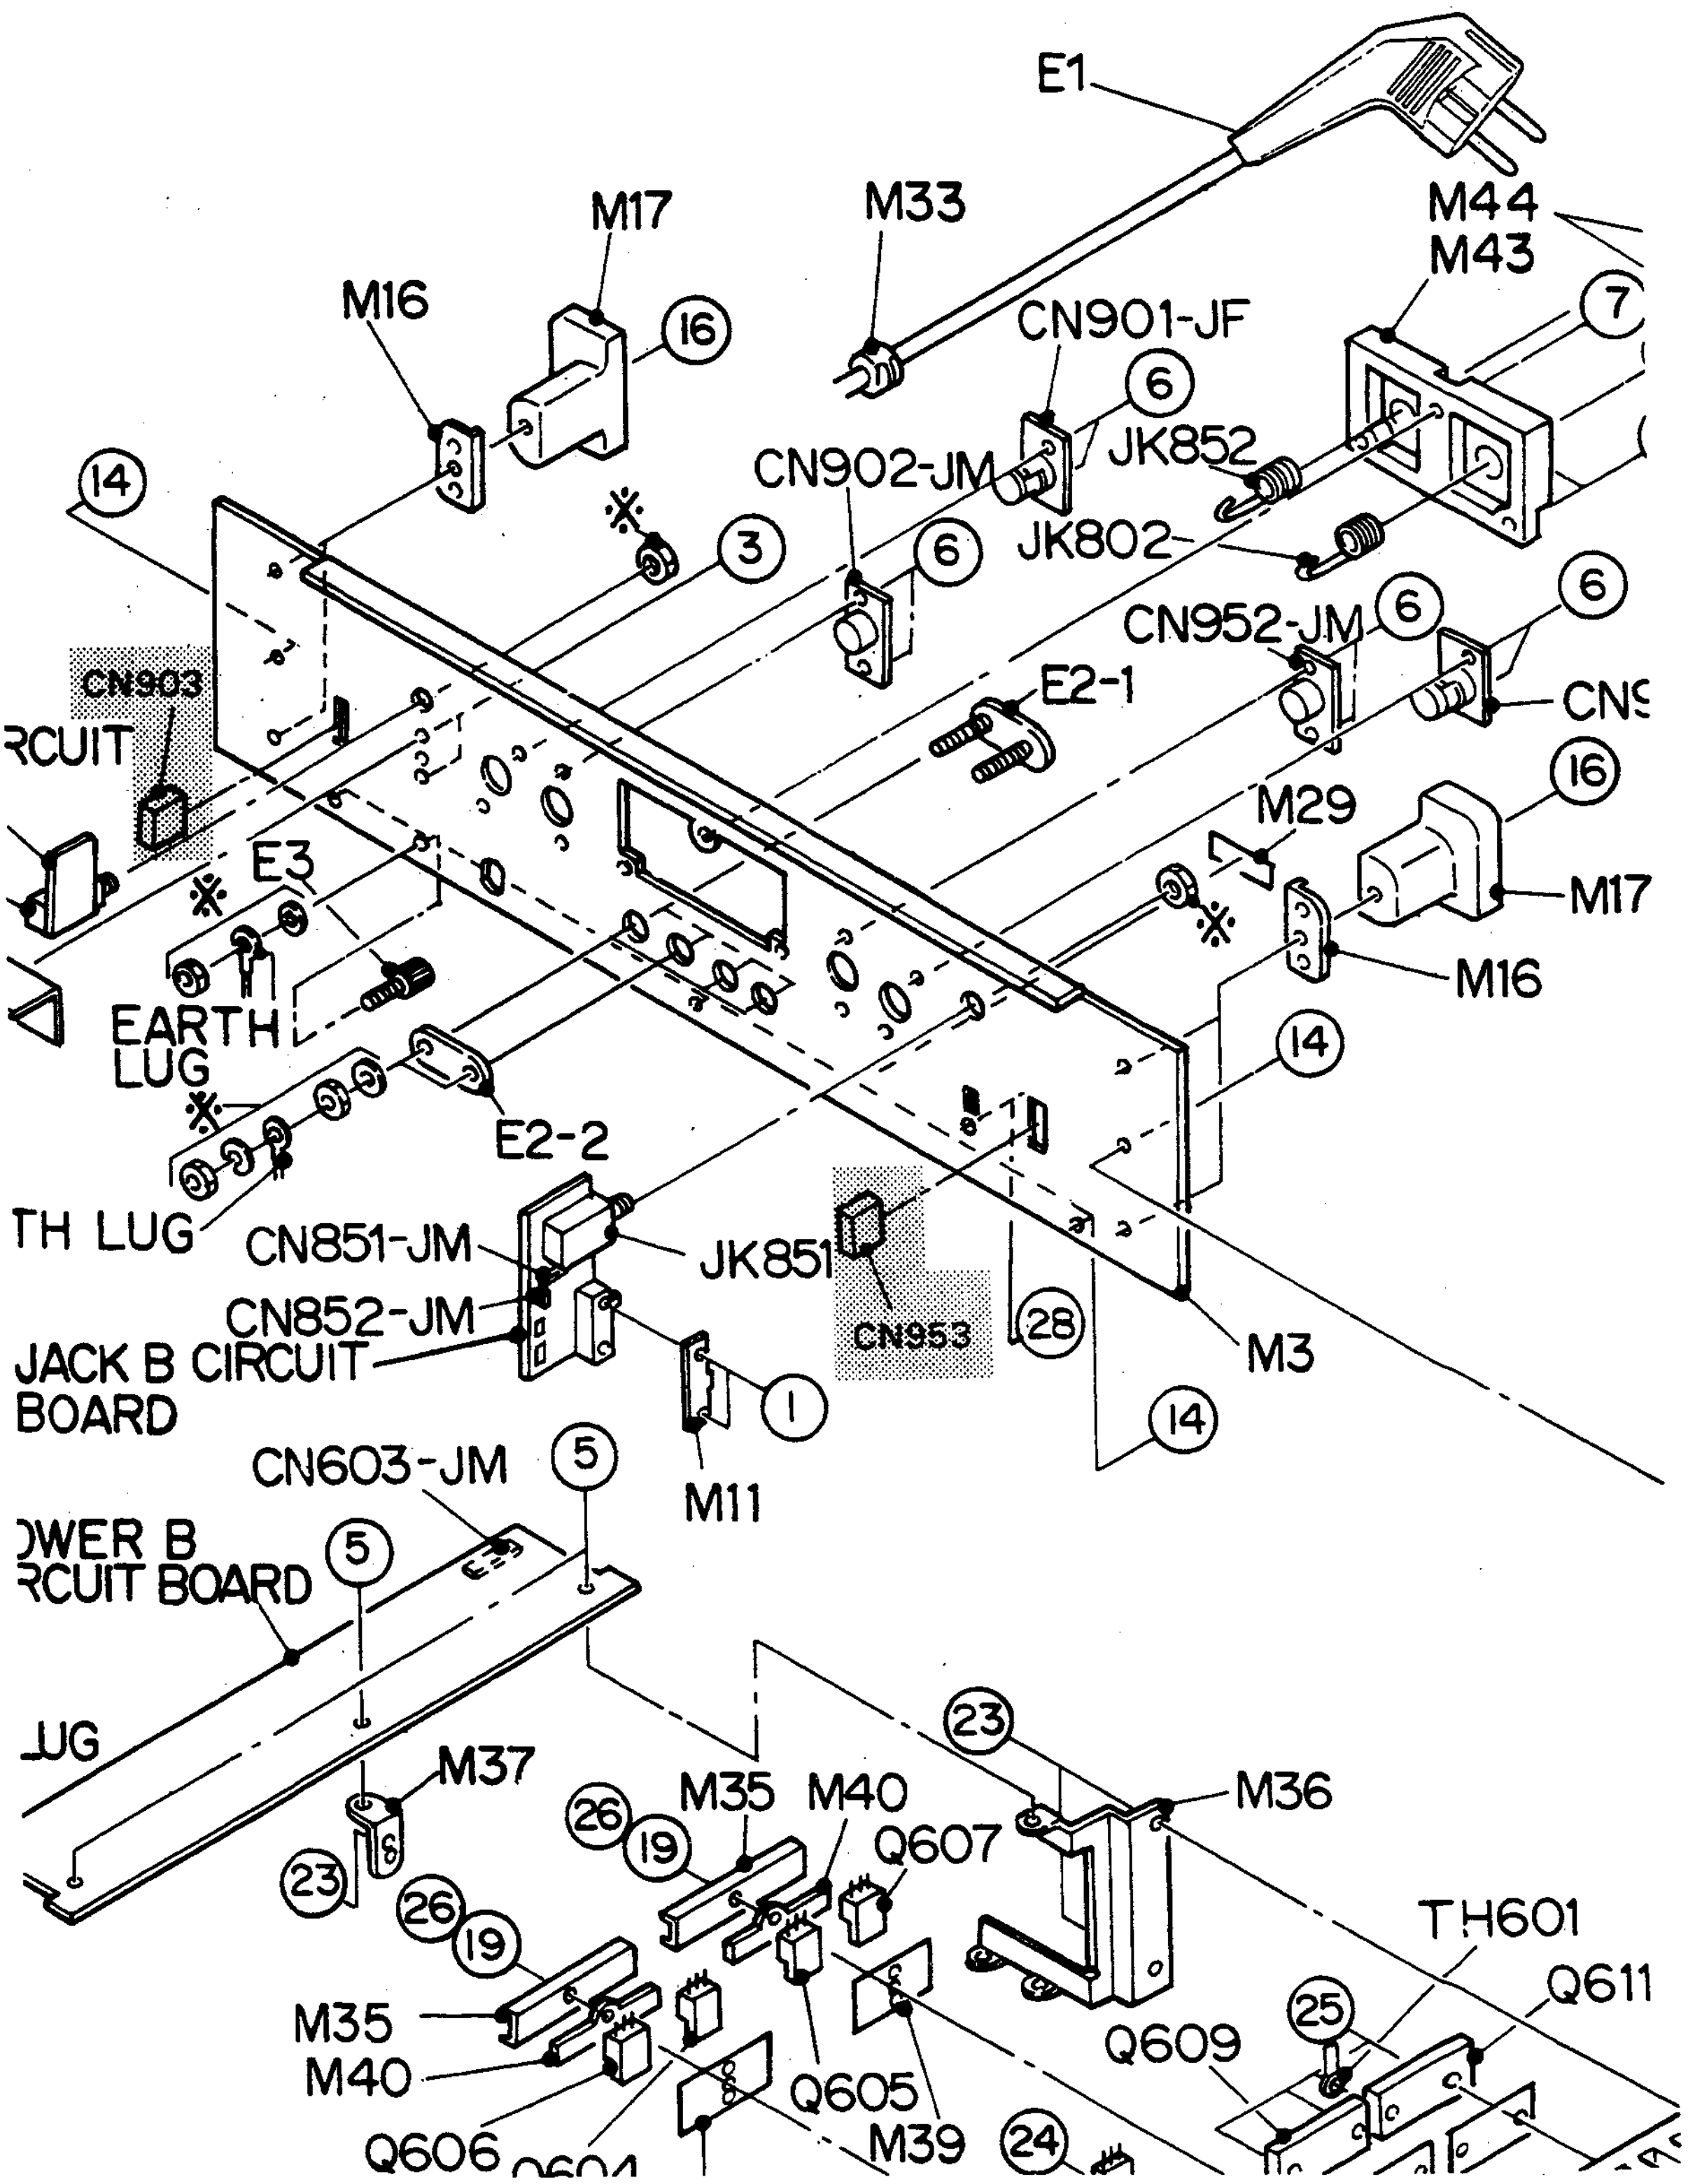
E1
M33
M44
M43
M17
M16
⑯
⑦
CN901-JF
⑥
CN902-JM
JK852
JK802
⑭
※
③
CN903
RCUIT
⑥
CN952-JM
⑥
⑥
CN9
E2-1
※
E3
M29
⑯
M17
※
M16
EARTH
LUG
※
E2-2
⑭
TH LUG
CN851-JM
JK851
CN852-JM
JACK B CIRCUIT
BOARD
CN953
㉘
M3
①
⑭
M11
CN603-JM
⑤
WER B
RCUIT BOARD
⑤
UG
M37
㉓
㉓
M36
㉖
⑲
M35
M40
Q607
㉖
⑲
M35
M40
Q606
Q604
Q605
M39
TH601
Q611
㉕
Q609
㉔